
總公司
アップリカ・チルドレンズプロダクツ合同会社
本社/大阪店 — 〒542-0082 大阪市中央区島之内1-13-13 TEL0120-415-814
Aprica Children's Products G.K.
1-13-13, Shimanouchi, Chuo-Ku, Osaka, Japan

進口商
台灣愛普力卡股份有限公司
總公司營業部 地址：新竹縣竹北市台元街28號5樓之3
電話：(03)5525688 傳真：(03)5525690
維修服務中心 地址：新竹縣竹北市福興路885號
電話：(03)6561261 傳真：(03)6561267
公司網址：http://www.aprica.com.tw
意見信箱：0800@aprica.com.tw 統一編號：22662003

NWL0000588472A

LUXUNA DUAL

ラクーナ デュアル

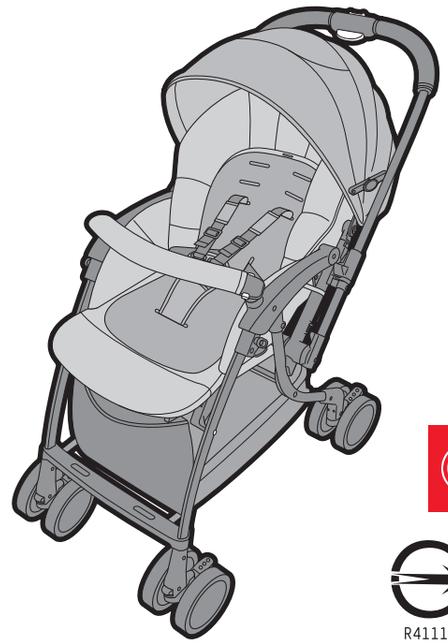

Carry Travel System

R41118 SG安全基準A形

・本產品是一個可以結合嬰兒揹巾和專屬嬰幼兒手推車的多用途攜帶旅行組(Carry Travel System)。
・嬰兒揹巾需另外購買。

使用說明書／保證書

非常感謝您購買此產品。
此產品適用於出生後1個月～36個月，體重15公斤以下的嬰幼兒。

※本說明書所敘述的出生後1個月，指的是母親懷孕37周以上，出生時體重超過2.5公斤以上，出生超過1個月的嬰幼兒。

使用前請詳細閱讀本說明書並正確地使用。請勿使用本說明書內容以外的方法操作本產品。不僅無法充分發揮本產品的功能也十分的危險。使用後請妥善保存此書。

目　錄

使用前

使用前的注意事項 ・・・・・・・・・・・・ 1
　給保護者的建議／SG基準／本説明書的標示
使用上請注意 ・・・・・・・・・・・・ 2～4
　警告／注意
製品取出時 ・・・・・・・・・・・・・・・ 5
　製品特徵
各部位名稱 ・・・・・・・・・・・・・・・ 6

嬰幼兒手推車的使用方法

嬰幼兒手推車的開啟方法 ・・・・・・・・・ 7
雙向手把切換的使用方法 ・・・・・・・・・ 9
手動車輪固定器的使用方法 ・・・・・・・ 12
車輪煞車器的使用方法 ・・・・・・・・・ 12
按鈕式開放型扶手的開啟方法 ・・・・・・ 13
雙腳支撐架的使用方法 ・・・・・・・・・ 13
兩用透氣守護墊的使用方法・・・・・・・・ 13
守護墊類的安裝方法 ・・・・・・・・・・ 14
讓嬰幼兒乘坐手推車的方法 ・・・・・・・ 15
安全肩帶的高度調節方法 ・・・・・・・・・ 17
無段式平躺角度調整器的使用方法 ・・・・ 18
遮陽篷的使用方法 ・・・・・・・・・・・・ 19
置物籃的使用方式(適用於多用途攜帶旅行組收納袋) 20
嬰幼兒手推車的收折方法 ・・・・・・・・・ 21

縫製品的保養方法

遮陽篷的拆卸方法 ・・・・・・・・・・・・ 23
扶手保護套的拆卸方法 ・・・・・・・・・・ 23
多用途攜帶旅行組收納袋的拆卸方法 ・・・ 23
座椅縫製品的拆卸方法 ・・・・・・・・・・ 24
座椅縫製品的安裝方法 ・・・・・・・・・・ 26

日常簡易保養

日常保養 ・・・・・・・・・・・・・・・・ 28
覺得故障嗎？送修前先確認 ・・・・・・・・ 30
保管方法／廢棄方法 ・・・・・・・・・・・ 31
保固與售後服務 ・・・・・・・・・・・・・ 32
ＭＥＭＯ ・・・・・・・・・・・・・・・・ 33
保證書 ・・・・・・・・・・・・・・・・・・封底內頁

使用前的注意事項

給保護者的建議

嬰幼兒並非成人的縮小版。
特別是頸部尚未發育完全的新生兒更是如此。
請充分了解嬰幼兒的情況，並小心使用嬰幼兒手推車。
①請隨時注意嬰幼兒的情況，並避免連續使用。
②請避免讓嬰幼兒直接照射到陽光。
　因為嬰幼兒手推車內的溫度，比大人的感覺來得高。
③請避開人群多的地方，以避免噪音、粉塵。
④經過不平整的路面，請盡可能放慢速度，並且請避開引起震動、衝擊的路段。
⑤本說明書所使用的插圖、組裝等，為求簡單明瞭，並非與實品完全相同。請以實際物品為主。

SG基準

○有顯示SG標章的手推車，表示有按照日本製品安全協會的規定，達到以下各項基準。
（此製品為SG基準Ａ車合格品。）

適用範圍	此嬰幼兒手推車限寶寶一人乘坐，提供戶外、購物等一般家庭親子移動上的使用。
車種的形式	**A車**　出生後一個月*　頸椎尚未發育完成的嬰幼兒，採取平躺姿勢使用的嬰幼兒手推車。
適用年齡	出生後1個月至36個月以內
建議連續使用時間	平躺姿勢：2小時以內　　坐立姿勢：1小時以內
平躺角度	150°以上
車輪外徑	115mm以上

※此處所稱出生後1個月，是指懷孕週數37週以上，且出生時之體重滿2.5kg以上，出生後1個月之嬰幼兒。

關於本書的標示

○「警告」、「注意」、「禁止」等符號是預測您未遵守注意事項的情況下，依據危害、損害的嚴重性來作區分。標示所表示的內容十分重要，請您務必遵守。

標示	標示之內容
⚠警告	使用方法錯誤時，可能會造成人員死亡或重傷等情形。
⚠注意	使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。

禁止	標示之意義
⃠	請勿操作本說明書所禁止的行為。

建議	使用產品時的便利小建議。

使用上請注意

○為避免意外事故發生，使用前請務必詳閱使用說明書，並且正確地使用。

⚠警告　○使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐寶寶有不慎掉落的危險。

請務必將安全肩帶、安全腰帶以及立體式股帶繫好再使用。



請勿讓寶寶站立於嬰幼兒手推車上。



安全腰帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。

請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。



因恐嬰幼兒手推車的車輪掉落於路面上的溝內，而使得嬰幼兒手推車失去平衡並且不慎造成寶寶及使用者受傷等危險發生。

當遇到有格子狀排水溝蓋的道路且必要通過的情況下，請先確認嬰幼兒手推車的車輪寬度是否適合。如果適合，請慢慢且仔細地推行嬰幼兒手推車。



前輪卡住時，請一手握著手把以及一手握著前腳管，提高前車輪。請勿將整台嬰幼兒手推車舉高。



在坡道等地方，嬰幼兒手推車因恐自行滑動、翻覆。

當寶寶乘坐時或離座時，請務必將車輪煞車器左右兩邊同時鎖上，並確認嬰幼兒手推車不會滑動。



當寶寶乘坐或置放物品時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對煞住嬰幼兒手推車。



即使鎖上煞車器，也請勿讓寶寶離開您的視線範圍，獨留於手推車內。



因恐失去平衡、看不到路面情況，而有導致摔倒之虞。

當寶寶乘坐時，請勿直接將嬰幼兒手推車提起懸空。



〈接下一頁〉

⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。

請勿讓兩名寶寶同時乘坐或搭乘於坐墊以外的地方。



請勿在樓梯、手扶梯等有高低落差的地方使用。



因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。

當寶寶乘坐時，請勿在置物籃以外的地方放置物品，勿在手把懸吊物品。此外，請勿倚靠在手把上。



因恐寶寶有被安全帶纏繞導致窒息的危險。

安全肩帶及安全腰帶請務必一起使用，並調整到適合寶寶體型的位置。



因恐嬰幼兒手推車收折時，使寶寶有摔落、夾傷之虞。

前向使用時，請確認開關確認插銷已上昇至最上方。



面對面使用時，請確認手把內側的黃點標示已露出。



嬰幼兒手推車因恐受到路面影響使得車內的溫度變高，導致寶寶身體受到傷害的危險。

高溫或日照強烈時，請勿長時間使用。



因恐導致嬰幼兒手推車破損、受傷、意外事故等發生。

當使用嬰幼兒手推車時，請勿過度施力。



各可動關節部位因恐有夾傷寶寶手腳、車體撞擊寶寶或使用者本人等情況發生。

當您折疊收納嬰幼兒手推車時，請勿讓寶寶靠近。



裝置按鈕式開放型扶手時，請務必注意寶寶的手腳。



⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐導致嬰幼兒手推車破損，使得寶寶或使用者受傷之虞。

○切換手把的過程中，請勿觸碰手把控制鈕。
○請勿讓兒童操作嬰幼兒手推車。
○當寶寶乘坐時，請務必讓寶寶的股間對準立體式股帶的位置。因恐嬰幼兒手推車將有往後翻覆之虞。
○本公司維修人員外，請勿自行分解、安裝或改造。
○請勿在座椅縫製品拆下的狀態下使用本產品。
○請勿在猛力撞擊或掉落後使用。
○請勿當成兒童玩具使用。
○請勿將本車用於寶寶乘坐之外的任何用途上。

⚠注意　使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。

○請務必定期檢查與保養。
○使用前，請先確認嬰幼兒手推車主體與座椅縫製品已正確安裝完成。
○請適時替可動關節部位上油，並務必使用塑膠製品用的潤滑油。
○長時間未使用的嬰幼兒手推車時，請務必進行檢查或保養後再使用。
○即使是空車，也請勿將嬰幼兒手推車放置於斜坡上或鄰近車道的人行道等危險場所。
○請勿在螺絲或螺帽鬆動的狀態下使用。
○請勿將兩輛手推車併在一起使用。
○請勿將前輪呈高舉狀態行走。因恐造成後部框架彎曲變形或斷裂。
○當寶寶乘坐於嬰幼兒手推車並且在行進中時，為了寶寶的安全，請以一般的步行速度行進（時速約4公里左右的速度）。
○在嬰幼兒手推車收折的狀態下，請勿觸摸雙向手把切換拉柄。否則恐因雙向手把切換拉柄解除，而無法開啟嬰幼兒手推車。
○進行收折的過程中，請勿觸摸雙向手把切換拉柄。以免造成故障。
○請勿將嬰幼兒手推車推至沙地或泥濘處。
（關節轉折處易因沙粒進入導致開關收納困難。）
○框架處沾染沙粒或泥土時請勿置之不理。
（關節滑動處易因沙粒進入導致開關收納困難。）
○嬰幼兒手推車是為了讓寶寶乘坐。為了避免造成損壞，請勿加裝任何市售零件。
○請勿在置物籃放入重量5kg以上的物品。
○家長、照護者請勿倚靠在嬰幼兒手推車上。
○請勿用來搬運物品等。
○本產品僅限於嬰幼兒乘坐。
○請勿做出其他可能導致嬰幼兒手推車故障之行為。
○請勿在公車上使用。
本產品之設計，並非以公車上使用為目的。若在公車上使用本產品，因恐轉彎、緊急煞車等原因，而有發生翻覆或意外事故之虞。
○電車上使用的注意事項。
本產品之設計，並非以電車上使用為目的。於電車中使用本產品，恐因轉彎或緊急煞車等情況而有翻覆之虞，因此請務必使用煞車器，並盡充分之注意，若發生意外，責任由使用者自行承擔。
○在電車等場所使用時，請勿強行上下車，嬰幼兒手推車可能未被感應到，造成被電車的自動門夾住，因恐造成寶寶受傷之虞。
○請勿在積雪處或是結霜的路面上使用。
○風勢強勁時，請勿使用。
○打雷時，請勿使用。
○由於易導致嬰幼兒手推車車內溫度變高，故請勿在室內、靠近火源處或高溫場所等地方使用遮雨罩。
○由於易造成塑膠部分變形而無法維持其原有功能，故請勿放置靠近火源處或炎夏高溫車內。

○請勿勉強越過高低落差的地面。以免造成損壞或故障。

〈越過高低落差地面的方法〉

面對面的場合使用下，腳踩在手推車的腳踏板上，將手把向下輕壓，讓手推車越過段差處。

〈對面的場合〉



背面的場合使用下，將手把向下輕壓，同時抬起安全扶手，讓手推車越過段差處。

〈背面的場合〉




製品取出時

○製品取出時，請務必進行各部位檢查工作。
○部品有缺少、弄錯或者破損時，請與經銷商或者總公司連絡。(請參閱P32)

主　體

○從箱子裡取出時，本產品處於折疊狀態。
嬰幼兒手推車的打開方式，請參閱P7。

○製品取出時。
前後的車輪煞車器處於鎖定的狀態。
使用前，請先解除前後車輪煞車器的鎖定狀態。(請參閱P12)

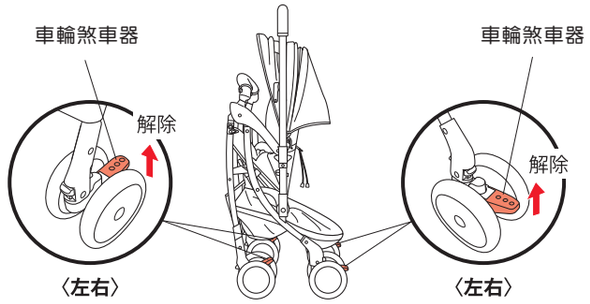

⚠注意　○使用前，請先解除前後車輪煞車器的鎖定狀態。(請參閱P12)

附屬品


預防呼吸道閉塞型保護頭墊
（裝設於手推車本體上。）


腰部・臀部守護墊



使用說明書

⚠警告　○請勿將產品包裝箱、捆包材料、塑膠袋放置於寶寶伸手可及之處。否則恐導致寶寶將其套在頭上而窒息。


〈製品的特徵〉

○手把是背對、正對兩用型。
○無論手把位於背面或面對面，手推車皆可收折。
○車體在折疊狀態可自行站立。
○框架使用的是輕量鋁管。

各部位名稱

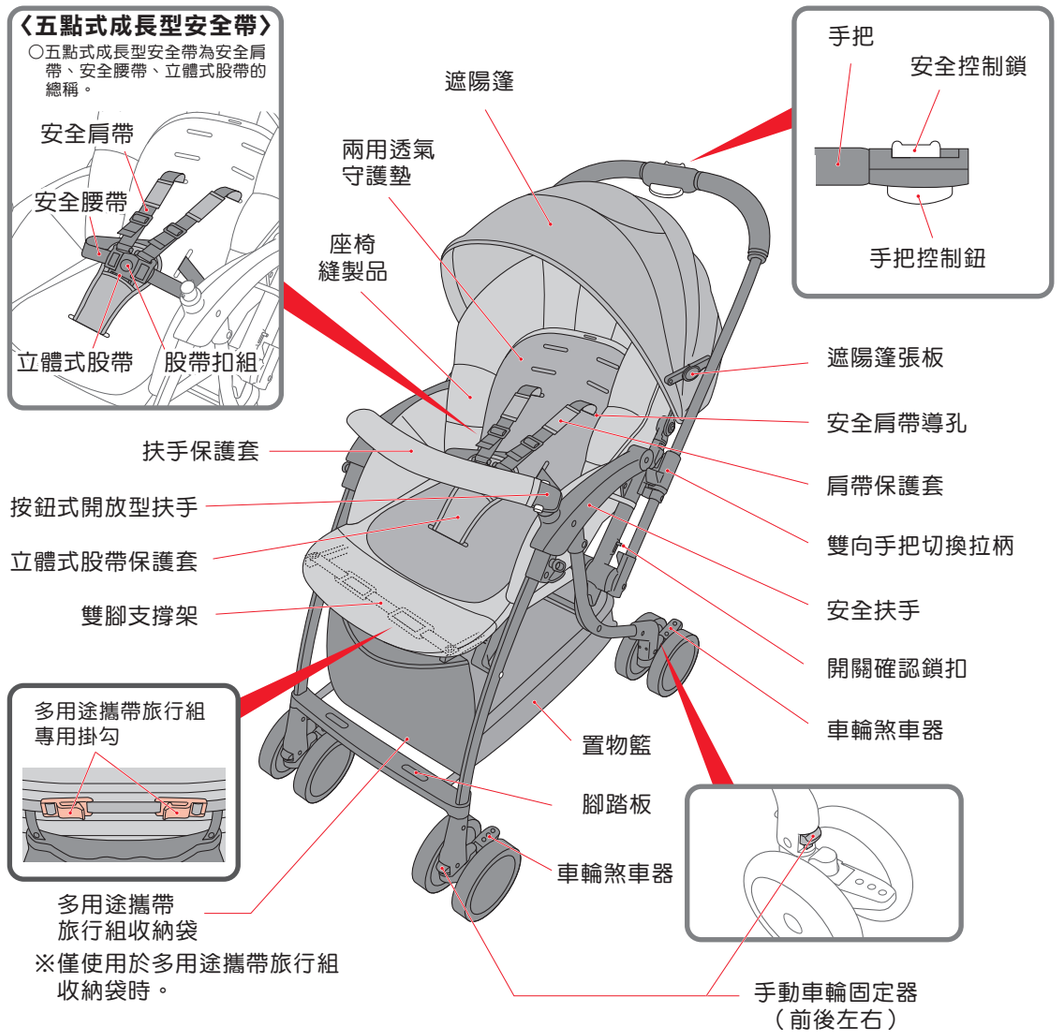

〈靠背背面〉

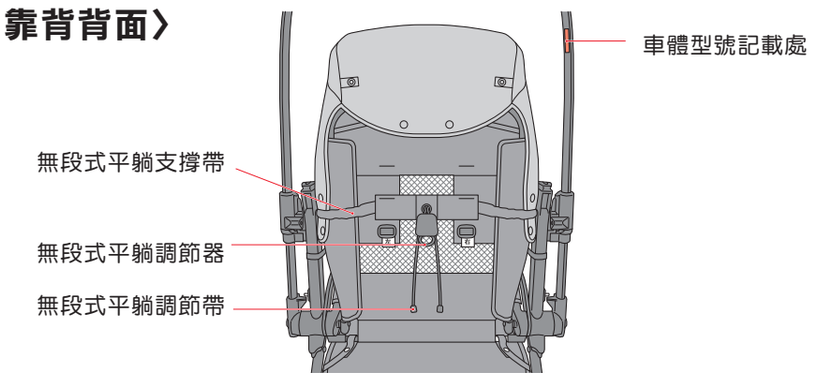

嬰幼兒手推車的開啟方法


・本產品無論手把位於背面，或是面對面，手推車皆可開啟。
本產品從包裝箱取出時，手把位於背面。

小叮嚀 ○因捆包裝箱的關係，初次使用可能無法順利開啟的情況發生。請重複操作2～3次後再進行開啟。


警告
○當寶寶碰觸手推車或靠近手推車時，請勿收折或開啟車體。因恐可動關節部位夾到寶寶手指、手腳或者嬰幼兒手推車碰撞寶寶身體而使寶寶有受傷之虞。
○請勿讓兒童操作嬰幼兒手推車。因恐導致跌倒或意外事故發生等危險。

警告
○使用時請依照〈確認鎖定狀態〉的方法，確認車體已完全開啟。若車體未完全開啟，恐導致嬰幼兒手推車收折，而使寶寶有摔落、夾傷之虞。


〈於背面狀態開啟時〉

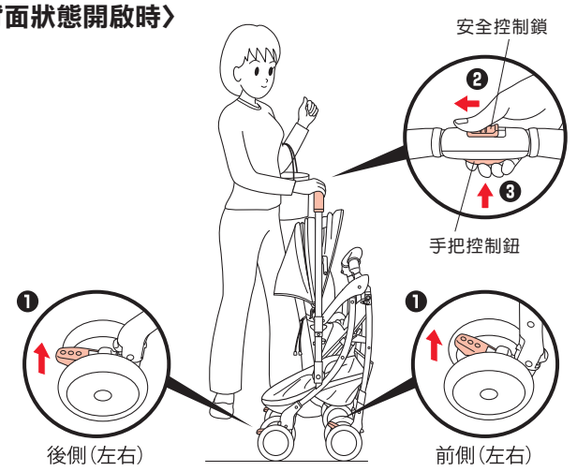


❶請先將前後的車輪煞車器解除鎖定。（請參閱P12）
❷將安全控制鎖往箭頭方向橫推，解除鎖定。
（顯示出紅色部分）
❸用力按住手把控制鈕。

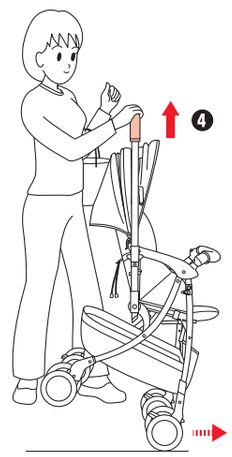

❹單手握手把將後輪提高離開地面。

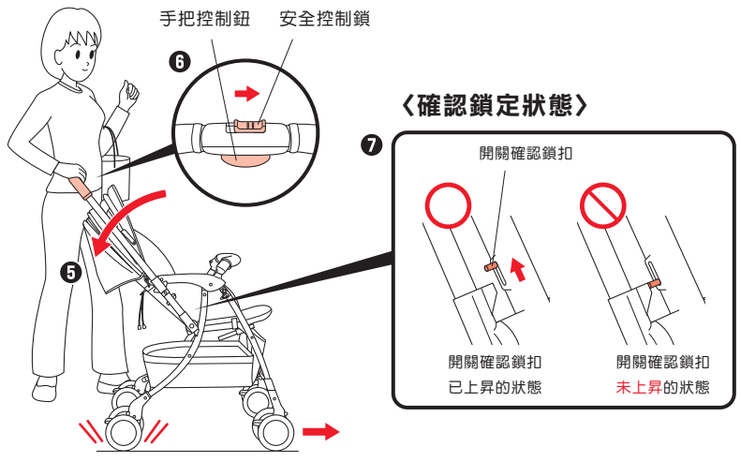


❺持續握著，朝後輪方向將手把向下壓到完全展開。
❻將手離開手把控制鈕與安全控制鎖。
・手一旦離開，安全控制鎖就會自動滑動返回原位。
❼確認開關確認鎖扣已上昇至最上方。

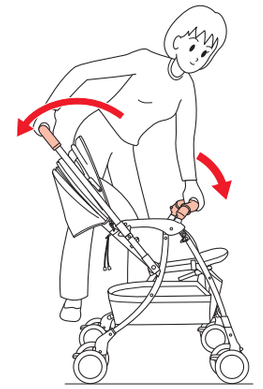


建議 ○若有難以使用單手開啟的情況，請用另一隻手握住開放型扶手展開車體。

〈於面對面狀態開啟時〉

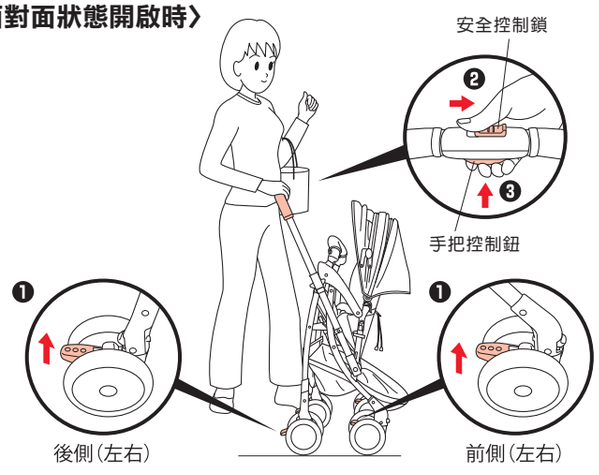


❶請先將前後的車輪煞車器解除鎖定。（請參閱P12）
❷將安全控制鎖往箭頭方向橫推，解除鎖定。
（顯示出紅色部分）
❸用力按住手把控制鈕。

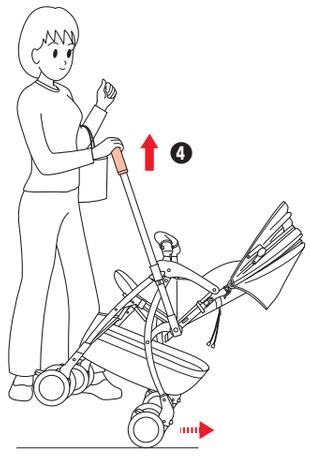


❹單手握手把將後輪提高離開地面。

警告 ・於面對面狀態開啟時，請注意避免讓嬰幼兒手推車的腳踏板撞到腳。

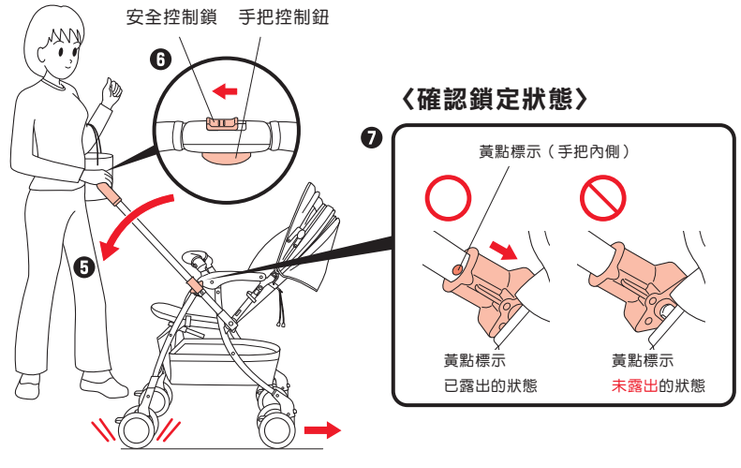

❺持續握著，朝後輪方向將手把向下壓到完全展開。
❻將手離開手把控制鈕與安全控制鎖。
・手一旦離開，安全控制鎖就會自動滑動返回原位。
❼確認手把內側的黃點標示已露出。

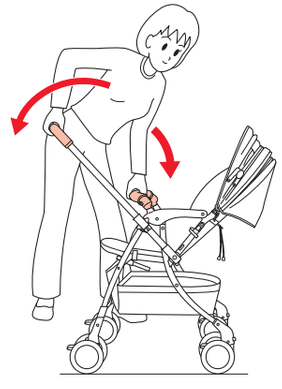

建議 ○若有難以使用單手開啟的情況，請用另一隻手握住開放型扶手展開車體。

嬰幼兒手推車的使用方法


雙向手把切換的使用方法

⚠警告


・切換手把的過程中，請勿觸碰手把控制鈕。
・切換手把時，請務必確認行進方向前側（左右）的手動車輪固定器已解除。若未解除的話，推車者位置的車輪即不會自動鎖上，因恐有使嬰幼兒手推車翻覆，使寶寶摔落之虞。
・請勿在嬰幼兒手推車未完全開啟的狀態下切換手把。
・切換手把時，注意避免夾到寶寶的手指或手腳。
・請勿在坡道切換手把。嬰幼兒手推車可能會意外滑動、翻覆，而使寶寶摔落。
・請勿一邊推著嬰幼兒手推車，一邊切換手把。
・將手把由「背面切換至面對面」、或由「面對面切換至背面」後，請確認左右側的雙向手把切換拉柄已確實扣上卡榫，並上下晃動手把，以確認處於鎖定狀態。因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。

〈切換手把的準備〉

〈背對寶寶〉

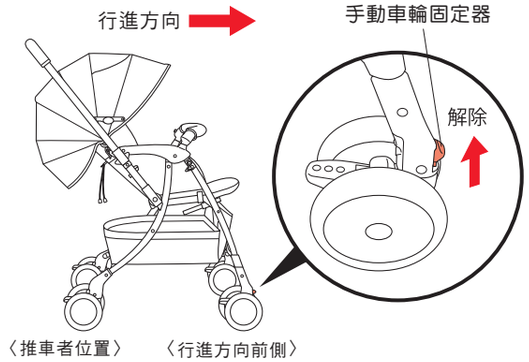


〈面對寶寶〉

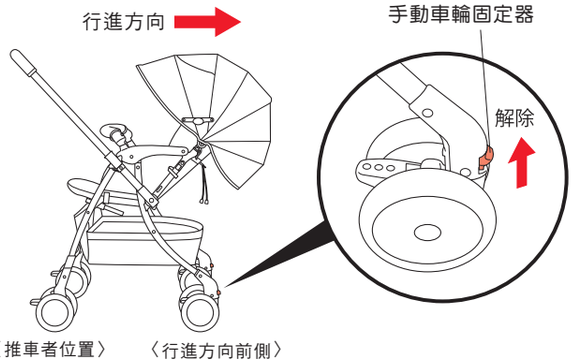

❶ 請確認**行進方向前側**的手動車輪固定器已經解除鎖定。
❷ 請確認嬰幼兒手推車已完全展開。(請參閱P8)

〈手把由背面切換至面對面時〉

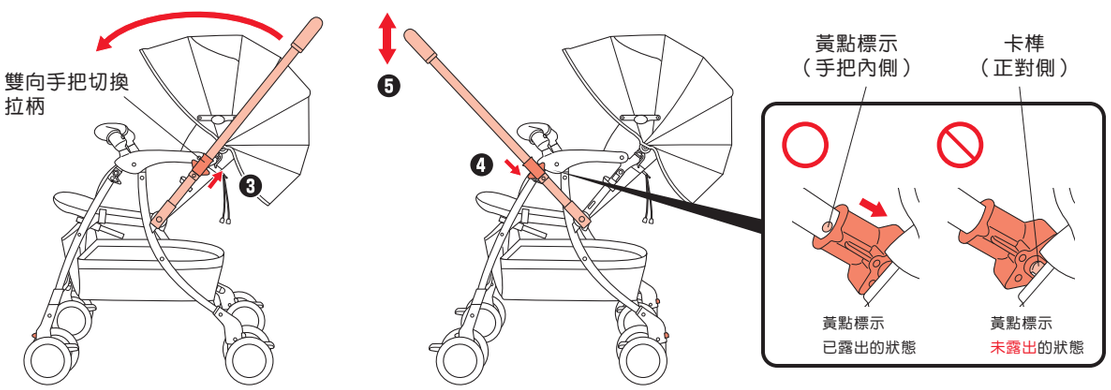


❸ 一邊將雙向手把切換拉柄（左右）往上拉，一邊切換手把的方向。
❹ 雙向手把切換拉柄扣上卡榫。（左右）
❺ 將手把上下動一動，確認已扣上卡榫。


⚠注意

・切換手把時，請在平坦的地方進行，並且同時將左右側的雙向手把切換拉柄往上拉，以切換手把的方向。


〈手把由面對面切換至背面時〉

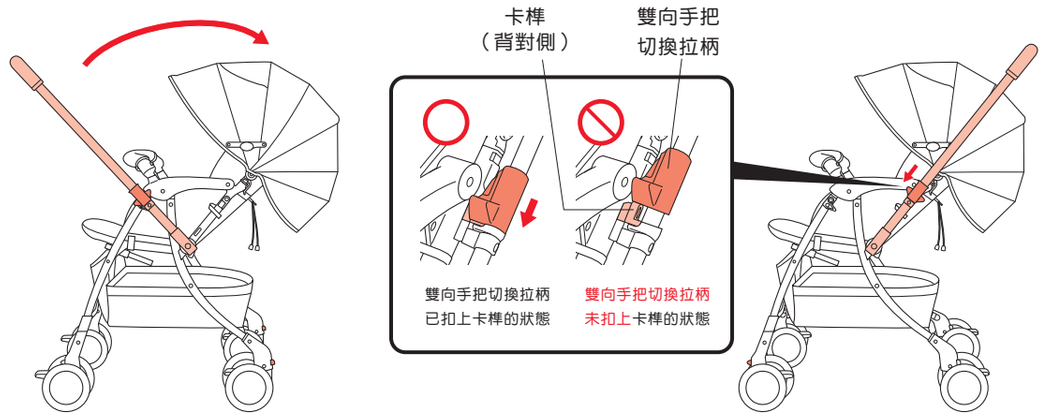

〈背對寶寶〉

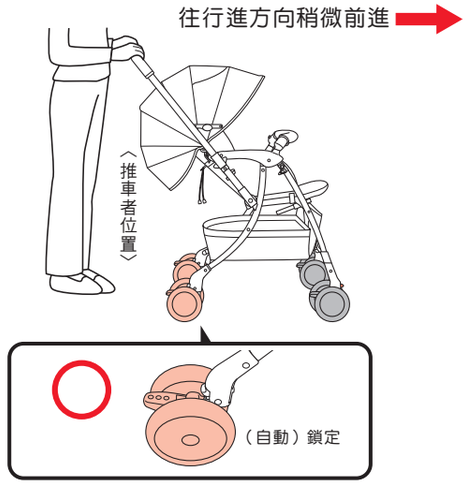

〈面對寶寶〉

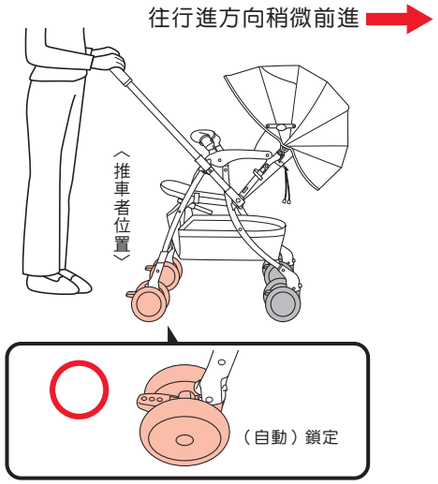

❻ 將嬰幼兒手推車往行進方向稍微前進，使得靠近推車者位置的左右車輪鎖上。

○手把在切換中或切換之後，因為所有的車輪都處於未鎖上的狀態，因此務必像❻一樣，使靠近推車者位置的車輪朝向推車者，並且確認已確實鎖上。未依照上述方向推行而反向推行，可能造成輪胎偏移及不順暢的情況發生。


建議

○上下電梯或電車等人多擁擠時，需要將推車往後方移動時，因推車者位置的車輪是處於鎖定狀態，有時會影響推車的移動。此時建議輕微的提起推車的扶手把讓靠近推車者位置的車輪輕微離開地面後再移動車身。

雙向手把切換的使用方法


〈手動車輪固定器的錯誤使用方法〉

〈背對寶寶〉

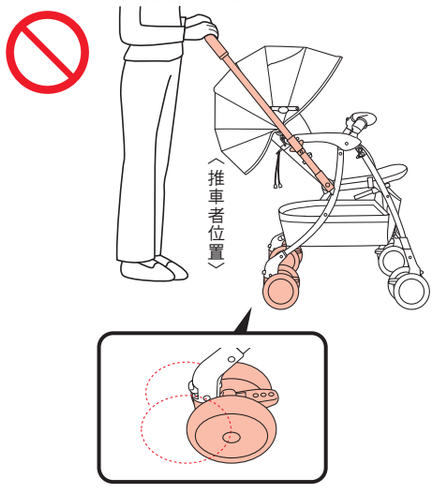

〈錯誤的車輪方向〉

〈面對寶寶〉

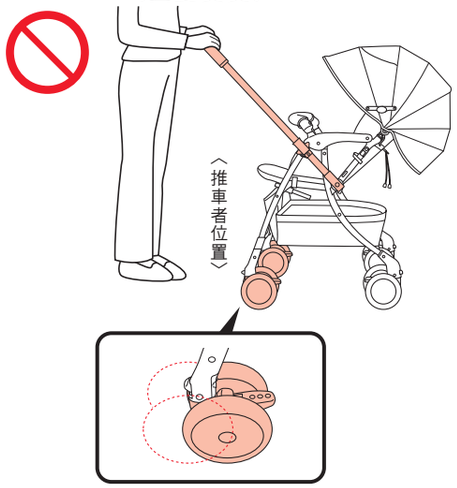

〈錯誤的車輪方向〉


○推車者位置的左右車輪朝內鎖上時，請解除前後左右的手動迴轉固定器之後，再進行操作手把切換的動作。

〈四輪自動定位導向系統（Auto 四輪）切換鎖定功能〉

○本產品可將雙向手把切換拉柄切換至背對或面對寶寶。


○無論背對或面對寶寶的狀態下，當切換雙向手把切換拉柄之後，後車輪會自動上鎖。靠近**推車者位置的車輪**（後輪）即自動地鎖上，而**行進方向前側**（前輪）的車輪即解除鎖定（Free）。**行進方向前側**（前輪）的車輪解除鎖定後，即可靈活地轉換方向。

〈背對寶寶〉站在寶寶後方的位置

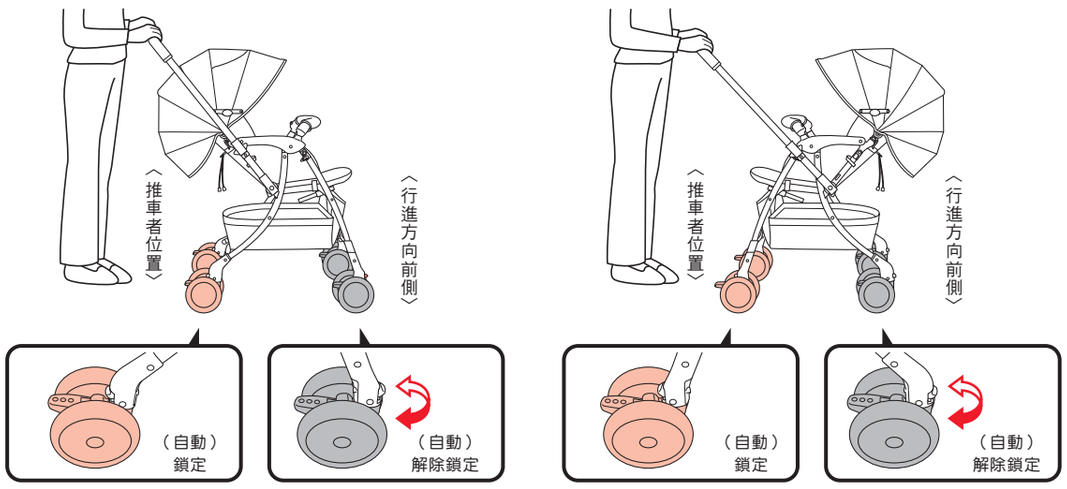

〈面對寶寶〉站在面對著寶寶的位置

手動車輪固定器的使用方法

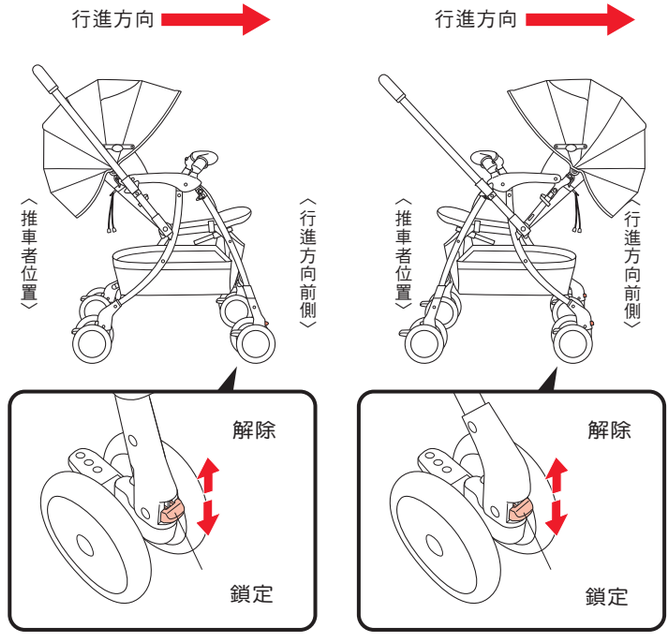

〈鎖定〉

・在凸凹不平、坡道、傾斜地面等場所行進時，暫時先將行進方向前側（左右2處）的車輪鎖上，這樣能使手推車比較好推。

●將行進方向前側的手動車輪固定器往下扳，鎖定車輪。（左右）

〈解除〉

・平常請在解除狀態下使用。

●將行進方向前側的手動車輪固定器往上扳，解除鎖定狀態。（左右）

・推車者位置的車輪自動鎖上。無法使用手動車輪固定器。

車輪煞車器的使用方法

警告

○當寶寶乘坐時或離座時，務必將左右煞車器都鎖上。


○當寶寶乘坐在手推車上時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對停住嬰幼兒手推車。

○即使鎖上車輪煞車器，當寶寶乘坐在手推車上時，仍然請勿離開寶寶的身邊。

注意

○即使寶寶未乘坐在手推車上，當要離開嬰幼兒手推車時，仍然請將左右車輪煞車器都鎖上。

〈鎖定〉

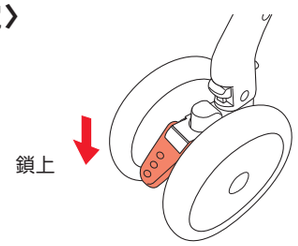


❶ 將推車者位置的車輪煞車器往下扳，即可鎖上車輪。（左右）

❷ 將手推車前後動一動，以確認車輪煞車器已鎖上。

建議 若車輪煞車器難以鎖上時，請將嬰幼兒手推車前後來回推動之後，再一次鎖上。


〈解除〉

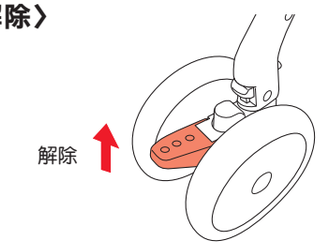


●將車輪煞車器往上扳，解除鎖定狀態。（左右）

注意

・若手動鎖上或解除車輪煞車時，請注意手指。因恐不慎被紅色箭頭處夾傷。



按鈕式開放型扶手的開啟方法

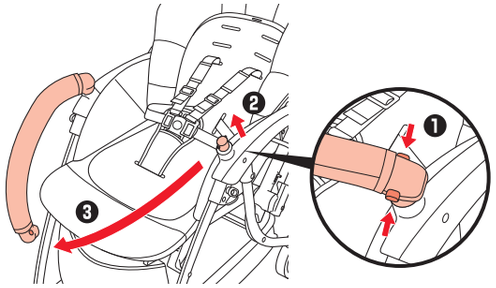


❶同時按住鎖定鈕的內外兩端，
❷將開放型扶手往上抽出。
❸將開放型扶手往下放。

⚠警告 ○扣合扶手時，請注意避免手指被開關夾傷。

雙腳支撐架的使用方法


○當座椅角度在平躺狀態時，請使用雙腳支撐架。

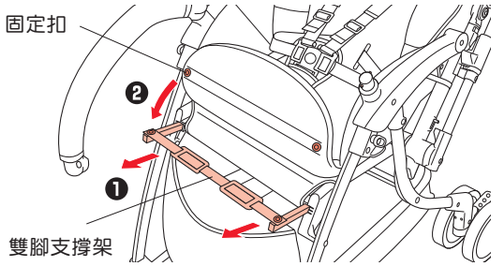


❶坐席向上翻起，將雙腳支撐架拉出。
❷將坐席內側的固定扣扣在雙腳支撐架前端的固定扣上。（左右）

兩用透氣守護墊的使用方法

・兩用透氣守護墊可依個人喜好，雙面皆可搭配使用。

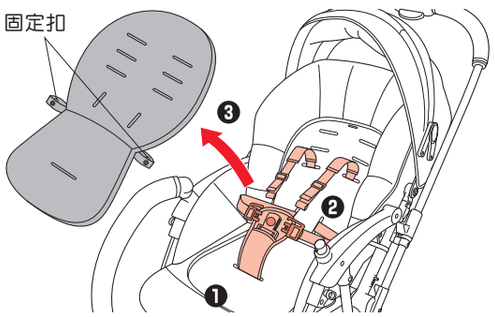

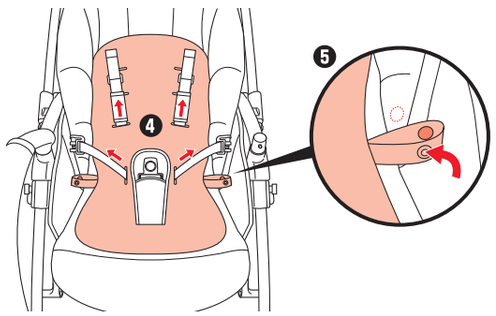


❶從坐席上解開兩用透氣守護墊側邊的固定扣。（左右）
❷按下立體式股帶的固定扣，解開安全腰帶、安全肩帶。
❸將安全肩帶、安全腰帶、立體式股帶由孔洞拔出，拆卸兩用透氣守護墊。
❹將兩用透氣守護墊的背面朝上，再將安全肩帶、安全腰帶、立體式股帶穿回孔洞。
❺將兩用透氣守護墊側邊的固定扣扣在坐席上。（左右）

守護墊類的安裝方法

○守護墊類在嬰幼兒手推車內，用來輔助寶寶維持適當正確的姿勢。

預防呼吸道閉塞型保護頭墊　寶寶頸部安定前，請務必使用。（約四個月左右）


○安裝預防呼吸道閉塞型保護頭墊時 ，請務必將安全肩帶安裝於下段肩帶導孔。
最高月齡使用至7個月為止。（請參閱P17「安全肩帶高度的調整方法」）

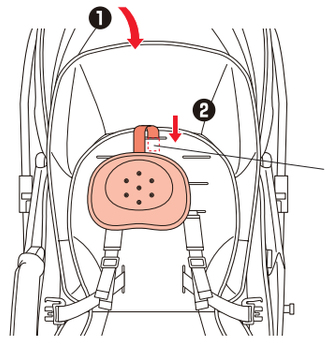

❶頭墊安裝適用於平躺狀態下使用。（請參閱P18）
❷將保護頭墊上的魔鬼氈白色布片取下，依照箭頭的方向，把魔鬼氈固定帶穿過頭墊安裝孔，黏在坐席裏側的魔鬼氈上。

建議 ○頭墊不易安裝時，可拆下座椅縫製品的上半部，在可看到座椅裏側的情況下來安裝。（請參閱P25「座椅縫製品的拆卸方法」）

〈預防呼吸道閉塞型保護頭墊的安裝位置〉

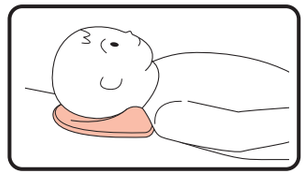


●安裝時，請讓頭墊下端的鼓起部分在寶寶的頸後。
※當鼓起部分不適合寶寶的頸後時，請立即拆除。

⚠注意 ○安全肩帶穿在中段、上段的肩帶導孔時，無法使用預防呼吸道閉塞型保護頭墊。
寶寶頸部開始安定後，請拆下預防呼吸道閉塞型保護頭墊。

腰部・臀部守護墊 （1個月～3歲左右的寶寶可使用。）

○依寶寶體格的不同，即使是3歲以下的寶寶，仍有可能已不適用腰部・臀部守護墊。當不適用時，請拆下。

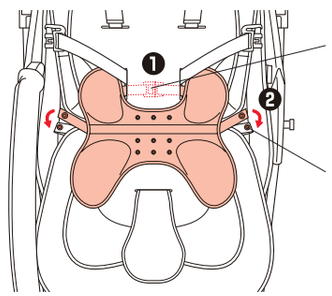


❶將上端固定帶扣穿過兩用透氣守護墊的安全腰帶導孔，並且扣上。
❷將腰部・臀部守護墊側邊的固定扣，扣在兩用透氣守護墊側邊的固定扣上。（左右）

嬰幼兒手推車的使用方法

讓嬰幼兒乘坐手推車的方法

1 準 備

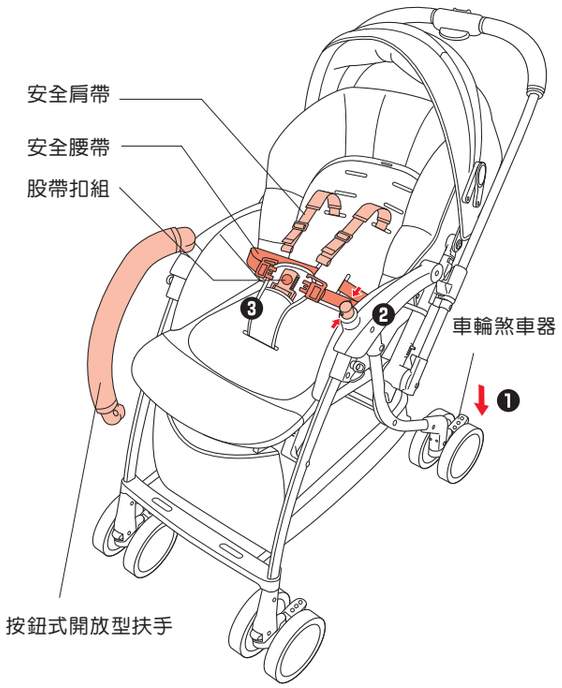



❶將推車者位置的車輪煞車器鎖上（左右）
❷打開按鈕式開放型扶手。
　○按住鎖定鈕的內外兩端，打開開放型扶手。
❸解開安全肩帶、安全腰帶。
　○按下股帶扣組，解開安全腰帶、安全肩帶。
　○將安全肩帶由肩帶固定勾環上取下。

○需要改變安全肩帶的位置時，請參閱P17「安全肩帶高度的調整方法」。
○需要改變座椅的角度時，請參閱P18「無段式平躺調節器的使用方法」。
○需使用雙腳支撐架時，請參閱P13「雙腳支撐架的使用方法」。

2 乘坐方法

〈寶寶乘坐之後，務必繫上安全帶〉

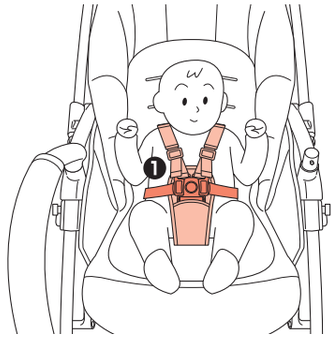

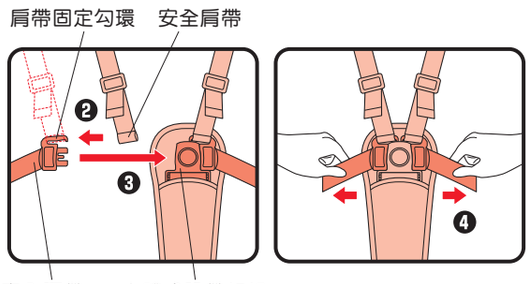


❶先讓寶寶乘坐於嬰幼兒手推車上。
❷將安全肩帶扣入肩帶固定勾環。
❸將安全腰帶扣入立體式股帶扣組。
❹將安全腰帶往兩側拉，調節至適合寶寶的寬鬆度。
　※請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。

建議
○安裝安全肩帶時，警示標籤應朝向外側。
○請確認安全肩帶沒有扭結的情況。


⚠警告
○繫上安全帶後，請確認左右兩側的安全腰帶有調節至適合寶寶的寬鬆度。
○使用時，務必將安全肩帶插在安全腰帶上。因恐安全肩帶可能會纏繞在寶寶頸部。
○請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。
　安全腰帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。
○寶寶乘坐時，應該讓寶寶的股間對準立體式股帶的位置。否則嬰幼兒手推車有可能會往後方翻覆。

〈安全腰帶的調整〉


〈拉緊〉

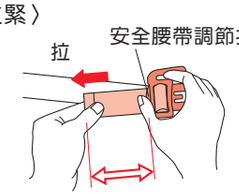

〈放鬆〉

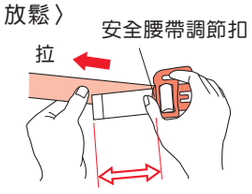


●輕壓安全腰帶調節扣，拉安全腰帶做調整。

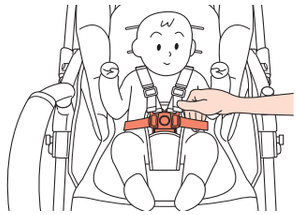


○安全腰帶的長度，以安全腰帶與寶寶之間可容納成人4隻手指頭的寬鬆度為適當。

〈安全肩帶的調整〉


〈拉緊〉

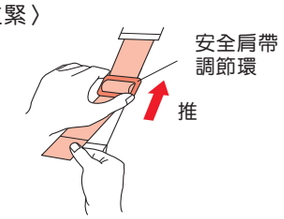

〈放鬆〉

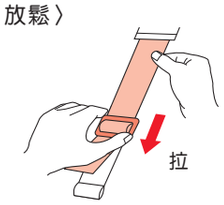


●移動安全肩帶調節環做調整。

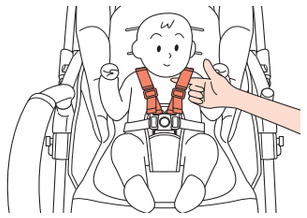


○安全肩帶的長度，以安全肩帶與寶寶之間可容納成人1隻手指頭的寬鬆度為適當。

〈立體式股帶的調整〉

〈放鬆〉

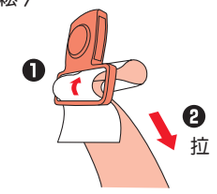

〈拉緊〉

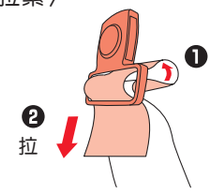


❶立體式股帶取出。
❷股帶拉出，調整長度。

○調整之後，請務必確認固定扣組與股帶保護套之間的固定扣已經扣上。


⚠注意
○請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。
　安全肩帶、安全腰帶、立體式股帶過鬆時，即使繫上安全帶，寶寶仍然可能站起來，而使寶寶有摔落之虞。
○關閉開放型扶手時，請注意避免夾到寶寶的手指。
○關閉開放型扶手後，請拉拉看，以確認開放型扶手已確實鎖上。
○當寶寶乘坐在手推車上時，請勿舉起開放型扶手。
○安全腰帶的尾端（插圖中 ⟺ 的部分），務必保留3cm以上。
○調整座椅靠背的角度時，應一併調整安全肩帶、安全腰帶、立體式股帶的長度。

〈關閉按鈕式開放型扶手〉

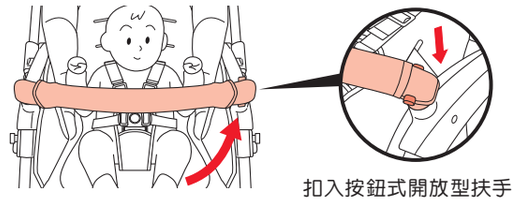

扣入按鈕式開放型扶手

〈解除車輪煞車器〉

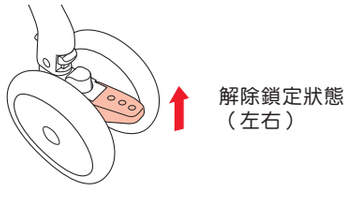

嬰幼兒手推車的使用方法


安全肩帶的高度調節方法

警告

○請依寶寶的成長情況，調整安全肩帶的高度。


〈安全肩帶的位置〉

○製品從包裝箱取出時，安全肩帶位置設定於下段。

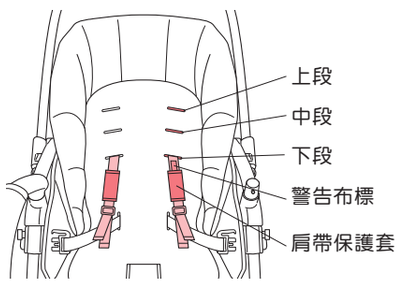

〈安全肩帶的使用標準〉

○穿過肩膀位置下段的安全肩帶導孔。

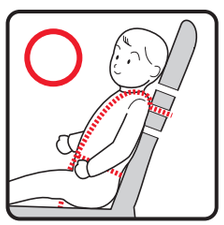

○安全肩帶的位置，請依以下3段標準進行調整。

月齡（體格）的標準	安全肩帶導孔的位置
18個月～36個月	上　段
7個月～18個月	中　段
1個月～7個月	下　段


請依個別差異對照上述表示的標準進行調整。


建議

○安裝安全肩帶時，警告布標應朝向外側。
○請確認安全肩帶沒有扭結的情況。


〈安全肩帶的高度調整方法〉

○將安全肩帶、安全腰帶，從安全股帶扣組上解開。（請參閱P15「準備❸」）
○安全肩帶自肩帶固定勾環取出。（參閱P15「準備❸」）
○掀開坐席。（參閱P25❿⓫）

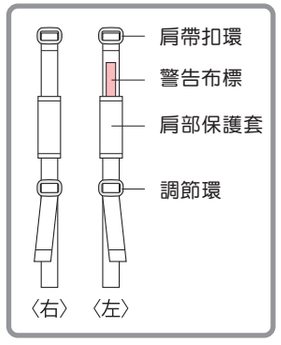

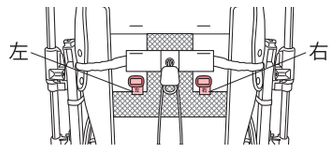


・由嬰幼兒手推車的背面觀看時，左側穿過標示為左邊的安全肩帶，右側則穿過標示為右邊的安全肩帶。

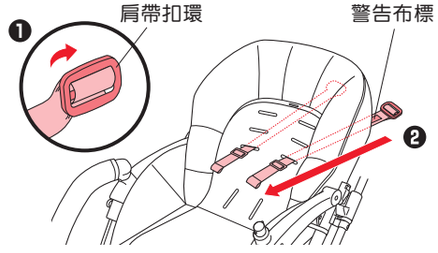


❶將安全肩帶扣環轉換與肩帶平行的方向。
❷將安全肩帶環穿過坐席導孔以及背板導孔。

〈使用上段導孔時〉

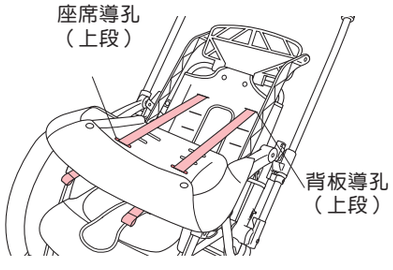


❸穿過坐席導孔（上段）與背板導孔（上段）。

〈使用中段導孔時〉

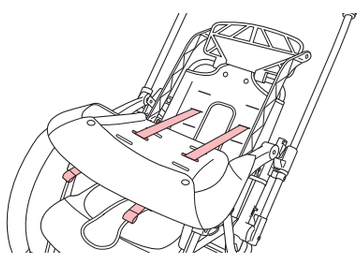

❸穿過坐席導孔（中段）與背板導孔（中段）。

〈使用下段導孔時〉

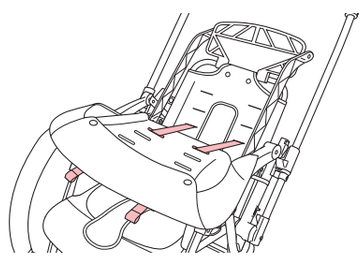

❸穿過坐席導孔（下段）與背板導孔（下段）。

❹調整之後，請務必確認固定扣組與股帶保護套之間的固定扣已經扣上。（請參閱P24）
❺將安全肩帶扣入肩帶固定勾環。

無段式平躺角度調節器的使用方法

○無段式平躺調整器的主要機能為支撐寶寶維持在舒適的姿勢。
○靠背平躺的狀態是為了讓寶寶乘坐時也能夠平躺所設計。


〈座椅的角度標準〉

月齡（體格）的標準	坐席的角度位置
1個月～頸椎成熟	平躺
頸椎成熟～可獨立坐立	平躺～半躺（中間位置）
可獨立坐立	平躺～坐立姿勢


建議

○靠背平躺時，頭枕即立起。


靠背平躺時

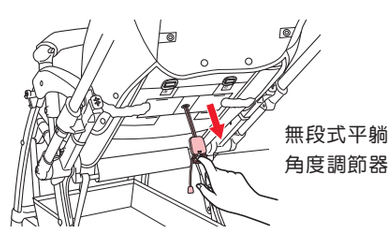

〈完全立起的狀態〉

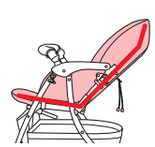

〈中間狀態〉

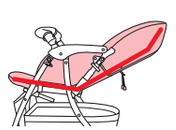

〈平躺的狀態〉



❶放鬆安全肩帶。（請參閱P16）
❷用單手扶住寶寶，另一手拉住無段式平躺角度調節器。
❸一邊拉著拉環，一邊將靠背往後倒，調整至適當的角度。
❹調整安全肩帶、安全腰帶、立體式股帶的長度。

警告


○在寶寶乘坐的狀態下，若要將靠背倒下時，請先鬆開安全肩帶。
○坐席角度調整完成後，接著調整安全肩帶、安全腰帶的長度。安全肩帶、安全腰帶過鬆的話，即使繫上安全帶，寶寶仍然可能站起來，因而使得寶寶有摔落之虞。

注意


○請勿一邊推著嬰幼兒手推車，一邊調整坐席角度。
○在寶寶乘坐的狀態下，若要調整坐席角度時，請勿急速且大幅度的改變角度。
○在寶寶乘坐的狀態下，若要將靠背倒下時，請確實扶住寶寶。

建議

○可獨立坐立的寶寶，將頭置於頭枕的位置時，若將靠背倒下，寶寶的姿勢將會變得不自然，因此請將坐席角度調整在頭枕不會立起的位置。



靠背立起時

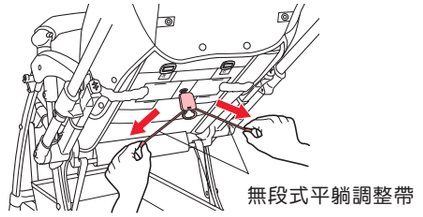

●請在寶寶未完全依靠靠背支撐下，兩手同時拉住無段式平躺調整帶往箭頭(如左圖)方向拉出，既可將座椅椅背立起。

建議


○當寶寶完全倚靠靠背支撐的狀態下，請勿豎起靠背。

遮陽篷的使用方法


警告

○請在寶寶未接觸遮陽篷的狀態下，開啟或收起遮陽篷。
否則可動關節部位可能會夾到寶寶的手指或手。

〈遮陽篷的各部位名稱〉

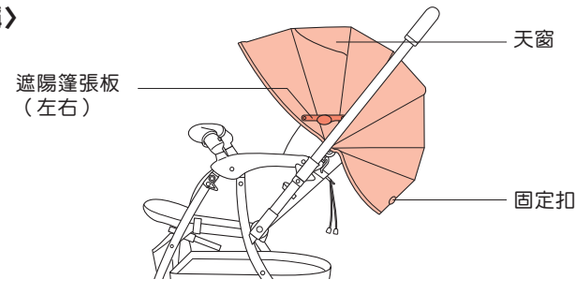


打開方法

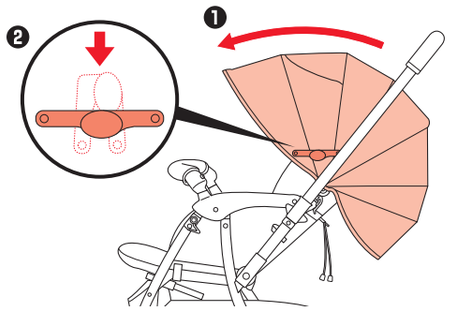

❶將遮陽篷往前展開。
❷押下遮陽篷張板。（左右）


收起方法

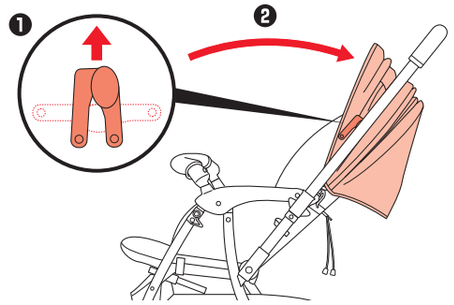


❶將遮陽篷張板往上折。（左右）
❷將遮陽篷往後收起。

遮陽篷的角度調整

○靠背往後躺或日照比較弱時，可調整遮陽篷的角度。

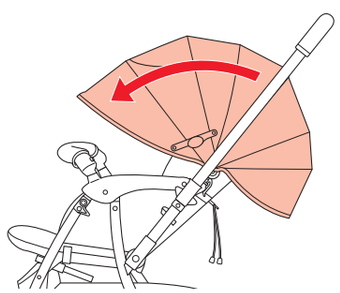


❶在遮陽篷打開的狀態下往前轉，在適當的位置固定。

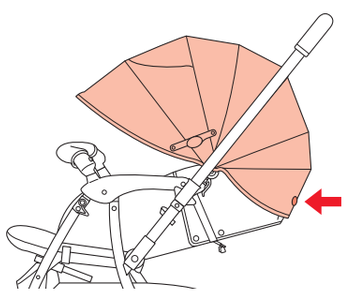

❷靠背往後躺時，將遮陽篷固定扣固定在頭枕後側的固定扣上。（左右）

天窗的開啟方法

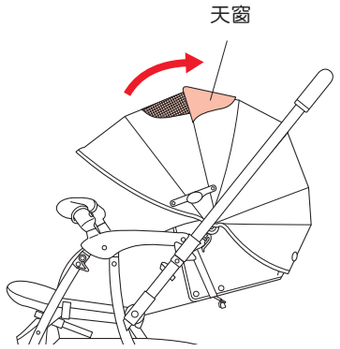


○開啟遮陽篷的窗罩，可看到寶寶的一舉一動。

置物籃的使用方法

注意


○請勿將形狀銳利的物品置於置物籃內。否則可能會破壞置物籃。
○請勿放置重量5kg以上的物品。
○收折嬰幼兒手推車之前，請先將物品取出。
○請勿將貴重物品放置於置物籃內。

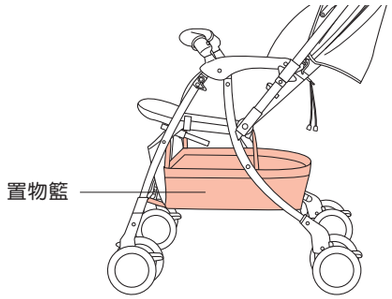

建議

○放置物品時，請儘量使物品的重量平均分散於置物籃底。

〈關於多用途攜帶旅行組收納袋的使用方式〉

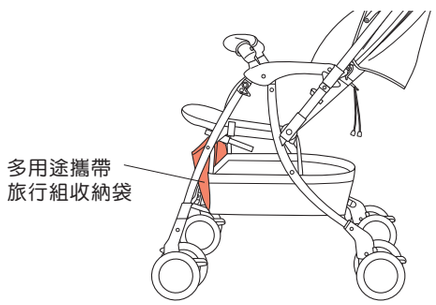

●多用途攜帶旅行組收納袋僅使用於收納多用途攜帶旅行組揹巾時。

注意

○請勿將其他物品放置於多用途攜帶旅行組收納袋內。

嬰幼兒手推車的使用方法

嬰幼兒手推車的收折方法


○本產品無論手把位於背面，或是面對面時皆可收折手推車。

小叮嚀 ○因捆包裝箱的關係，剛開始使用可能有不易收開的情況。請重複操作2～3次。

⚠警告
○當寶寶碰觸手推車或者靠近手推車時，請勿收折或開啟車體。因恐可動關節部位夾到寶寶手指、手腳，或嬰幼兒手推車碰撞寶寶身體，而使得寶寶有受傷之虞。
○請勿讓兒童操作嬰幼兒手推車。因恐造成翻覆、意外事物，而有受傷之虞。

⚠注意
○在嬰幼兒手推車收折的狀態下，請勿觸摸雙向手把切換拉柄。否則恐因雙向手把切換拉柄解除，而無法開啟嬰幼兒手推車。
○進行收折的過程中，請勿觸摸雙向手把切換拉柄。以免造成故障。

〈以背面狀態收折時〉

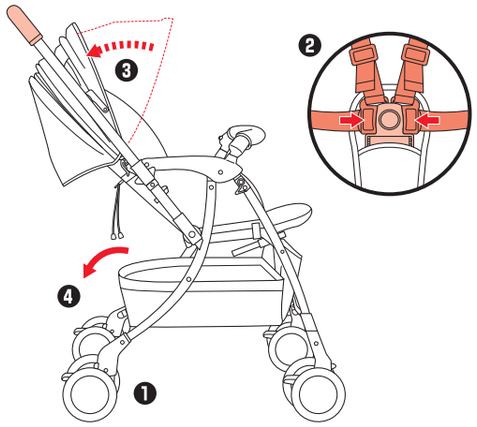


〈收折之前〉

❶請稍微往前進，確認推車者位置的車輪已自動鎖上。（請參閱P10）
❷將安全肩帶、安全腰帶，扣入安全股帶扣組。（請參閱P15）
❸收起遮陽篷。（請參閱P19）
❹置物籃裡的物品取出。

建議 ○立起靠背（參閱P18），即可收折成小巧體積。


建議 無法以單手收折時，請用另一隻手拉著開放型扶手來收折。

〈解除安全控制鎖〉

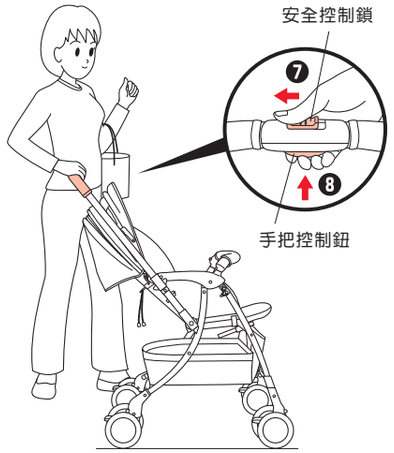


❺將安全控制鎖往箭頭方向滑動的狀態下，（標示為紅色。）
❻用力按住手把控制鈕。

〈收折〉

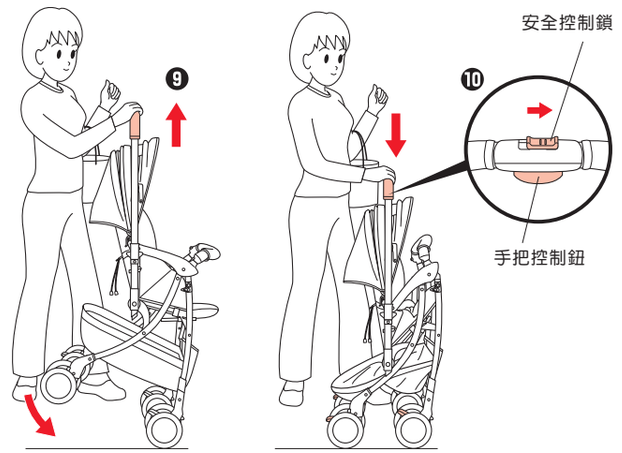

❼繼續握著，將手把往上提。然後將車體稍微前傾並且將手把往下押即可收折完畢。
❽將手離開手把控制鈕與安全控制鎖。
・手一旦離開，安全控制鎖就會自動滑動返回原位。

〈以面對面狀態收折時〉

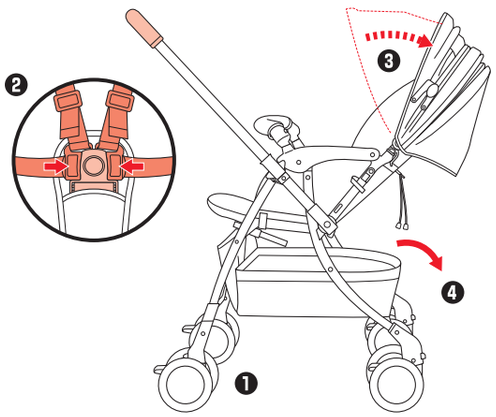

〈收折之前〉

❶請稍微往前進，確認推車者位置的車輪已自動鎖上。（請參閱P10）
❷將安全肩帶、安全腰帶，扣入安全股帶扣組。（請參閱P15）
❸收起遮陽篷。（請參閱P19）
❹置物籃裡的物品取出。

建議 ○立起靠背（參閱P18），即可收折成小巧體積。


建議 無法以單手收折時，請用另一隻手拉著開放型扶手來收折。

〈解除安全控制鎖〉




❺將安全控制鎖往箭頭方向滑動的狀態下，（標示為紅色。）
❻用力按住手把控制鈕。

〈收折〉

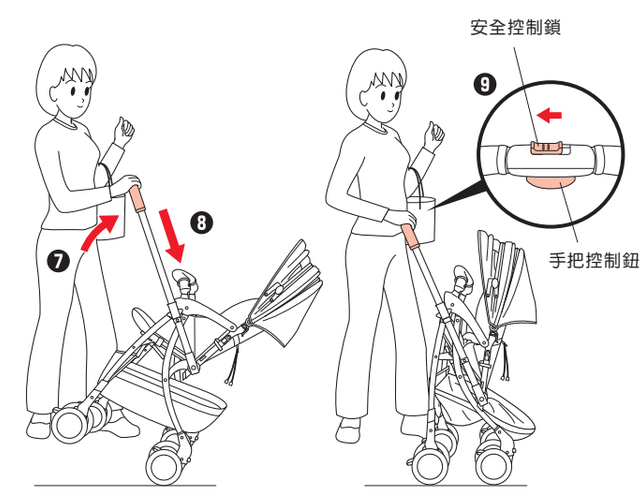


❼繼續握著，將手把往上提。
❽在此狀態下以前輪為軸心，壓下手把，即可收折。
❾將手離開手把控制鈕與安全控制鎖。
・手一旦離開，安全控制鎖就會自動滑動返回原位。

遮陽篷的拆卸方法

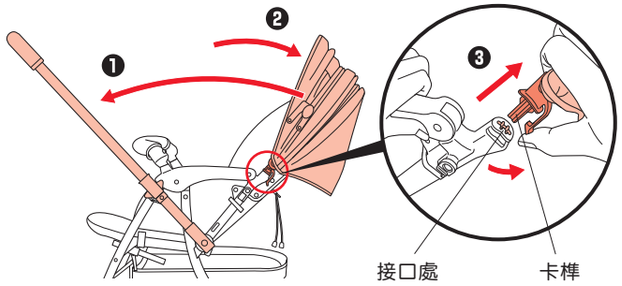


❶將手把切換至面對寶寶。(請參閱P9)
❷收起遮陽篷。(請參閱P19)
❸拉起左右兩邊卡榫下側的突起處向後輕扳即可自接口處拔出。

扶手保護套的拆卸方法

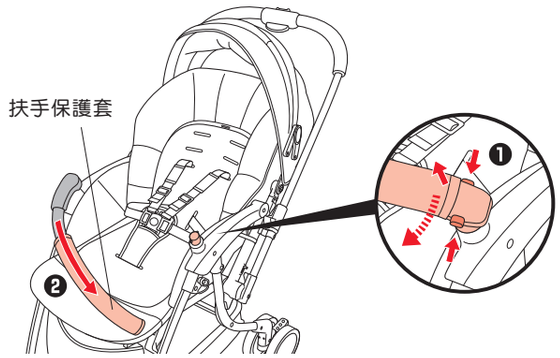

❶打開按鈕式開放型扶手。(請參閱P13)
❷取出扶手保護套。

多用途攜帶旅行組收納袋的拆卸方法

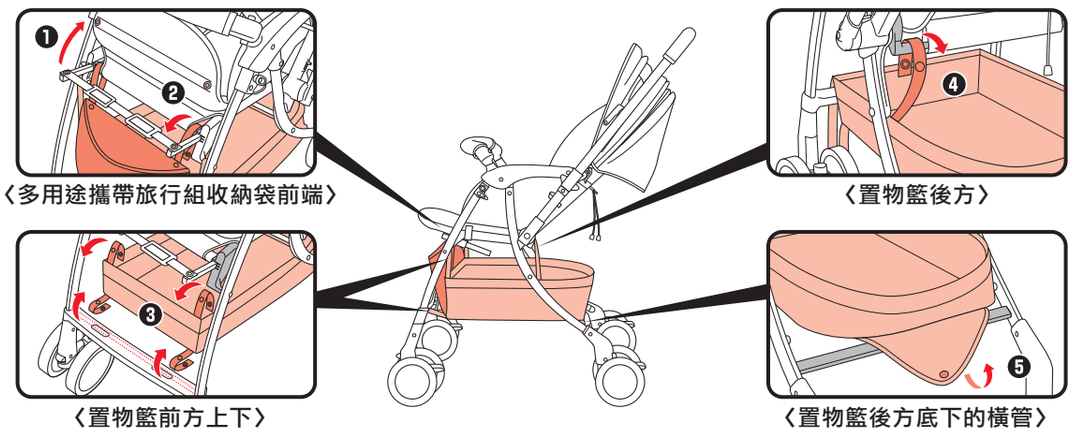


❶解開雙腳支撐架的固定扣。(左右)
❷將多用途攜帶旅行組收納袋前端的固定扣解開，取下多用途攜帶旅行組收納袋。(左右)
❸解開置物籃前方上下的固定扣。(左右)
❹解開置物籃後方的固定扣。(左右)
❺解開置物網籃後方底下的橫管固定扣。


⚠注意 ○請將置物網籃內所有物品取出後再進行拆卸動作。

座椅縫製品的拆卸方法


⚠警告 ○請勿讓寶寶乘坐在已取下座椅縫製品的手推車上，因恐發生手推車損壞等意想不到的事故發生。

・請先將置物籃、遮陽篷拆卸後再進行。(請參閱P23)

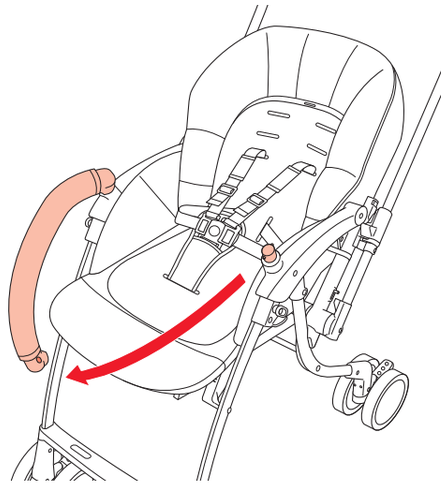

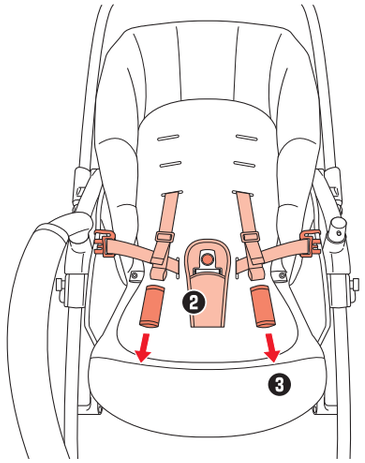


❶打開按鈕式開放型扶手。(請參閱P13)

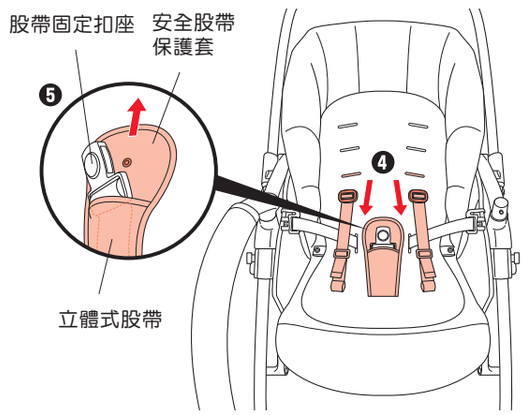


❹拉出安全肩帶(請參閱P17❶❷)
❺解開立體式股帶固定扣座，取下立體式股帶保護套。


❷按下股帶扣組的安全扣鎖，即可解開安全肩帶、安全腰帶。
❸自安全肩帶上取下肩帶保護套。

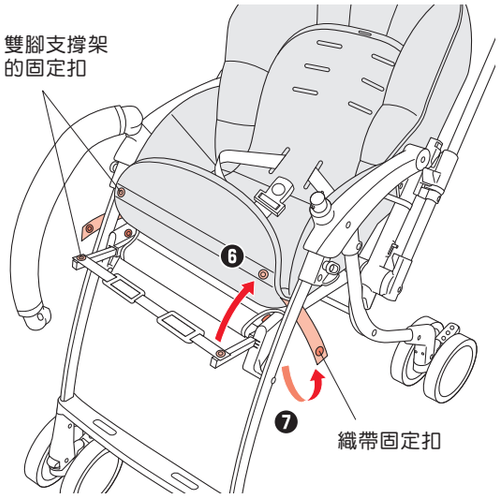

❻解開雙腳支撐架的固定扣。(2處)(當雙腳支撐架有使用時)
❼解開座椅縫製品下方的織帶固定扣。(2處)


座椅縫製品的拆卸方法

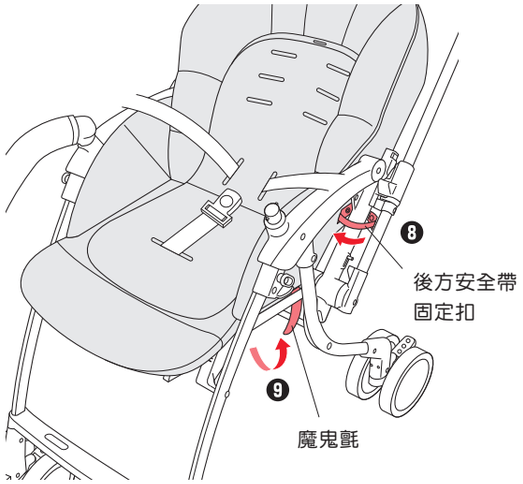


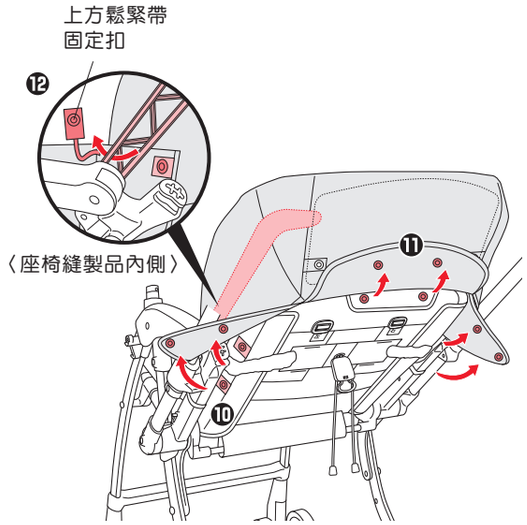

❽將座椅兩側後方的安全帶固定扣解開。（2處）
❾解開座椅縫製品下方兩側的魔鬼氈。（2處）

⓾解開座椅兩側的固定扣。（4處）
⓫解開靠背背面的固定扣。（2處）
⓬解開上方的鬆緊帶固定扣（2處）後抽出。

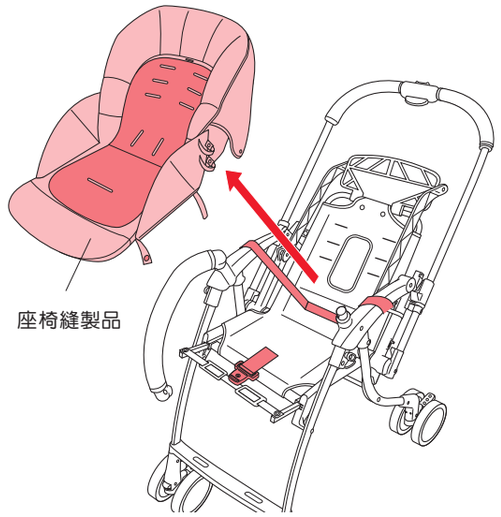


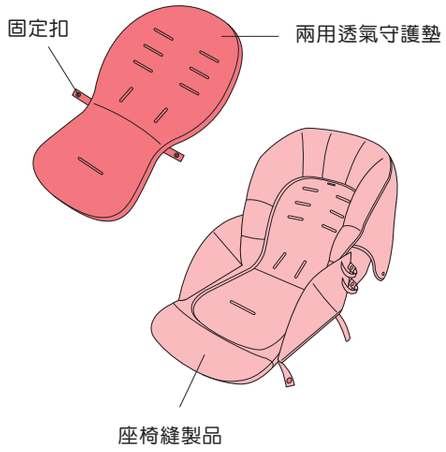


⓭將安全肩帶、安全腰帶取出後，即可取下座椅縫製品。

⓮解開兩用透氣守護墊的固定扣，並取出兩用透氣守護墊。


座椅縫製品的安裝方法

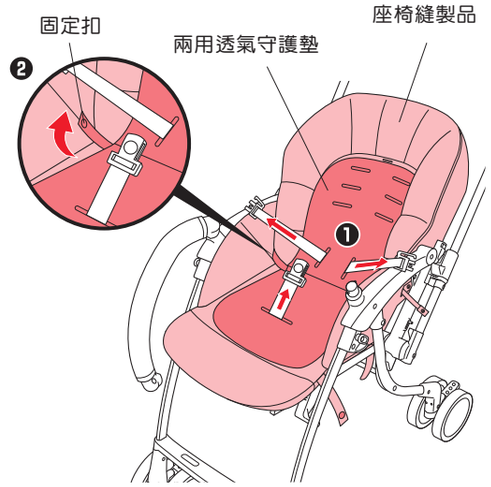


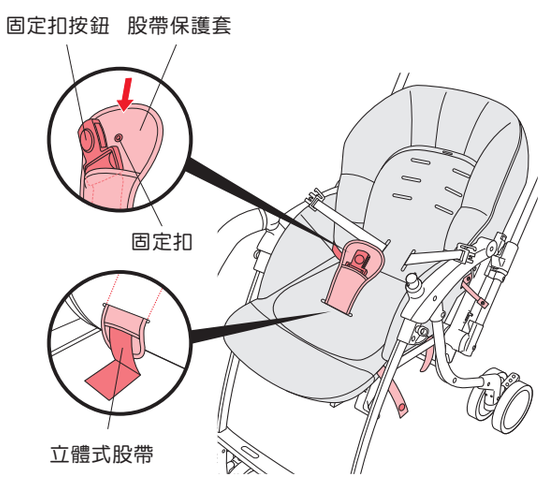

❶將立體式股帶與安全腰帶穿過導孔，裝上座椅縫製品。
❷安裝兩用透氣守護墊。

❸將立體式股帶套上股帶保護套，將固定扣內側與股帶保護套的固定扣扣上。股帶保護套的前端應穿出座椅的內側。

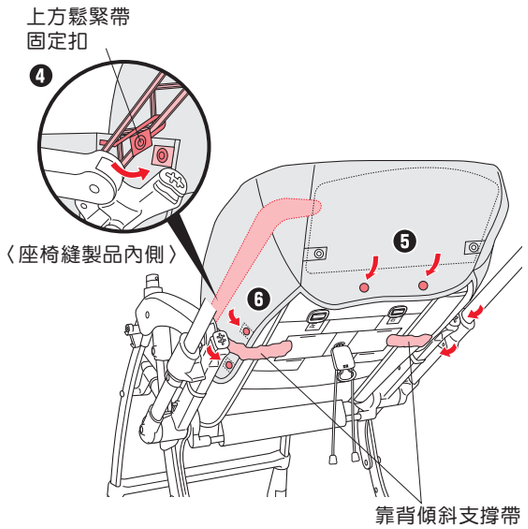


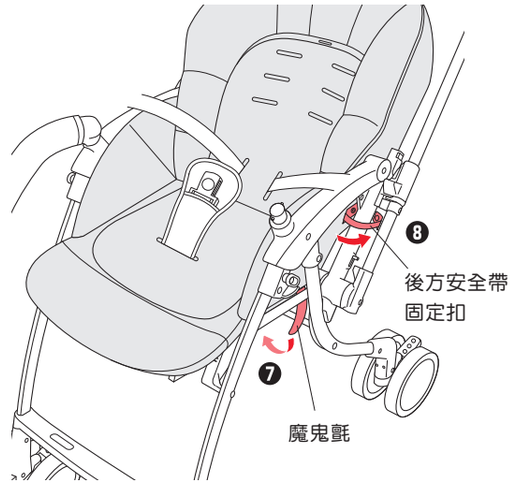


❹穿過鬆緊帶固定扣後，扣上固定扣。（2處）
❺將靠背背面的固定扣扣上。（2處）
❻將座椅穿過靠背傾斜支撐帶內側，將兩側的固定扣扣上。（4處）

❼將座椅縫製品內側的魔鬼氈黏上。（2處）
❽扣上座椅兩側的後方安全帶固定扣。（2處）


座椅縫製品的安裝方法

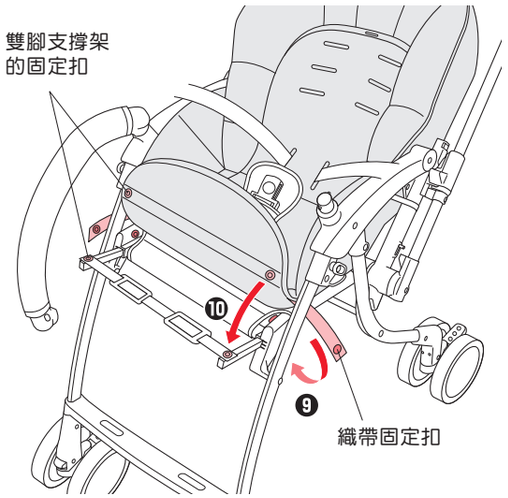


❾扣上座椅縫製品下方的織帶固定扣。（2處）
❿扣上雙腳支撐架的固定扣。（2處）
（若有需要使用雙腳支撐架時）

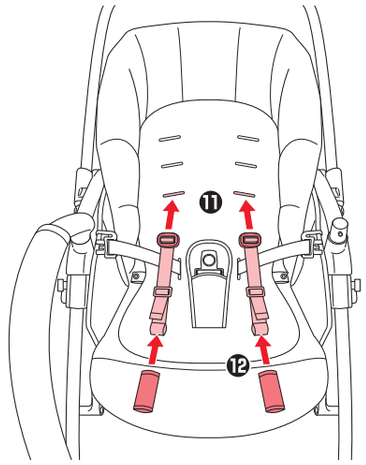

⓫安裝安全肩帶。(請參閱P17❶❷)
⓬安裝肩帶保護套。

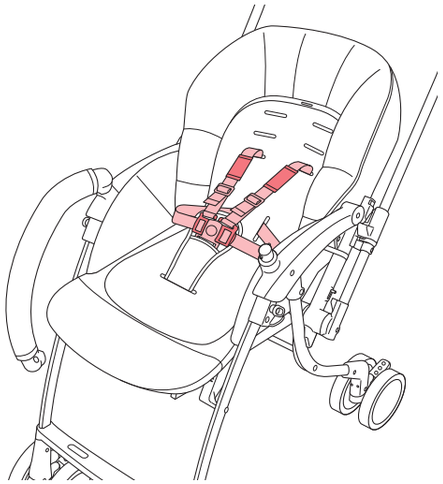

⓭將安全肩帶及腰帶扣入立體式股帶扣座。

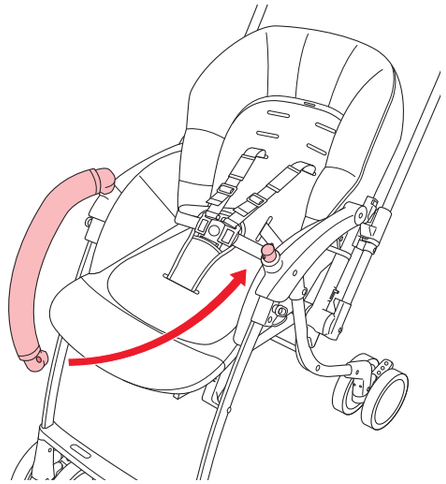

⓮扣上按鈕式開放型扶手。

日常保養

縫製品的清洗方法


〈座椅縫製品、扶手保護套、預防呼吸道閉塞型保護頭墊、腰部・臀部守護墊的清洗方法〉

○清洗時，請注意以下事項。



〈兩用透氣守護墊的清洗方法〉

○清洗時，請注意以下事項。



※請放入洗衣袋中，洗衣機水溫設定40度以下，並以低速弱洗程序清洗。

注意
○若要將縫製品晾曬於室外時，請於陰涼處平放晾乾。
○請不要使用鹼性清潔劑、酸性清潔劑以及含氯漂白劑。

〈遮陽篷、安全肩帶、置物籃的清洗方法〉

○請勿整件放進洗衣機裡清洗，請按照下述要領清洗。

●水溶性污垢（如果汁、唾液、尿液等）的情況：用40度左右的熱水將毛巾浸濕，輕輕擰乾後充分擦拭污垢處。再以乾毛巾充分擦拭水份後再置於陰涼處自然晾乾。

●非水溶性污垢（如牛奶、油脂、沙拉醬等）的情況：首先將中性洗潔劑溶解在40度左右的熱水中，再使用刷子或海綿輕輕刷洗污垢處。再用冷水或溫水洗掉中性洗潔劑，用乾毛巾充分擦拭水份後置於陰涼處自然晾乾。

注意
○若發現縫製品產生破損或異常現象，請立即停止使用，並請務必要聯繫維修中心進行檢查及維修。

車體的保養

〈框架及車輪的保養方法〉

○請勿對黏附在車輪上的泥土、灰塵等置之不理。務必使用濕毛巾等物品擦拭乾淨。

> **注意**
> ○車架及車輪黏附泥土及灰塵時容易發生故障，故發現此情況時請停止使用。
> ○擦拭泥土及灰塵時請勿使用稀釋液或揮發油等有揮發性的溶劑。

○車輪屬於消耗品。行進中若感到異常，可能須更換輪胎。請洽詢本公司維修中心。（參閱P32）

〈螺絲、螺帽類的保養〉

○請經常檢查螺絲、螺帽是否有鬆動，當發現鬆動時請盡速鎖緊。


〈按鈕式開放型扶手的保養〉

○當發現開放型扶手與車台連接處有灰塵時，請使用乾毛巾擦拭。

〈添加潤滑油〉

○請適時地在可動關節部位注入潤滑油。並請使用塑膠用的潤滑油。
○在注油之前，請先去除泥土及灰塵，並將水分擦拭乾淨。
○注油時，請在每個部位注入2~3滴左右。

●若無法順利折疊展開車體，且無法順利回轉迴轉固定器以及車輪與車體產生聲響，請在上圖 ⇨箭頭處添加市售塑膠用潤滑油，再重複開閉動作2～3次即可。

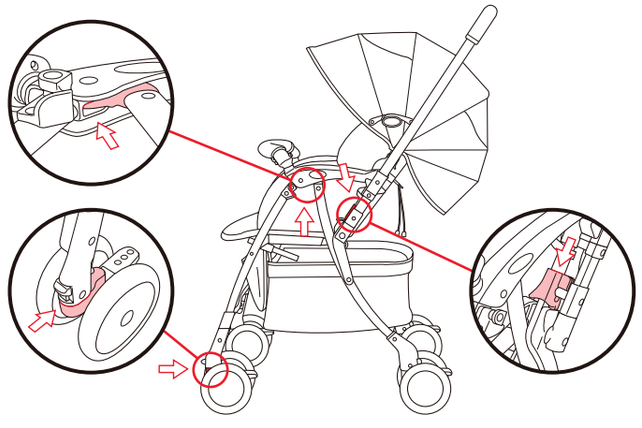

> **注意**
> ○按鈕式開放型扶手與車台連接處的附近及內部請勿使用潤滑油。
> 避免解開按鈕式開放型扶手時寶寶有掉落的危險。



○倘若採取以下的方法卻仍無法解決問題時，請與本公司維修中心連絡。（請參閱P32）

〈使用中發現問題時〉

問題	處理方法
手把控制鈕無法操作時	請先解除安全控制鎖之後再操作一次。（請參閱P7）
車輪無法迴轉時	請將左右兩邊的車輪迴轉固定鎖一併解除。（請參閱P12）
車輪的轉動不靈活時	請在車輪注入潤滑油。（請參閱P29）
後輪煞車器失靈時	請確認後輪煞車器部位是否夾到碎石等異物。
手把無法切換時	確認車體已完全開啟，開關確認鎖扣已上昇至最上方且手把內側的黃點標示已露出。（請參閱P8） 請先解除手把的左右安全控制鎖之後，再進行切換。（請參閱P10）
靠背無法豎直時	請先將寶寶抱離嬰幼兒手推車，然後拉動無段式平躺角度調節帶。（請參閱P18）
安全肩帶無法插入安全腰帶時	請確認是否夾到衣物或安全帶。
無法收折嬰幼兒手推車時	請先完成〈收折之前〉的動作，然後再進行收折步驟。（請參閱P21） 請確認開關鎖扣部分是否夾到安全帶。
上下電梯或電車之際，要將嬰幼兒手推車往後方移動，卻難以操作時	請提起手把，讓位於推車者位置的車輪稍微離開地面後再移動車身。
切換手把後，車輪呈現傾斜狀態，而難以推動嬰幼兒手推車時	請解除手動車輪固定器。
輪胎磨損時	行進中若感到異常，可能須更換輪胎。請洽詢本公司維修中心。（請參閱P32）

〈使用二手品〉

問題	處理方法
不了解之前的使用者是如何使用	對於使用狀態不明的商品，不建議使用。
嬰幼兒手推車出現裂痕或重大損傷時	切勿使用。

保管方法

○請將主體放入塑膠袋內，保管在沒有陽光直射的陰涼場所。
○請勿在上面放置重物、施加壓力的狀態下保管。恐造成故障或變形。

注意

○為避免遮陽篷變形，請勿橫倒手推車或放置重物在車上。且避免放置在高溫的場所裡做保管。
○請勿置於火源附近、勿在大熱天下放置於高溫車內。恐易使塑膠零件變形、無法維持性能。

廢棄方法

○請依照各區域的廢棄物處理方式做處理。
○為維護地球環境，請勿隨意放置丟棄。

保固與售後服務


〈保固事宜〉

○於品質保證期間內（自購買日起1年內），由於零件短少、加工不良等可歸責於本公司者、依照使用說明書及注意事項而在正常使用狀態下故障者，根據保固規定提供免費修繕服務。
自購買日起已超過3年之產品，雖仍受理修理，但產品修理部位以外之品質，則恕不保證。
此外，已停產之產品，可能因修理所需零件已無庫存而無法修理。（零件之保有期間為停產後3年期間。即使於3年內，零件之顏色、布料之花樣等方面，亦有可能無法符合您所指定的，敬請見諒。）

〈售後服務事宜〉

○使用中發生故障等情況，或檢查中發現時，需要更換零件或修理時，各部位之固定部位發生鬆動或異音、零件缺損或車輪轉動有異常時，以及感覺到其他異常時，請停止使用，並確認產品名稱、型號、批號（參考下圖）後，向本公司維修中心聯絡 。

○聯絡時，請務必告知本產品之品名、型號、批號，以利進行後續處理作業。

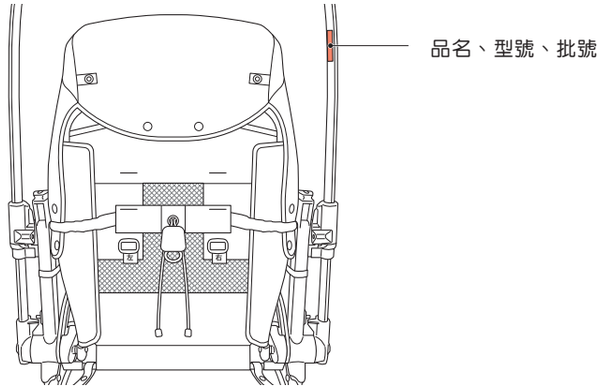

維修服務中心聯絡方式

台灣愛普力卡股份有限公司 維修服務中心
連絡電話：（03）6561261
服務地址：新竹縣竹北市福興路885號


MEMO

MEMO

LUXUNA DUAL

Aprica

- This product is a Carry Travel System (CTS) which can be used in combination with a baby sling and dedicated stroller types.
- The baby sling has to be purchased separately.

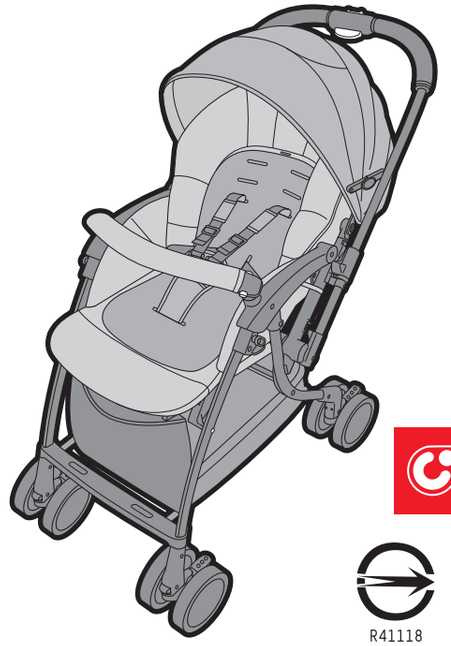

Carry Travel System

R41118

SG安全基準A形

User Manual

***For ASEAN countries ONLY**

Thank you for purchasing this product.
This product is suitable for babies 1 month to 36 months old, and under 15 kg.

※One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

Please read this manual carefully before use and use it correctly. Please do not use any method except the ones specified in this manual to operate this product. Doing so not only leads to malfunctioning of the product but also endangers your child.
Please keep this book carefully for future reference.

Table of Contents

Before use

Precautions before use 1
Suggestions / Standards / Warning marks indicator
Please note when using .....2~4
Warning / Caution
When unpacking the product.....5
Product features
Name of Parts 6

Stroller instructions

How to unfold the stroller.....7
How to switch the handle..... 9
How to use the manual wheel lock.....12
How to use the Wheel brake 12
How to open the button-type open handle 13
How to use the footrest 13
How to use the dual-use inner seat..... 13
How to install the protection pad products 14
How to sit baby in the stroller 15
How to adjust the height adjusting shoulder belt..... 17
How to use the stepless angled lay-flat regulator..... 18
How to use the sunshade.....19
How to use the basket.....20
How to fold the stroller.....21

Maintenance of sewing parts

How to detach the sunshade.....23
How to detach the handle protecting cover.....23
How to detach the CTS storage pouch 23
How to detach the seat fabric.....24
How to install the seat fabric 26

Simple routine maintenance

Routine maintenance 28
Troubleshooting.....30
Disposal / Storage 31
MEMO 32

Precautions before use

Suggestions

An infant is not a miniature adult.
Especially for the baby without a fully developed neck.
Please consider your baby's condition carefully when using a stroller.
①Please pay attention to the baby's condition and avoid using it continuously.
②Please avoid leaving baby under direct sunlight exposure.
The temperature inside the stroller is higher than what adult feels outside.
③Please stay away from crowded areas to avoid noise and dust.
④Please slow down when going through rugged pavement, and avoid the surface that could cause vibration and impulsion.
⑤For a concise approach, the images or assembly used in this User Manual may not be identical to the real product, so please check with the real product for reference.

SG standard

・The stroller marked with SG symbol meets the following standards regulated by Japanese Product Safety Association. (This product qualifies as a SG standard A stroller.)

Range of application	This stroller is limited to one baby passenger, and is used for normal family and child movement such as outdoor activities or shopping.	
Stroller style	**Stroller A**	Stroller for one-month-old* baby whose neck is not well developed and needs to lie flat in the stroller.
Suitable age	1 month to 36 months old	
Recommended continuous use time	Lie-flat: less than 2 hours. Sitting posture: less than 1 hour	
Lay-flat angle	More than 150°	
Wheel external diameter	More than 115 mm	

※One month old described here indicates babies following 37 weeks of pregnancies, weighed more than 2.5 kg in delivery, and born for over one month.

About the labels of this book.

・Symbol such as “WARNING”, “CAUTION”, and “Prohibited” are used to predict the condition if you do not follow the notice items. These are divided by the damage severity. The indicated contents are very important, so you need to abide by them.

Mark	Indication
⚠WARNING	Failure to observe these instructions could lead to death or serious injury.
⚠CAUTION	Failure to observe these instructions could lead to serious injury or product damage.

Prohibit Mark	Indication
⃠	Please do not perform these prohibited actions.

Tips	Tips and tricks when using the product.

Please note when using

・To avoid unexpected accidents, please read this user manual carefully, and follow the instructions thoroughly.

⚠WARNING ・Failure to observe these instructions could lead to death or serious injury.

To avoid the danger of the baby falling down.

Please buckle up shoulder belt, waist belt and Crotch belt before use.



Do not let the baby stand on the stroller.



If waist belt gets loose, the baby may stand up and fall down.

Please keep an eye on the baby. Even if the seat belts are buckled up, the baby still could possible stand up, so please adjust waist belt according to the baby's developing condition.



If the wheel of stroller falls into the gutter on the pavement, the stroller will lose balance and could cause the baby or the user injury.

When roadway with latticed drainage ditch is encountered, please make sure the width of the stroller wheel is suitable. If suitable, then slowly push and stroll over.



When the front wheel gets stuck, please hold the handle with one hand and hold the stroller leg with another hand to lift the front wheel. Please do not lift the entire stroller.



When parking the stroller on a ramp area, the stroller may slide or overturn automatically.

Whether baby is in or out of the stroller, please lock the wheel brakes on both sides to make sure the stroller will not slide.



When baby or belongings are on the stroller, please do not trust brake too much, since the road surface and the duration of structural function varies, and the brake may not be able to completely stop the stroller.




Even if the brake is locked, please do not leave the baby inside the stroller and outside your range of visibility.



The stroller could lose its balance when you can not see the road condition and fall over.

When the baby is in the stroller, please do not lift up the stroller.

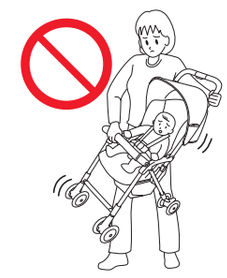

<Next page>

Before use

⚠WARNING · Failure to observe these instructions could lead to death or serious injury.

Since the stroller may overturn, and injure the baby.

Please do not let two babies ride at same time or let the baby sit beside the seat cushion.




Please do not use it in a place with height differences such as stairs or escalator.




There may be a risk of the baby stroller folding up causing the baby in the baby stroller to fall off or get caught in the baby stroller.

When using the front-facing position, please check to make sure that the safety latch has been raised to the uppermost position.

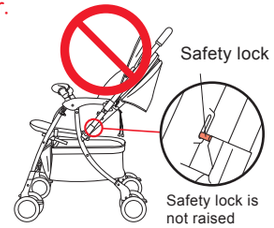

When using the rear-facing position, please check to make sure that the yellow dot indicator on the inner side of the handle is visible.

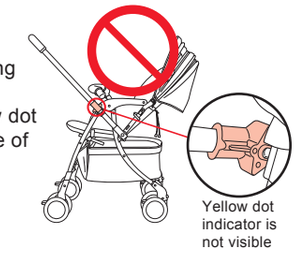

Since the stroller may overturn, and injure the baby.

When the baby is on the stroller, please do not place materials on any place other than the storage basket. Do not hang objects on the handle, and do not lean on the handle.



The road surface may cause the temperature inside the stroller to get high and harm the baby's body.

Please do not use for a long time in high temperature or under strong sunlight.



To avoid the baby being wound up by the seatbelt and result in the danger of suffocation.

Please use shoulder belt and waist belt together, and adjust these to the positions that fit baby's figure.



It may damage the stroller, harm the baby, or cause other accidents.

Please do not push too hard when using stroller.



All movable joint of stroller may pinch the baby, and the stroller main frame may hit the baby or user.

Please keep the baby away when you are folding the stroller.



Please watch out for baby's hands and feet while installing the button-type open handle.



⚠WARNING · Failure to observe these instructions could lead to death or serious injury.

It may cause the stroller damage and hurt the baby or user.

- Do not touch the handle lever when switching the andle.
- When the baby sits in the stroller, please align baby's legs to the position of crotch belt to avoid stroller turning upside down or backwards.
- Any person except our maintenance personnel should not disassemble, install or remold the stroller.
- Please do not use this product when seat fabric article is removed.
- Please do not use this product when it has been vigorously struck or fallen down.
- Please do not use it as a toy.
- Please do not use this stroller for any purpose other than for the baby to ride in it.

⚠CAUTION Failure to observe these instructions could lead to serious injury or product damage.

- Please do periodic inspections and maintenance.
- Before use, please make sure the mainframe and seat fabric article of the stroller are completely and correctly installed.
- Before using a stroller, which has not been used for a long time, please inspect and maintain the stroller first.
- Even if baby is not on the stroller, please do not place the stroller in a dangerous area such as steep hill or sidewalk close to driveway.
- Please do not use the stroller when screw or screw cap is loose.
- Please do not combine two strollers and use them together at same time.
- Please do not push the stroller by lifting up the front wheel, since this may cause the rear frame to be bent and deformed or breakdown.
- For the baby's safety, please push the stroller at a normal walking speed (about 4 km per hour)
- Do not touch the handle lever when switching the handle.
- Do not touch the handle lock when the baby stroller is in its folded state. Otherwise, the handle lock may be released, thus preventing the baby stroller from opening.
- Do not touch the handle lock when closing the baby stroller. This is to prevent fault in the baby stroller.
- Please do not push the stroller to sandy or muddy areas (since sand may enter the joints and cause unfolding difficult.)
- Please do not ignore it when the frame is contaminated with sand or mud. (since sand may enter the joints and cause unfolding difficult.)
- A stroller is for a baby to ride on, so please do not install any extra components, sold on the market, on the stroller to avoid damage.
- Please do not put object over 5 kg in the basket torage.
- Please do not use it to move objects.
- This product is only used for baby's riding.
- Please do not use it on a bus.
- This product is not designed for using on the bus. If using on bus, turning or urgent braking of the bus may cause overturn or other accidents.
- CAUTION for using on subway.
- This product is not designed for using on the train. If using on the train, turning or urgent braking of the train may cause overturn or other accidents, so please use the stroller brakes and pay a lot of attention to it. User will need to undertake the responsibility of any accident.
- Please do not rush to get on and off the train when using in the subway. The train may not sense the situation when stroller is gripped by train door, and get the baby injured.
- Please do not use it on snow-covered or frosty pavement.
- Please do not use it in strong wind. · Please do not use under thunder.
- To avoid increasing the temperature inside the stroller, please do not use the rain shade indoor, an area close to source of ignition or high temperature location.
- To avoid deformation of plastic component and losing its original function, please do not place the stroller close to any source of ignition or inside the car with high temperature in the summer.
- When switching the handle (front-facing to rear-facing, or rear-facing to front-facing), be sure to lock the two-way switchable handle.
- Please do not do anything that could cause the stroller to breakdown.

· Do not push the baby stroller over a place with raised elevation by force. This is to prevent damage or fault in the baby stroller.

<Crossing a place with raised elevation>

In face-to-face situations, step on the pedal plate of the stroller and lightly push the handle to push the stroller over the height different area.

<Face-to-face situation>



In back-to-face situations, push the handle lightly and lift up the safety handle at the same time to push the stroller over the height different area.

<Back-to-face situation>



When unpacking the product


・Please check every component when unpacking the product.
・Please contact the distributor or our company if any component is missing, mistaken, or damaged.

Framework

・This product is folded when packed in the box.
Please see P7 on how to open the stroller.

・Unpacking the product.

The front and rear stoppers are in the locked position.
Please release the front and rear stoppers before use. (See page 12)

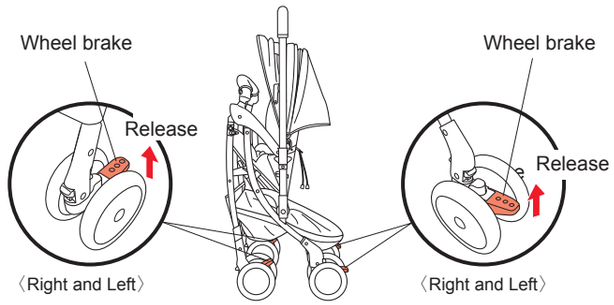

⚠CAUTION ・Before use, please release the locking status. (See P12)

Accessory



Protective head pad that prevents respiratory tract blockage (Installed on the baby stroller)



Waist and buttocks protection pad




User Manual

⚠ WARNING ・Keep the packaging material and storage bag out of reach of the child. They pose suffocation risk to the child if they are placed over the child's head.


〈Product features〉

・Handle is 2-way use with back-to-face and face-to-face
・The baby stroller can be closed whether the handle is in the rear-facing or front-facing position.
・The stroller can stand alone in folding status.
・The frame uses a lightweight aluminum tube.

Name of Parts

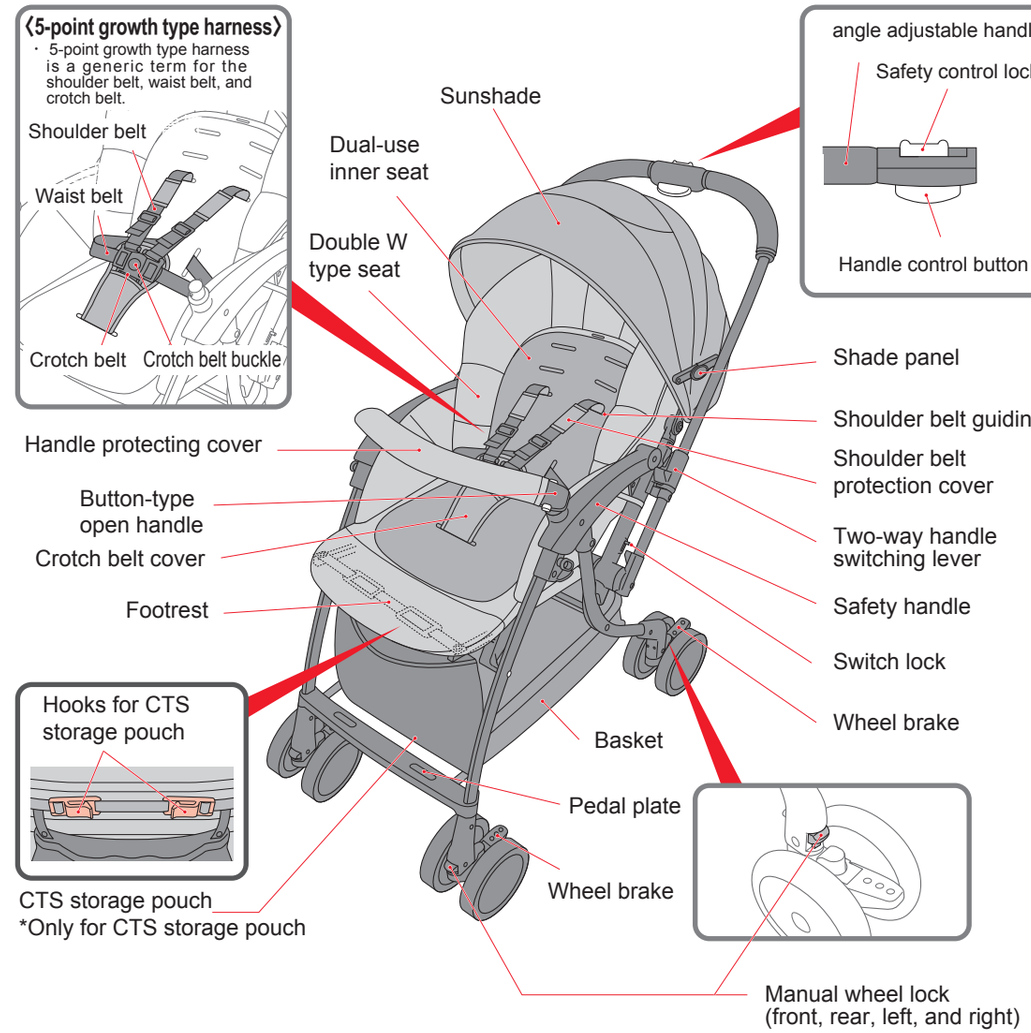

<The back of backrest>

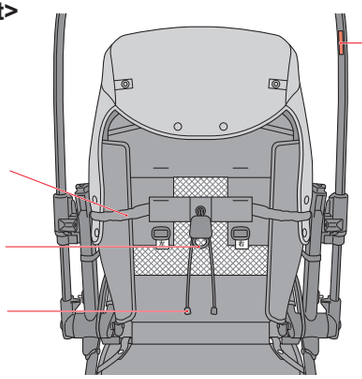

How to unfold the stroller

・The baby stroller can be opened whether the handle is in the rear-facing or front-facing position. After taking this product out from the box, the handle is in the front-facing position.

WARNING

・Please do not fold or unfold the stroller when the baby touches or is close to the stroller, since the movable joint may hurt the baby's fingers, hands, or feet, or the stroller may hit the baby's body and hurt the baby.
・Please do not let the child operate the stroller, since this may result in the dangers of falling down or other accidents.


Little reminder

・Since the stroller is packed inside the box, it may not be able to unfold smoothly. Please repeatedly operate 2-3 times to unfold it.


WARNING

・When in use, please follow the instructions in <Check lock status> to ensure that the stroller body is fully opened. If the stroller body is not fully opened, there may be a risk of the baby stroller folding up causing the baby to fall off or get caught in the baby stroller.


〈Opening the baby stroller in front-facing position〉

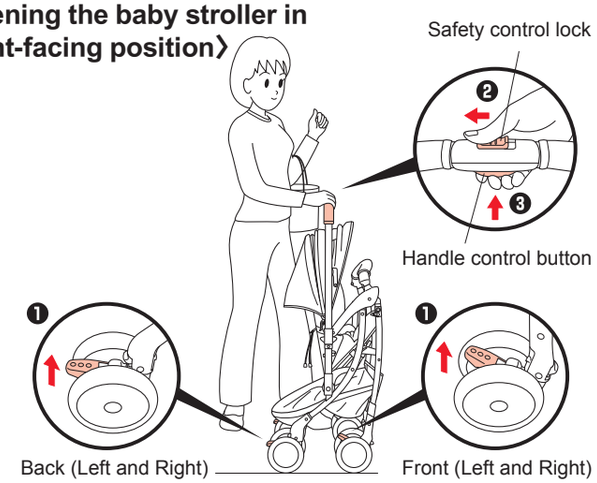


❶ Unlock the wheel brake. (See P12)
❷ Slide the safety control lock in the direction of the arrow to release the lock. (Red colour is indicated.)
❸ Press and hold the handle lever.

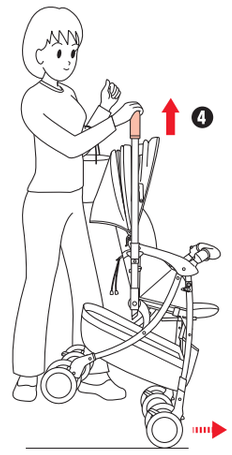

❹ Hold on to the handle with one hand and lift the rear wheel slightly off the ground.

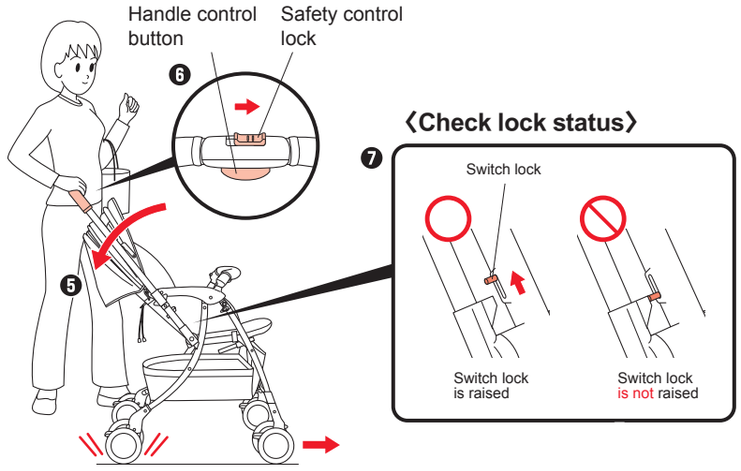


❺ Continue to hold on to the handle, push the handle down towards to the rear wheels to open the stroller fully.
❻ Let go of the handle lever and handle lever lock.
• The handle lever lock will reset automatically right after the hand has moved away.
❼ Check to make sure that the Switch lock has been raised to the uppermost position.

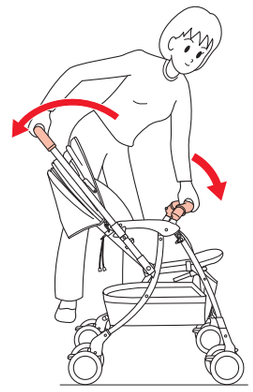


Tips
・If it is difficult to unfold it with a single hand, please use another hand to hold the button-type open handle to unfold the stroller.

〈Opening the baby stroller in rear-facing position〉

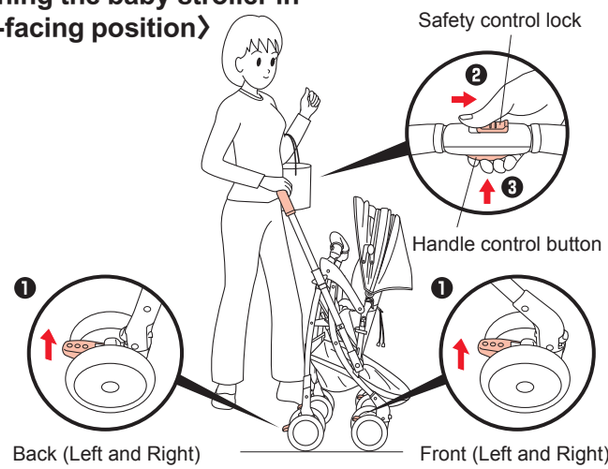


❶ Unlock the wheel brake. (See P12)
❷ Slide the safety control lock in the direction of the arrow to release the lock. (Red colour is indicated.)
❸ Press and hold the handle lever.

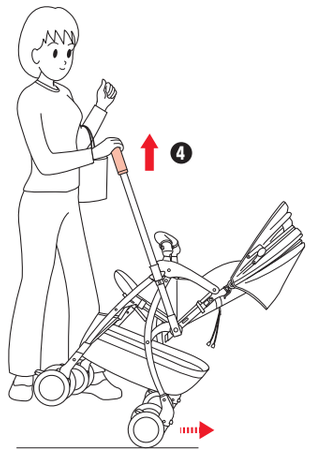


❹ Hold on to the handle with one hand and lift the rear wheel slightly off the ground.

WARNING

・When using the rear-facing position, please be careful to avoid getting hit in the leg by the step on the baby stroller.

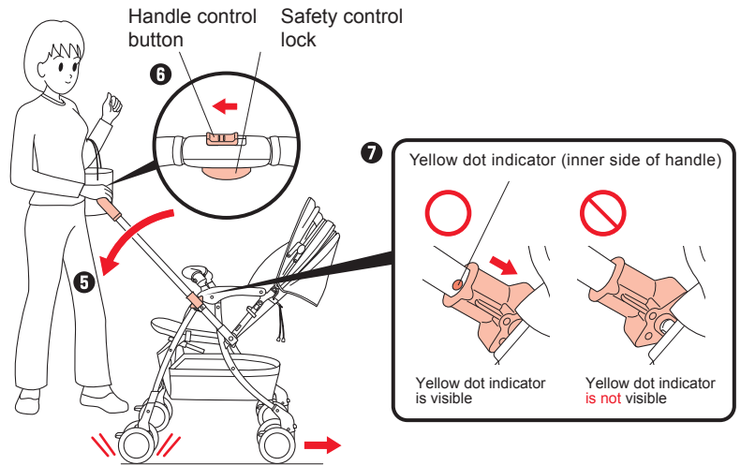

❺ Continue to hold on to the handle, push the handle down towards to the rear wheels to open the stroller fully.
❻ Let go of the handle lever and handle lever lock.
• The handle lever lock will reset automatically right after the hand has moved away.
❼ Check to make sure that the yellow dot indicator is visible.

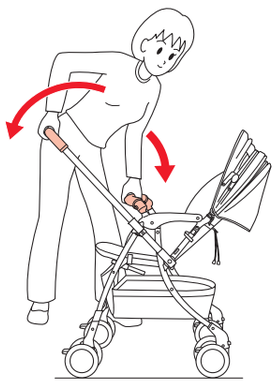

Tips
・If it is difficult to unfold it with a single hand, please use another hand to hold the button-type open handle to unfold the stroller.


How to switch the handle

WARNING


- Do not touch the handle lever when switching the handle.
- Please ensure that swivel lock levers (left & right) on the forward side of the moving direction have been released when switching the handle. Otherwise, the wheels on the user side will not be locked automatically, and there may be a risk of the baby falling off due to the baby stroller tumbling over.
- Do not perform the handle switching operation if the baby stroller is not fully opened.
- Ensure that the baby's limbs, fingers or toes are not caught by the baby stroller when switching the handle.
- Do not switch the handle on a slope. The baby stroller may move in an unexpected direction or tumble over, causing the baby may fall off the stroller.
- Do not perform the handle switching operation while pushing the baby stroller.
- When switching the handle from front-facing position to rear-facing position or vice versa, please ensure that the left and right handle locks are firmly engaged with the support pins. Move the handle in a vertical direction to confirm that they are locked in position. There may be a risk of the baby stroller tumbling over, causing the baby to fall off the stroller and resulting in injury to the baby.

〈Switch the handle〉

〈Facing the baby's back〉

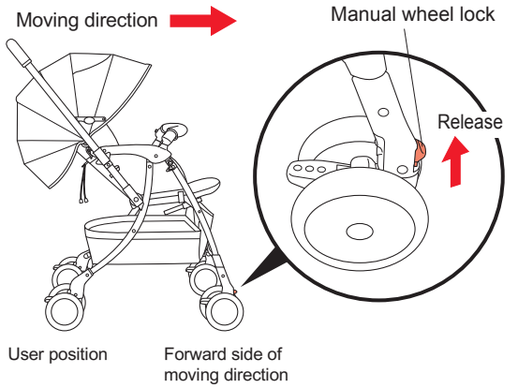


〈Facing the baby〉

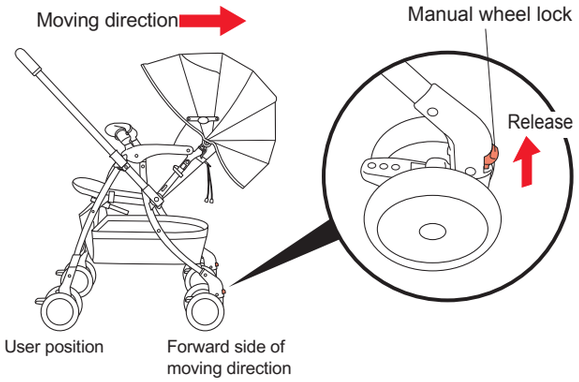

❶ Be sure the manual wheel locks of the front wheels are unlocked.
❷ Please ensure that stroller is open. (see P8.)

〈Switching the handle from front-facing to rear-facing position〉

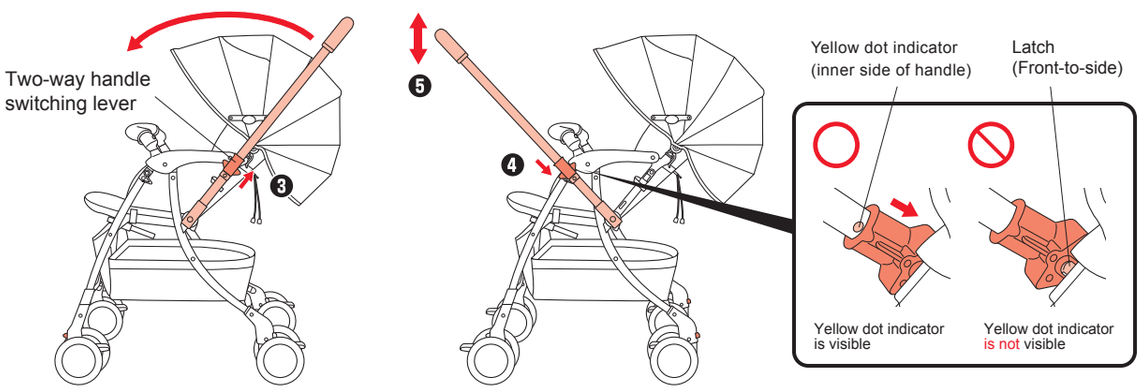


❸ Pull up the two-way handle switching lever (left and right) while switching the direction of the handles.

❹ Lock the latch of the two-way switchable handle. (left and right)
❺ Move the handle up and down to ensure the latch is locked. ◦


WARNING

- Please perform the handle switching operation on a flat surface. Pull up the left and right handle locks together to switch the handle.


〈Switching the handle from rear-facing to front-facing position〉

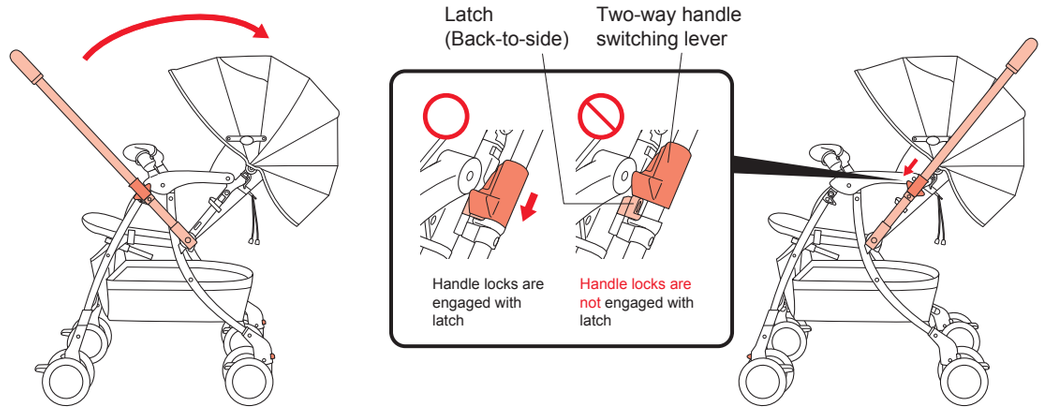

〈Facing the baby's back〉

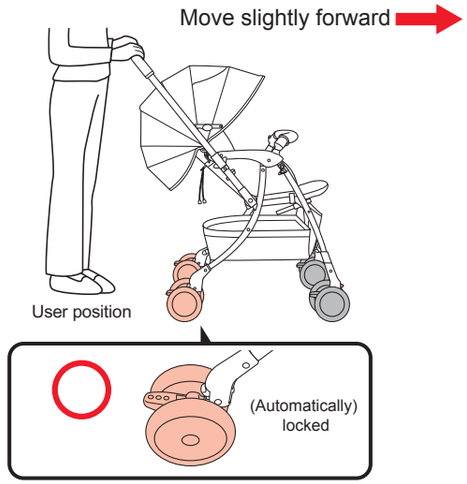

〈Facing the baby〉

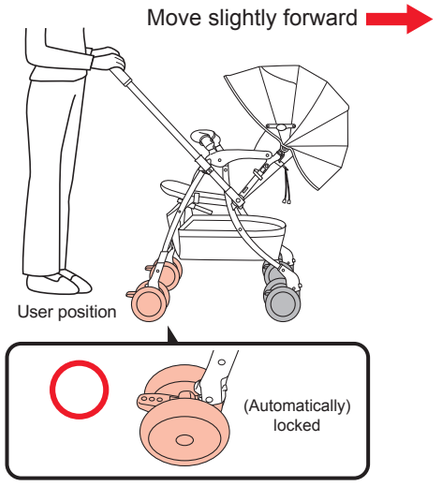

❻ Move the stroller slightly forward to lock the left and right wheels next to the user person.

- All wheels are still unlocked during or after the handle is switched, so follow step❻ to lock the wheels. Pushing the baby stroller in a direction opposite to that shown above may cause the wheels to veer and the wheels may not turn smoothly.

Tips


- In crowded places such as going up/down the escalator or boarding/alighting the train, if there is a need to move the baby stroller backward, the stroller's movement may sometimes be affected because the wheels on the pusher's side are locked. We advise to lift the stroller's handle slightly so that the wheels nearer to the pusher are a little bit off the ground before moving the stroller.

Stroller instructions

How to switch the handle


〈Mistakes that the manual wheel lock may make〉

〈Facing the baby's back〉

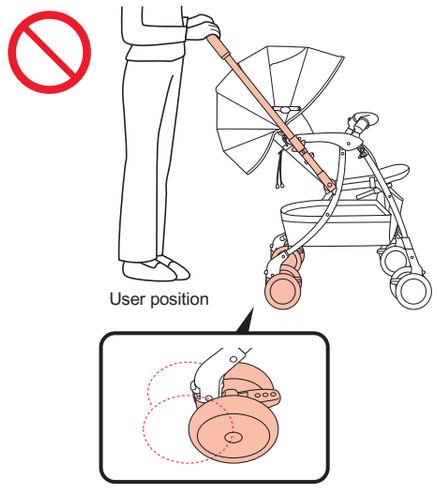

<Wrong wheel direction>

〈Facing the baby〉

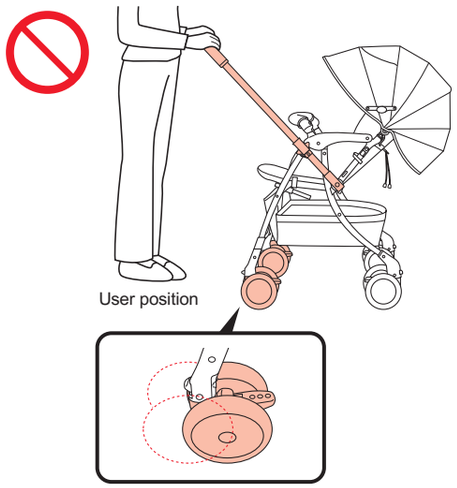


<Wrong wheel direction>

・When the left and right wheels next to you are locked, unlock the manual rotation locks of all wheels before switching the handle.


〈The switch function of the 4-wheel automatic positioning guidance system (Auto four wheels)〉

・The product has a direct control interlock switchable handle that can be switched to face the baby's face or back.
・When the direct control interlock switchable handle is switched, whether it's facing the baby's face or back, the rear wheels will be locked up automatically. The rear wheels next to the person pushing the stroller will be locked automatically; the front wheels will be unlocked and can turn freely.


〈Facing the baby's back〉 Standing in the place where you face the baby's back

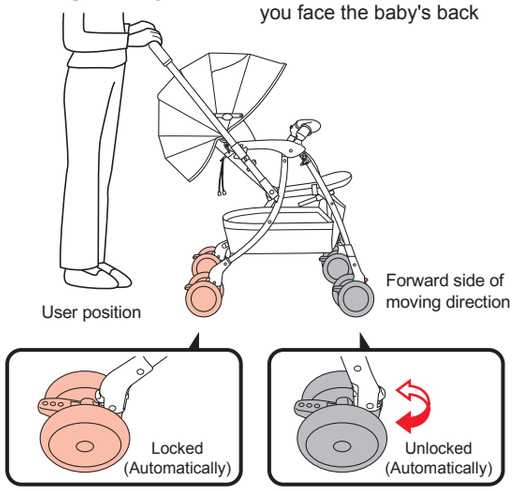

〈Facing the baby〉 Standing in the place where you face the baby

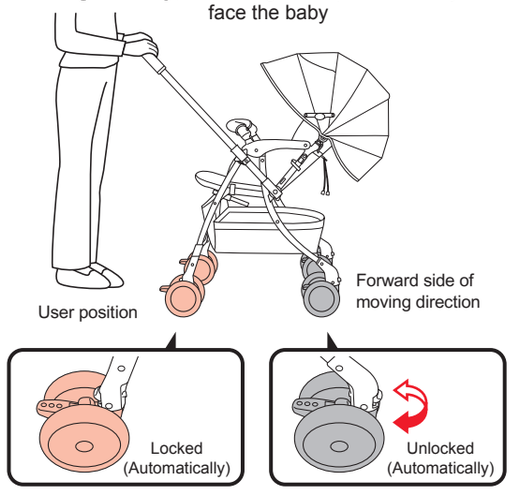

How to use the manual wheel lock

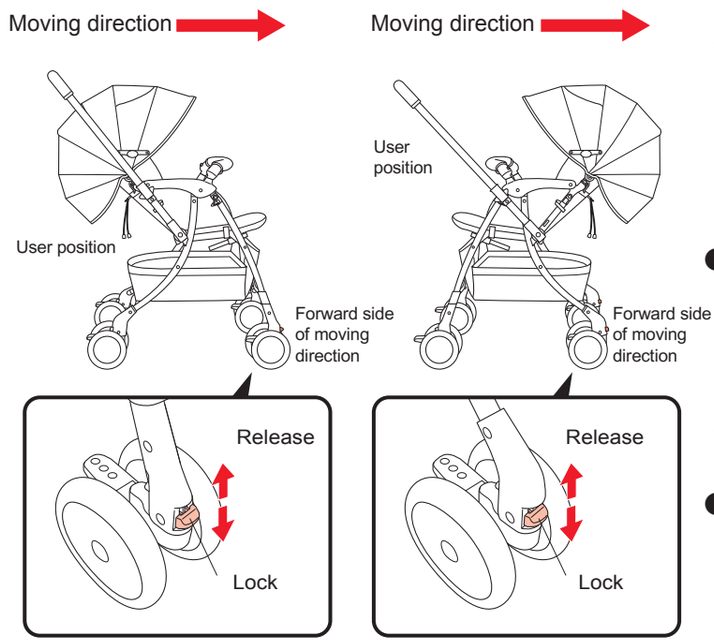

〈Lock〉

・When moving on rough and uneven surface, ramp, and inclined surfaces, please lock the left and right front side wheel of moving direction temporarily, so that the stroller will be easier to push.

●Pull down the front manual wheel lock to lock the wheels (left and right).

〈Release〉

・Please use the stroller in unlocked situation in normal situation.

●Pull up the front manual wheel lock to unlock the wheels (left and right).

・The swivels of the wheels on the user side are locked automatically and cannot be released manually.

How to use the wheel brake


WARNING

・Please lock the left and right brakes when putting baby in or taking baby out of the stroller.
・When baby or material is on the stroller, please do not trust brake too much, since the road surface and the duration of structural function varies, and the brake may not be able to completely stop the stroller.
・Even if the wheel brakes are locked, please do not leave the baby alone when the baby is on the stroller.

CAUTION

・Even if the baby is not in the stroller, please still lock the left and right wheel brake when leaving the stroller.

〈Lock〉

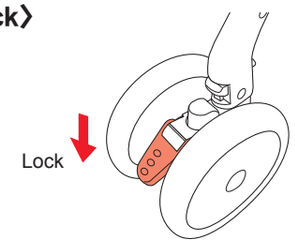


❶ Push down the wheel brake next to the person pushing the stroller to lock the wheels (left and right).
❷ Move the stroller back and forth a little bit to make sure the wheel brakes are locked.

Tips

・If it is difficult to lock the stopper, try to lock it again after moving the baby stroller back and forth.


〈Release〉

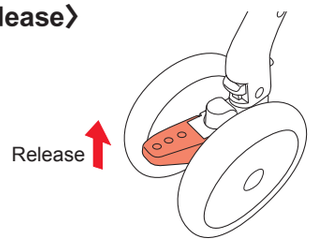


●Pull the wheel brake up to release the locking status (left and right).

CAUTION

・When locking or releasing the stopper by hand, be careful not to let your finger get caught in the gap indicated by the arrow.

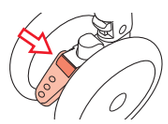

How to open the button-type open handle

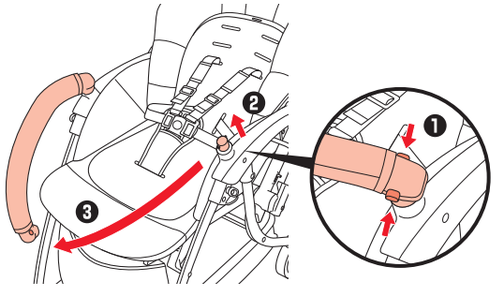


❶ Press and hold the inner and outer lock buttons simultaneously.
❷ Pull the button-type open handle outward to remove it.
❸ Lower the button-type open handle.

> ⚠ WARMING
> ・When attaching the button-type open handle, please be careful to avoid the fingers getting caught by the locks.

How to use the footrest


・When the angle of the seat is flat, use the footrest.

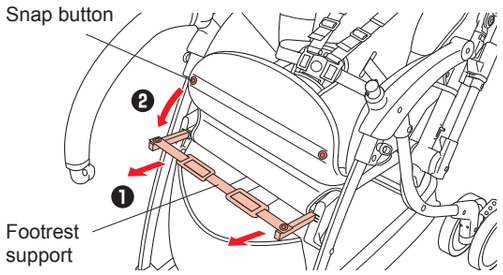


❶ Lift the seat and pull out footrest support.
❷ Fasten the snap buttons on the inside of the seat to the snap buttons at the front of the footrest support. (Left & right)

How to use the dual-use inner seat

・Either side of the dual-use inner seat can be used, depending on personal preference.

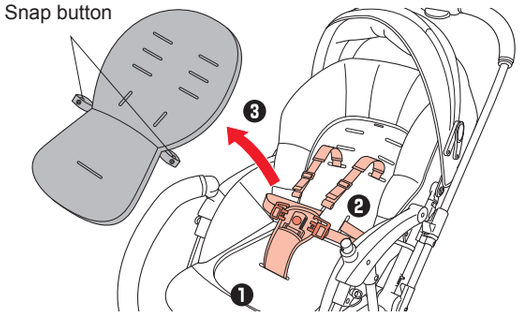

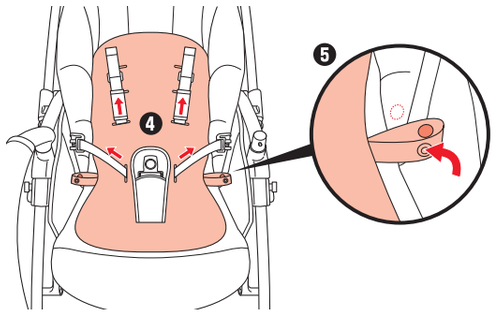

❶ Unfasten the snap buttons on the side of the dual-use inner seat. (Left & right)
❷ Push the crotch buckle button to unfasten the shoulder and waist belts.
❸ Pull out the shoulder, waist and crotch belts from the respective holes and remove the dual-use inner seat.
❹ Turn over the dual-use inner seat such that the rear side faces up and pass the shoulder, waist and crotch belts through the holes.
❺ Fasten the snap buttons on the side of the dual-use inner seat to the seat. (Left & right)


How to install the protection pad products

・The protection pad inside the stroller is used to assist the baby in maintaining a proper and accurate posture.

Prevent respiratory tract blocking type head-protecting pad

Please use this when baby's neck starts to get stable (about 4 months old)


・When installing head protection pad to prevent respiratory tract blockage, please install shoulder belt in the lower shoulder belt guiding hole.
Used up to 7 months old. (See P17 “To adjust the height of the shoulder belt”)

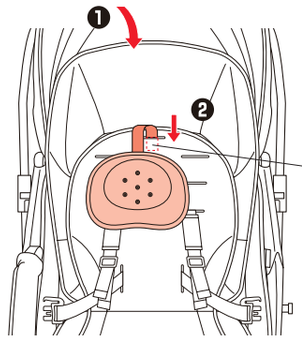

❶ Head pad installation is suitable for the use of lying flat. (See P18)
❷ Unfasten the hook-and-loop fastener strap on the head mamolu pad. Pass the strap through the pad installation hole in the direction of the arrow and fasten it to the hook-and-loop fastener at the reverse side of the seat.

> Tips
> ・When the head pad is not easy to install, remove the upper half of seat fabric article, and reinstall it again in the situation of being able to see the inside of seat. (See P25 “How to detach the seat fabric article ”)

〈Installing position for preventing respiratory tract blockage type head protecting pad〉

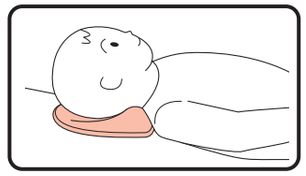


●Please leave the part in the lower end of head pad in baby's neck when installing it.
※Remove it immediately if the part does not fit baby's neck.

> ⚠ CAUTION
> ・When shoulder belt is installed through middle or upper shoulder belt guiding hole, prevent respiratory tract blockage type head protecting pad cannot be used.
> When baby’s nech is stable, please remove the prevent respiratory tract blocking type head-protecting pad.


Waist and buttocks protecting pad (for new-born to 3 yrs old.)

・Depending on baby's figure, even the baby under 3 years old is still possibly not suitable for waist and buttocks protecting pad. Please remove it if not suitable.

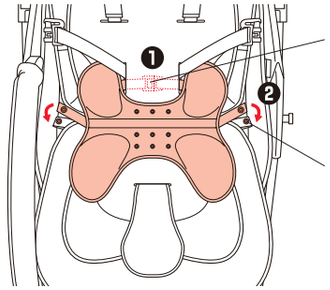

❶ Place the upper end of the buckle through the guide hole of the waist belt on the dual-use inner seat.
❷ Lock the buckles around the waist and hip protectors to the dual-use inner seat (left and right).

1 Preparation

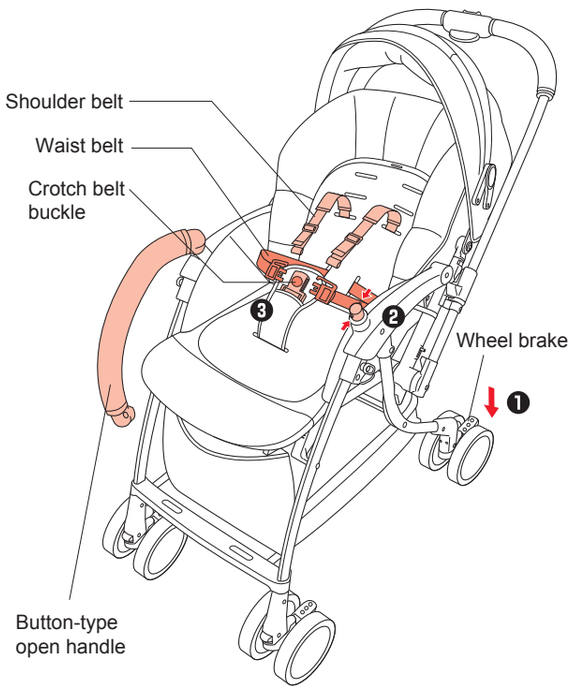



❶ Lock the stoppers on the user side. (Left & right)
❷ Open button-type open handle.
・Press and hold the inner and outer lock buttons to open the front guard.
❸ Unfasten shoulder belt and waist belt.
・Press the crotch belt buckle to unlock the waist and shoulder belts.

・If shoulder belt position needs to be changed, please see P17 “To adjust the height of the shoulder belt”.
・When the angle of the seat needs to be adjusted, please see P18 “How to use the stepless angled lay-flat regulator”.
・When using the footrest, please pull out the footrest. (See P13)

2 Seating the baby

〈Place the baby in the seat and fasten the seat belts〉

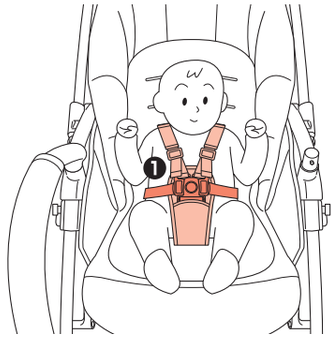

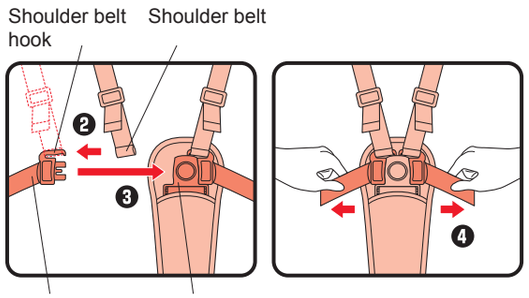


❶ Put the baby in the stroller first.
❷ Insert the shoulder belts into the shoulder belt hooks.
❸ Insert the waist belt into the crotch buckle.
❹ Pull waist belt to both sides, and adjust it to fit the baby.
※Please adjust shoulder belt, waist belt, and crotch belt buckle according to baby's development.

Tips
・When installing shoulder belt, the warning stick should face outward.
・Please make sure shoulder belt is not tangled up.

⚠Warning
・After buckling up seatbelt, please make sure waist belt on left and right side is adjusted to fit the baby.
・Please buckle shoulder belt on waist belt in use, since shoulder belt could possibly hurt the baby's neck.
・Please keep an eye on the baby. Even if the seat belts are buckled up, the baby could still stand up, so please adjust waist belt according to the baby's developing condition. If waist belt gets loose, the baby may stand up and fall down carelessly.
・When the baby sits on the stroller, please align the baby's inner thighs to the position of the crotch belt to prevent stroller from turning upside down and backwards.


〈Adjusting the waist belt〉

〈Fasten〉

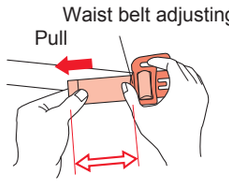


Keep more than 3 cm at the end.

〈Loosen〉

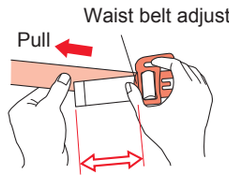

Keep more than 3 cm at the end.


●Gently press the waist belt buckle while adjusting the belt.

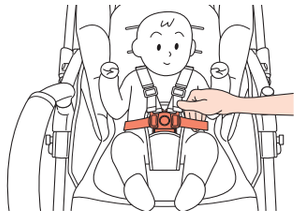


・A proper length of waist belt is to leave a space of 4 fingers between waist belt and the baby.

〈Adjusting shoulder belt〉


〈Fasten〉

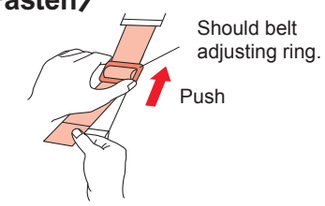

〈Loosen〉

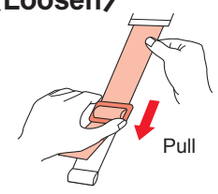


●Adjust it by moving the shoulder belt adjusting ring.

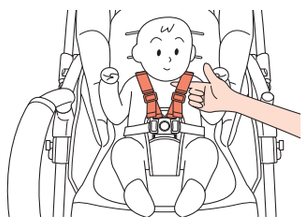


・The proper length of the shoulder belt is about the width of an adult's finger between shoulder belt and the baby.

〈Adjusting the crotch belt 〉

〈Loosen〉

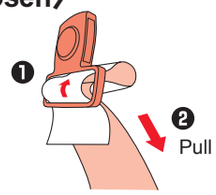


〈Fasten〉

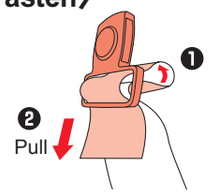

❶ Take the crotch belt out.
❷ Pull out the crotch belt to adjust the length.
・After the adjustment, make sure the buckle between the buckle set and crotch belt protector is locked.


⚠Caution
・Please adjust shoulder belt, waist belt, and crotch belt buckle according to baby's development. When the shoulder belt, waist belt, or crotch belt is too loose, even with a fastened seatbelt, the baby could still possibly stand up and fall down.
・Please be careful not to pinch the baby's fingers when closing the open handle.
・After closing the open handle, please pull it to make sure it is actually locked.
・When the baby is riding the stroller, please do not lift the open handle.
・Please save more than 3 cm for the end of the waist belt (⟺ part in the diagram)
・When adjusting the angle of the seat backrest, please adjust the length of shoulder belt, waist belt, and crotch belt .

〈Close up the button-type open handle〉

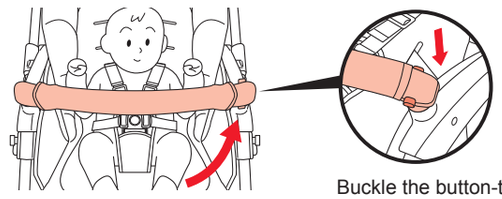

Buckle the button-type open handle

〈Unlock wheel brake〉

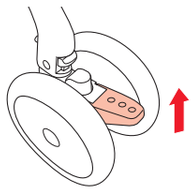

Release the locking status. (left and right)

Stroller instructions


To adjust the height of the shoulder belt

WARNING

・Adjust the height of the shoulder belts as the baby grows older.


〈Shoulder belt position〉

・When taken out from the packaging, the shoulder belts are set at the lower position.

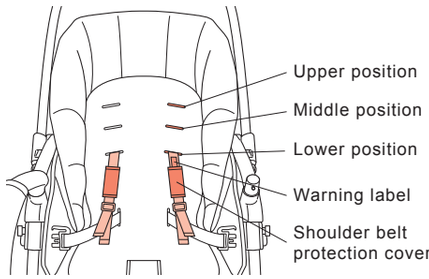

〈Shoulder belt guideline〉

・Shoulder belts should be inserted at the position below the

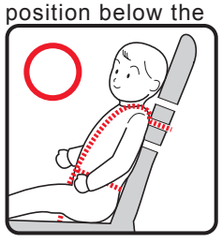

・Adjust the position of the shoulder belts based on the three levels below.

Approximate age (body size)	Shoulder belt position
18 – 36 months	Upper position
7 – 18 months	Middle position
1 – 7 months	Lower position


The figures above serve as a guideline and they differ across individuals.


Tips

・The warning label on the shoulder belts should be facing outward when fastened correctly.
・Check to ensure that the shoulder belts are not twisted.


〈Adjusting the height of the shoulder belts〉

・Release the shoulder, waist and crotch belts from the thigh buckle. (See step ❸ in “Preparing for use” on page 15).
・Remove the shoulder belts from the shoulder belt hooks. (See step ❸ in “Preparing for use” on page 15).
・Lift up the seat. (See step ❿⓫ on page 25).

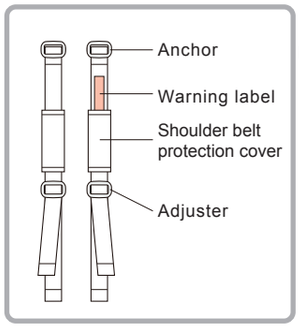

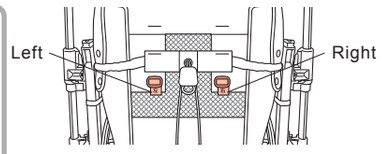


・Viewed from the rear of the stroller’s backrest, the shoulder belt labelled as left passes through the left side while the shoulder belt labelled as right passes through the right side.

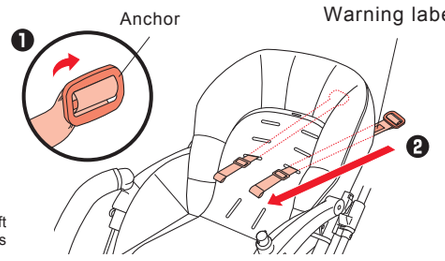


❶Turn the shoulder belt anchor such that it is parallel to the shoulder belt.
❷Pass the shoulder belt anchor through the shoulder belt hole of the seat and backrest.

〈Using the upper position〉

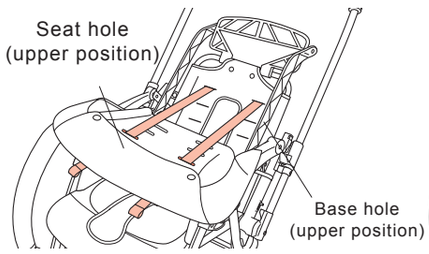


・Pass the shoulder belts through the seat hole (upper position) and base hole (upper position)

〈Using the middle position〉

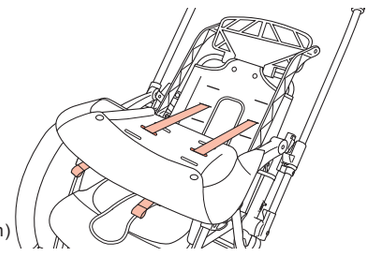

・Pass the shoulder belts through the seat hole (middle position) and base hole (middle position)

〈Using the lower position〉

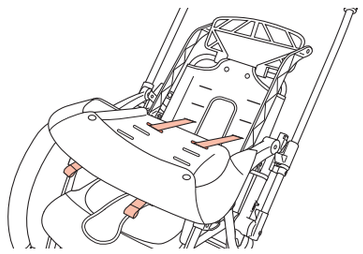

・Pass the shoulder belts through the seat hole (lower position) and base hole (lower position)

・After adjusting the belt, please check to ensure that the seat is reattached and the snap buttons are fastened. (See page 24)
・Insert the Shoulder belt protection cover into the shoulder belts.

How to use the stepless reclining adjuster


〈Guideline for the position of recline angle〉

Approximate age (body size)	Recline angle position
1 month – able to hold the head up	Fully reclined
Able to hold the head up – able to sit upright unaided	Fully reclined – halfway back (intermediate position)
Able to sit upright unaided onwards	Fully reclined – upright

Tips


・When the backrest is in fully reclined position, the headrest will rise.

Lowering the backrest

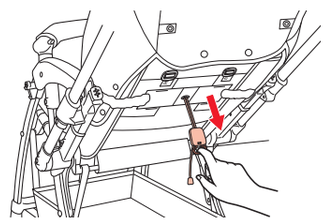

Reclining ring

〈Upright〉 〈Semi-reclined〉 〈Fully reclined〉

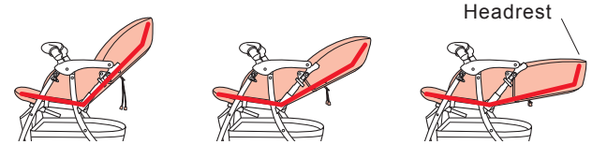

❶ Loosen the shoulder belts. (See page 16)
❷ Pull the reclining ring while supporting the baby with one arm.
❸Lower the backrest and adjust the recline angle while pulling on the ring.
❹Adjust the length of the shoulder and waist belts.

WARNING


・When lowering the backrest with the baby in the baby stroller, please loosen the shoulder belts first.
・After adjusting the recline angle, adjust the length of the shoulder and waist belts. If the shoulder and waist belts are loose, there may be a risk of the baby standing up or falling off the baby stroller even with the belts fastened.

CAUTION


・Do not adjust the recline angle while pushing the baby stroller.
・When adjusting the recline angle with the baby in the baby stroller, do not change the recline angle abruptly.
・Support the weight of the baby when lowering the backrest with the baby in the baby stroller.
・Please use the fully reclined position for babies who are not yet able to sit upright unaided.

Tips

・If the baby is able to sit upright unaided and the position of his head has reached the position of the headrest, lowering the backrest will result in an uncomfortable posture for the baby. As such, adjust the reclining angle to a position where the headrest will not move upward.



Raising the backrest

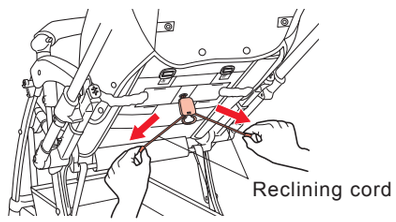

Reclining cord

●To raise the backrest, please pull the reclining cord to the left and right while the baby’s weight is not resting on the backrest.

Tips


・The backrest cannot be raised when the baby’s weight is resting on the backrest

How to use the sunshade


WARNING

・Only when the baby isn't touching the sunshade, you may open or close the sunshade. Otherwise, the moving parts, such as joints, may hurt the baby's fingers or hands.

〈Names of parts of the sunshade〉

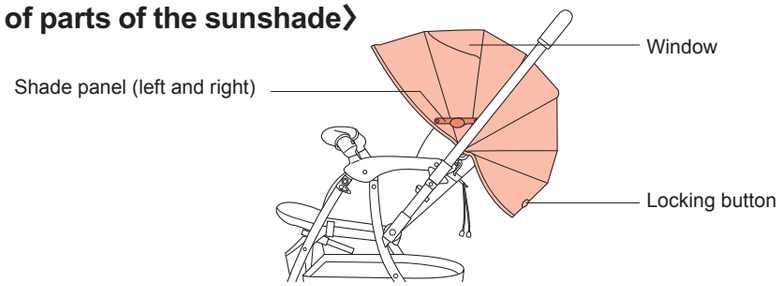


How to open

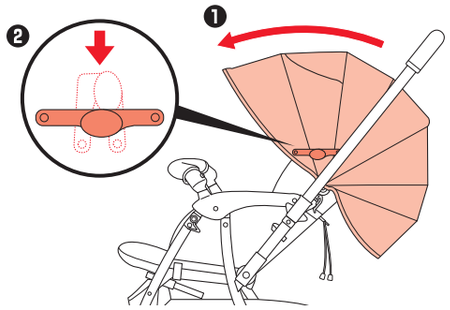

❶ Pull the sunshade forward.
❷ Push down the Shade panel (left and right).


How to close

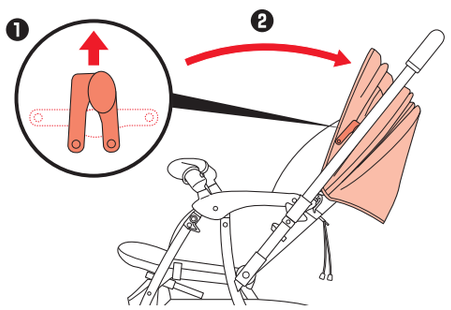


❶ Fold up Shade panel (left and right).
❷ Push back the sunshade.

How to adjust the angle of the shade

・The angle of the shade can be adjusted when the backrest reclines or the sunlight is weak.

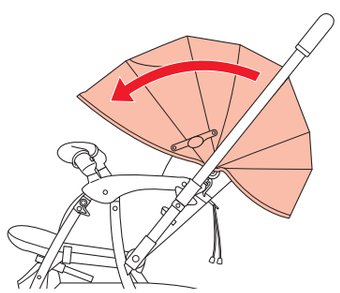


❶ When the sunshade is open, pull it forward to an appropriate position.

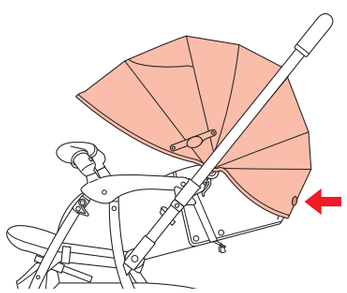

❷ When laying down the backrest, lock the sunshade buckle to the buckle on the backside of the headrest.

How to open the front or rear windows

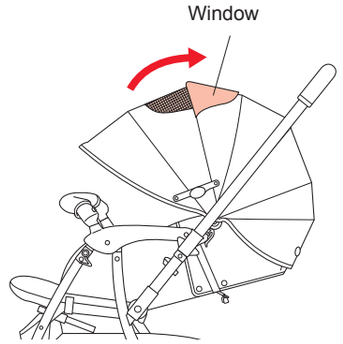


・You can check baby's status through the opened window cover on the shade.

How to use the basket

CAUTION


・Do not put sharp items into the basket for those may damage the basket.
・Do not load items over 5kg.
・Remove all items before folding the stroller.
・Please do not place valuable items in the basket.

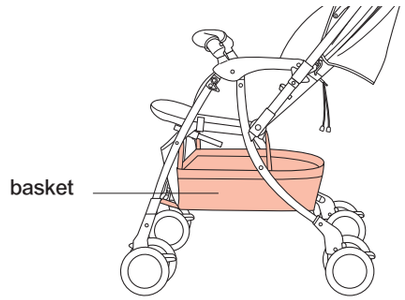

Tips

・When placing materials in the storage basket, please distribute the material weight evenly in the storage basket.

〈How to use the CTS storage pouch〉

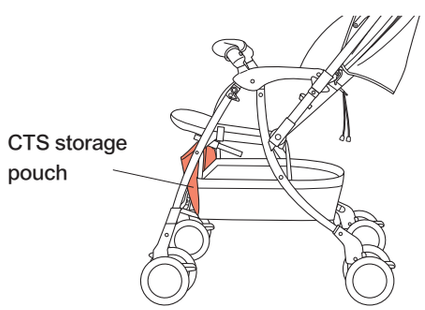

●The CTS storage pouch is only applicable to baby carrier equipped with Carry Travel System.

CAUTION

・Please do not place other items in the CTS storage pouch.

How to fold the stroller

・The baby stroller can be closed whether the handle is in the rear-facing or front-facing position.

WARNING

・Please do not fold or unfold the stroller when the baby touches or is close to the stroller, since the movable joint may hurt the baby's fingers, hands, or feet, or the stroller may hit the baby's body and hurt the baby.
・Please do not let the child operate the stroller, since this may result in the dangers of falling down or other accidents.


Little reminder

・Since the stroller is packed inside the box, it may not be able to unfold smoothly. Please repeatedly operate 2-3 times to unfold it.

CAUTION

・Do not touch the handle lock when the baby stroller is in its folded state. Otherwise, the handle lock may be released, thus preventing the baby stroller from opening.
・Do not touch the handle lock when closing the baby stroller. This is to prevent fault in the baby stroller.

〈Closing the baby stroller in front-facing position〉

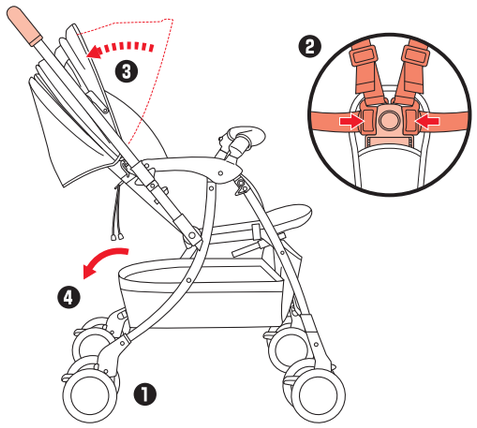


〈Before folding〉

❶Move the stroller forward a little bit to make sure the wheels are automatically locked. (See P10)
❷Fasten seat belt into the belt buckle. (See P15)
❸Push back the sunshade. (See P19)
❹Remove all items from the basket.

Tips ・Raise the backrest (see page 18) so that the baby stroller can be folded into a compact size.


Tips ・If it is difficult to fold it with one hand, use your other hand to hold the front guard while folding.

〈Releasing the lock〉

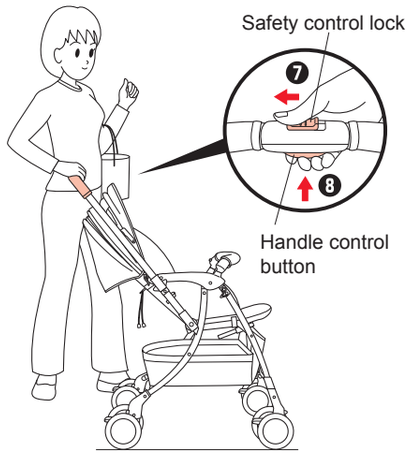


❺Slide and hold the handle lever lock in the direction of the arrow (red colour is indicated).
❻Squeeze the handle lever.

〈Folding〉

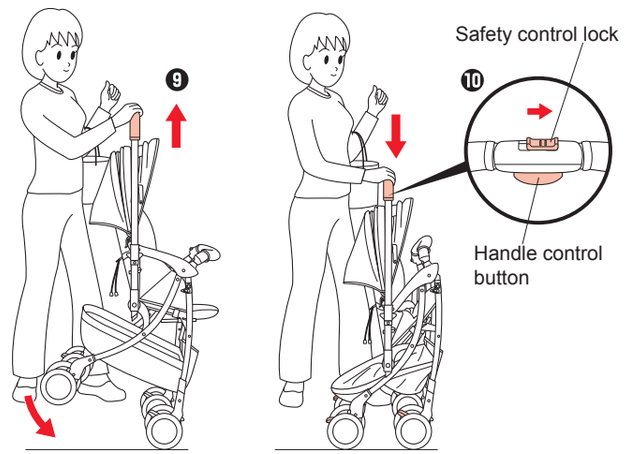

❼While gripping the handle lever, lift the handle. Tilt the baby stroller forward slightly and lower the handle to fold the baby stroller.
❽Let go of the handle lever and handle lever lock.
・The handle lever lock will reset automatically right.

〈Usage of the angle adjustable handle〉

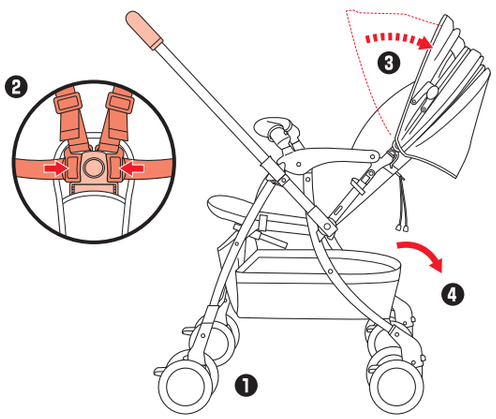


〈Before folding〉

❶Move the stroller forward a little bit to make sure the wheels are automatically locked. (See P10)
❷Fasten seat belt into the belt buckle. (See P15)
❸Push back the sunshade. (See P19)
❹Remove all items from the basket.

Tips ・Raise the backrest (see page 18) so that the baby stroller can be folded into a compact size.


Tips ・If it is difficult to fold it with one hand, use your other hand to hold the front guard while folding.

〈Releasing the lock〉

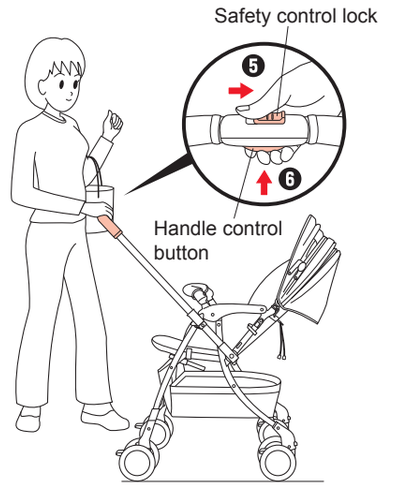


❺Slide and hold the handle lever lock in the direction of the arrow (red colour is indicated).
❻Squeeze the handle lever.

〈Folding〉

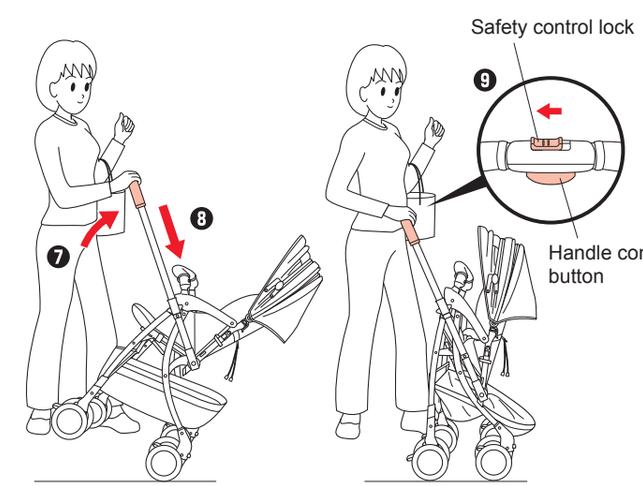


❼While gripping the handle lever, lift the handle.
❽By pivoting on the front wheels, lower the handle to fold the baby stroller.
❾Let go of the handle lever and handle lever lock.
・The handle lever lock will reset automatically right after the hand has moved away.

How to detach the sunshade

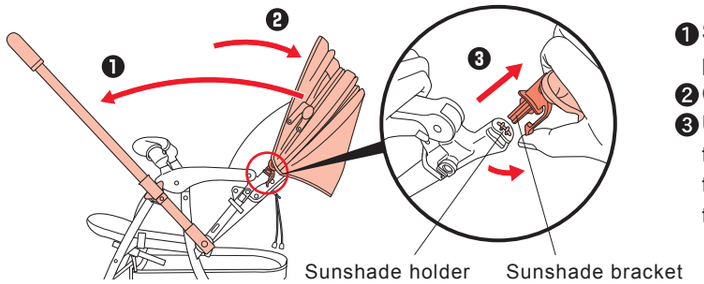


❶Switch the handle to rear-facing position. (See page 9)
❷Close the sunshade. (See page 19)
❸Use your fingertip to flick the tab at the bottom of the sunshade bracket towards you, and pull it out from the sunshade holder.

How to detach the handle protecting cover

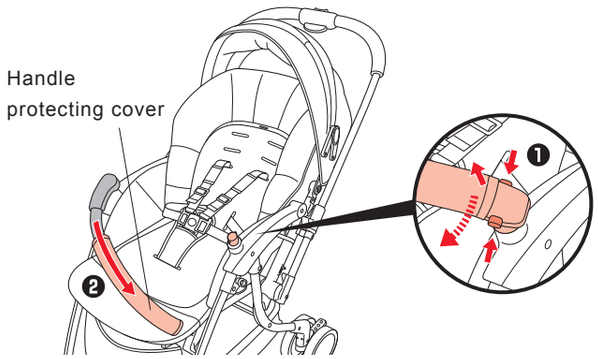

❶Open the button-type open handle. (See P13)
❷Remove the handle protecting cover.

How to detach the CTS storage pouch

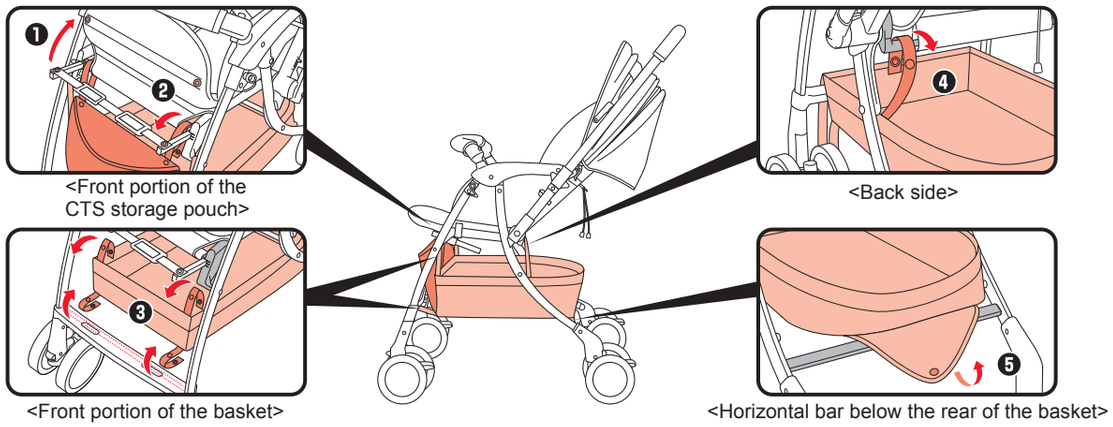

❶Unfasten the snap button on the footrest. (Left & right)
❷Unfasten the left and right snap buttons to remove the CTS storage pouch.


CATUION
・Please remove all items from the basket before removing the basket.

❸Unfasten the top and bottom snap buttons at the front of the basket. (Left & right)
❹Unfasten the snap buttons at the rear of the basket. (Left & right)
❺Unfasten the snap button at the horizontal bar below the rear of the basket.


How to detach the seat fabric

WARNING
・Please do not let the baby sit on the stroller with the seat fabric article removed, since this may cause unexpected damage on the stroller.


・Remove the seat after removing the sunshade and basket. (See P23)

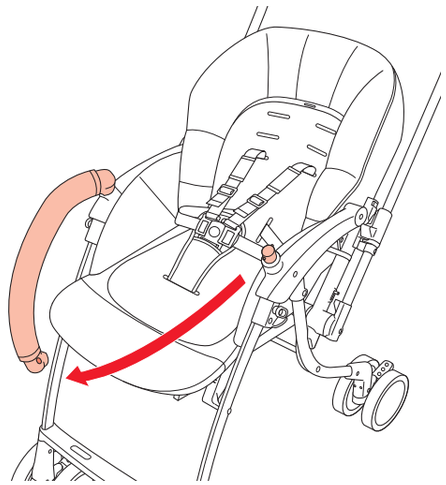


❶Take out the button-type open handle. (See P13)

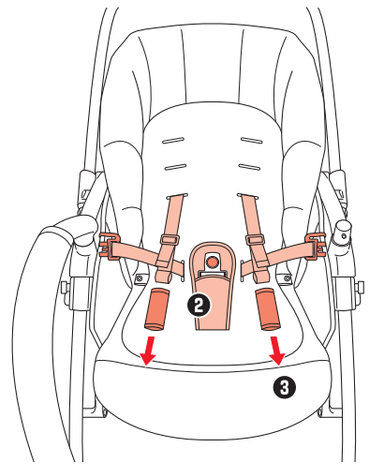

❷Push down the crotch belt buckle to unlock the shoulder belt and waist belt. (See P15)
❸Remove the protector from the shoulder belt, and then pull out the shoulder belt.

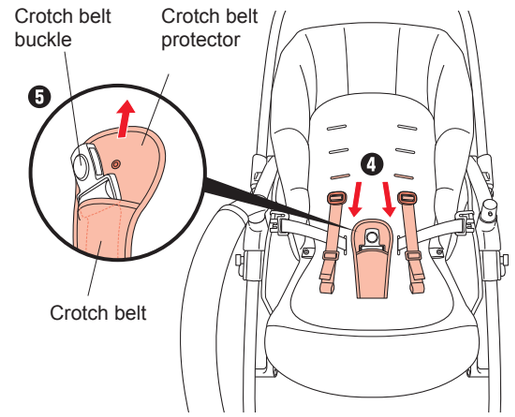


❹Pull out the shoulder belt.(See P17❶❷)
❺Unlock the crotch belt buckle and remove the crotch belt protector.

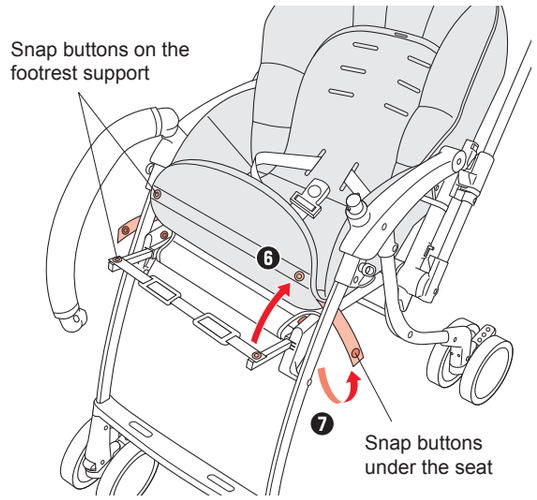


❻Unfasten the snap buttons on the footrest support.(2 locations)(If footrest support is used)
❼Unfasten the belt snap buttons under the seat.(2 locations)


How to detach the seat fabric

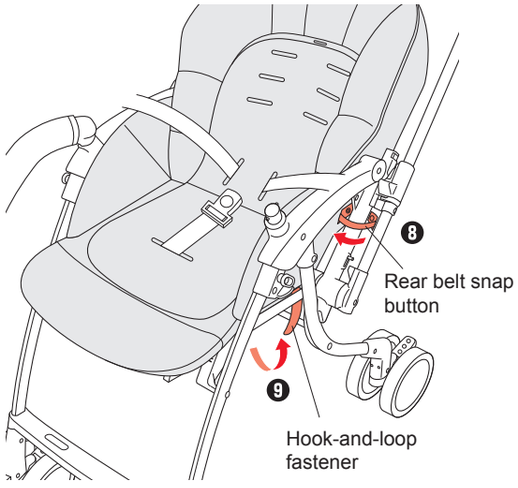


❽Unfasten the rear belt snap buttons on the sides of the seat. (2 locations)
❾Unfasten the hook-and-loop fasteners on both sides under the seat. (2 locations)

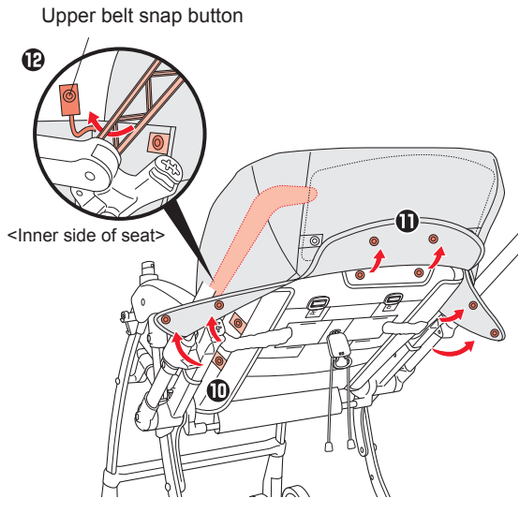

❿Unfasten the snap buttons on both sides of the seat. (4 locations)
⓫Unfasten the snap buttons on the back of the backrest. (2 locations)
⓬Unfasten the belt snap buttons on the upper belt (2 locations) and pull them out.

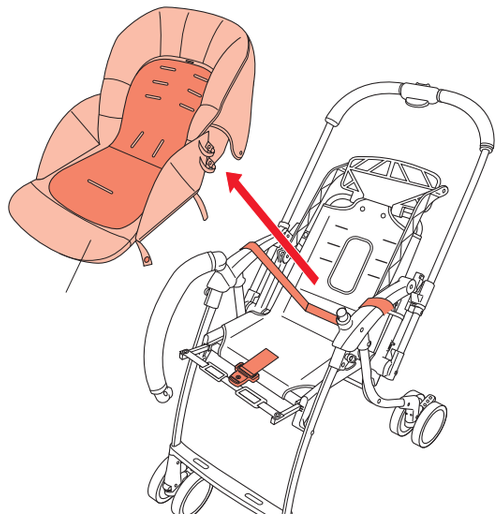


⓭Remove the Seat fabric article after pulling out the shoulder and waist belts.

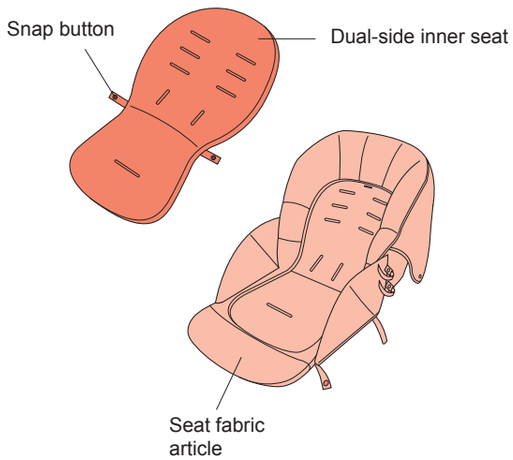


⓮Unfasten the snap buttons on the dual-side inner seat and remove the inner seat.


How to install the seat fabric

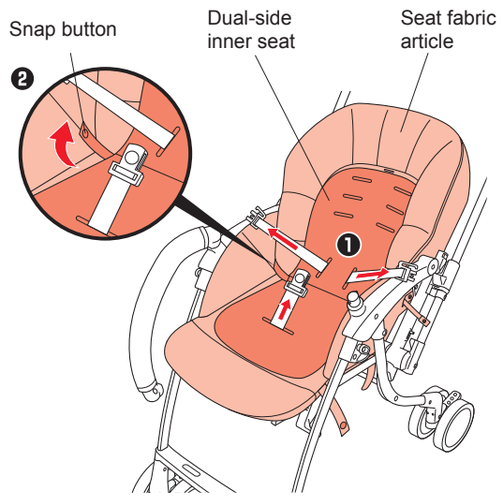


❶Install the seat by inserting the crotch and waist belts through the holes on the seat.
❷Install the dual-side inner seat.

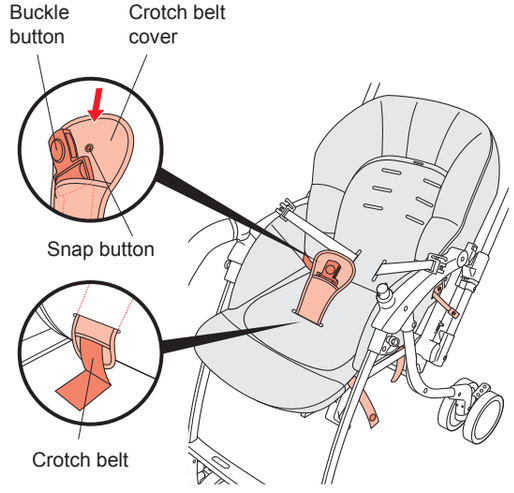

❸Install the crotch belt cover onto the crotch belt. Fasten the snap button on the inside of the crotch buckle to the snap button on the crotch belt cover.

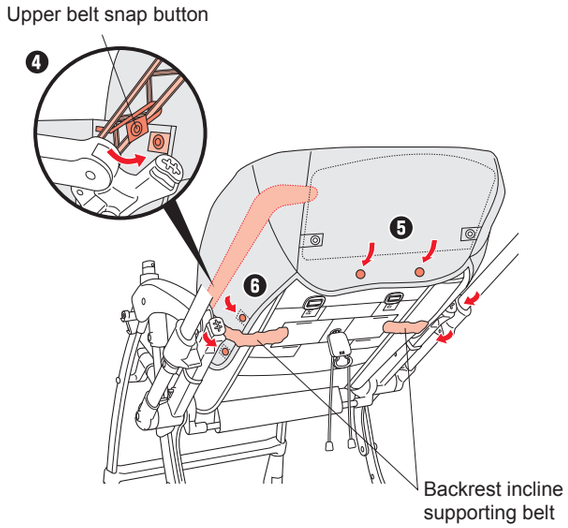


❹Pass the upper belt snap buttons through the main body and fasten them. (2 locations)
❺Fasten the snap buttons on the back of the backrest. (2 locations)
❻Pass the seat through the inner side of the reclining belts and fasten the snap buttons on both sides. (4 locations)

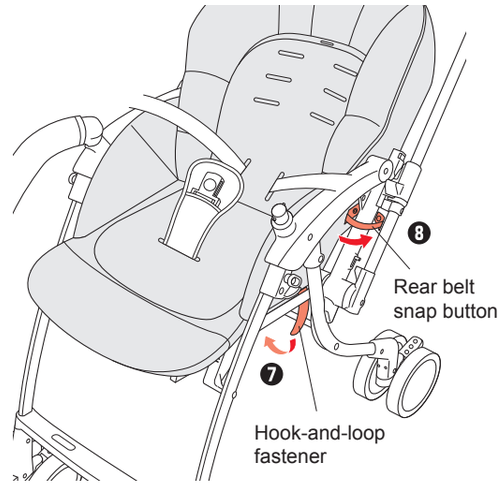


❼Fasten the hook-and-loop fasteners under the seat. (2 locations)
❽Fasten the rear belt snap buttons on the sides of the seat. (2 locations)


How to install the seat fabric

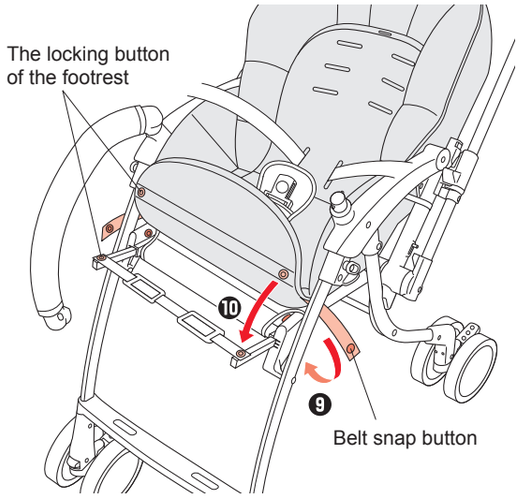


❾Fasten the belt snap buttons under the seat.
(2 locations)
❿Fasten the snap buttons on the footrest support.
(2 locations) (If footrest support is used)

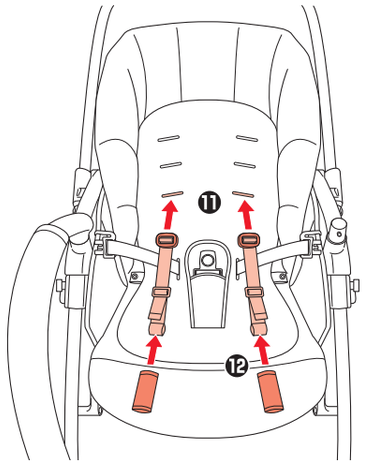

⓫Install the shoulder belts. (See page 17❶❷)
⓬Install the Shoulder belt protection cover.

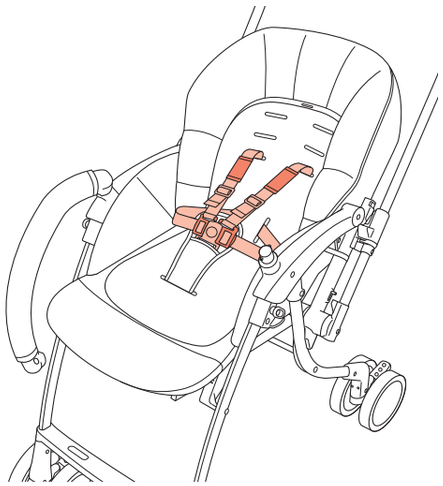

❸Insert the shoulder and waist belts into the crotch buckle.

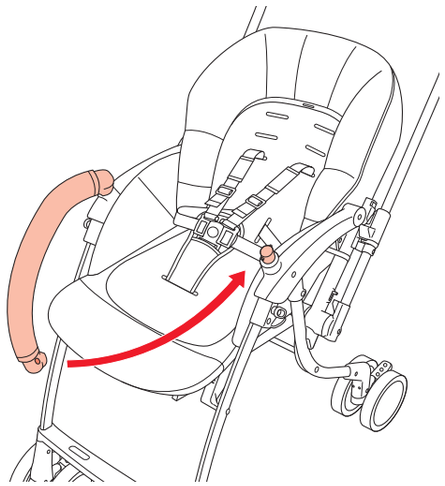

❹Attach the button-type open handle.

Routine maintenance

Cleaning method for sewing parts

〈Cleaning method for sewn seat products, handle protector, shoulder belt protector, crotch belt protector, preventing respiratory tract block protection cushion and Waist and buttocks protection pad〉

・Please note the following laundering & cleaning symbols.



※Do not wring or twist.

〈Cleaning the dual-side inner seat〉

・Please note the following laundering & cleaning symbols.



※Do not wring or twist when using in laundry bag.

※Please using laundry bag , Water temperature of under 40 degree is recommended.
Also, use low speed water flow to clean it.

CAUTION

・If drying the sewing outdoor, please place it flat on a shady area to dry it.
・Please do not use alkaline detergent, acidic detergent or bleach containing chlorine.

〈Cleaning method for the shade, shoulder belt, waist belt, CTS storage pouch and storage basket〉

・Please do not put the entire component into the laundry machine. Please clean it according to the instructions below.
- Situation for water soluble smudges (such as juice, saliva, or urine): Please use a soft wet cloth, submerged in 40 degrees warm water and dried out slightly, to wipe out the smudge. Use a dry towel to wipe it out, and then put it in a shady place to dry naturally.
- Situation for non-water-soluble smudges (such as milk, fat, or salad dressing): Please add neutral detergent into 40 degree warm water, and then use brush or sponge to clean the smudge. Use cold or warm water to wash out the neutral detergent, use a dry towel to wipe water, and then place it in shady area to dry naturally.

CAUTION

・If any damage or abnormal situation is discovered on sewing, please stop using it and contact our maintenance center for help

Maintenance of the stroller frame

〈Maintenance of the frame and wheel〉

・Please do not ignore the mud or dirt attached to the wheel. Wipe it out and clean it up with a wet towel.

> **CAUTION**
> ・Breakdowns will occur often when mud or dirt is attached to the frame or wheel, so please stop using the stroller in this situation.
> ・Please do not use volatile solvents such as diluents or essential oil to clean mud or dirt.

・The wheels are consumable components. Any abnormality felt when pushing the baby stroller may signal a need to change the tyres. Please contact our customer support centre.

〈Maintenance of the screw and screw cap〉

・Please check if the screw or screw cap if loose routinely. Please screw it tight when they get loose.


〈Maintenance of the safety bar〉

・Please wipe off dirt in the joint of the safety bar and the stroller with a dry towel.


〈Add lubricating oil〉

・Please occasionally add lubricating oil used for plastic products onto the movable joint.
・Please remove mud or dirt and wipe out any water before adding lubricating oil.
・Please add about 2~3 drops in every component.

●If any problem occurs while folding or unfolding the stroller, such as being unable to turn the turning fixer smoothly, or hearing noises on the wheel and main frame, please add lubricating oil used for plastic products on the places shown with ⇨ arrow, and repeat the folding/ unfolding action 2 to 3 times.

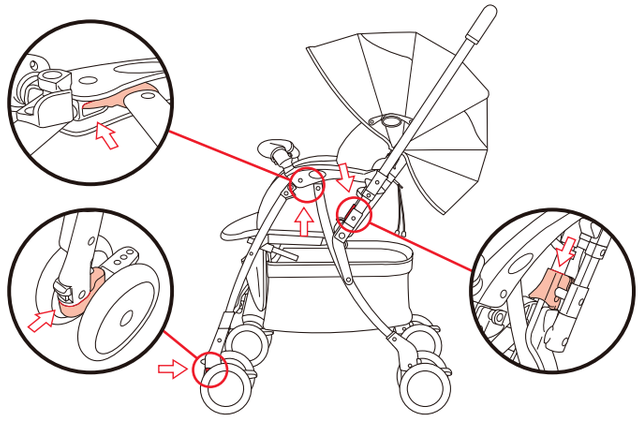

> **CAUTION**
> ・Please do not use lubricating oil in the joint and neighborhood of button-type open handle and stroller frame to avoid unlocking the button-type open handle and cause the baby fall down.

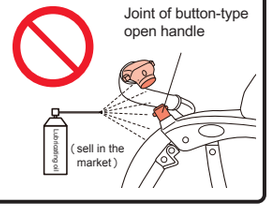

・If the following method still does not resolve the problem, please contact our maintenance center.

〈Encounter problem in use〉

Problem	Troubleshooting
Cannot operate handle control button	Please release the safety control lock and then do it again. (See P7)
Wheel is not turning	Please unlock the manual wheel lock on both sides (See P12).
Wheel does not turn smoothly.	Please add lubricating oil to the wheel (See P29).
Wheel brake does not work	Please check if any rubble gets stuck in the wheel brake.
Handle cannot be switched.	Make sure the switch lock moves to the bottom completely when the stroller is unfolded (See P8). Please release the left and right safety control lock on the handle before switching it (See P10).
Backrest cannot be pulled up.	Please take the baby out of stroller first, and then pull the stepless lay-flat angle adjusting belt (See P18)
Shoulder belt can not be inserted into waist belt	Please make sure the clothes and seatbelt are not caught.
Cannot unfold stroller.	Please complete the procedure before folding, and then do the folding again (See P21). Please make sure the seatbelt is not caught by switch lock.
Difficulty in moving the baby stroller in reverse direction when boarding/alighting a lift car or train.	Lift the handle such that the wheels on the user side are slightly off the ground before moving the baby stroller.
The wheels are slanted after switching the handle and it is difficult to push to baby stroller.	Release the swivel lock levers.
When the tire is worn.	Any abnormality felt when pushing the baby stroller may signal a need to change the tyres. Please contact our customer support centre.

〈For used product〉

Problem	Troubleshooting
Do not understand how previous user was using it.	Do not recommend the use of any product with unclear using condition.
The stroller shows cracks or serious damage.	Please do not use it.

Storage

- Please place the framework inside a plastic bag and store in a cool place without direct sunlight.
- Please do not place heavy objects on top of this product during storage. Overload may cause malfunction or deformation.

CAUTION

- To avoid the distortion of the shade, please do not put stroller by its side or place heavy material on the stroller. Also, keep the stroller from high temperature areas when stored.
- Please do not place the stroller near a source of ignition. Please do not put the stroller inside the car on a hot day, since the plastic component may deform and would not fulfill its function.

Disposal guide

- Please dispose this product according to local regulations.
- Please do no dispose arbitrarily for environmental awareness.

MEMO

MEMO

保證書

〈僅限台灣地區使用〉

保固規定

1) 消費者請於購買時要求經銷商在本保證書上蓋章，並填上銷售日期。
2) 本公司產品之保固期間為自購買日起一年間。
3) 產品在保固期間內需要維修服務時，請出示本保證書。
4) 產品維修前，未出示本產品保證書或保證書尚未蓋店章、未填寫銷售日期時，即使於一年內購買，亦無法享有一年保固之免費修繕服務。
5) 於品質保證期間內，由於零件短少、加工不良等製造商所引起之原因，由製造商提供免費修繕服務（含運費）。若為消費者之責任，則計費維修。
6) 免費修繕服務不包含以下項目。
   ◎非歸責於製造商責任之任何損壞與故障。
   ◎坐墊、遮陽篷等刮傷。
   ◎使用者任意變更所引起。
   ◎由自然災害或事故等原因所引起。
   ◎框架自然劣化（塗料部分需時常保養）。
   ◎錯誤的使用方法或保養不良所致。
   ◎輪胎、車輪的自然消耗。

使用時，如發生故障或強烈撞擊、不慎掉落等情況，及發現有零件需要更換時，台灣國內請向公司維修中心聯絡，海外地區請洽當地代理商聯絡，我們竭誠為您服務。

產品	LUXUNA DUAL	型號	
		購買日期	年　月　日
顧客資料	姓名 地址 電話 E-mail	經銷商 確認章	（請務必蓋章，保證方為有效）

〇請確認購買時之經銷商店名稱，填寫型號、購買日期。
〇本保證書不另行補發，因此請小心保管，避免遺失。
〇本保證書填寫之個人資料，僅使用於產品保固及修理事宜。