——保證書——　〈僅限台灣地區使用〉

保固規定

1) 消費者請於購買時要求經銷商在本保證書上蓋章，並填上銷售日期。
2) 本公司產品之保固期間為自購買日起一年間。
3) 產品在保固期間內需要維修服務時，請出示本保證書。
4) 產品維修前，未出示本產品保證書或保證書尚未蓋店章、未填寫銷售日期時，即使於一年內購買，亦無法享有一年保固之免費修繕服務。
5) 於品質保證期間內，由於零件短少、加工不良等製造商所引起之原因，由製造商提供免費修繕服務（含運費）。若為消費者之責任，則計費維修。
6) 免費修繕服務不包含以下項目。
   ◎非歸責於製造商責任之任何損壞與故障。
   ◎坐墊、遮陽篷等刮傷。
   ◎使用者任意變更所引起。
   ◎由自然災害或事故等原因所引起。
   ◎框架自然劣化（塗料部分需時常保養）。
   ◎錯誤的使用方法或保養不良所致。
   ◎輪胎、車輪的自然消耗。

使用時，如發生故障或強烈撞擊、不慎掉落等情況，及發現有零件需要更換時，台灣國內請向公司維修中心聯絡，海外地區請洽當地代理商聯絡，我們竭誠為您服務。

產品	LUXUNA *Light*	型號	
		購買日期	年　月　日
顧客資料	姓名 地址 電話 E-mail	經銷商 確認章	（請務必蓋章，保證方為有效）

○請確認購買時之經銷商店名稱，填寫型號、購買日期。
○本保證書不另行補發，因此請小心保管，避免遺失。
○本保證書填寫之個人資料，僅使用於產品保固及修理事宜。

總公司
アップリカ·チルドレンズプロダクツ合同会社
本社/大阪店 — 〒542-0082大阪市中央区島之内1-13-13 **TEL0120-415-814**
Aprica Children's Products G.K.
1-13-13, Shimanouchi, Chuo-Ku, Osaka, Japan

進口商
台灣愛普力卡股份有限公司
總公司營業部　地址：新竹縣竹北市台元街28號5樓之3
電話：(03)5525688　傳真：(03)5525690
維修服務中心　地址：新竹縣竹北市福興路885號
電話：(03)6561261　傳真：(03)6561267
公司網址：http://www.aprica.com.tw
意見信箱：0800@aprica.com.tw　統一編號：22662003


PD332223C

LUXUNA *Light*

ラクーナライト

Aprica

・本產品是一個可以結合嬰兒揹巾和專屬嬰幼兒手推車的多用途攜帶旅行組(Carry Travel System)。
・嬰兒揹巾需另外購買。
・有關多用途攜帶旅行組(CTS)的更多資訊，請參閱多用途攜帶旅行組(CTS)的使用說明書。

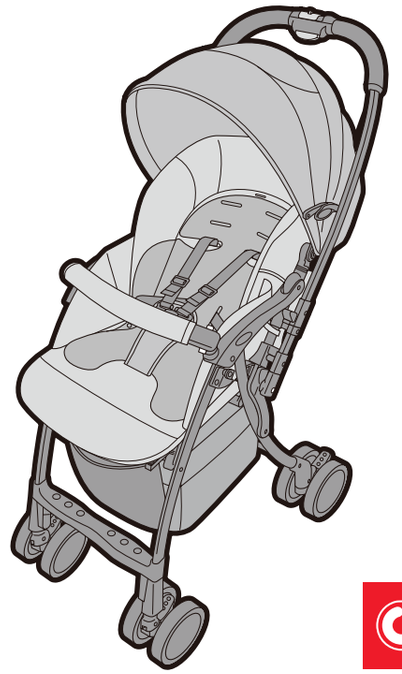

R41118

Carry Travel System

使用說明書／保證書

非常感謝您購買此產品。
此產品適用於出生後1個月～36個月，體重15公斤以下的嬰幼兒。

※本說明書所敘述的出生後1個月，指的是母親懷孕37周以上，出生時體重超過2.5公斤以上，出生超過1個月的嬰幼兒。

使用前請詳細閱讀本說明書並正確地使用。請勿使用本說明書內容以外的方法操作本產品。不僅無法充分發揮本產品的功能也十分的危險。
使用後請妥善保存此書。

目　錄

使用前

使用前的注意事項 ・・・・・・・・・・・・ 1
　給保護者的建議／CNS基準／本說明書的標示
使用上請注意 ・・・・・・・・・・・・ 2～4
　警告／注意
製品取出時 ・・・・・・・・・・・・・・・・ 5
　製品特徵
各部位名稱 ・・・・・・・・・・・・・・・・ 6

嬰幼兒手推車的使用方法

嬰幼兒手推車的開啟方法 ・・・・・・・・・ 7
兩對面切換手把的使用方法 ・・・・・・・・ 9
車輪迴轉固定器的使用方法 ・・・・・・・・ 9
車輪煞車器的使用方法 ・・・・・・・・・・ 10
按鈕式開放型扶手的開啟方法 ・・・・・・ 11
雙腳支撐架的使用方法 ・・・・・・・・・・ 11
置物網籃的使用方式(適用於多用途攜帶旅行組收納袋) 11
守護墊的安裝方法 ・・・・・・・・・・・・ 12
讓嬰幼兒乘坐手推車的方法 ・・・・・・・・ 13
安全肩帶的高度調節方法 ・・・・・・・・・ 15
無段式平躺角度調整器的使用方法 ・・・・ 16
遮陽篷的使用方法 ・・・・・・・・・・・・ 17
嬰幼兒手推車的收折方法 ・・・・・・・・・ 19

縫製品的保養方法

遮陽篷的拆卸方法 ・・・・・・・・・・・・ 20
扶手保護套的拆卸方法 ・・・・・・・・・・ 20
多用途攜帶旅行組收納袋及置物網籃的拆卸方法 20
座椅縫製品的拆卸方法 ・・・・・・・・・・ 21
座椅縫製品的安裝方法 ・・・・・・・・・・ 22

日常簡易保養

日常保養 ・・・・・・・・・・・・・・・・・ 23
覺得故障嗎？送修前先確認 ・・・・・・・・ 25
保管方法 ・・・・・・・・・・・・・・・・・ 26
廢棄方法 ・・・・・・・・・・・・・・・・・ 26
品質保證 ・・・・・・・・・・・・・・・・・ 27
ＭＥＭＯ ・・・・・・・・・・・・・・・・・・ 28
保證書 ・・・・・・・・・・・・・・・・・・ 封底

使用前的注意事項

給保護者的建議

嬰幼兒並非成人的縮小版。
特別是頸部尚未發育完全的寶寶更是如此。

請充分了解嬰幼兒的情況，並小心使用嬰幼兒手推車。
①請隨時注意嬰幼兒的情況，並避免連續使用。
②請避免讓嬰幼兒直接照射到陽光。
　為嬰幼兒手推車內的溫度，比大人的感覺來得高。
③請避開人群多的地方，以避免噪音、粉塵。
④經過不平整的路面，請盡可能放慢速度，並且請避開引起震動、衝擊的路段。
⑤本說明書所使用的插圖、組裝等，為求簡單明瞭，並非與實品完全相同。請以實際物品為主。

CNS基準

• 本產品通過台灣CNS認證，達到以下各項基準。（此製品為CNS基準A車合格品。）

適用範圍	此嬰幼兒手推車限寶寶一人乘坐，提供戶外、購物等一般家庭親子移動上的使用。
車種的形式	**A車**　出生後一個月＊　頸椎尚未發育完成的嬰幼兒，採取平躺姿勢使用的嬰幼兒手推車。
適用年齡	出生後1個月至36個月以內
建議連續使用時間	平躺姿勢：2小時以內　　坐立姿勢：1小時以內
平躺角度	150˚以上
車輪外徑	115mm以上

＊此處所稱出生後1個月，是指懷孕週數37週以上，且出生時之體重滿2.5kg以上，出生後1個月之嬰幼兒。

關於本書的標識

○「警告」、「注意」、「禁止」等符號是預測您未遵守注意事項的情況下，依據危害、損害的嚴重性來作區分。標示所表示的內容十分重要，請您務必遵守。

標示	標示之內容
⚠警告	使用方法錯誤時，可能會造成人員死亡或重傷等情形。
⚠注意	使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。

禁止	標示之意義
⃠	請勿操作本說明書所禁止的行為。
建議	使用產品時的便利小建議。

使用上請注意

○為避免意外事故發生，使用前請務必詳閱使用說明書，並且正確地使用。

⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐寶寶有不慎掉落的危險。

請務必將安全肩帶、安全腰帶以及立體式股帶繫好再使用。



請勿讓寶寶站立於嬰幼兒手推車上。



腰部安全帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。

請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。



因恐嬰幼兒手推車的車輪掉落於路面上的溝內，而使得嬰幼兒手推車失去平衡並且不慎造成寶寶及使用者受傷等危險發生。

當遇到有格子狀排水溝蓋的道路且必要通過的情況下，請先確認嬰幼兒手推車的車輪寬度是否適合。如果適合，請慢慢且仔細地推行嬰幼兒手推車。



前輪卡住時，請一手握著手把以及一手握著腳管，提高前車輪。請勿將整台嬰幼兒手推車舉高。



在坡道等地方，嬰幼兒手推車因恐自行滑動、翻覆。

當寶寶乘坐時或離座時，請務必將車輪煞車器左右兩邊同時鎖上，並確認嬰幼兒手推車不會滑動。



當寶寶乘坐或置放物品時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對煞住嬰幼兒手推車。



即使鎖上煞車器，也請勿讓寶寶離開您的視線範圍，獨留於手推車內。



因恐失去平衡、看不到路面情況，而有導致摔倒之虞。

當寶寶乘坐時，請勿直接將嬰幼兒手推車提起懸空。



〈接下一頁〉

⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。

請勿讓兩名寶寶同時乘坐或搭乘於坐墊以外的地方。



請勿在樓梯、手扶梯等有高低落差的地方使用。



因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。

當寶寶乘坐時，請勿在置物籃以外的地方放置物品，勿在手把懸吊物品。此外，請勿倚靠在手把上。



因恐寶寶有被安全帶纏繞導致窒息的危險。

安全肩帶及安全腰帶請務必一起使用，並調整到適合寶寶體型的位置。



各可動關節部位因恐有夾傷寶寶手腳、車體撞擊寶寶或使用者本人等情況發生。

當您折疊收納嬰幼兒手推車時，請勿讓寶寶靠近。




因恐嬰幼兒手推車收折時，而使寶寶有摔落、夾傷之虞。

使用嬰幼兒手推車前，請確認左右開關鎖扣是否完全扣住。



使用嬰幼兒手推車之前，請務必確認安全控制鎖是否完全扣住。

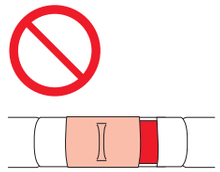

嬰幼兒手推車因恐受到路面影響使得車內的溫度變高，導致寶寶身體受到傷害的危險。

高溫或日照強烈時，請勿長時間使用。



因恐導致嬰幼兒手推車破損、受傷、意外事故等發生。

當使用嬰幼兒手推車時，請勿過度施力。



⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐導致嬰幼兒手推車破損，使得寶寶或使用者受傷之虞。

○請勿讓兒童操作嬰幼兒手推車。
○當寶寶乘坐時，請務必讓寶寶的股間對準立體式股帶的位置。否則因恐使得嬰幼兒手推車往後翻覆之虞。
○本公司維修人員外，請勿自行分解、安裝或改造。
○請勿在座椅縫製品拆下的狀態下使用本產品。
○請勿在猛力撞擊或掉落後使用。
○請勿當成兒童玩具使用。
○請勿將本車用於寶寶乘坐之外的任何用途上。

⚠注意　使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。

○請務必定期檢查與保養。
○使用前，請先確認嬰幼兒手推車主體與座椅縫製品已正確安裝完成。
○請適時替可動關節部位上油，並務必使用塑膠製品用的潤滑油。
○長時間未使用的嬰幼兒手推車時，請務必進行檢查或保養後再使用。
○即使是空車，也請勿將嬰幼兒手推車放置於斜坡上或鄰近車道的人行道等危險場所。
○請勿在螺絲或螺帽鬆動的狀態下使用。
○請勿將兩輛手推車併在一起使用。
○請勿將前輪呈高舉狀態行走。因恐造成後部框架彎曲變形或斷裂。
○當寶寶乘坐於嬰幼兒手推車並且在行進中時，為了寶寶的安全，請以一般的步行速度行進（時速約4公里左右的速度）。
○請勿將嬰幼兒手推車推至沙地或泥濘處。
（關節轉折處易因沙粒進入導致開關收納困難。）
○框架處沾染沙粒或泥土時請勿置之不理。
（關節滑動處易因沙粒進入導致開關收納困難。）
○嬰幼兒手推車是為了讓寶寶乘坐。為了避免造成損壞，請勿加裝任何市售零件。
○請勿在置物籃放入重量5kg以上的物品。
○家長、照護者請勿倚靠在嬰幼兒手推車上。
○請勿用來搬運物品等。
○本產品僅限於嬰幼兒乘坐。
○請勿做出其他可能導致嬰幼兒手推車故障之行為。
○請勿在公車上使用。
本產品之設計，並非以公車上使用為目的。若在公車上使用本產品，因恐轉彎、緊急煞車等原因，而有發生翻覆或意外事故之虞。
○電車上使用的注意事項。
本產品之設計，並非以電車上使用為目的。於電車中使用本產品，恐因轉彎或緊急煞車等情況而有翻覆之虞，因此請務必使用煞車器，並盡充分之注意，若發生意外，責任由使用者自行承擔。
○在電車等場所使用時，請勿強行上下車，嬰幼兒手推車可能未被感應到，造成被電車的自動門夾住，因恐造成寶寶受傷之虞。
○請勿在積雪處或是結霜的路面上使用。
○風勢強勁時，請勿使用。
○打雷時，請勿使用。
○由於易導致嬰幼兒手推車車內溫度變高，故請勿在室內、靠近火源處或高溫場所等地方使用遮雨罩。
○由於易造成塑膠部分變形而無法維持其原有功能，故請勿放置靠近火源處或炎夏高溫車內。

○越過段差的場合，若寶寶在乘坐的狀態下，請注意可能被推倒的意外發生。

面對面的場合使用下，腳踩在手推車的腳踏板上，將手把向下輕壓，讓手推車越過段差處。

〈對面的場合〉



背面的場合使用下，將手把向下輕壓，同時抬起安全扶手，讓手推車越過段差處。

〈背面的場合〉




製品取出時

○製品取出時，請務必進行各部位檢查工作。
○部品有缺少、弄錯或者破損時，請與經銷商或者總公司連絡。（請參閱封底「產品保證書」）

主　體

○從箱子裡取出時，本產品處於折疊狀態。
嬰幼兒手推車的打開方式，請參閱P7。

○製品取出時。
A部位的車輪迴轉固定器於鎖定的狀態。
B部位的車輪煞車器處於鎖定的狀態。
車輪迴轉固定器、後輪煞車器的解除鎖定方法，請參閱P9、P10。

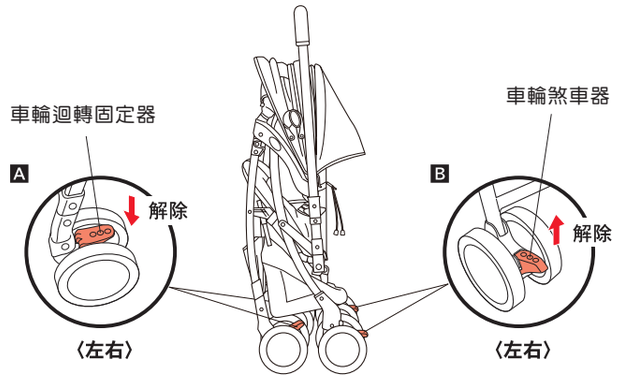

⚠注意　○使用前，請先解除鎖定狀態。（請參閱P9、10）

付属品


預防呼吸道閉塞型
保護頭墊


腰部・臀部守護墊


使用說明書




多用途攜帶旅行組
使用說明書

⚠警告　○捆包的收納袋請放收置於孩童無法拿到的地方。
因恐不慎遮住孩童口鼻導致窒息等危險發生。


〈製品特徵〉

○手把為背面、對面兩用型。
○前後收折方式。
○車體在折疊狀態可自行站立。
○框架使用的是輕量鋁管。

各部位名稱

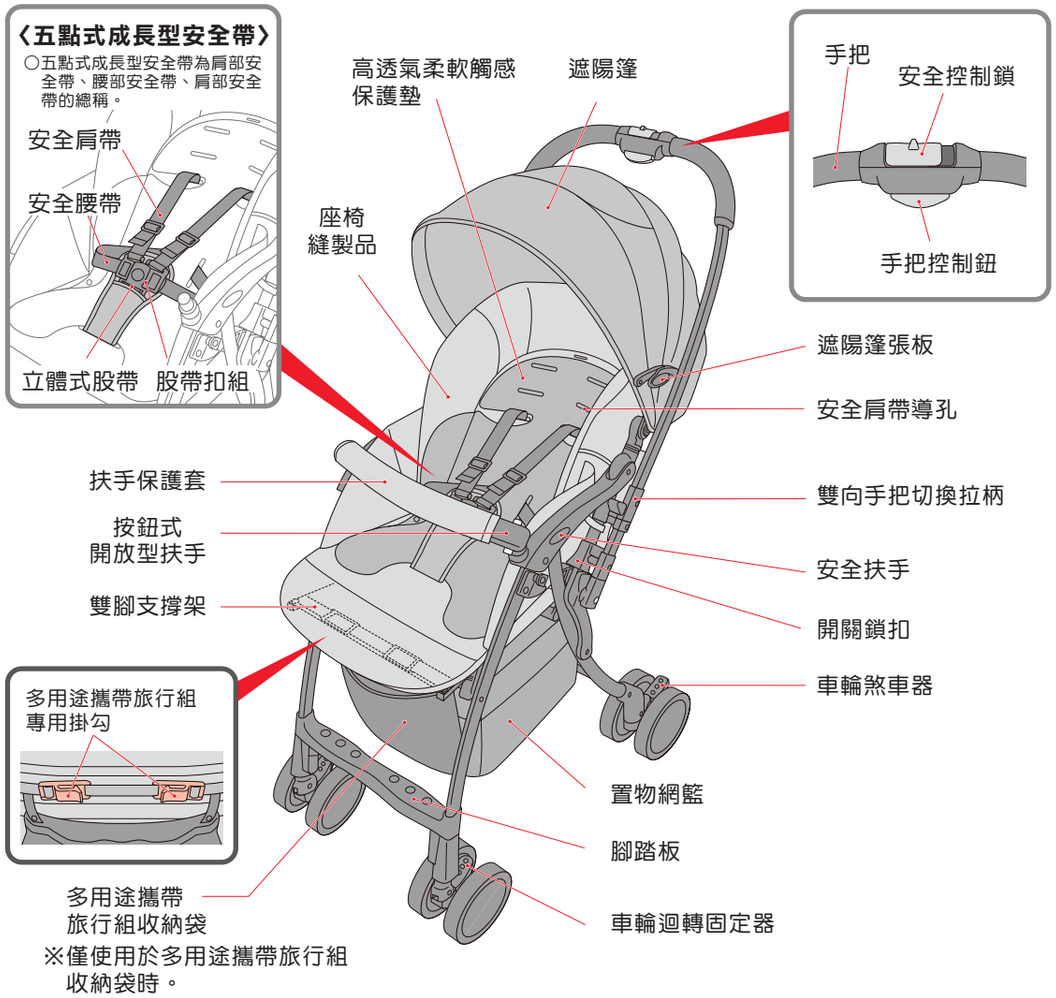

〈靠背背面〉

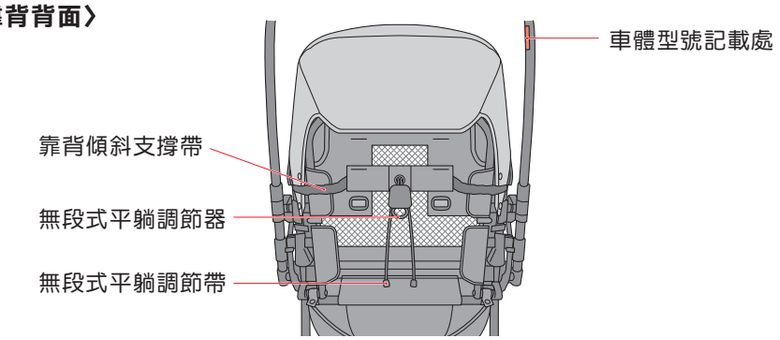


嬰幼兒手推車的開啟方法

警告
○當寶寶碰觸手推車或靠近手推車時，請勿收折或打開車體。因恐可動關節部位夾到寶寶手指、手、腳或是嬰幼兒手推車碰撞寶寶身體，而使寶寶有受傷之虞。
○請勿讓兒童操作嬰幼兒手推車。因恐導致跌倒或意外事故發生等危險。


小叮嚀 ○因捆包裝箱的關係，初次使用可能無法順利開啟的情況發生。請重複操作2～3次後再進行開啟。

〈解除安全控制鎖〉

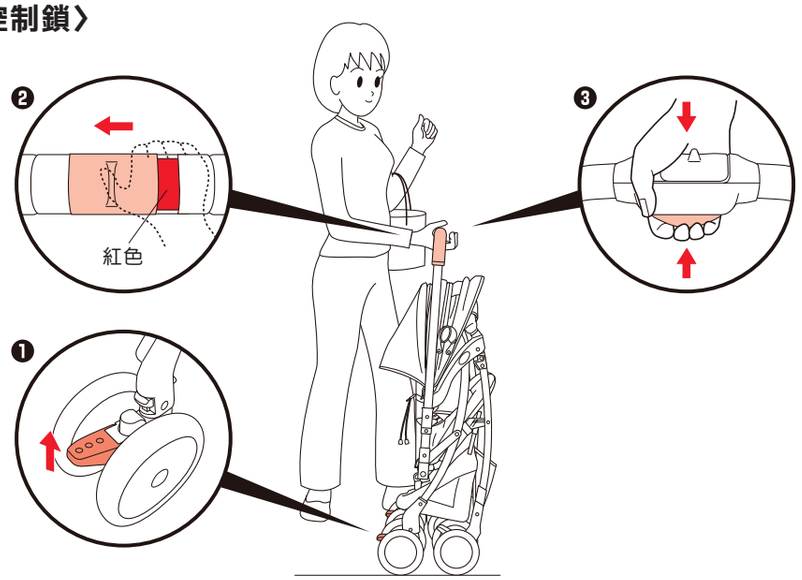


❶將車輪煞車解除鎖定（請參閱P10）
❷將安全控制鎖解除鎖定。（顯示出紅色部分）
❸施力於手把中央部位，將手把控制鈕向上押解除鎖定。


〈打開嬰幼兒手推車〉

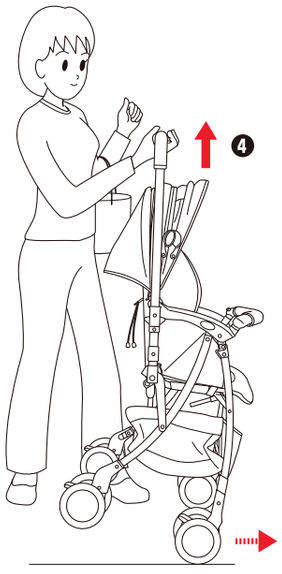

❹手持續握著手把，將後輪提高離開地面。

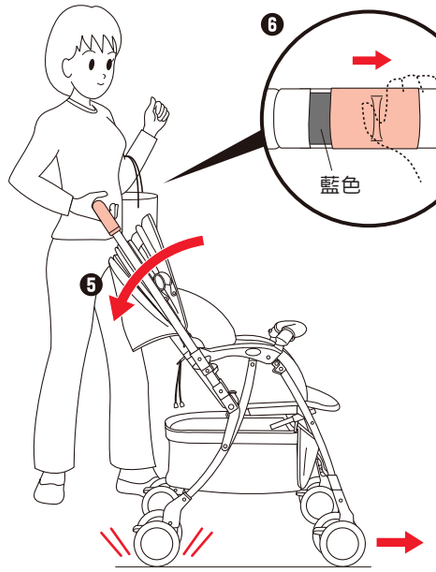

❺ 持續握著，朝後輪方向將手把向下壓到完全展開。
❻ 鎖上安全控制鎖。（顯示出藍色部分）

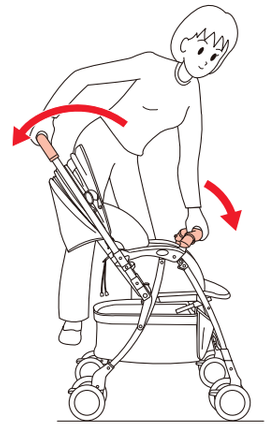


建議 ○若有難以使用單手開啟的情況，請用另一隻手握住按鈕式開放型扶手展開車體。


警告
○使用之前，請先確認開關鎖扣已完全降到底。否則恐導致嬰幼兒手推車收折，而使寶寶有摔落、夾傷之虞。



兩對面切換手把的使用方法


警告
○切換手把時，注意避免夾到寶寶的手指、手或腳。
○請勿在坡道切換手把。嬰幼兒手推車可能會意外滑動、翻覆，而使寶寶摔落。
○請勿一邊推著嬰幼兒手推車，一邊切換手把。

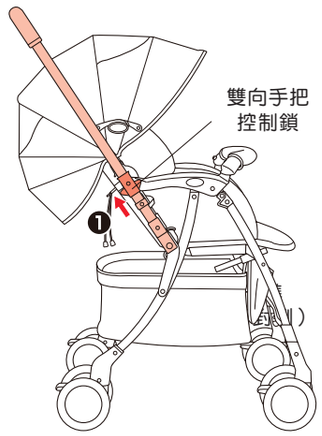

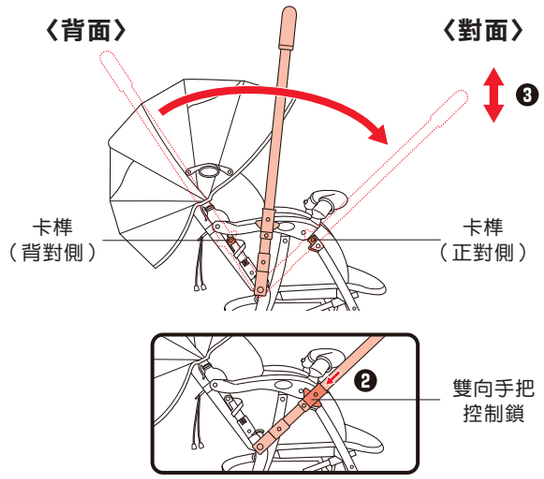

❶左右同時將雙向手把控制鎖往上拉起，將手把切換至對面位置。
❷確認雙向手把控制鎖確實鎖上卡榫（左右）。
❸上下晃動手把，確認卡榫是否確實扣住。

車輪迴轉固定器的使用方法

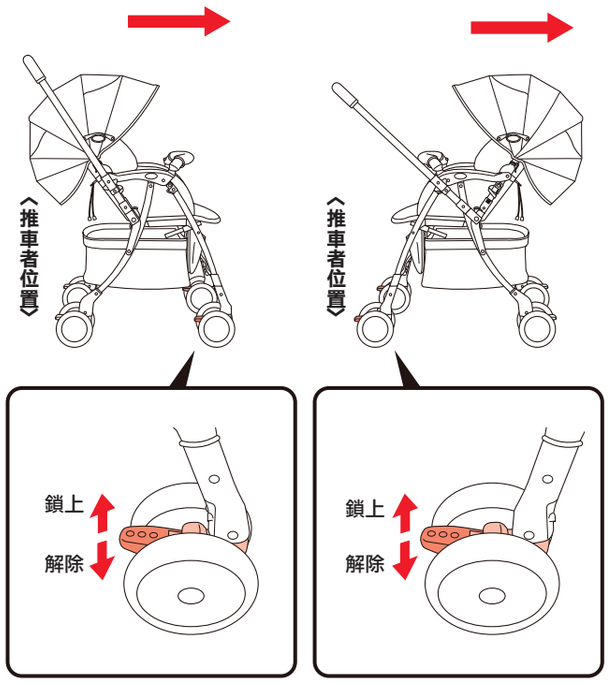

〈解除固定的場合〉

○車輪迴轉固定器解除的場合，在平坦的路面上前輪可自由迴轉。
平常請在解除狀態下使用。

●押下迴轉固定器（左右），解除固定。

〈鎖定的場合〉

○在凸凹不平、坡道、傾斜地面等場所行進時，暫時先將行進方向前側（左右2處）的車輪鎖上，這樣能使手推車比較好推。


● 拉起迴轉固定器(左右)，鎖上固定器。

車輪煞車器的使用方法

警告
○當寶寶乘坐時或離座時，務必將左右煞車器都鎖上。
○當寶寶乘坐在手推車上時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對停住嬰幼兒手推車。
○即使鎖上車輪煞車器，當寶寶乘坐在手推車上時，仍然請勿離開寶寶的身邊。

注意
○即使寶寶未乘坐在手推車上，當要離開嬰幼兒手推車時，仍然請將左右車輪煞車器都鎖上。


〈鎖定車輪煞車器〉

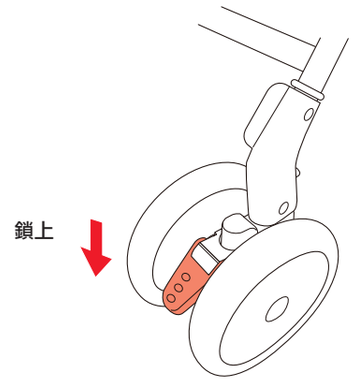

❶將推車者方向的車輪煞車器往下扳，即可鎖上車輪。（左右）
❷將手推車前後動一動，以確認車輪煞車器已鎖上。


建議 ○車輪煞車器無法鎖定時，請將手推車前後移動再將車輪煞車器鎖上。

〈解除車輪煞車器〉

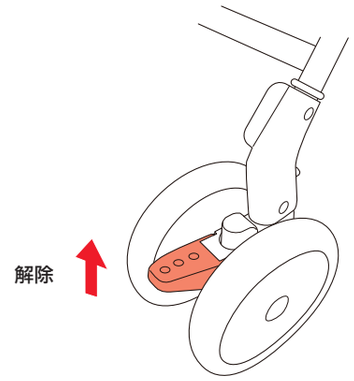


●將車輪煞車器往上扳，解除鎖定狀態。（左右）

注意 ○用手將車輪煞車器解除時，請勿讓紅色箭頭處夾傷手指頭。

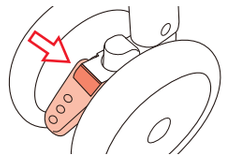

嬰幼兒手推車的使用方法


按鈕式開放型扶手的開啟方法

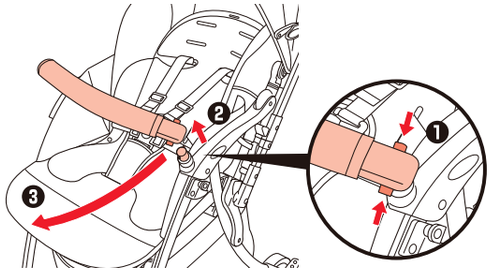

❶ 按住按鈕式開放型扶手鎖定鈕的內外兩端
❷ 將按鈕式開放型扶手向上提起。
❸ 將按鈕式開放型扶手向下放。

雙腳支撐架的使用方法

○雙腳支撐架適合於嬰兒睡覺時使用。增加座椅長度的功能。

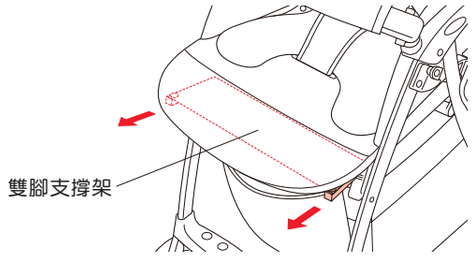


●將座席縫製布向上抬起，並且將雙腳支撐架拉出。（左右）

置物網籃的使用方法

注意

○請勿將形狀銳利的物品置於置物網籃內。否則可能會破壞置物網籃。
○請勿放置重量5kg以上的物品。
○收折嬰幼兒手推車之前，請先將物品取出。

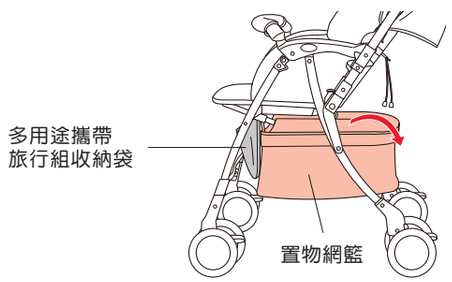

●請由置物網籃上方收納物品。

建議 ○放置物品時，請儘量使物品的重量平均分散於置物網籃底。

〈關於多用途攜帶旅行組收納袋的使用方式〉

注意


○請勿將其他物品放置於多用途攜帶旅行組收納袋內。

守護墊的安裝方法

○守護墊在嬰幼兒手推車內，用來輔助寶寶維持適當正確的姿勢。

預防呼吸道閉塞型保護頭墊　頸部安定前，請務必使用。


○安裝預防呼吸道閉塞型保護頭墊時 ，請務必將安全肩帶安裝於下段肩帶導孔。
最高月齡使用至7個月為止。（請參閱P15「安全肩帶的高度調節方法」）

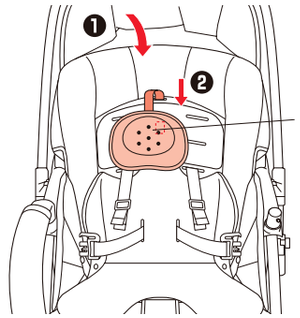

❶頭墊安裝適用於平躺狀態下使用。（請參閱P16）
❷將保護頭墊上的魔鬼氈白色布片取下，依照箭頭的方向，把魔鬼氈固定帶穿過頭墊安裝孔，黏在座椅裏側的魔鬼氈上。

建議 ○頭墊不易安裝時，可拆下座椅縫製品的上半部，在可看到座椅裏側的情況下來安裝。（請參閱P21「座椅縫製品的拆卸方法」）

〈預防呼吸道閉塞型保護頭墊的安裝位置〉

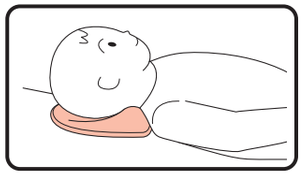


●安裝時，請讓頭墊下端的鼓起部分在寶寶的頸後。
※當鼓起部分不適合寶寶的頸後時，請立即拆除。

注意

○安全肩帶穿在中段、上段的肩帶導孔時，無法使用預防呼吸道閉塞型保護頭墊。

腰部・臀部守護墊　（1個月～3歲左右的寶寶可使用。）

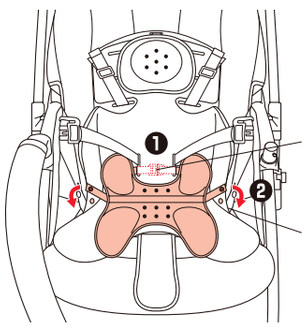


❶將上端固定帶扣穿過高透氣柔軟觸感保護墊的安全腰帶導孔，並且扣上。
❷將腰部・臀部守護墊側邊的固定扣，扣在高透氣柔軟觸感保護墊側邊的固定扣上。（左右）

○依寶寶體格的不同，即使是3歲以下的嬰幼兒，仍有可能已不適用腰部守護墊。當不適用時，請將腰部・臀部守護墊拆下。

讓嬰幼兒乘坐手推車的方法

1 準備

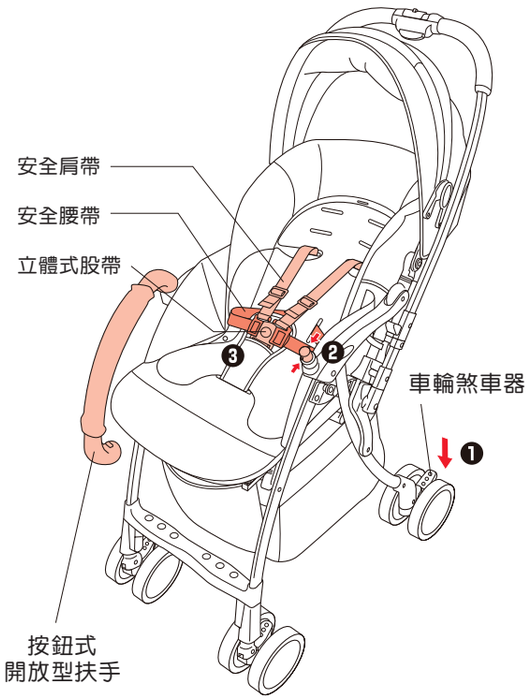


❶鎖上車輪煞車器。（左右）
❷打開按鈕式開放型扶手。
　〇按住鎖定鈕的內外兩端。
❸解開安全肩帶、安全腰帶。
　〇按下立體式股帶的固定扣，解開安全腰帶、安全肩帶。

〇需要改變安全肩帶的位置時，請參閱P15「安全肩帶高度的調整方法」。
〇需要改變座椅的角度時，請參閱P16「無段式平躺調節器的使用方法」。
〇需使用雙腳支撐架時，請參閱P11「雙腳支撐架的使用方法」。

2 乘坐方法

〈寶寶乘坐之後，務必繫上安全帶〉



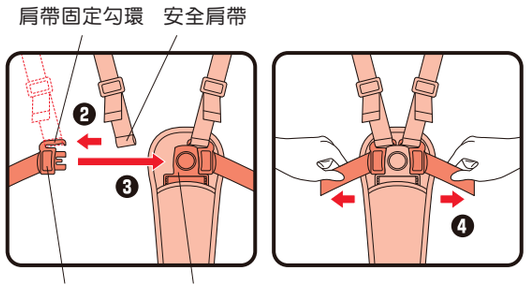


❶先讓寶寶乘坐於嬰幼兒手推車上。
❷將安全肩帶扣入肩帶固定勾環。
❸將安全腰帶扣入固定扣組。
❹將安全腰帶往兩側拉，調節至適合寶寶的寬鬆度。
※請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。

建議
〇安裝安全肩帶時，警示標籤應朝向外側。
〇請確認安全肩帶沒有扭結的情況。

注意
〇繫上安全帶後，請確認左右兩側的安全腰帶有調節至適合寶寶的寬鬆度。
〇使用時，務必將安全肩帶扣在肩帶固定勾環上。因恐安全肩帶可能會纏繞在寶寶頸部。
〇請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。
　安全腰帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。
〇寶寶乘坐時，應該讓寶寶的股間對準立體式股帶的位置。否則嬰幼兒手推車有可能會往後方翻覆。

〈安全腰帶的調整〉


〈拉緊〉

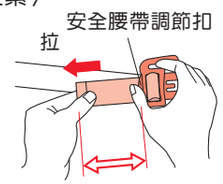

〈放鬆〉



●輕押安全腰帶調節扣，拉安全腰帶做調整。

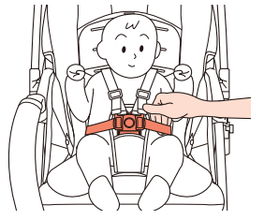


〇安全腰帶的長度，以安全腰帶與寶寶之間可容納成人4隻手指頭的寬鬆度為適當。

〈安全肩帶的調整〉


〈拉緊〉



〈放鬆〉

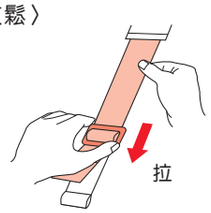


●移動安全肩帶調節環做調整。

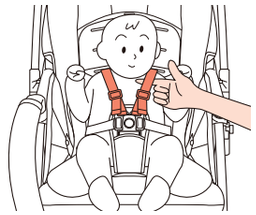


〇安全肩帶的長度，以安全肩帶與寶寶之間可容納成人1隻手指頭的寬鬆度為適當。


〈立體式股帶的調整〉

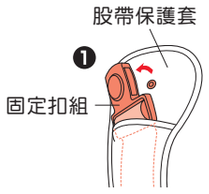

〈放鬆〉

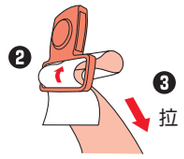


〈拉緊〉

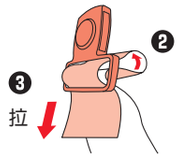


❶解開固定扣組與股帶保護套之間的固定扣。
❷立體式股帶取出。
❸股帶拉出，調整長度。
　〇調整之後，請務必確認固定扣組與股帶保護套之間的固定扣已經扣上。

注意
〇請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。
　安全肩帶、安全腰帶、立體式股帶過鬆時，即使繫上安全帶，寶寶仍然可能站起來，而使寶寶有摔落之虞。
〇關閉開放型扶手時，請注意避免夾到寶寶的手指。
〇關閉開放型扶手後，請拉拉看，以確認開放型扶手已確實鎖上。
〇當寶寶乘坐在手推車上時，請勿舉起開放型扶手。
〇安全腰帶的尾端（插圖中 ⟺ 的部分），務必保留3cm以上。
〇調整座椅靠背的角度時，應一併調整安全肩帶、安全腰帶、立體式股帶的長度。

〈關閉按鈕式開放型扶手〉

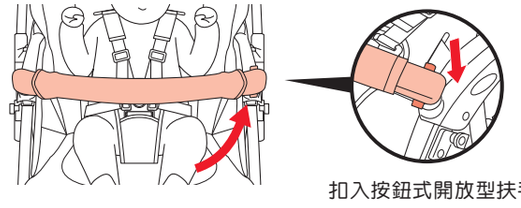

〈解除車輪煞車器〉

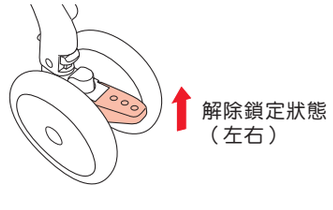


嬰幼兒手推車的使用方法

安全肩帶的高度調節方法

警告
○請依寶寶的成長情況，調整安全肩帶的高度。

〈安全肩帶的位置〉

○製品從包裝箱取出時，安全肩帶位置設定於下段。

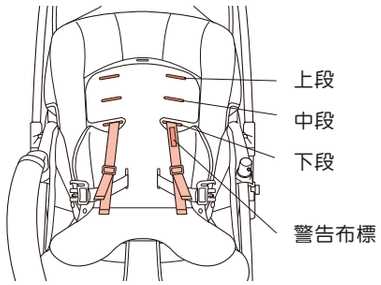

〈安全肩帶的使用標準〉

●穿過肩膀位置下段的安全肩帶導孔。



○安全肩帶的位置，請依以下3段標準進行調整。


月齡（體格）的標準	安全肩帶導孔的位置
18個月～36個月	上　段
7個月～18個月	中　段
1個月～7個月	下　段


※請依個別差異對照上述表示的標準進行調整。

建議
○安裝安全肩帶時，警告布標應朝向外側。
○請確認安全肩帶沒有扭結的情況。

〈安全肩帶的高度調整方法〉


●將安全肩帶、安全腰帶，從安全股帶扣組上解開。（請參閱P13「準備❸」）
●將安全肩帶由肩帶固定勾環上拆下。
●解開靠背側邊的固定扣，掀開座席。

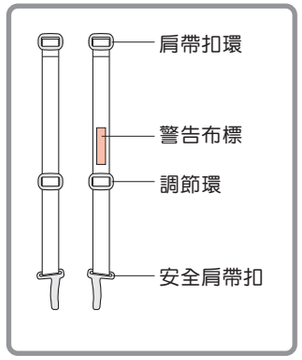

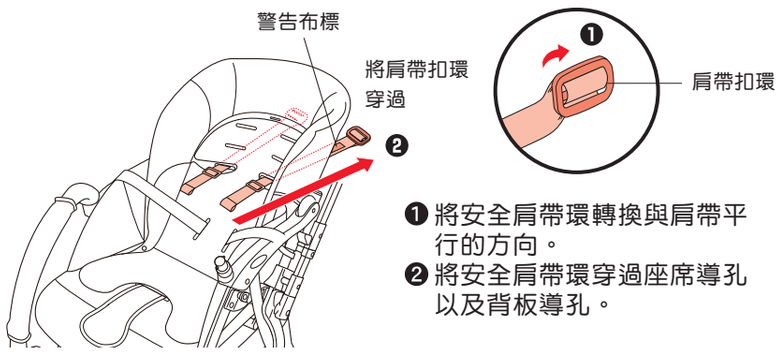


❶將安全肩帶環轉換與肩帶平行的方向。
❷將安全肩帶環穿過座席導孔以及背板導孔。

〈使用上段導孔時〉

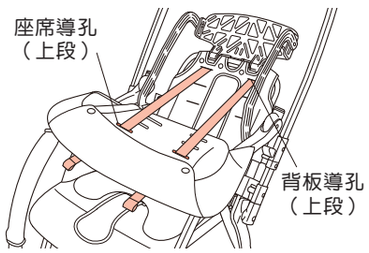


●穿過座席導孔（上段）與背板導孔（上段）。

〈使用中段導孔時〉

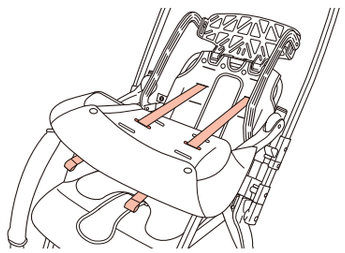

●穿過座席導孔（中段）與背板導孔（中段）。

〈使用下段導孔時〉

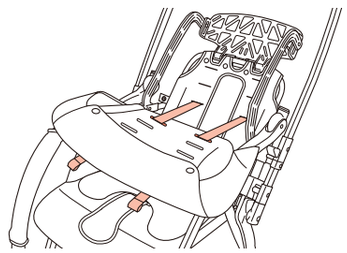

●穿過座席導孔（下段）與背板導孔（下段）。

●高度調節後，請務必確認固定扣組與股帶保護套之間的固定扣已扣上。（請參閱P22）
●將安全肩帶扣入肩帶固定勾環。


無段式平躺角度調節器的使用方法

〈座椅的角度標準〉


月齡（體格）的標準	座席的角度位置
1個月～頸椎成熟	平躺
頸椎成熟～可獨立坐立	平躺～半躺（中間位置）
可獨立坐立	平躺～坐立姿勢

建議
○靠背平躺時，頭枕即立起。

靠背平躺時

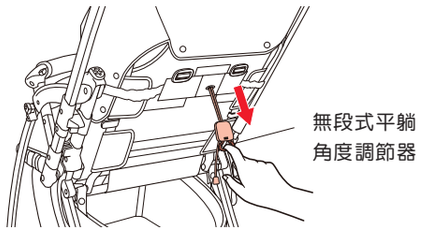

❶放鬆安全肩帶。（請參閱P14）
❷用單手扶住寶寶，另一手拉住無段式平躺角度調節器。

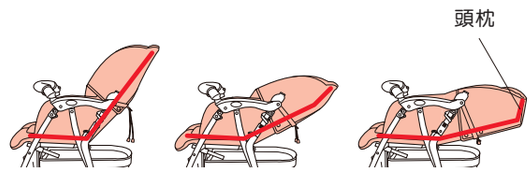


❸一邊拉著拉環，一邊將靠背往後倒，調整至適當的角度。
❹調整安全肩帶、安全腰帶的長度。


警告
○在寶寶乘坐的狀態下，若要將靠背倒下時，請先鬆開安全肩帶。
○座席角度調整完成後，接著調整安全肩帶、安全腰帶的長度。安全肩帶、安全腰帶過鬆的話，即使繫上安全帶，寶寶仍然可能站起來，因而使得寶寶有摔落之虞。

注意
○請勿一邊推著嬰幼兒手推車，一邊調整座席角度。
○在寶寶乘坐的狀態下，若要調整座席角度時，請勿急速且大幅度地改變角度。
○在寶寶乘坐的狀態下，若要將靠背倒下時，請確實扶住寶寶。
○無法獨立坐立的寶寶，請使用座席平躺的方式。

建議
○可獨立坐立的寶寶，將頭置於頭枕的位置時，若將靠背倒下，寶寶的姿勢將會變得不自然，因此請將座席角度調整在頭枕不會立起的位置。



靠背立起時

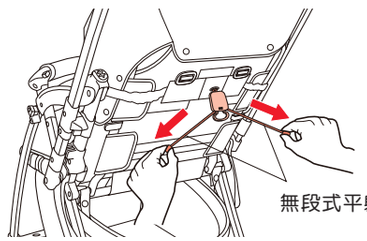

●請在寶寶不完全倚靠靠背支撐的狀態下，單手握住無段式平躺調整帶並且往上拉即可將座椅靠背立起。


建議
○當寶寶完全倚靠靠背支撐的狀態下，請勿豎起靠背。

遮陽篷的使用方法


警告

○請在寶寶未接觸遮陽篷的狀態下，開啟或收起遮陽篷。
否則可動關節部位可能會夾到寶寶的手指或手。


〈遮陽篷的各部位名稱〉

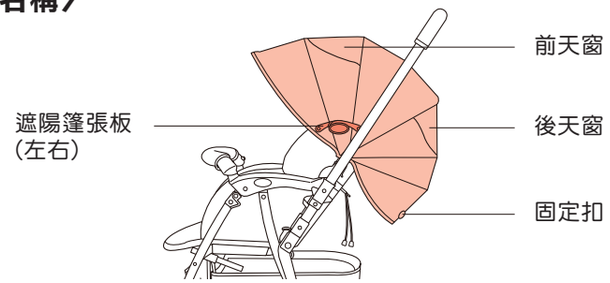

打開方法

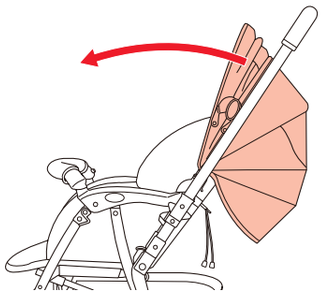


❶ 將遮陽篷往前展開。

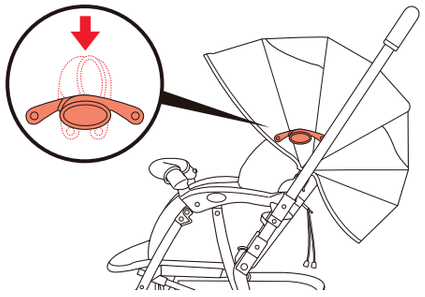


❷ 押下遮陽篷張板。（左右）

收起方法

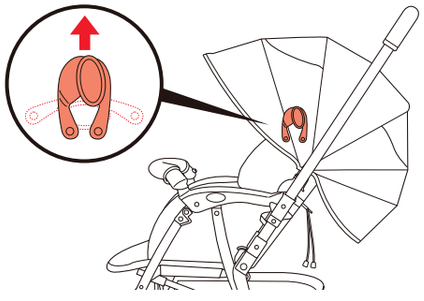


❶ 將遮陽篷張板往上折。（左右）

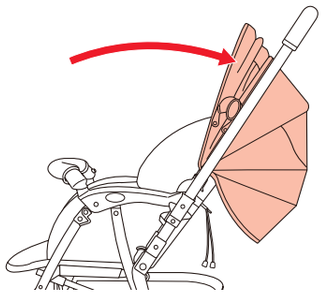


❷ 將遮陽篷往後收起。

遮陽篷的角度調整

○靠背往後躺或日照比較弱時，可調整遮陽篷的角度。

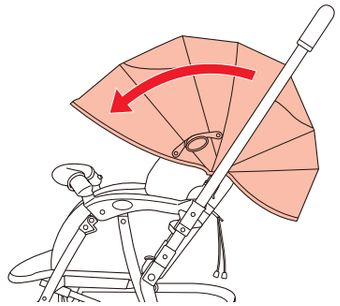


❶在遮陽篷打開的狀態下往前轉，在適當的位置固定。

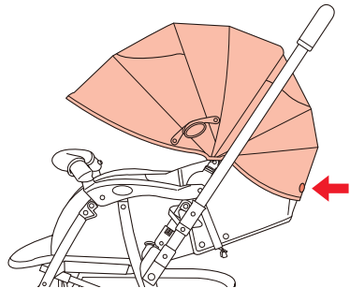

❷靠背往後躺時，將遮陽篷固定扣固定在頭枕後側的固定扣上。（左右）

前天窗、後天窗的開啟方法

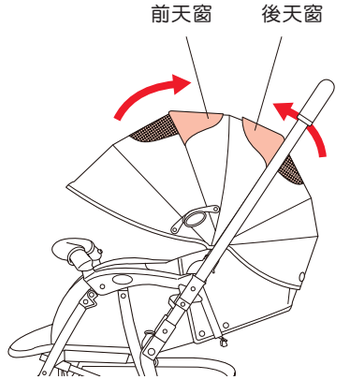

○開啟遮陽篷的窗罩，可看到寶寶的一舉一動。

嬰幼兒手推車的收折方法


⚠警告

○當寶寶碰觸手推車靠近手推車時，請勿收折或打開車體。恐因可動關節部位夾到寶寶手指、手腳，或因嬰幼兒手推車碰撞寶寶身體，而使寶寶有受傷之虞。
○請勿讓孩童操作嬰幼兒手推車。因恐造成翻覆、意外事物，而有受傷之虞。

⚠注意


○請先將安全肩帶、安全腰帶插入安全股帶扣後，再收折嬰幼兒手推車。否則恐有使安全股帶扣破損之虞。

小叮嚀 ○因梱包裝箱的關係，剛開始使用可能有不易收開的情況。請重複操作2～3次。

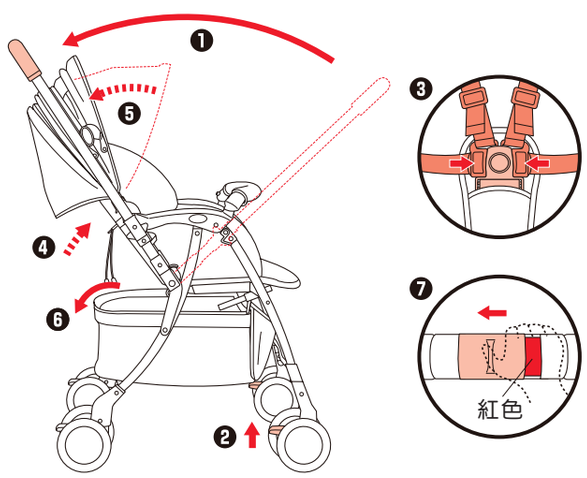


〈收折之前〉


❶將手把切換至背面。（請參閱P9）
❷將車輪的迴轉固定器鎖上。（左右）
❸將安全肩帶、安全腰帶，扣入安全股帶扣組。（請參閱P13）
❹豎直靠背。（請參閱P16）
❺收起遮陽篷。（請參閱P17）
❻將置物網籃裡的物品取出。
❼往左橫推，解除安全控制鎖。

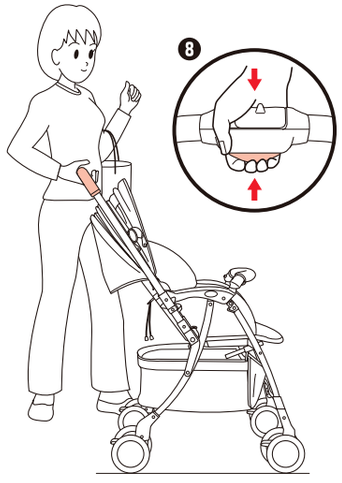

〈解除安全控制鎖〉

❽施力於手把中央部位，將手把控制鈕向上押。

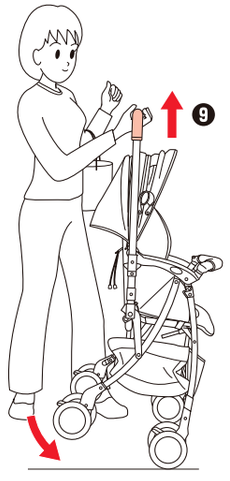

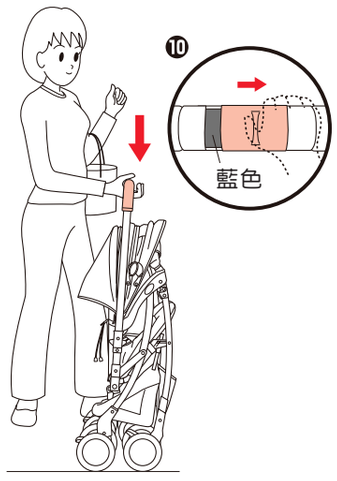


〈收折方法〉

❾繼續握著，將手把往上提。然後將車體稍微前傾並且將手把往下押即可收折完畢。
❿鎖上安全控制鎖。


建議 ○若無法以單手操作時，請用另一隻手提起按鈕式開放型扶手折疊。

遮陽篷的拆卸方法

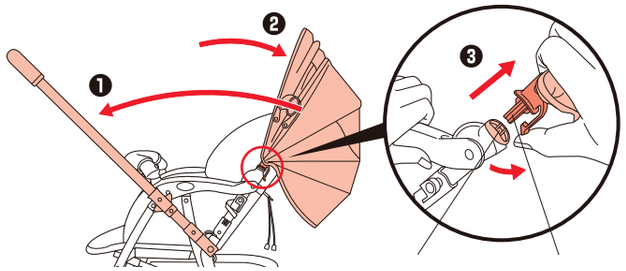


❶將手把切換至對面。(請參閱P9)
❷收起遮陽篷。(請參閱P17)
❸拉起左右兩邊卡榫下側的突起處向後輕扳即可自接口處拔出。

扶手保護套的拆卸方法

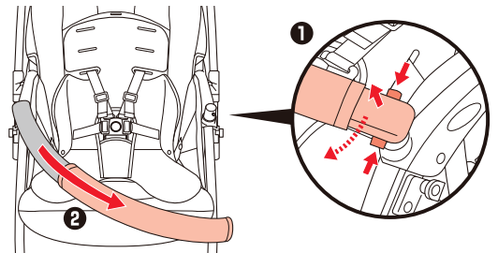

❶打開按鈕式開放型扶手。
❷取出扶手保護套。

多用途攜帶旅行組收納袋及置物網籃的拆卸方法

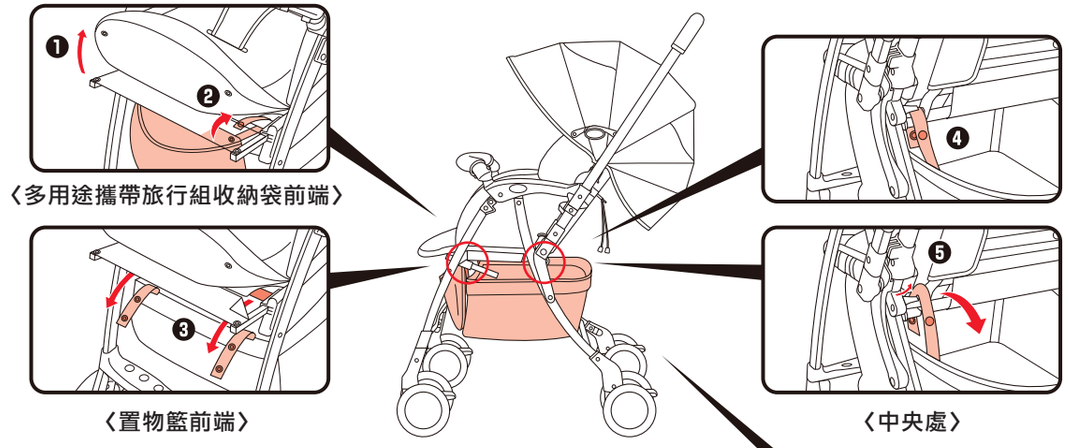


❶卸除雙腳支撐架的固定扣。（左右）
（當雙腳支撐架使用時）
❷將多用途攜帶旅行組收納袋前端的固定扣解開，取下多用途攜帶旅行組收納袋。（左右）
❸卸除置物籃前端的固定扣。（左右）
❹卸除中央處的固定扣。（左右）
❺卸除後方的固定扣。（左右）
❻固定帶自內側取出，即可取出置物網籃。

⚠注意 ○請將置物網籃內所有物品取出後再進行拆卸動作。


座椅縫製品的拆卸方法

警告 ○請勿讓寶寶乘坐在已取下座椅縫製品的手推車上，因恐發生手推車損壞等意想不到的事故發生。


●請先將置物網籃、遮陽篷拆卸後再進行。（請參閱P20）

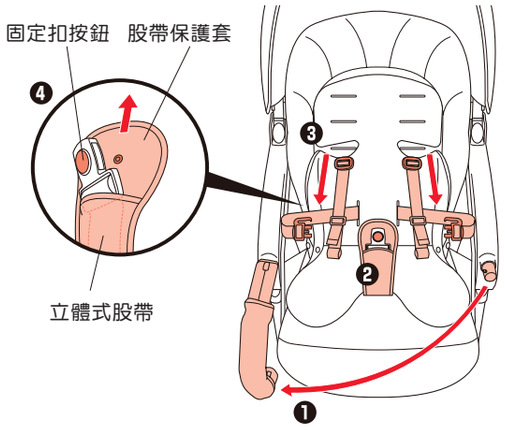


❶打開按鈕式開放型扶手。
❷按下固定扣按扭，解開安全肩帶及安全腰帶。
❸拉出安全肩帶。
❹將固定扣內側與股帶保護套的固定扣解開。

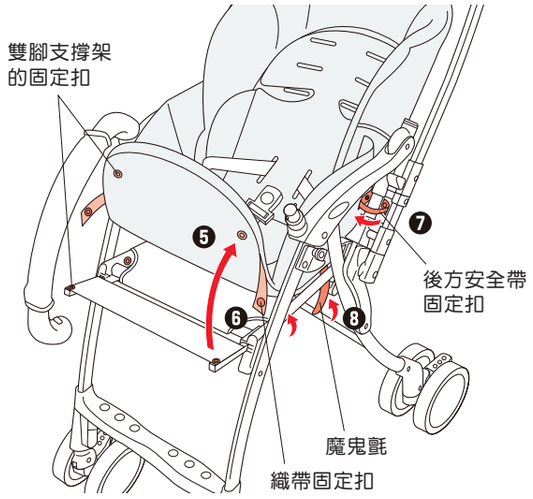

❺解開雙腳支撐架的固定扣。（2處）
（當雙腳支撐架有使用時）
❻解開座椅縫製品下方的織帶固定扣。（2處）
❼將座椅兩側後方的安全帶固定扣解開。（2處）
❽解開座椅縫製品下方兩側的魔鬼氈。（2處）

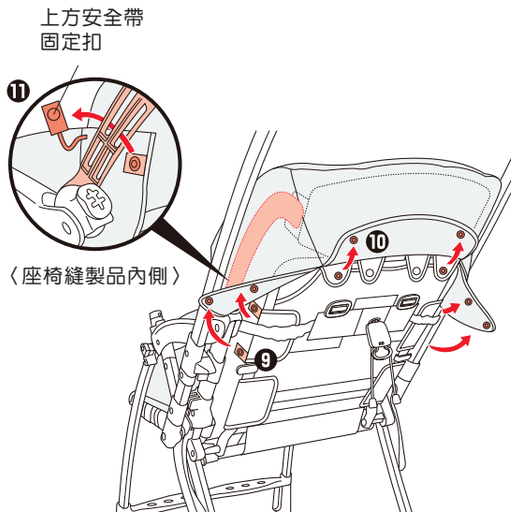


❾解開座椅兩側的固定扣。（四處）
❿解開靠背背面的固定扣。（2處）
⓫解開上方的安全帶固定扣後抽出。（2處）

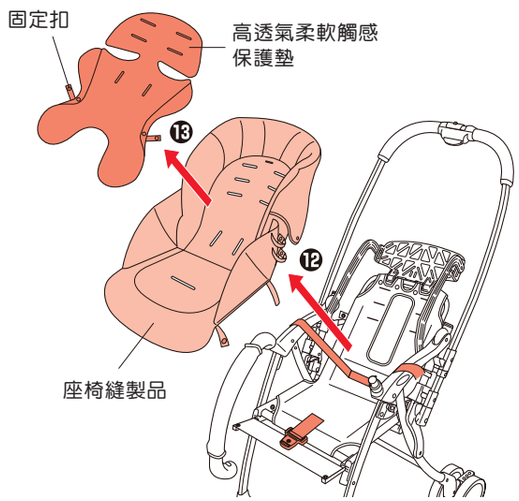


⓬將安全肩帶、安全腰帶取出後，即可取下座椅縫製品。
⓭解開固定扣，取下高透氣柔軟觸感保護墊。


座椅縫製品的安裝方法

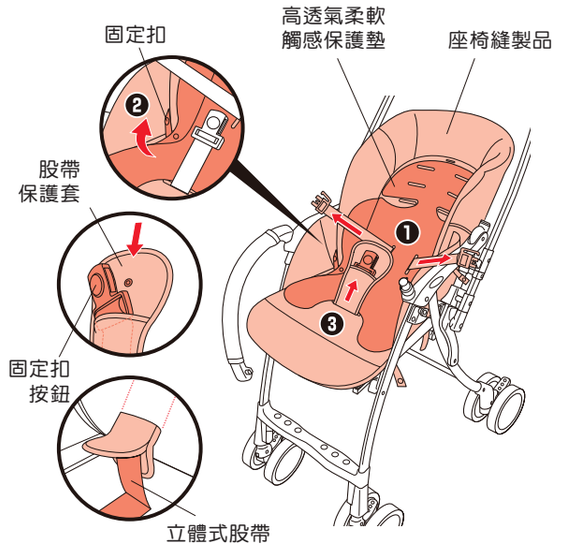


❶將立體式股帶與安全腰帶穿過導孔，裝上座椅縫製品。
❷安裝高透氣柔軟觸感保護墊。
❸將立體式股帶套上股帶保護套，將固定扣內側與股帶保護套的固定扣扣上。
股帶保護套的前端應穿出座椅的內側。

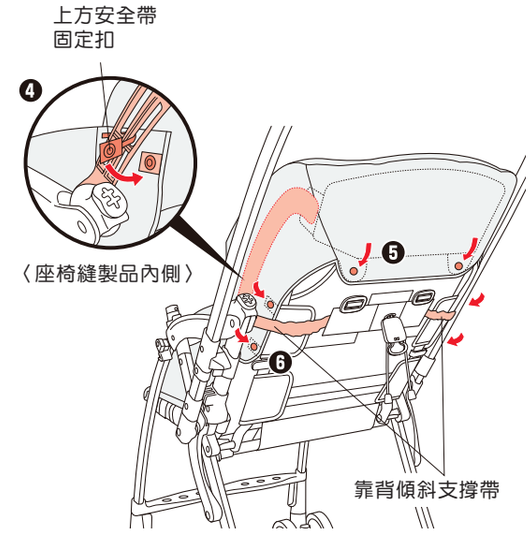

❹穿過安全帶固定扣後，扣上固定扣。（2處）
❺將靠背背面的固定扣扣上。（2處）
❻將座椅穿過靠背傾斜支撐帶內側，將兩側的固定扣扣上。

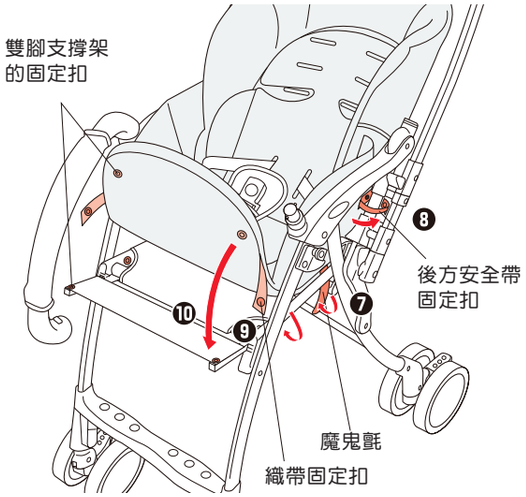

❼將座椅縫製品內側的魔鬼氈黏上。（2處）
❽扣上座椅兩側的後方安全帶固定扣。（2處）
❾扣上座椅縫製品下方的織帶固定扣。（2處）
❿扣上雙腳支撐架的固定扣。（2處）
（若有需要使用雙腳支撐架時）

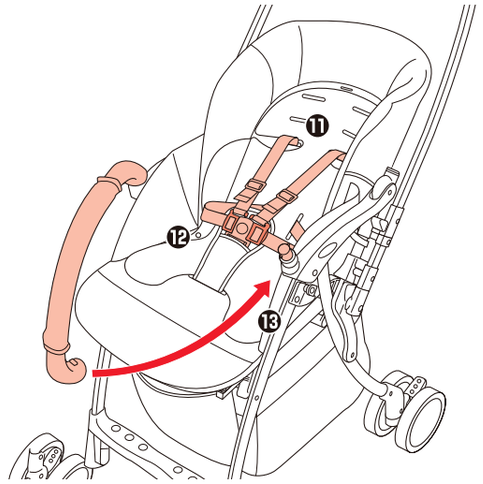

⓫安裝安全肩帶(請參閱P15)
⓬將安全肩帶及腰帶扣入立體式股帶扣座。
⓭扣上按鈕式開放型扶手。

縫製品的清洗方法

〈座椅縫製品、扶手保護套、預防呼吸道閉塞型保護頭墊、腰部・臀部守護墊的清洗方法〉

○清洗時，請注意以下事項。



〈快拆輕鬆洗坐墊的清洗方法〉

○清洗時，請注意以下事項。



※建議洗衣機水溫設定30度以下，並以低速水量清洗。

注意
○若要將縫製品晾曬於室外時，請於陰涼處平放晾乾。
○請不要使用鹼性清潔劑、酸性清潔劑以及含氯漂白劑。

〈遮陽篷、安全肩帶、置物網籃的清洗方法〉

○請勿整件放進洗衣機裡清洗，請按照下述要領清洗。

●水溶性污垢（如果汁、唾液、尿液等）的情況：用40度左右的熱水將毛巾浸濕，輕輕擰乾後充分擦拭污垢處。再以乾毛巾充分擦拭水份後再置於陰涼處自然晾乾。

●非水溶性污垢（如牛奶、油脂、沙拉醬等）的情況：首先將中性洗潔劑溶解在40度左右的熱水中，再使用刷子或海綿輕輕刷洗污垢處。再用冷水或溫水洗掉中性洗潔劑，用乾毛巾充分擦拭水份後置於陰涼處自然晾乾。

注意
○若發現縫製品產生破損或異常現象，請立即停止使用，並請務必要聯繫維修中心進行檢查及維修。

車體的保養

〈框架及車輪的保養方法〉

○請勿對黏附在車輪上的泥土、灰塵等置之不理。務必使用濕毛巾等物品擦拭乾淨。

注意
○車架及車輪黏附泥土及灰塵時容易發生故障，故發現此情況時請停止使用。
○擦拭泥土及灰塵時請勿使用稀釋液或揮發油等有揮發性的溶劑。

○車輪屬於消耗品。當車輪的厚度磨損掉了5mm左右時，請向本公司維修中心聯繫更換。（須支付費用）

〈螺絲、螺帽類的保養〉

○請經常檢查螺絲、螺帽是否有鬆動，當發現鬆動時請盡速鎖緊。


〈按鈕式開放型扶手的保養〉

○當發現開放型扶手與車台連接處有灰塵時，請使用乾毛巾擦拭。

〈添加潤滑油〉

○請適時地在可動關節部位注入潤滑油。並請使用塑膠用的潤滑油。
○在注油之前，請先去除泥土及灰塵，並將水分擦拭乾淨。
○注油時，請在每個部位注入2~3滴左右。

●若無法順利折疊展開車體，且無法順利回轉迴轉固定器以及車輪與車體產生聲響，請在上圖 ⇨箭頭處添加市售塑膠用潤滑油，再重複開閉動作2～3次即可。

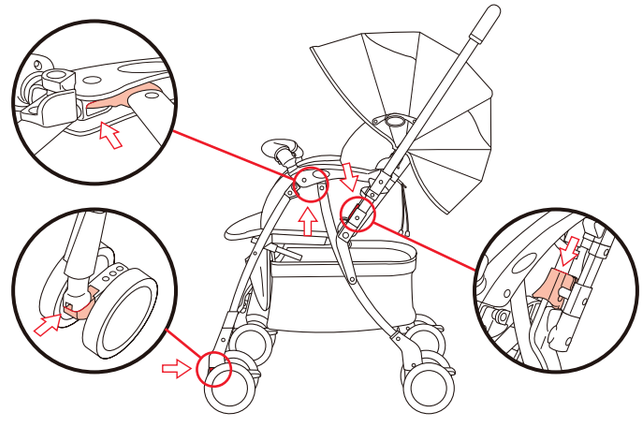

注意
○按鈕式開放型扶手與車台連接處的附近及內部請勿使用潤滑油。
避免解開按鈕式開放型扶手時寶寶有掉落的危險。



覺得故障嗎？送修前先確認

○倘若採取以下的方法卻仍無法解決問題時，請與本公司維修中心連絡。（請參閱P27）

〈使用中發現問題時〉

問題	處理方法
手把控制鈕無法操作時	請先解除安全控制鎖之後再操作一次。（請參閱P7）
車輪無法迴轉時	請將左右兩邊的車輪迴轉固定鎖一併解除。（請參閱P9）
車輪的轉動不靈活時	請在車輪注入潤滑油。（請參閱P24）
後輪煞車器失靈時	請確認後輪煞車器部位是否夾到碎石等異物。
手把無法切換時	請先解除手把的左右安全控制鎖之後，再進行切換。（請參閱P8）
靠背無法豎直時	請先將寶寶抱離嬰幼兒手推車，然後拉動無段式平躺角度調節帶。（請參閱P16）
安全肩帶無法插入安全腰帶時	請確認是否夾到衣物或安全帶。
無法收折嬰幼兒手推車時	請先完成〈收折之前〉的動作，然後再進行收折步驟。（請參閱P19） 請確認開關鎖扣部分是否夾到安全帶。
輪胎磨損時	輪胎的厚度低於5mm時，即需更換。 請與本公司維修中心連絡。（請參閱P27）

〈使用二手品〉

問題	處理方法
不了解之前的使用者是如何使用	對於使用狀態不明的商品，不建議使用。
嬰幼兒手推車出現裂痕或重大損傷時	切勿使用。

保管方法

○請將主體放入塑膠袋內，保管在沒有陽光直射的陰涼場所。
○請勿在上面放置重物、施加壓力的狀態下保管。恐造成故障或變形。

⚠注意

○為避免遮陽篷變形，請勿橫倒手推車或放置重物在車上。且避免放置在高溫的場所裡做保管。
○請勿置於火源附近、勿在大熱天下放置於高溫車內。恐易使塑膠零件變形、無法維持性能。

廢棄方法

○請依照各區域的廢棄物處理方式做處理。
○為維護地球環境，請勿隨意放置丟棄。

保固與售後服務


〈保固事宜〉

○於品質保證期間內（自購買日起1年內），由於零件短少、加工不良等可歸責於本公司者、依照使用說明書及注意事項而在正常使用狀態下故障者，根據保固規定提供免費修繕服務。
自購買日起已超過3年之產品，雖仍受理修理，但產品修理部位以外之品質，則恕不保證。
此外，已停產之產品，可能因修理所需零件已無庫存而無法修理。（零件之保有期間為停產後3年期間。即使於3年內，零件之顏色、布料之花樣等方面，亦有可能無法符合您所指定的，敬請見諒。）

〈售後服務事宜〉

○使用中發生故障等情況，或檢查中發現時，需要更換零件或修理時，各部位之固定部位發生鬆動或異音、零件缺損或車輪轉動有異常時，以及感覺到其他異常時，請停止使用，並確認產品名稱、型號、批號（參考下圖）後，向本公司維修中心聯絡 。

○聯絡時，請務必告知本產品把手管側貼紙所示之品名、型號、批號，以利進行後續處理作業。

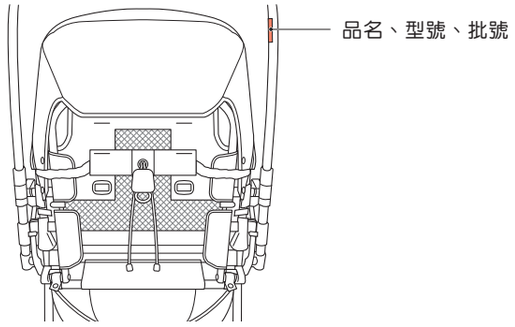

維修服務中心聯絡方式

台灣愛普力卡股份有限公司 維修服務中心
連絡電話：（03）6561261
服務地址：新竹縣竹北市福興路885號

MEMO

LUXUNA *Light*

ラクーナライト

- This product is a Carry Travel System (CTS) which can be used in combination with a baby sling and dedicated stroller types.
- The baby sling has to be purchased separately.
- Please refer to the CTS user manual for more information on CTS.


User Manual

***For ASEAN countries ONLY**

Thank you for purchasing this product.
This product is suitable for babies 1 month to 36 months old, and under 15 kg.

※One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

Please carefully read this specification before use and use it correctly.
Please do not use any method except the ones specified in this specification, to operate this product, since it may not be able to maintain this product's function correctly, and is very dangerous.
Please carefully keep this book after using it.

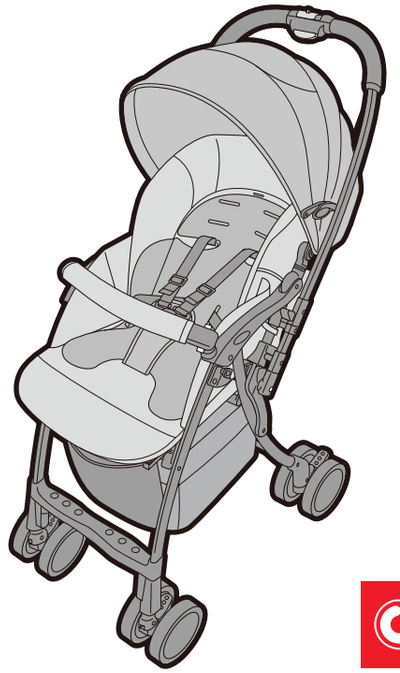

R41118

Carry Travel System

Index

Before use

Precautions before use 1
Suggestions/CNS standard/Warning marks indicator
Please note when using.....2~4
Warning/Caution
When unpacking the product.....5
Product features
Name of Parts.....6

Stroller instructions

How to unfold the stroller..... 7
How to switch the handlebars to the reverse position 9
How to use the wheel-turning fixer 9
How to use the wheel brake 10
How to open the push-button open handle .. 11
How to use the footrest 11
How to use the basket (applicable for CTS storage pouch)..... 11
How to install the protection pad products ... 12
How to sit baby in the stroller 13
How to adjust the height adjusting shoulder belt..... 15
How to use the stepless angled lay-flat regulator..... 16
How to use the shade..... 17
How to fold the stroller..... 19

Maintenance of sewing parts

Removing the shade 20
Removing the handle protecting cover..... 20
Removing the CTS storage pouch and basket..... 20
Removing the seat fabric..... 21
How to install the seat fabric 22

Simple routine maintenance

Routine maintenance 23
Troubleshooting..... 25
Storage..... 26
Disposal..... 26
MEMO ..... 27~28

Precautions before use

Suggestions

An infant is not a miniature adult, especially for the baby without a fully developed neck.

Please consider your baby's condition carefully when using a stroller.

①Please pay attention to the baby's condition and avoid using it continuously.
②Please avoid leaving baby under direct sunlight exposure; the temperature inside the stroller is higher than what adult feels outside.
③Please stay away from crowded areas to avoid noise and dust.
④Please slow down when going through rugged pavement, and avoid the surface that could cause vibration and impulsion.
⑤For a concise approach, the images or assembly used in this User Manual may not be identical to the real product, so please check with the real product for reference.

CNS standard

○The stroller marked with CNS symbol meets the following standards regulated by Taiwan Product Safety Association. (This product qualifies as a CNS standard A stroller.)

Range of application	This stroller is limited to one baby passenger, and is used for normal family parent and child movement such as outdoor activities or shopping.
Stroller style	**A stroller** Stroller for one-month-old* baby whose neck is not well developed and needs to lie flat in the stroller.
Suitable age	1 month to 36 months old
Recommended continuous use time	Lie-flat: less than 2 hours Sitting posture: less than 1 hour
Lay-flat angle	More than 150°
Wheel external diameter	More than 115 mm

＊One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

About the labels of this book

○Symbol such as "Warning", "Caution", and "Prohibited" are used to predict the condition if you do not follow the notice items. These are divided by the damage severity. The indicated contents are very important, so you need to abide by them.

Mark	Indication
⚠ Warning	Failure to observe these instructions could lead to death or serious injury.
⚠ Caution	Failure to observe these instructions could lead to serious injury or product damage.

Prohibit	Indication
⃠	Please do not perform these prohibited actions.

Tips	Tips and tricks when using the product.

Please note when using

○To avoid unexpected accidents, please read this user manual carefully, and follow the instructions thoroughly.

⚠ Warning Failure to observe these instructions could lead to death or serious injury.

To avoid the danger of the baby falling down.

Please buckle up shoulder belt, waist belt and 3D hip belt before use.



Do not let the baby stand on the stroller.



If waist belt gets loose, the baby may stand up and fall down.

Please keep an eye on the baby. Even if the seat belts are buckled up, the baby still could possible stand up, so please adjust waist belt according to the baby's developing condition.



If the wheel of stroller falls into the gutter on the pavement, the stroller will lose balance and could cause the baby or the user injury.

When roadway with latticed drainage ditch is encountered, please make sure the width of the stroller wheel is suitable.
If suitable, then slowly push stroll over.



When the front wheel gets stuck, please hold the handle with one hand and hold the stroller leg with another hand to lift the front wheel. Please do not lift the entire stroller.



When parking the stroller on a ramp area, the stroller may slide or overturn automatically.

Whether baby is in or out of the stroller, please lock the wheel brakes on both sides to make sure the stroller will not slide.



When baby or belongings are on the stroller, please do not trust brake too much, since the road surface and the duration of structural function varies, and the brake may not be able to completely stop the stroller.



Even if the brake is locked, please do not leave the baby inside the stroller and outside your range of visibility.



The stroller could lose its balance when you can not see the road condition and all over.

When the baby is in the stroller, please do not directly lift up the stroller.



<Next page>

⚠Warning Failure to observe these instructions could lead to death or serious injury.

Since the stroller may overturn, and injure the baby.

Please do not let two babies ride at same time or let the baby sit beside the seat cushion.




Please do not use it in a place with height differences such as stairs or escalator.




Since the baby may fall down or may be pinched when folding the stroller.

Before using the stroller, please make sure the switch lock on both sides are complete locked.

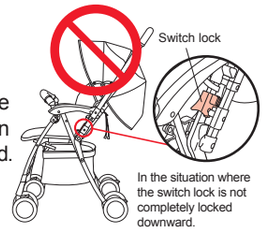

Before using the stroller, please make sure the safety control lock is completely locked.

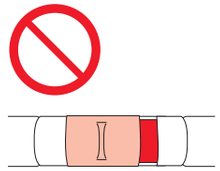

Since the stroller may overturn, and injure the baby.

When the baby is on the stroller, please do not place materials on any place other than the storage basket. Do not hang objects on the handle, and do not lean on the handle.



The road surface may cause the temperature inside the stroller to get high and harm the baby's body.

Please do not use for a long time in high temperature or under strong sunlight.



To avoid the baby being wound up by the seat-belt and result in the danger of suffocation.

Please use shoulder belt and waist belt together, and adjust these to the positions that fit baby's figure.



It may damage the stroller, harm the baby, or cause other accidents.

Please do not push too hard when using stroller.



All movable joint of stroller may pinch the baby, and the stroller main frame may hit the baby or user.

Please keep the baby away when you are folding the stroller.



Please watch out for baby's hands and feet while installing the button-type open handle.



⚠Warning Failure to observe these instructions could lead to death or serious injury.

It may cause the stroller damage and hurt the baby or user.

- Do not let a child operate the stroller.
- When the baby sits in the stroller, please align baby's legs to the position of 3D hip belt to avoid stroller turning upside down or backwards.
- Any person except our maintenance personnel should not disassemble, install or remold the stroller.
- Please do not use this product when seat fabric article is removed.
- Please do not use this product when it has been vigorously struck or fallen down.
- Please do not use it as a toy.
- Please do not use this stroller for any purpose other than for the baby to ride in it.

⚠Caution Failure to observe these instructions could lead to serious injury or product damage.

- Please do periodic inspections and maintenance.
- Before use, please make sure the mainframe and seat fabric article of the stroller are completely and correctly installed.
- Please periodically apply plastic-product-use oil to movable joint.
- Before using a stroller, which has not been used for a long time, please inspect and maintain the stroller first.
- Even if baby is not on the stroller, please do not place the stroller in a dangerous area such as steep hill or sidewalk close to driveway.
- Please do not use the stroller when screw or screw cap is loose.
- Please do not combine two strollers and use them together at same time.
- Please do not push the stroller by lifting up the front wheel, since this may cause the rear frame to be bent and deformed or breakdown.
- For the baby's safety, please push the stroller at a normal walking speed (about 4 km per hour)
- Please do not push the stroller to sandy or muddy areas (since sand may enter the joints and cause unfolding difficulty)
- Please do not ignore it when the frame is contaminated with sand or mud. (since sand may enter the joints and cause unfolding difficulty)
- A stroller is for a baby to ride on, so please do not install any extra components, sold on the market, on the stroller to avoid damage.
- Please do not put object over 5 kg in the basket storage.
- Parents or guardian should not lean on the stroller.
- Please do not use it to move objects.
- This product is only used for baby's riding.
- Please do not do anything that could cause the stroller to breakdown.
- Please do not use it on a bus.
  This product is not designed for using on the bus. If using on bus, turning or urgent braking of the bus may cause overturn or other accidents.
- Caution for using on subway.
  This product is not designed for using on the train. If using on the train, turning or urgent braking of the train may cause overturn or other accidents, so please use the stroller brakes and pay a lot of attention to it. User will need to undertake the responsibility of any accident.
- Please do not rush to get on and off the train when using in the subway.
  The train may not sense the situation when stroller is gripped by train door, and get the baby injured.
- Please do not use it on snow-covered or frosty pavement.
- Please do not use it in strong wind.
- Please do not use under thunder.
- To avoid increasing the temperature inside the stroller, please do not use the rain shade indoor, an area close to source of ignition or high temperature location.
- To avoid deformation of plastic component and losing its original function, please do not place the stroller close to any source of ignition or inside the car with high temperature in the summer.

- When baby sits on the stroller to cross a height-differenced area, please watch out that the stroller may be overturned.

In face-to-face situations, step on the pedal plate of the stroller and lightly push the handle to push the stroller over the height different area.

<Face-to-face situation>



In back-to-face situations, push the handle lightly and lift up the safety handle at the same time to push the stroller over the height different area.

<Back-to-face situation>



When unpacking the product

○Please check every component when unpacking the product.


○Please contact the distributor or our company if any component is missing, mistaken, or damaged.

Framework

○This product is folded when packed in the box. Please see P7 on how to open the stroller.

○Unpacking the product.

A Wheel turning fixer in part A is in locked status.
B Wheel brake in part B is in locked status.
To unlock the wheel-turning fixer or rear wheel brake, please see P9 and P10.

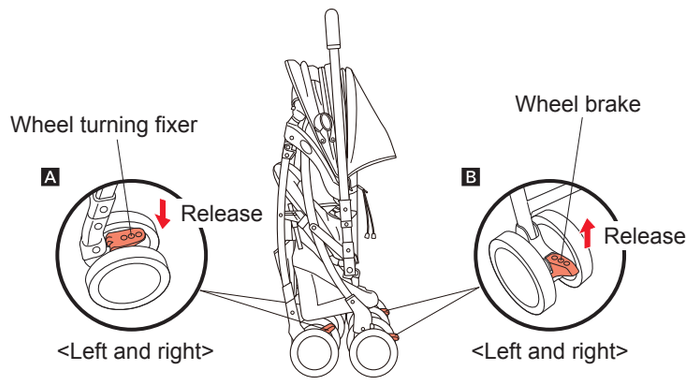

⚠ Caution

○Before use, please release the locking status. (See P9 and 10)

Accessory


Protective head pad that prevents respiratory tract blockage


Waist and buttocks protection pad


User Manual



Carry Travel System User Manual

⚠ Warming

○Keep the packaging material and storage bag out of reach of your child.


<Product features>

○Handle is 2-way use with back-to-face and face-to-face.
○Front-to-back folding method.
○The stroller can stand alone in folding status.
○The frame uses a lightweight aluminum tube.


Name of Parts

<5-point growth type harness>

○5-point growth type harness is a generic term for the shoulder belt and waist belt.

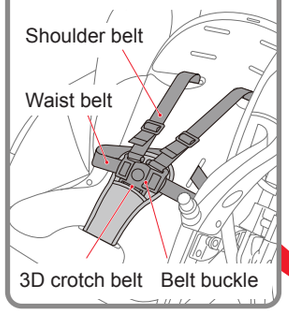

<The back of backrest>

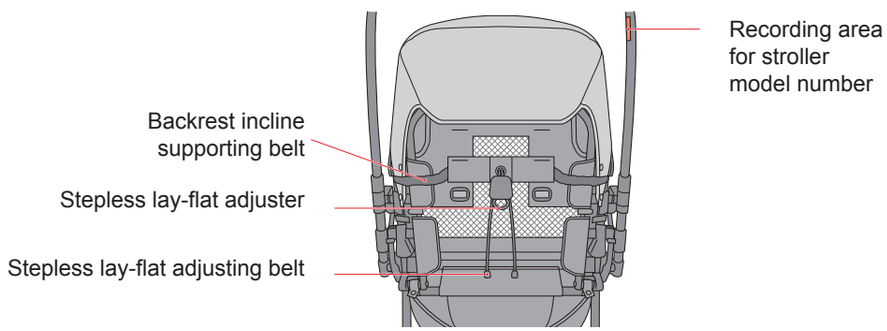

How to unfold the stroller


Warning

- Please do not fold or unfold the stroller when the baby touches or is close to the stroller, since the movable joint may hurt the baby's fingers, hands, or feet, or the stroller may hit the baby's body and hurt the baby.
- Please do not let the child operate the stroller, since this may result in the dangers of falling down or other accidents.

Little reminder


- Since the stroller is packed inside the box, it may not be able to unfold smoothly. Please repeatedly operate 2-3 times to unfold it.

<Release the safety control lock>

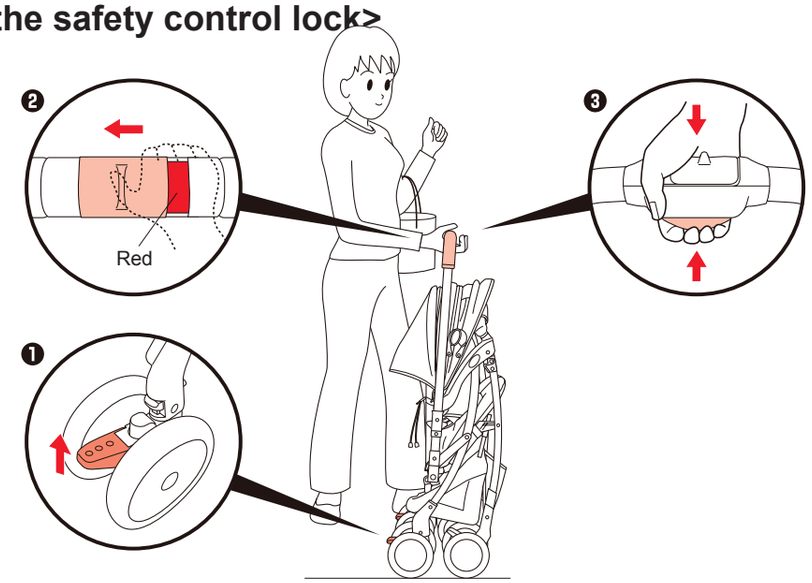


❶Unlock the wheel brake (See P10)
❷Unlock the safety control lock (The part marked in red)
❸Push the middle of the handle, and pull the control button up to unlock it.


<Unfold the stroller>

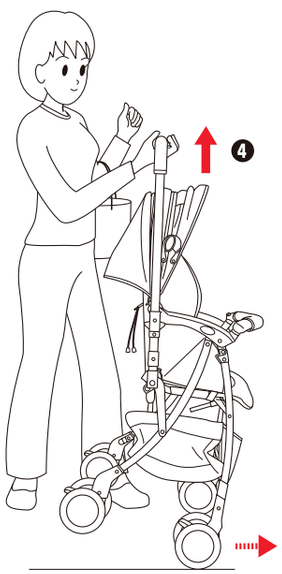

❹Continue to hold the handle and lift the rear wheel away from the ground.

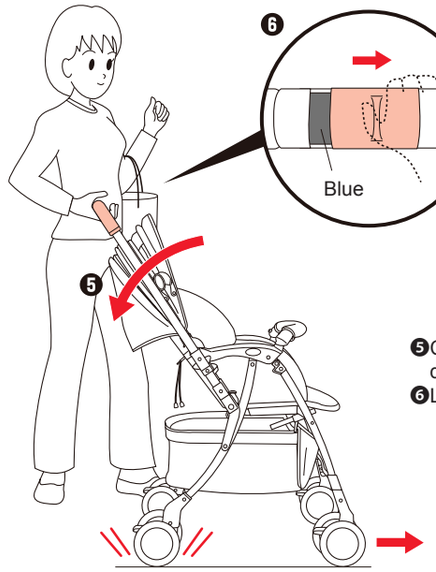

❺Continue to hold the handle and push the handle down toward the direction of the rear wheel until the stroller is completely unfolded.
❻Lock the safety control lock (Shown in blue)

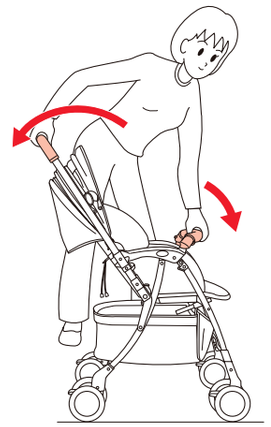


Tips

- If it is difficult to unfold it with a single hand, please use another hand to hold the button-type open handle to unfold the stroller.

Warning

- Please make sure the lock switch is completely dropped to bottom before use, so that it will not fold and cause the baby to fall down or get pinched.

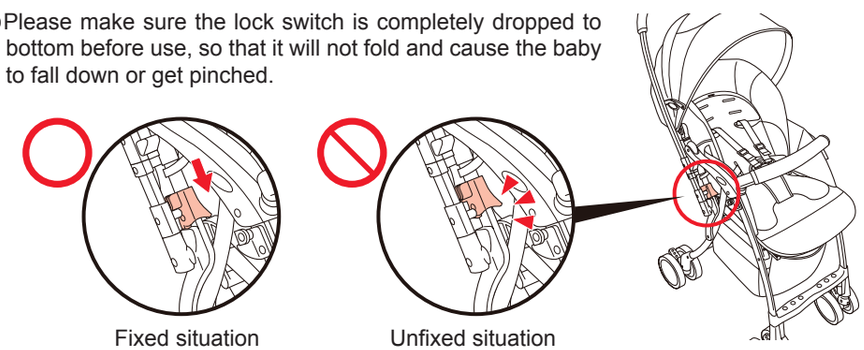



Fixed situation　　Unfixed situation

How to switch the handlebars to the reverse position

Warning


- Watch out to avoid pinching baby's finger, hand or foot when switching the handle.
- Please do not switch the handle in a ramp, since the stroller may slide or overturn unexpectedly and cause the baby fall down.
- Please do not switch the handle while pushing the stroller.

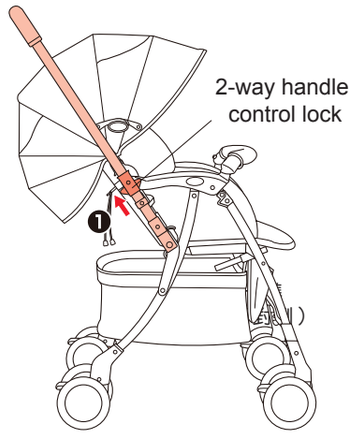

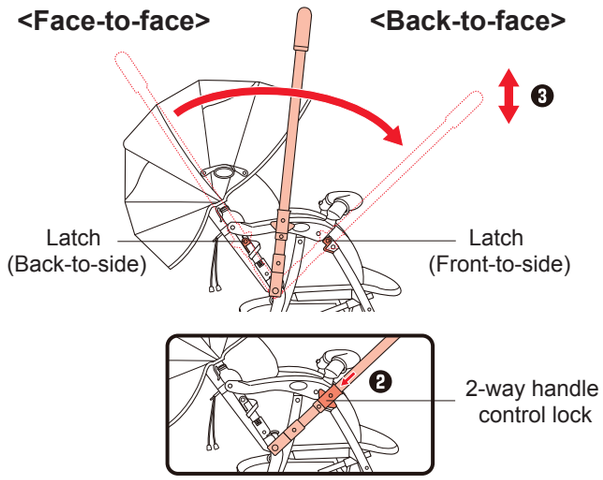

❶Pull the 2-way handle control lock up with both hands, and switch the handle to the opposite position.
❷Make sure the 2-way handle control lock actually locks up (left and right).
❸Shake the handle up and down to make sure it is locked.

How to use the wheel-turning fixer

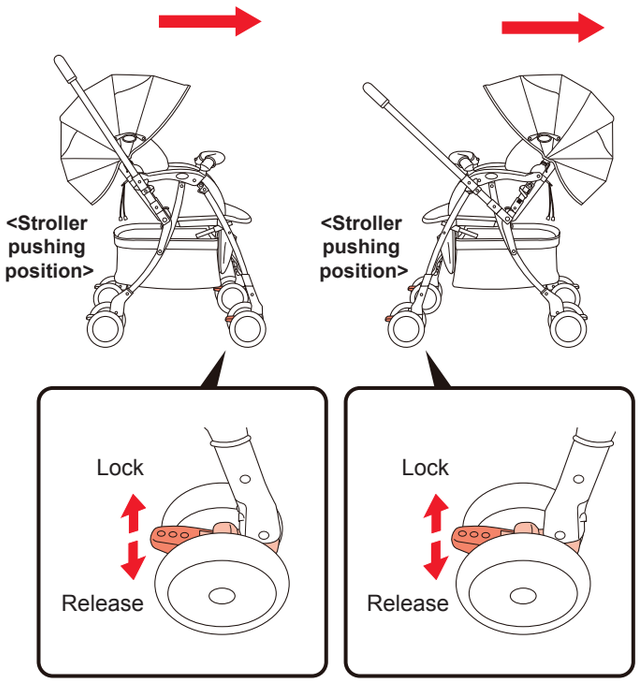

<When to release the fixer>

- Front wheel can turn freely on a flat surface after unlocking the wheel-turning fixer.
  Please use the stroller in unlocked situation in normal situation.

● Push down the turning fixer (left and right) to unlock it.

<Locking occasion>

- When moving on rough and uneven surface, ramp, and inclined surfaces, please lock the left and right front side wheel of moving direction temporarily, so that the stroller will be easier to push.

● Pull up the turning fixer (left and right) to lock it.

How to use the wheel brake


Warning

- Please lock the left and right brakes when putting baby in or taking baby out of the stroller.
- When baby or material is on the stroller, please do not trust brake too much, since the road surface and the duration of structural function varies, and the brake may not be able to completely stop the stroller.
- Even if the wheel brakes are locked, please do not leave the baby alone when the baby is on the stroller.

Caution

- Even if the baby is not in the stroller, please still lock the left and right wheel brake when leaving the stroller.

<Lock wheel brake>

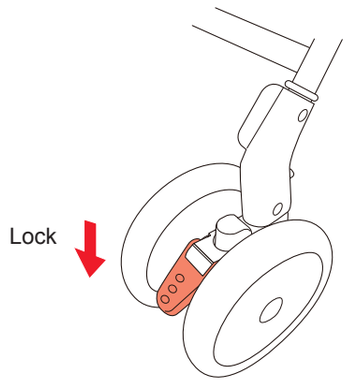


❶Push the wheel brake in stroller pushing position down to lock the wheels (left and right).
❷Move the stroller back and forth a little bit to make sure the wheel brakes are locked.

Tips

- When wheel brake is unable to be locked, please move the stroller back and forth and try to lock it again.


<Unlock wheel brake>

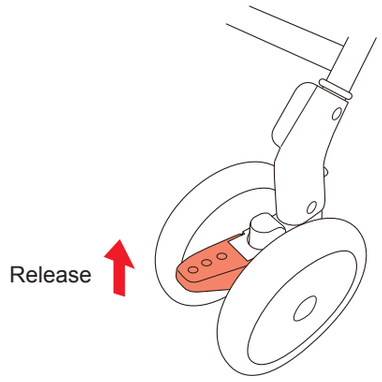


● Pull the wheel brake up to release the locking status (left and right).

Caution

- When unlocking the wheel brake with a hand, please do not hurt your finger by the part marked with a red arrow.

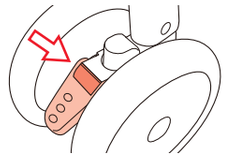


How to open the push-button open handle

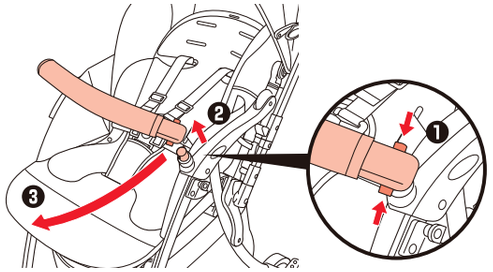

❶Press and hold the inner and outer lock buttons.
❷Pull the front guard upward.
❸Lower the front guard.

How to use the footrest


○Footrest extends the length of the seat and is suitable for the use when baby is sleeping.

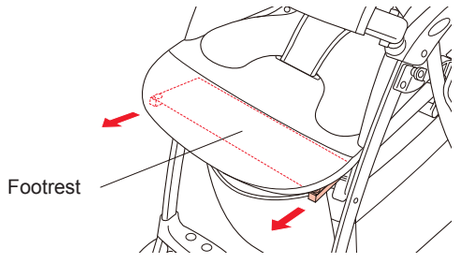

● Pull up the sewn cover of the seat, and pull out the footrest. (Left and right)

How to use the basket

Caution
○Do not put sharp items into the basket for those may damage the basket.
○Do not load items over 5kg.
○Remove all items before folding the stroller.

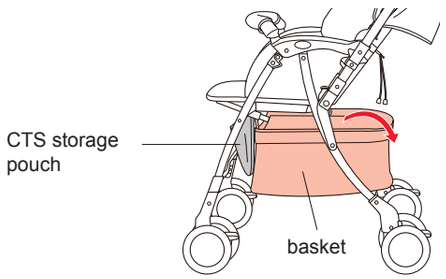

● Please place items into the basket from the top.

Tips ○When placing materials in the storage basket, please distribute the material weight evenly in the storage basket.

Caution
○Please do not place other items in the CTS storage pouch.


How to install the protection pad products

○The protection pad inside the stroller is used to assist the baby in maintaining a proper and accurate posture.

Prevent respiratory tract blocking type head-protecting pad

Please use this when baby's neck starts to get stable


○When installing head protection pad to prevent respiratory tract blockage, please install shoulder belt in the lower shoulder belt guiding hole.
Used up to 7 months old. (See P15 "How to adjust the height of the shoulder belt")

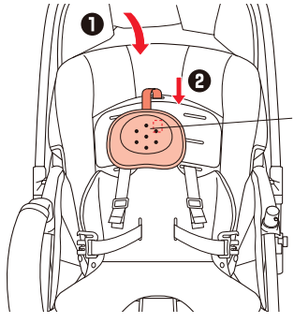

❶Head pad installation is suitable for the use of lying flat. (See P16).
❷Remove the white Velcro on head protecting pad, put fixing belt of devil felt through head pad installation hole, and stick it on the devil felt in seat inner side.

Tips ○When the head pad is not easy to install, remove the upper half of seat fabric article, and reinstall it again in the situation of being able to see the inside of seat. (see P21 "Removing the seat fabric)


<Installing position for "preventing respiratory tract blockage"-type head protecting pad>

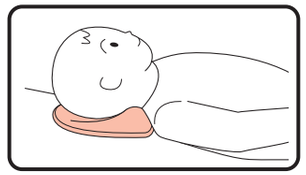

●Please leave the part in the lower end of head pad in baby's neck when installing it.
※Remove it immediately if the part does not fit baby's neck.


Caution
○When shoulder belt is installed through middle or upper shoulder belt guiding hole, "prevent respiratory tract blockage"-type head protecting pad cannot be used.

Waist and buttocks protecting pad (for new-born to 3 yrs old.)

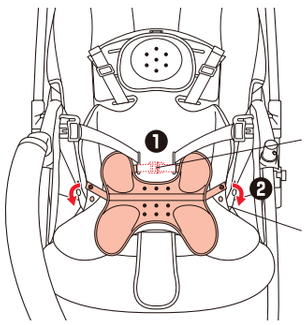

❶Pass the upper portion of the belt buckle through the waist belt hole on the high-ventilation soft-touch protective pad, and then fasten it.
❷Buckle the side locking buttons on the waist and hip protection cushion onto the side locking button of the High-ventilationsoft-touch protective pad. (left and right)
○Depending on baby's figure, even the baby under 3 years old is still possibly not suitable for waist protecting pad. Please remove it if not suitable.

1 Preparation

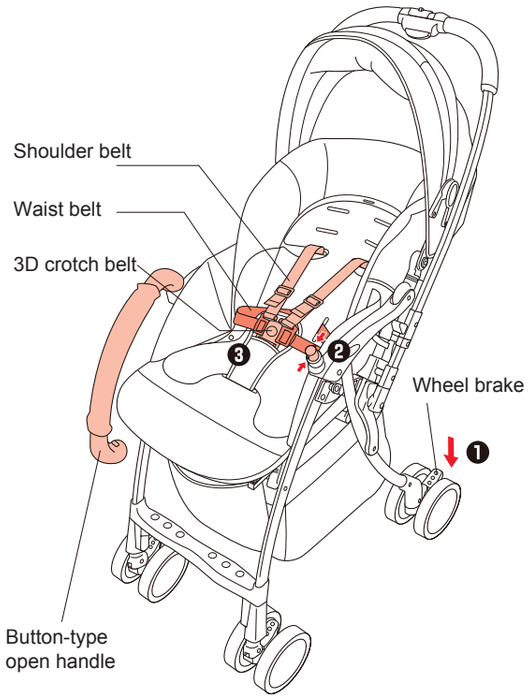


❶Lock wheel brake (left and right).
❷Open up button-type open handle.
○Push both inside and outside of the locking button for button-type open handle to unfold it.
❸Unfasten shoulder belt and waist belt.
○Push down the “PRESS” section of the belt, and unlock the waist belt and shoulder belt.

○If shoulder belt position needs to be changed, please see P15 “To adjust the height of the shoulder belt”.
○When the angle of the seat needs to be adjusted, please read P16 “How to use the stepless lay-flat angle adjuster”.
○When using the foot rest, please read P11 “How to use the foot rest”.

2 How to ride

<When the baby is in the stroller, be sure to buckle him/her up>

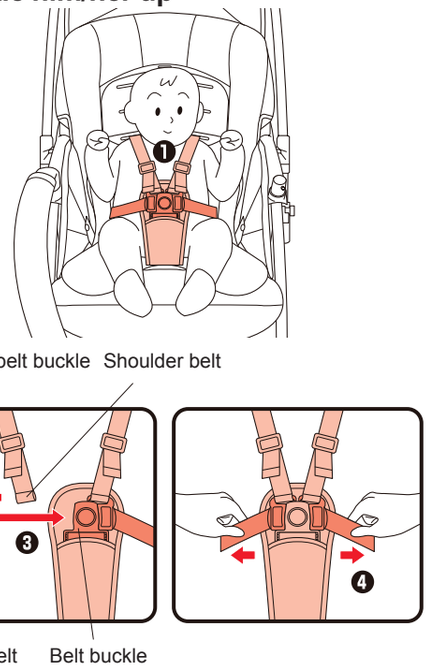


❶ Put the baby in the stroller first.
❷ Fasten shoulder belt into the waist belt.
❸ Fasten waist belt into the belt buckle.
❹ Pull waist belt to both sides, and adjust it to fit the baby.
※Please adjust shoulder belt, waist belt, and 3D crotch belt according to baby’s development.


Tips
○When installing shoulder belt, the warning stick should face outward.
○Please make sure shoulder belt is not tangled up.

⚠ Warning
○After buckling up seatbelt, please make sure waist belt on left and right side is adjusted to fit the baby.
○Please buckle shoulder belt on waist belt in use, since shoulder belt could possibly hurt the baby’s neck.
○Please keep an eye on the baby. Even if the seat belts are buckled up, the baby could still stand up, so please adjust waist belt according to the baby’s developing condition. If waist belt gets loose, the baby may stand up and fall down carelessly.
○When the baby sits on the stroller, please align the baby’s inner thighs to the position of the 3D crotch belt to prevent stroller from turning upside down and backwards.

<Adjusting the waist belt>

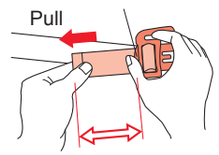
<Fasten>


Keep more than 3 cm at the end.

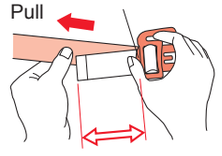
<Loosen>


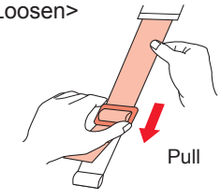
Keep more than 3 cm at the end.

●Gently press the waist belt buckle while adjusting the belt.

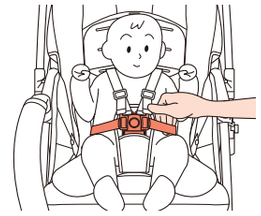

○A proper length of waist belt is to leave a space of 4 fingers between waist belt and the baby.

<Adjusting shoulder belt>

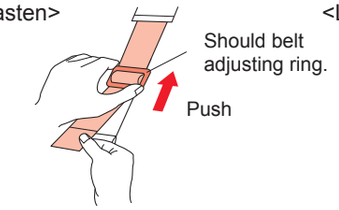
<Fasten>


<Loosen>


●Adjust it by moving the shoulder belt adjusting ring.

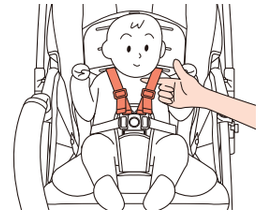
○The proper length of the shoulder belt is about the width of an adult’s finger between shoulder belt and the baby.

<Adjusting the 3D crotch belt>

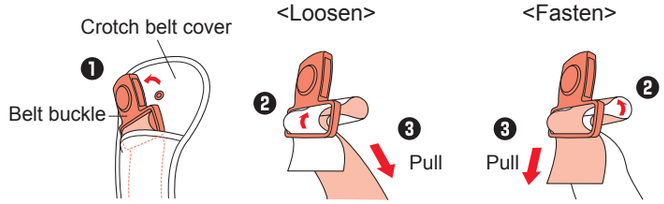


❶ Unfasten the snap button on the inside of the Belt buckle from the snap button on the crotch belt cover.
❷ Take the belt out.
❸ Pull out the belt to adjust the length.


○After the adjustment, make sure the buckle between the buckle set and belt protector is locked.

⚠ Caution
○Please adjust shoulder belt, waist belt, and 3D crotch belt according to baby’s development. When the shoulder belt, waist belt, or 3D crotch belt is too loose, even with a fastened seatbelt, the baby could still possibly stand up and fall down.
○Please be careful not to pinch the baby’s fingers when closing the open handle.
○After closing the open handle, please pull it to make sure it is actually locked.
○When the baby is riding the stroller, please do not lift the open handle.
○Please save more than 3 cm for the end of the waist belt (⟺ part in the diagram)
○When adjusting the angle of the seat backrest, please adjust the length of shoulder belt, waist belt, and 3D crotch belt.

<Close up the button-type open handle>

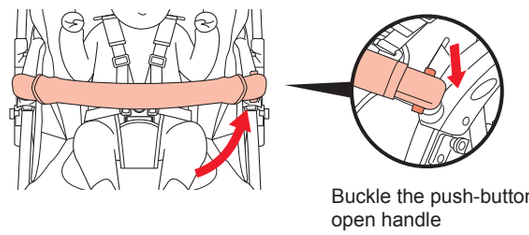

<Unlock wheel brake>

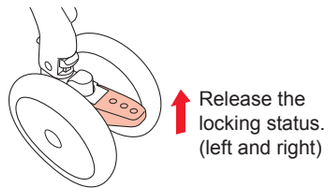

Stroller instructions


How to adjust the height adjusting shoulder belt

Warning

○Please adjust the height of the shoulder belt according to your baby's development.

<Position of the shoulder belt>

○The position of the shoulder belt is set on lower section when the product is pulled out from its packing box.

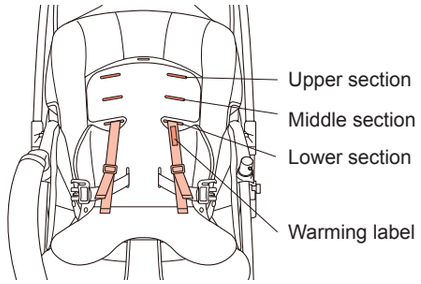

<Correct use of the shoulder belt>

●Put it through the lower section shoulder belt guiding hole near the shoulder's position.



○Please use the following 3 level standards to adjust the shoulder position.

The standard of age by months (body build)	The position of the shoulder belt guiding hole
18 mo~36 mo	Upper section
7 mo~18 mo	Middle section
1 mo~7 mo	Lower section


※ Please adjust the belt according to the above table.


Tips


○The Warming label should face outward when installing the shoulder belt.
○Please make sure the shoulder belt is not tangled.

<The height adjustment of shoulder belt>

●Release the shoulder belt and waist belt from the hip belt buckle (see P13 "Preparation ❸")
●Remove the shoulder belts from the shoulder belt hooks.
●Unlock the side-locking button of the backrest, and pull up the seat.

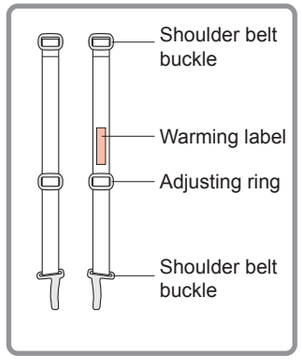


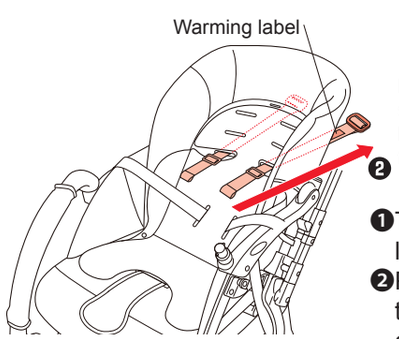

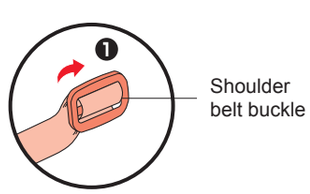


❶Turn the shoulder belt buckle to parallel to the direction of the shoulder belt.
❷Put the shoulder belt buckle through the seat guide hole and backboard guide hole.

<When using the upper section guiding hole>

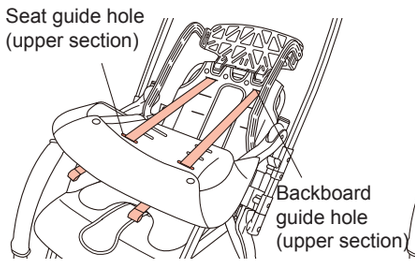


●Put it through the seat guide hole (upper section) and backboard guide hole (upper section)

<When using the middle section guiding hole>

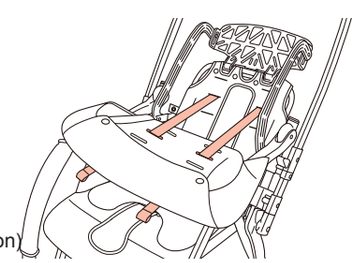

●Put it through the seat guide hole (middle section) and backboard guide hole (middle section)

<When using the lower section guiding hole>

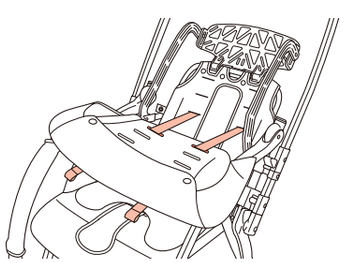

●Put it through the seat guide hole (lower section) and backboard guide hole (lower section)

●After adjusting the height, please put the sewn cover on the seat backrest, and buckle up the locking button. (See P22).
●Insert the shoulder belts into the shoulder belt hooks.

How to use the stepless angled lay-flat regulator


<Angle standard of seat>


The standard of age by months (body build)	Angle position of seat
1 mo~ neck is fully developed	Lay flat
Neck is fully developed ~ Able to sit independently	Lay flat ~ lay half (middle position)
Able to sit independently	Lay flat ~ sitting posture

Tips

○When the backrest is lay-flat, the headrest is automatically straight.

When backrest is lay-flat

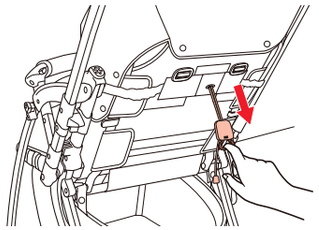

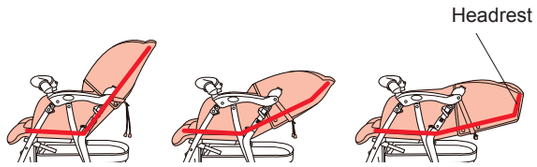

❶Loosen the shoulder belt. (See P14)
❷Use one hand to hold the baby and another hand to pull the stepless lay-flat angle adjuster.
❸Put the backrest down while pulling the ring to a proper angle.
❹Adjust the length of the shoulder belt and waist belt.

Warning


○If the backrest needs to be laid down when the baby is on the stroller, please release the shoulder belt first.
○After adjusting the seat angle, adjust the length of the shoulder belt and waist belt. If these belts are too loose, even if they are buckled up, the baby still could possibly stand up and fall down.

Caution


○Please do not adjust the seat backrest angle while pushing the stroller.
○When the baby is on the stroller, if the seat angle needs to be adjusted, please do not rush and change the angle drastically.
○When the baby is on the stroller, in case necessary to lay down the backrest, please be sure to hold on to the baby.
○Please use the lay-flat backrest for babies who cannot sit independently.

Tips

○For babies who can sit independently, if the seat backrest is laid down, the posture of a baby's head on the headrest will be uncomfortable, so please adjust the angle of set backrest to make sure the headrest is not in and uncomfortable position.



When the backrest is straight

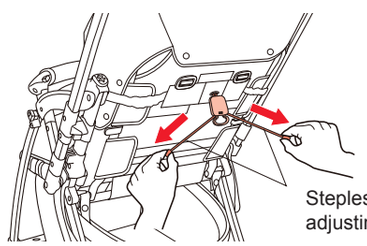

●Please make sure the baby is not completely supported by the backrest by holding the stepless lay-flat adjusting belt with single hand, and pulling the backrest up into an upright position.


Tips

○When the baby is completely supported by the backrest, please do not adjust the backrest.


How to use the shade

⚠Warning


○Do not fold or unfold the shade when the baby is in contact with it to avoid harming the baby's fingers or hands with the movable joints.

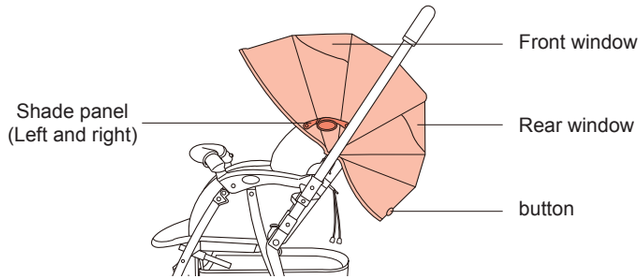

How to pull out the shade

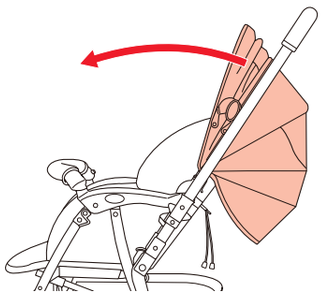


❶Pull out the shade.

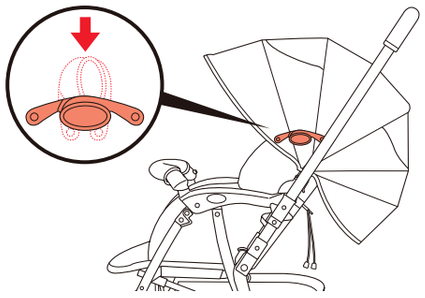


❷Press down the shade panel. (Left and right)

How to fold the shade

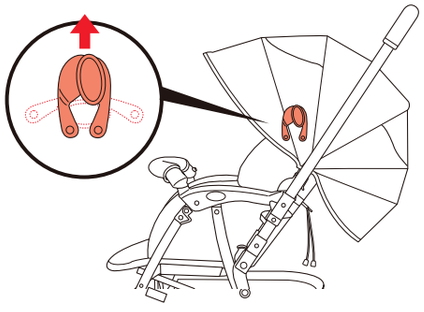


❶Fold the shade panel upward. (Left and right)

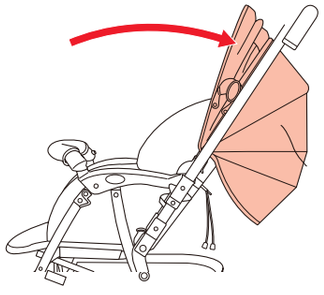


❷Fold the shade.

How to adjust the angle of the shade

○The angle of the shade can be adjusted when the backrest reclines or the sunlight is weak.

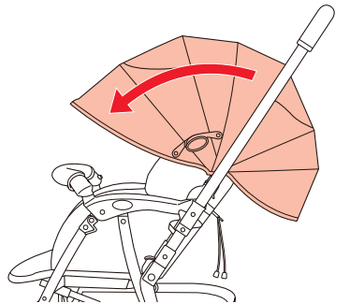


❶Pull out the shade and fasten it in a suitable position.

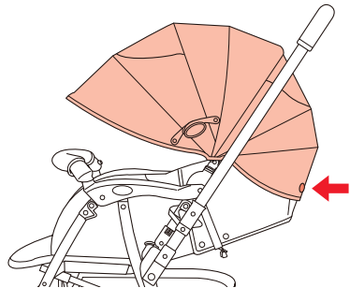

❷When the backrest reclines, fasten the shade at the fastener on the back of pillow (left and right).

How to open the front or rear windows

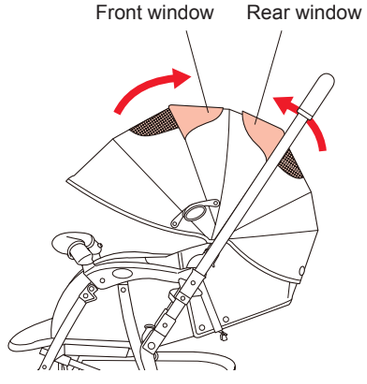

○You can check baby's status through the opened window cover on the shade

How to fold the stroller

⚠Warning


- Please do not fold or unfold the stroller when the baby touches or is close to the stroller, since the movable joint may hurt the baby's fingers, hands, or feet, or the stroller may hit the baby's body and hurt the baby.
- Please do not let the child operate the stroller, since this may cause overturn or accident and hurt the baby.


⚠Caution

- Insert the shoulder belt and waist belt into a safety buckle before folding the stroller to avoid damaging the hip belt buckle.

Little reminder


- Due to packing, the stroller may not be easy to fold or unfold in the beginning, please repeat the operation it 2 to 3 times.

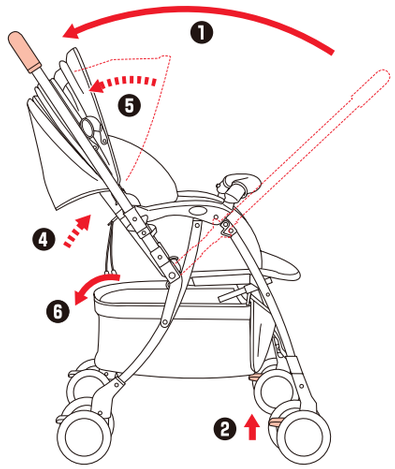


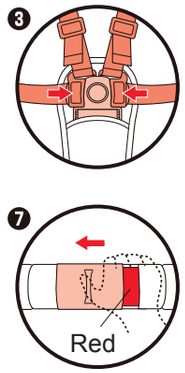

<Before folding the stroller>

❶Switch the handle to the backside. (See P9)
❷Lock the wheel turning fixer. (right and left)
❸Buckle up the shoulder belt and waist belt onto the belt buckle. (See P13)
❹Pull up the backrest (Please read P16)
❺Fold the shade. (See P17).
❻Take out all articles from the basket.
❼Push it to the left to unlock the safety control lock.

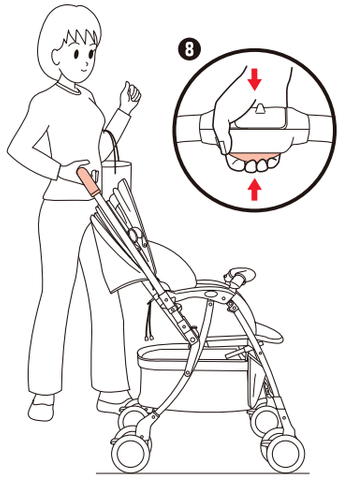

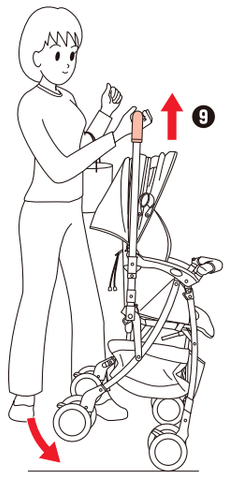

<Release the safety control lock>

❽Push on the middle of the handle and push the control button of the handle upward.


<Folding method>

❾Continue to hold the handle, lift it up, slightly bend the stroller forward, and then push down the handle to complete the folding.
❿Lock safety control lock.

Tips


- If a single hand cannot operate it, please use another hand to lift the button-type open-style handle to fold it.

Removing the seat fabric

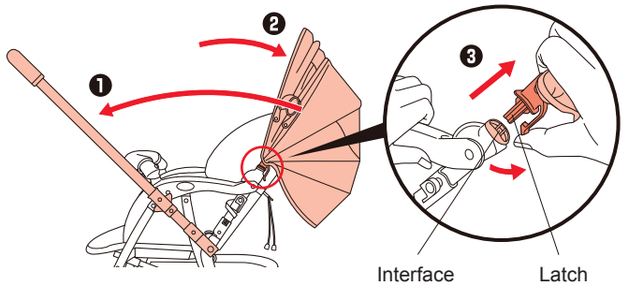


❶Switch the handle to the opposite side. (See P9)
❷Fold the shade. (See P17)
❸Pull up the protrusions below the latch of both sides, and slightly pull it out of the interface.

Removing the handle protecting cover

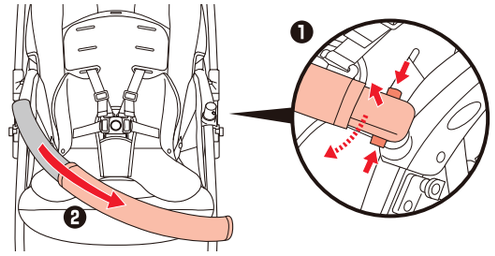

❶Open up button-type open handle.
❷Take out the handle protector.

Removing the CTS storage pouch and basket

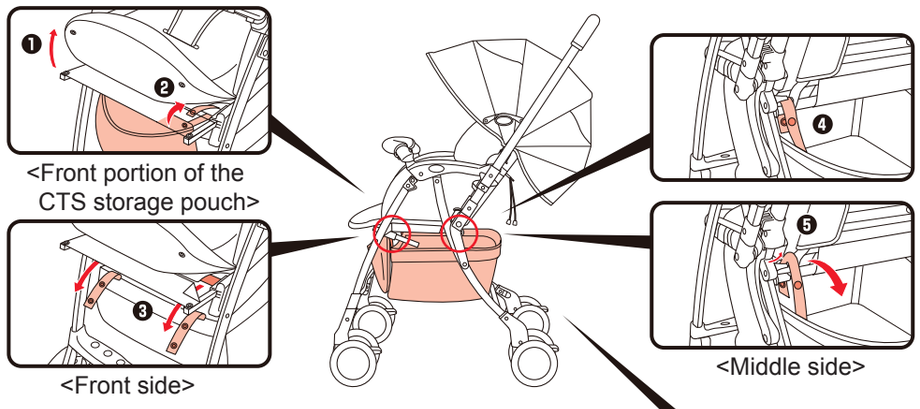

❶Unfasten the locking button of the footrest (left and right) (When the footrest is in use)
❷Unfasten the snap buttons at the front of the CTS storage pouch, and remove the CTS storage pouch.
❸Unfasten front locking button (left and right)
❹Unfasten middle locking button (left and right)
❺Unfasten rear locking button (left and right)
❻Pull out the locking belt from the inside to take out the storage basket.

⚠Caution


- Please take out all articles from the storage basket before removing the basket.


Removing the seat fabric

Warning

○Please do not let the baby sit on the stroller with the seat fabric article removed, since this may cause unexpected damage on the stroller.


●Proceed after removing the shade. (Please read P20)

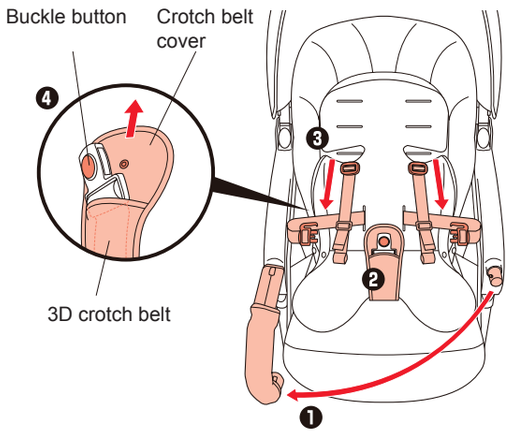


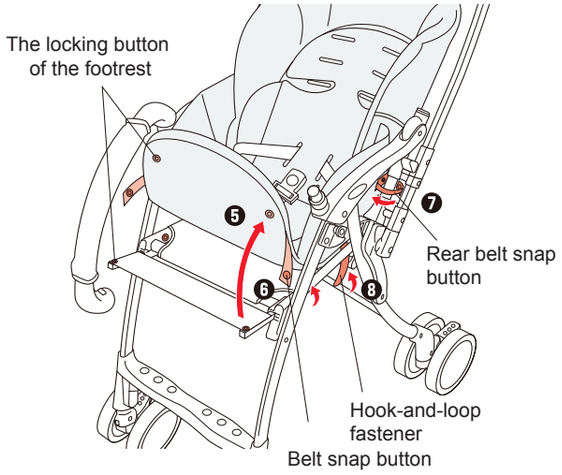

❶Open button-type open handle.
❷Push the buckle button to unfasten the shoulder and waist belts.
❸Pull out the shoulder belts.
❹Unfasten the snap button on the inside of the crotch buckle from the snap button on the crotch-belt cover.

❺Unfasten the snap buttons on the footrest support.(2locations)(If footrest support is used)
❻Unfasten the belt snap buttons under the seat. (2 locations)
❼Unfasten the rear belt snap buttons on the sides of the seat. (2 locations)
❽Unfasten the hook-and-loop fasteners on both sides under the seat. (2 locations)

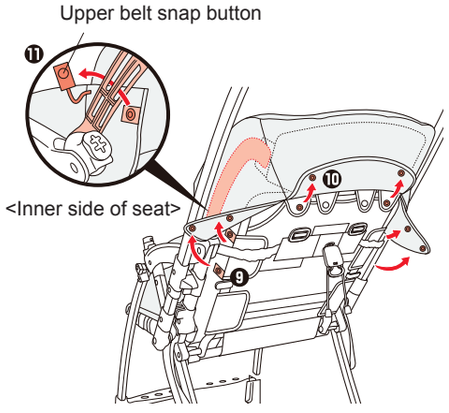


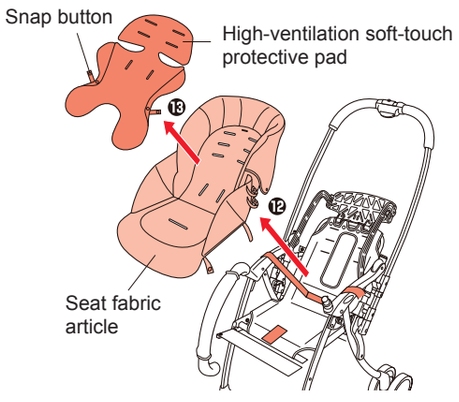


❾Unfasten the snap buttons on both sides of the seat. (4 locations)
❿Unfasten the snap buttons on the back of the backrest. (2 locations)
⓫Unfasten the upper belt snap buttons and pull them out. (2 locations)

⓬Remove the Seat fabric article after pulling out the shoulder and waist belts.
⓭Unfasten the snap buttons and remove the high-ventilation soft-touch protective pad.


How to install the seat fabric

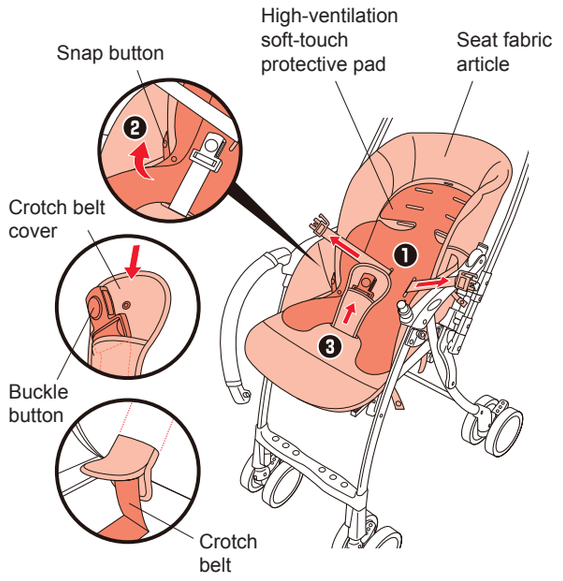


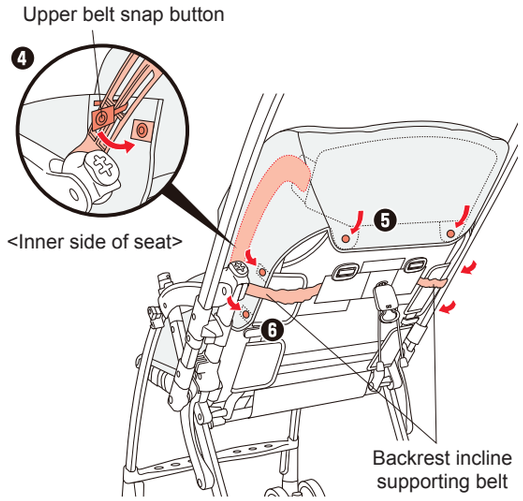

❶Install the seat by inserting the crotch and waist belts through the holes on the seat.
❷Install the high-ventilation soft-touch protective pad.
❸Install the crotch belt cover onto the crotch belt. Fasten the snap button on the inside of the crotch buckle to the snap button on the crotch belt cover. Insert the front end of the crotch belt cover through the inner side of the seat.

❹Pass the upper belt snap buttons through the main body and fasten them. (2 locations)
❺Fasten the snap buttons on the back of the backrest. (2 locations)
❻Pass the seat through the inner side of the reclining belts and fasten the snap buttons on both sides.

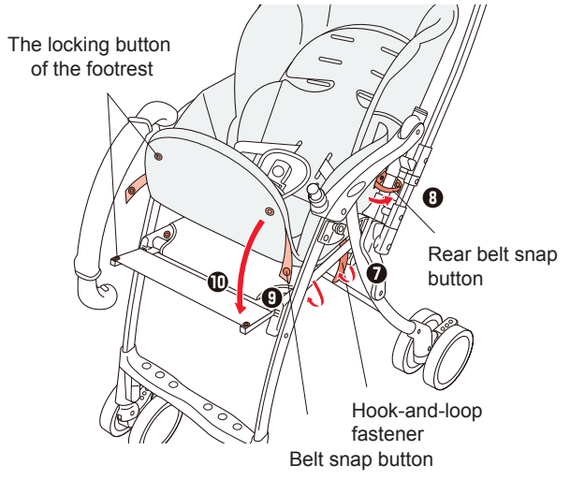

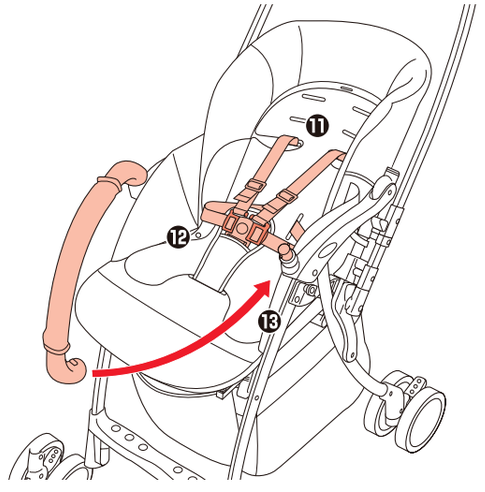

❼Fasten the hook-and-loop fasteners under the seat. (2 locations)
❽Fasten the rear belt snap buttons on the sides of the seat. (2 locations)
❾Fasten the belt snap buttons under the seat. (2 locations)
❿Fasten the snap buttons on the footrest support. (2 locations) (If footrest support is used)

⓫Install the shoulder belts. (See page 15)
⓬Insert the shoulder and waist belts into the crotch buckle.
⓭Attach the front guard.

Cleaning method for sewing parts


<The cleaning method for the seat-sewn cover, handle protector, preventing respiratory tract block protection head cushion, and waist and hip protection cushion>

○Please note the following laundering & cleaning symbols.



<Cleaning method for the quick-remove easy-wash cushion>

○Please note the following laundering & cleaning symbols.

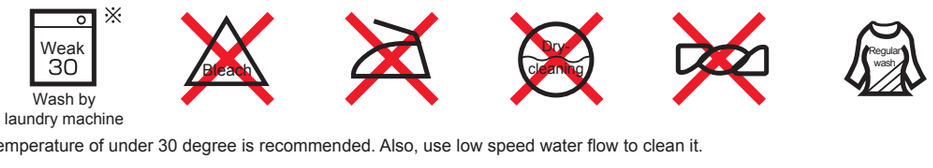

※Water temperature of under 30 degree is recommended. Also, use low speed water flow to clean it.

Caution

○If drying the sewing outdoor, please place it flat on a shady area to dry it.
○Please do not use alkaline detergent, acidic detergent or bleach containing chlorine.

<Cleaning method for the shade, shoulder belt, and storage basket>

○Please do not put the entire component into the laundry machine. Please clean it according to the instructions below.
●Situation for water soluble smudges (such as juice, saliva, or urine): Please use a soft wet cloth, submerged in 40 degrees warm water and dried out slightly, to wipe out the smudge. Use a dry towel to wipe it out, and then put it in a shady place to dry naturally.
●Situation for non-water-soluble smudges (such as milk, fat, or salad dressing): Please add neutral detergent into 40 degree warm water, and then use brush or sponge to clean the smudge. Use cold or warm water to wash out the neutral detergent, use a dry towel to wipe water, and then place it in shady area to dry naturally.

Caution

○If any damage or abnormal situation is discovered on sewing, please stop using it and contact our maintenance center for help.

Maintenance of the stroller frame

<Maintenance of the frame and wheel>

○Please do not ignore the mud or dirt attached to the wheel. Wipe it out and clean it up with a wet towel.

Caution

○Breakdowns will occur often when mud or dirt is attached to the frame or wheel, so please stop using the stroller in this situation.
○Please do not use volatile solvents such as diluents or essential oil to clean mud or dirt.

○The tire is consumable, so when the tire approaches a thickness of 5 mm, please contact our maintenance center to replace it (at your cost).

<Maintenance of the screw and screw cap>

○Please check if the screw or screw cap if loose routinely. Please screw it tight when they get loose.


<Maintenance for the button-type open handle>

○Please use a dry towel to wipe out the dust in the joint of the open handle and stroller frame.

<Add lubricating oil>


○Please occasionally add lubricating oil used for plastic products onto the movable joint.
○Please remove mud or dirt and wipe out any water before adding lubricating oil.
○Please add about 2~3 drops in every component.

●If any problem occurs while folding or unfolding the stroller, such as being unable to turn the turning fixer smoothly, or hearings noises on the wheel and main frame, please add lubricating oil used for plastic products on the places shown with ⇨ arrow, and repeat the folding/unfolding action 2 to 3 times.

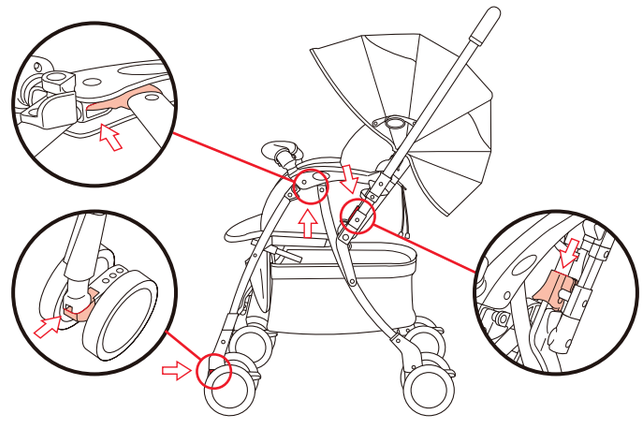

Caution

○Please do not use lubricating oil in the joint and neighborhood of button-type open handle and stroller frame to avoid unlocking the button-type open handle and cause the baby fall down.

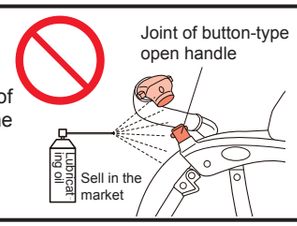

Troubleshooting

○If the following method still does not resolve the problem, please contact our maintenance center.

<Encounter problem in use>

Problem	Troubleshooting
Cannot operate handle control button	Please release the safety control lock and then do it again (see P7).
Wheel is not turning	Please unlock the wheel fixing lock on both sides (see P9).
Wheel does not turn smoothly	Please add lubricating oil to the wheel (see P24).
Rear wheel brake does not work	Please check if there is rubble stuck inside rear wheel brake.
Handle cannot be switched	Please release the left and right safety control lock on the handle before switch it (see P8).
Backrest cannot be pulled up	Please take the baby out of stroller first, and then pull the stepless lay-flat angle adjusting belt (Please read P16)
Shoulder belt can not insert into waist belt	Please make sure the clothes and seatbelt are not caught.
Cannot unfold stroller	Please complete the procedure before folding, and then do the folding again (see P19). Please make sure the seatbelt is not caught by switch lock.
When the tire is worn	Replace the tire when the thickness of tire is less than 5 mm. Please contact our maintenance center.

<For used product>

Problem	Troubleshooting
Do not understand how previous user was using it.	Do not recommend the use of any product with unclear using condition.
The stroller shows cracks or serious damage.	Please do not use it.

Maintenance

○Please place the framework inside a plastic bag and store in a cool place without direct sunlight.

○Please do not place heavy objects on top of this product during storage. Overload may cause malfunction or deformation.

⚠Caution

○To avoid the distortion of the shade, please do not put stroller by its side or place heavy material on the stroller. Also, keep the stroller from high temperature areas when stored.

○Please do not place the stroller near a source of ignition. Please do not put the stroller inside the car on a hot day, since the plastic component may deform and would not fulfill its function.

Disposal guide

○Please dispose this product according to local regulations.

○Please do no dispose arbitrarily for environmental awareness.

MEMO

MEMO