總公司
アップリカ・チルドレンズプロダクツ合同会社
本社/大阪店 — 〒542-0082 大阪市中央区島之内1-13-13 TEL0120-415-814
Aprica Children's Products G.K.
1-13-13, Shimanouchi, Chuo-Ku, Osaka, Japan


進口商
台灣愛普力卡股份有限公司
總公司營業部 地址：新竹縣竹北市台元街28號5樓之3
電話：(03)5525688 傳真：(03)5525690
維修服務中心 地址：新竹縣竹北市福興路885號
電話：(03)6561261 傳真：(03)6561267
公司網址：http://www.aprica.com.tw
意見信箱：0800@aprica.com.tw 統一編號：22662003

5098T0100-02

Optia
オプティア

Aprica

・本產品是一個可以結合嬰兒揹巾和專屬嬰幼兒手推車的多用途攜帶旅行組(Carry Travel System)。
・嬰兒揹巾需另外購買。

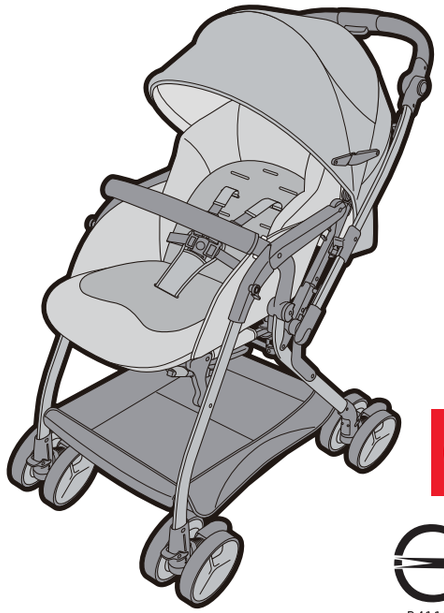

Carry Travel System

R41118　SG安全基準A形

使用說明書／保證書

非常感謝您購買此產品。
此產品適用於出生後1個月～36個月，體重15公斤以下的嬰幼兒。

※本說明書所敘述的出生後1個月，指的是母親懷孕37周以上，出生時體重超過2.5公斤以上，出生超過1個月的嬰幼兒。

使用前請詳細閱讀本說明書並正確地使用。請勿使用本說明書內容以外的方法操作本產品。不僅無法充分發揮本產品的功能也十分的危險。使用後請妥善保存此書。

目　錄

使用前
使用前的注意事項 ・・・・・・・・・・・・ 1
　給保護者的建議／SG基準／本說明書的標示
使用上請注意 ・・・・・・・・・・・・ 2～4
　警告／注意
製品取出時 ・・・・・・・・・・・・・・・・ 5
　製品特徵
各部位名稱 ・・・・・・・・・・・・・・・・ 6

嬰幼兒手推車的使用方法
嬰幼兒手推車的開啟方法 ・・・・・・・・・ 7
兩對面切換手把的使用方法 ・・・・・・・・ 9
手動車輪固定器的使用方法 ・・・・・・・ 12
車輪煞車器的使用方法 ・・・・・・・・・・ 12
按鈕式開放型扶手的開啟方法 ・・・・・・・ 13
雙腳支撐架的使用方法 ・・・・・・・・・・ 13
置物籃的使用方式 ・・・・・・・・・・・・ 13
守護墊的安裝方法 ・・・・・・・・・・・・ 14
讓嬰幼兒乘坐手推車的方法 ・・・・・・・・ 15
安全肩帶的高度調節方法 ・・・・・・・・・ 17
無段式平躺角度調整器的使用方法 ・・・・ 18
遮陽篷的使用方法 ・・・・・・・・・・・・ 19
嬰幼兒手推車的收折方法 ・・・・・・・・・ 21

縫製品的保養方法
遮陽篷的拆卸方法 ・・・・・・・・・・・・ 23
扶手保護套的拆卸方法 ・・・・・・・・・・ 23
多用途攜帶旅行組收納袋的拆卸方法 ・・・ 23
座椅縫製品的拆卸方法 ・・・・・・・・・・ 24
座椅縫製品的安裝方法 ・・・・・・・・・・ 27

日常簡易保養
日常保養 ・・・・・・・・・・・・・・・・・ 29
覺得故障嗎？送修前先確認 ・・・・・・・・ 31
保管方法／廢棄方法 ・・・・・・・・・・・ 32
品質保證 ・・・・・・・・・・・・・・・・・ 33
保證書 ・・・・・・・・・・・・・・・・・・ 34

使用前的注意事項

給保護者的建議

嬰幼兒並非成人的縮小版。
特別是頸部尚未發育完全的新生兒更是如此。
請充分了解嬰幼兒的情況，並小心使用嬰幼兒手推車。
①請隨時注意嬰幼兒的情況，並避免連續使用。
②請避免讓嬰幼兒直接照射到陽光。
　因為嬰幼兒手推車內的溫度，比大人的感覺來得高。
③請避開人群多的地方，以避免噪音、粉塵。
④經過不平整的路面，請盡可能放慢速度，並且請避開引起震動、衝擊的路段。
⑤本說明書所使用的插圖、組裝等，為求簡單明瞭，並非與實品完全相同。請以實際物品為主。

SG基準

○有顯示SG標章的手推車，表示有按照日本製品安全協會的規定，達到以下各項基準。
（此製品為SG基準Ａ車合格品。）

適　用　範　圍	此嬰幼兒手推車限寶寶一人乘坐，提供戶外、購物等一般家庭親子移動上的使用。
車　種　的　形　式	**A車**　出生後一個月*　頸椎尚未發育完成的嬰幼兒，採取平躺姿勢使用的嬰幼兒手推車。
適　用　年　齡	出生後1個月至36個月以內
建議連續使用時間	平躺姿勢：2小時以內　　坐立姿勢：1小時以內
平　躺　角　度	150˚以上
車　輪　外　徑	115mm以上

※此處所稱出生後1個月，是指懷孕週數37週以上，且出生時之體重滿2.5kg以上，出生後1個月之嬰幼兒。

關於本書的標示

○「警告」、「注意」、「禁止」等符號是預測您未遵守注意事項的情況下，依據危害、損害的嚴重性來作區分。標示所表示的內容十分重要，請您務必遵守。

標　示	標　示　之　內　容
⚠警告	使用方法錯誤時，可能會造成人員死亡或重傷等情形。
⚠注意	使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。

禁　止	標　示　之　意　義
⃠	請勿操作本說明書所禁止的行為。

建議	使用產品時的便利小建議。

使用上請注意

○為避免意外事故發生，使用前請務必詳閱使用說明書，並且正確地使用。

⚠警告　○使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐寶寶有不慎掉落的危險。

請務必將安全肩帶、安全腰帶以及立體式股帶繫好再使用。



請勿讓寶寶站立於嬰幼兒手推車上。



安全腰帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。

請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。



因恐嬰幼兒手推車的車輪掉落於路面上的溝內，而使得嬰幼兒手推車失去平衡並且不慎造成寶寶及使用者受傷等危險發生。

當遇到有格子狀排水溝蓋的道路且必要通過的情況下，請先確認嬰幼兒手推車的車輪寬度是否適合。如果適合，請慢慢且仔細地推行嬰幼兒手推車。



前輪卡住時，請一手握著手把以及一手握著前腳管，提高前車輪。請勿將整台嬰幼兒手推車舉高。



在坡道等地方，嬰幼兒手推車因恐自行滑動、翻覆。

當寶寶乘坐時或離座時，請務必將車輪煞車器左右兩邊同時鎖上，並確認嬰幼兒手推車不會滑動。



當寶寶乘坐或置放物品時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對煞住嬰幼兒手推車。



即使鎖上煞車器，也請勿讓寶寶離開您的視線範圍，獨留於手推車內。



因恐失去平衡、看不到路面情況，而有導致摔倒之虞。

當寶寶乘坐時，請勿直接將嬰幼兒手推車提起懸空。



〈接下一頁〉

⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。


請勿讓兩名寶寶同時乘坐或搭乘於坐墊以外的地方。



請勿在樓梯、手扶梯等有高低落差的地方使用。



雙向手把切換拉柄切換至手推車的「背對寶寶」或「面對寶寶」時，請確認雙向手把切換拉柄已扣上左右卡榫，並將手把上下動一動，確認已扣上卡榫。

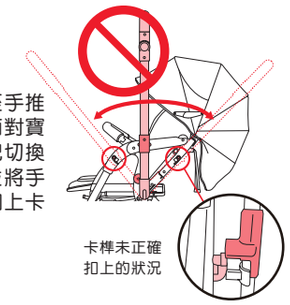


因恐嬰幼兒手推車收折時，而使寶寶有摔落、夾傷之虞。

使用嬰幼兒手推車前，請確認左右開關鎖扣是否完全扣住。



使用嬰幼兒手推車之前，請務必確認安全控制鎖是否完全扣住。

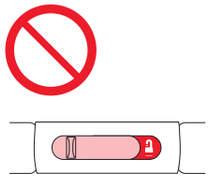

嬰幼兒手推車因恐受到路面影響使得車內的溫度變高，導致寶寶身體受到傷害的危險。

高溫或日照強烈時，請勿長時間使用。



因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。

當寶寶乘坐時，請勿在置物籃以外的地方放置物品，勿在手把懸吊物品。此外，請勿倚靠在手把上。



因恐導致嬰幼兒手推車破損、受傷、意外事故等發生。

當使用嬰幼兒手推車時，請勿過度施力。



因恐寶寶有被安全帶纏繞導致窒息的危險。

安全肩帶及安全腰帶請務必一起使用，並調整到適合寶寶體型的位置。



各可動關節部位因恐有夾傷寶寶手腳、車體撞擊寶寶或使用者本人等情況發生。

當您折疊收納嬰幼兒手推車時，請勿讓寶寶靠近。



⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐導致嬰幼兒手推車破損，使得寶寶或使用者受傷之虞。

○請勿讓兒童操作嬰幼兒手推車。
○當寶寶乘坐時，請務必讓寶寶的股間對準立體式股帶的位置。否則因恐使得嬰幼兒手推車往後翻覆之虞。
○本公司維修人員外，請勿自行分解、安裝或改造。
○請勿在座椅縫製品拆下的狀態下使用本產品。
○請勿在猛力撞擊或掉落後使用。
○請勿當成兒童玩具使用。
○請勿將本車用於寶寶乘坐之外的任何用途上。

⚠注意　使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。

○請務必定期檢查與保養。
○使用前，請先確認嬰幼兒手推車主體與座椅縫製品已正確安裝完成。
○請適時替可動關節部位上油，並務必使用塑膠製品用的潤滑油。
○長時間未使用的嬰幼兒手推車時，請務必進行檢查或保養後再使用。
○即使是空車，也請勿將嬰幼兒手推車放置於斜坡上或鄰近車道的人行道等危險場所。
○請勿在螺絲或螺帽鬆動的狀態下使用。
○請勿將兩輛手推車併在一起使用。
○請勿將前輪呈高舉狀態行走。因恐造成後部框架彎曲變形或斷裂。
○當寶寶乘坐於嬰幼兒手推車並且在行進中時，為了寶寶的安全，請以一般的步行速度行進（時速約4公里左右的速度）。
○請勿將嬰幼兒手推車推至沙地或泥濘處。
（關節轉折處易因沙粒進入導致開關收納困難。）
○框架處沾染沙粒或泥土時請勿置之不理。
（關節滑動處易因沙粒進入導致開關收納困難。）
○請勿碰觸座椅底部的座椅懸掛吸震系統(彈簧部分)，避免造成損壞的情形。
○嬰幼兒手推車是為了讓寶寶乘坐。為了避免造成損壞，請勿加裝任何市售零件。
○請勿在置物籃放入重量5kg以上的物品。
○家長、照護者請勿倚靠在嬰幼兒手推車上。
○請勿用來搬運物品等。
○本產品僅限於嬰幼兒乘坐。
○請勿做出其他可能導致嬰幼兒手推車故障之行為。
○請勿在公車上使用。
本產品之設計，並非以公車上使用為目的。若在公車上使用本產品，因恐轉彎、緊急煞車等原因，而有發生翻覆或意外事故之虞。
○電車上使用的注意事項。
本產品之設計，並非以電車上使用為目的。於電車中使用本產品，恐因轉彎或緊急煞車等情況而有翻覆之虞，因此請務必使用煞車器，並盡充分之注意，若發生意外，責任由使用者自行承擔。
○在電車等場所使用時，請勿強行上下車，嬰幼兒手推車可能未被感應到，造成被電車的自動門夾住，因恐造成寶寶受傷之虞。
○請勿在積雪處或是結霜的路面上使用。
○風勢強勁時，請勿使用。
○打雷時，請勿使用。
○由於易導致嬰幼兒手推車車內溫度變高，故請勿在室內、靠近火源處或高溫場所等地方使用遮雨罩。
○由於易造成塑膠部分變形而無法維持其原有功能，故請勿放置靠近火源處或炎夏高溫車內。

○越過段差的場合，若寶寶在乘坐的狀態下，請注意可能被推倒的意外發生。

面對面的場合使用下，腳踩在手推車的腳踏板上，將手把向下輕壓，讓手推車越過段差處。

〈對面的場合〉



背面的場合使用下，將手把向下輕壓，同時抬起安全扶手，讓手推車越過段差處。

〈背面的場合〉




製品取出時

○製品取出時，請務必進行各部位檢查工作。
○部品有缺少、弄錯或者破損時，請與經銷商或者總公司連絡。（請參閱封底）

主　體


○從箱子裡取出時，本產品處於折疊狀態。
　嬰幼兒手推車的打開方式，請參閱P7。


○製品取出時。
　車輪煞車器處於鎖定的狀態。
　手動車輪固定器、車輪煞車器的解除鎖定方法，請參閱P12。

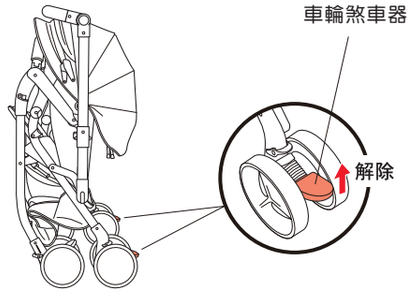

⚠注意　○使用前，請先解除鎖定狀態。（請參閱P12）

附屬品

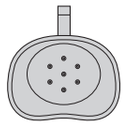
預防呼吸道閉塞型
保護頭墊

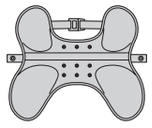

腰部・臀部守護墊


使用說明書


〈製品的特徵〉

○手把是背對、正對兩用型。
○前後收折方式。
○車體在折疊狀態可自行站立。
○框架使用的是輕量鋁管。

各部位名稱

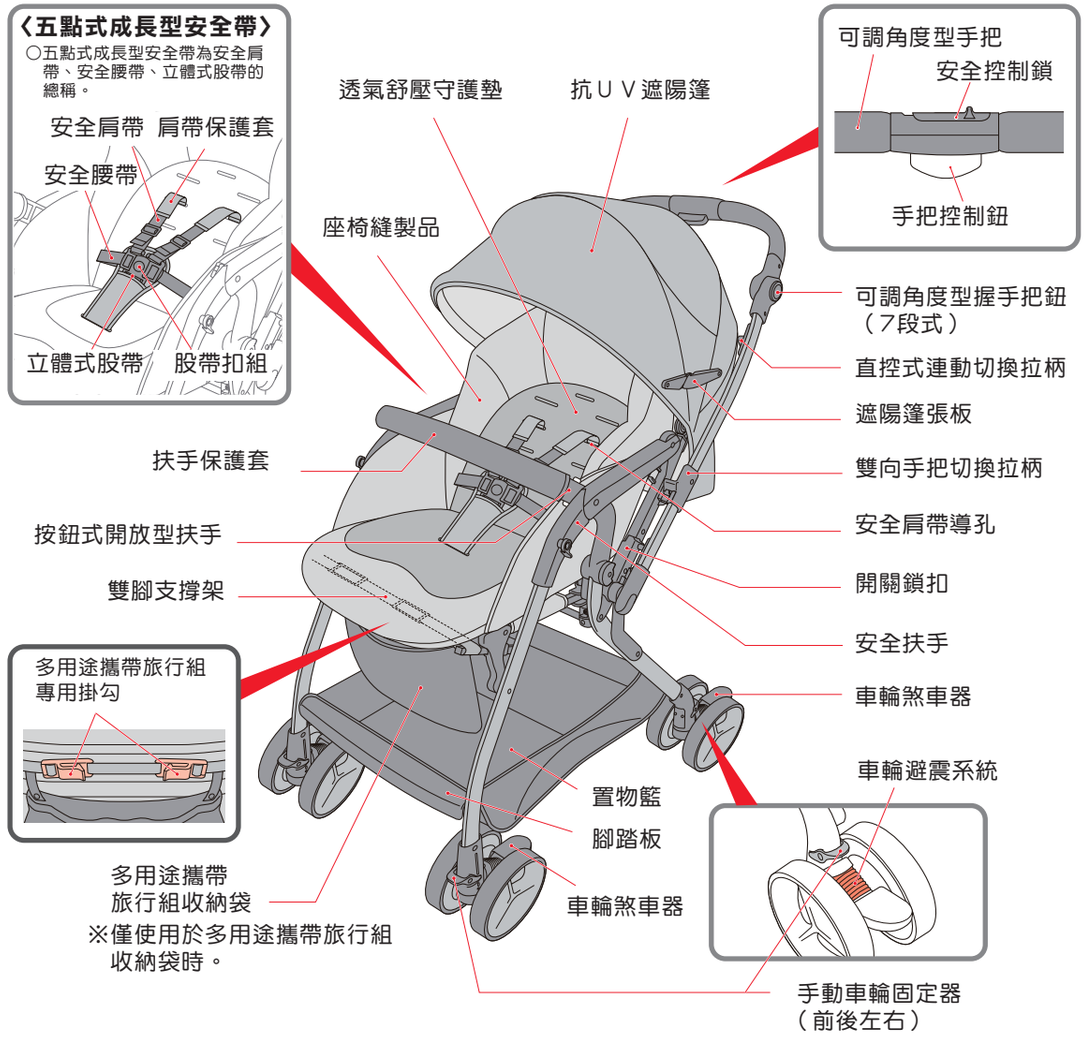

〈靠背背面〉

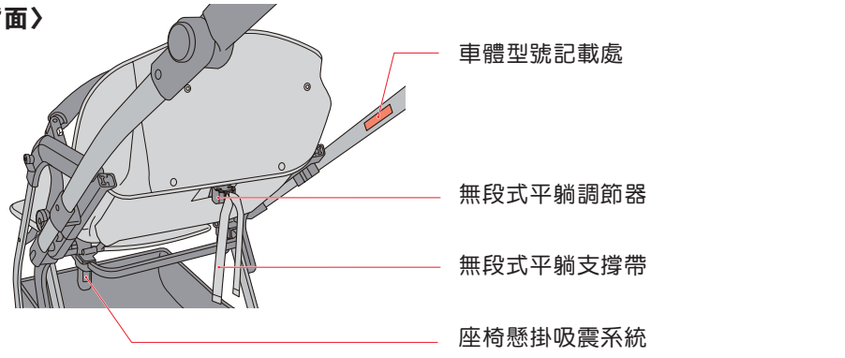


嬰幼兒手推車的開啟方法

⚠警告

○當寶寶碰觸手推車或靠近手推車時，請勿收折或開啟車體。因恐可動關節部位夾到寶寶手指、手腳或者嬰幼兒手推車碰撞寶寶身體而使寶寶有受傷之虞。
○請勿讓兒童操作嬰幼兒手推車。
因恐導致跌倒或意外事故發生等危險。

小叮嚀 ○因捆包裝箱的關係，初次使用可能無法順利開啟的情況發生。請重複操作2～3次後再進行開啟。


1 打開之前

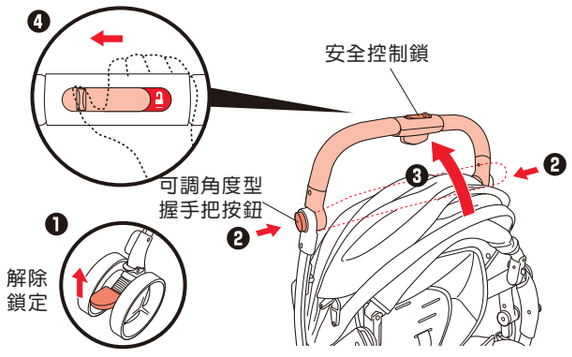

❶請先將車輪煞車器解除鎖定。（請參閱P12）
❷兩手壓下可調角度型握手把按鈕後，同時豎起手把。
❸將安全控制鎖往左橫推，解除鎖定。
❹施力於手把中央部位，輕壓後即按住手把控制鈕。

〈可調角度型握手把的使用方法〉


○可改變手把的角度、調整高度。
（7段式調節）

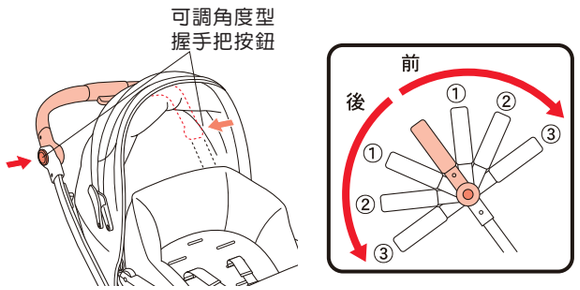


❶用雙手邊按住兩側的可調角度型握手把按鈕，邊調整手把的角度。
❷在適當的角度放開可調角度型握手把按鈕。

○本嬰幼兒手推車有兩種開啟方法。


2 雙手打開操作法

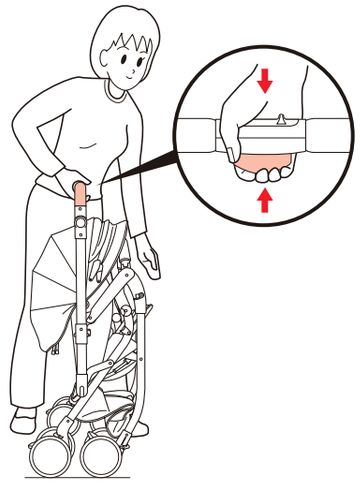

❺施力於手把中央部位，將手把控制鈕向上押。

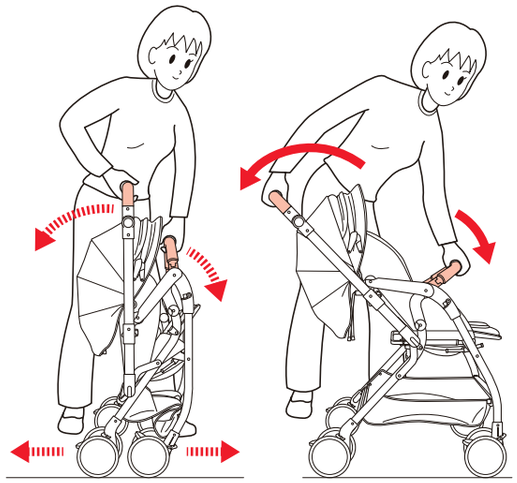


❻ 繼續握著，用另一隻手握住開放型扶手，往外打開車體。

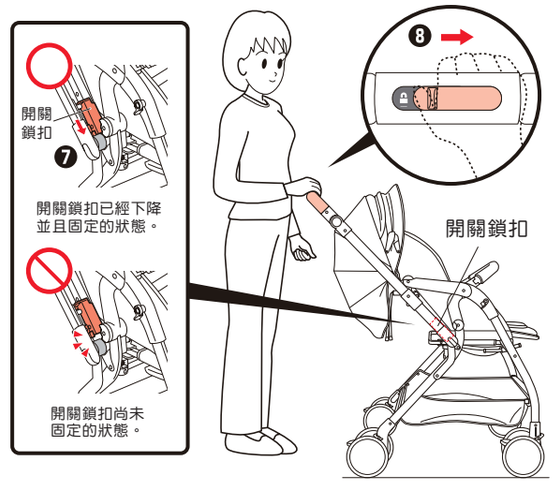

❼ 請先確認開關鎖扣已完全降到底。
❽ 鎖上安全控制鎖。

⚠警告


○當手放在扶手上開啟手推車時，請注意可動關節部夾傷手部或手指等意外產生。




⚠警告

○使用之前，請先確認開關鎖扣已完全降到底。否則恐導致嬰幼兒手推車收折，而使寶寶有摔落、夾傷之虞。


2 單手打開操作法

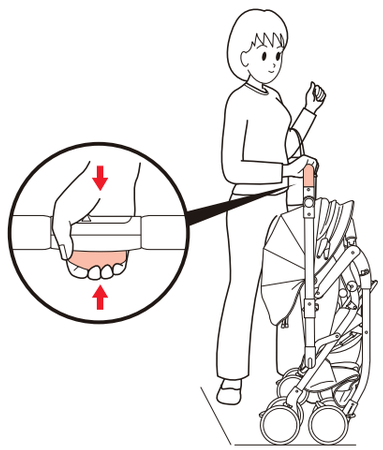

❺施力於手把中央部位，將手把控制鈕向上押。

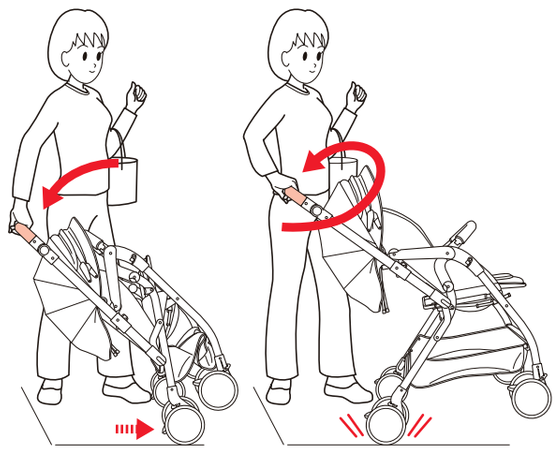

❻ 繼續握著，車體往後傾，把手向前推出後拉回打開車體。

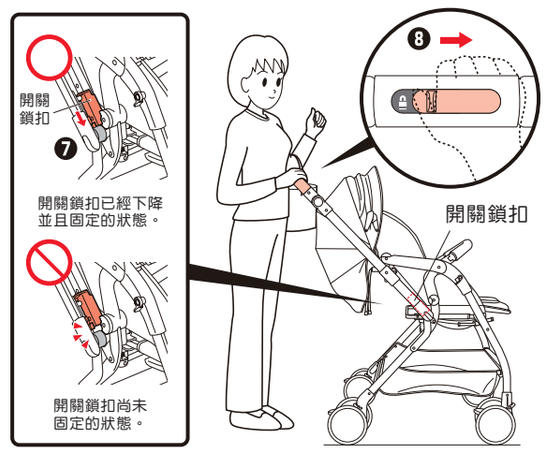


❼ 請先確認開關鎖扣已完全降到底。
❽ 鎖上安全控制鎖。


兩對面切換手把的使用方法

〈切換手把的準備〉

〈背對寶寶〉

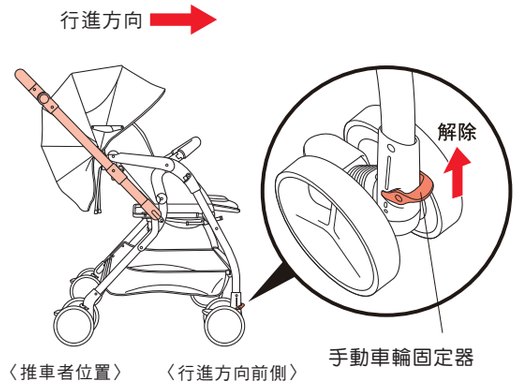

〈面對寶寶〉

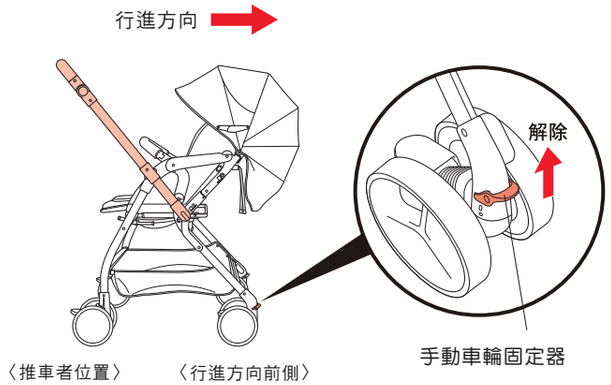


❶ 請確認**行進方向前側**的手動車輪固定器已經解除鎖定。

警告

○進行切換手把時，請務必解除行進方向前側的手動車輪固定器（左右）。若未解除的話，推車者位置的車輪即不會自動鎖上，因恐有使嬰幼兒手推車翻覆，使寶寶摔落之虞。
○未依行進的方向往前推行(意即向後反推)，可能形成車輪內八或外八之現象，此屬於結構正常狀態，並非車輪品質不良。

〈由背對寶寶切換握手把至面對寶寶的使用方法〉

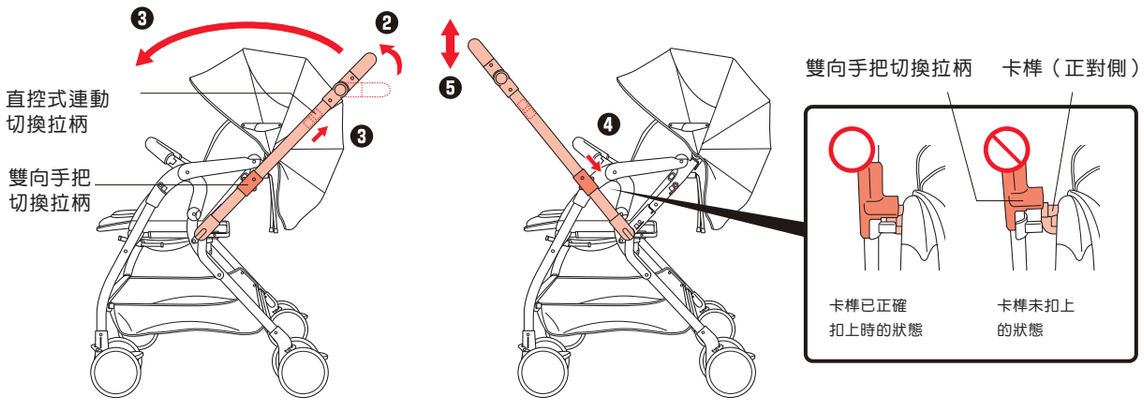

❷ 將可調角度型手把豎直。（請參閱P7）
❸ 一邊將直控式連動切換拉柄（左右）往上拉，一邊切換手把的方向。
❹ 雙向手把切換拉柄扣上卡榫。（左右）
❺ 將手把上下動一動，確認已扣上卡榫。


警告

○切換手把時，注意避免夾到寶寶的手指或手腳。
○請勿在坡道切換手把。嬰幼兒手推車可能會意外滑動、翻覆，而使寶寶摔落。
○請勿一邊推著嬰幼兒手推車，一邊切換手把。
○將把手由『背面切換對面』、『對面切換背面』時，請將手把上下動一動，確認左右手把已正確扣合於卡榫上，避免手推車翻覆等意外事故發生之虞。

警告


○切換手把時，可調角度型手把的角度務必豎直。
○請勿在坡道切換手把。嬰幼兒手推車可能會意外滑動、翻覆，而使寶寶摔落。
○請勿將物品懸吊於手把上，避免切換手把時造成物品損壞或手推車翻覆等意外事故之虞。

〈由面對寶寶切換握手把至背對寶寶的使用方法〉

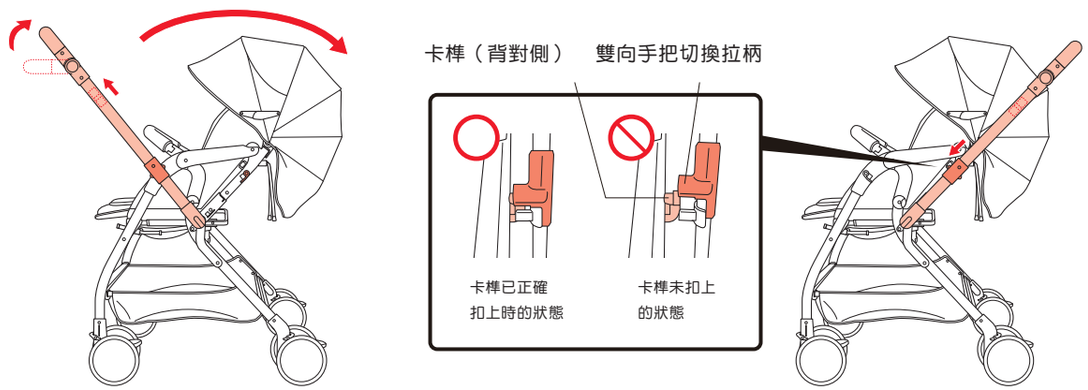


○將手把由面對寶寶切換至背對寶寶時，請務必確認手把已確實扣上卡榫(背對側)。

〈背對寶寶〉

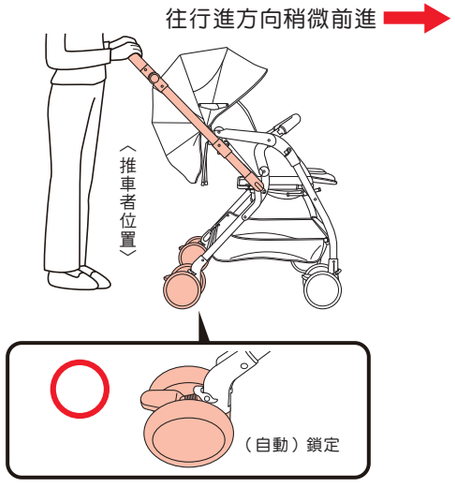

〈面對寶寶〉

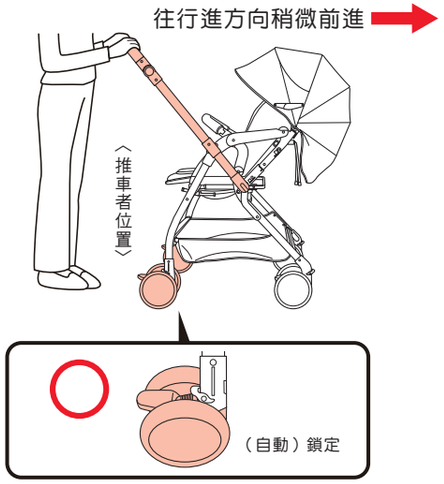

❻ 將嬰幼兒手推車往行進方向稍微前進，使得靠近推車者位置的左右車輪鎖上。

○手把在切換中或切換之後，因為所有的車輪都處於未鎖上的狀態，因此務必像❻一樣，使靠近推車者位置的車輪朝向推車者，並且確認確實鎖上。


建議

○上下電梯或電車等人多擁擠時，需要將推車往後方移動時，因推車者位置的車輪是處於鎖定狀態，有時會影響推車的移動。此時建議輕微的提起推車的扶手把讓靠近推車者位置的車輪輕微離開地面後再移動車身。


兩對面切換手把的使用方法

〈手動車輪固定器的錯誤使用方法〉

〈背對寶寶〉

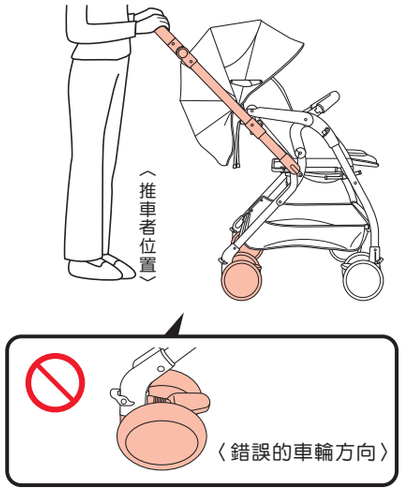


〈面對寶寶〉

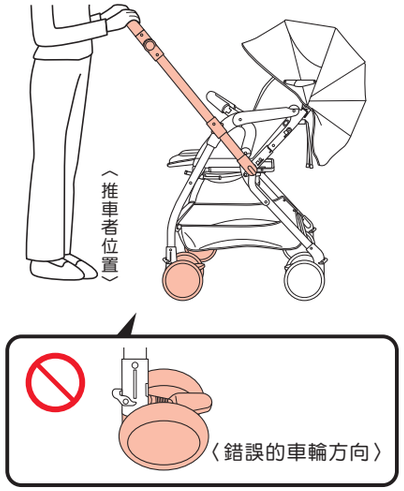

・正確的車輪方向請參閱P10。
・**推車者位置**的左右車輪朝內鎖上時，請解除前後左右的手動迴轉固定器之後，再進行操作手把切換的動作。


〈往後方移動時〉

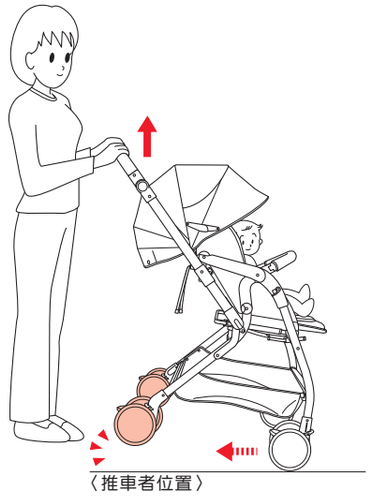

建議

○上下電梯或電車等人多擁擠時，需要將推車往後方移動時，因**推車者位置的車輪**是處於鎖定狀態，有時會影響推車的移動。此時建議輕微的提起推車的扶手把**讓靠近推車者位置的車輪輕微離開地面**後再移動車身。

手動車輪固定器的使用方法

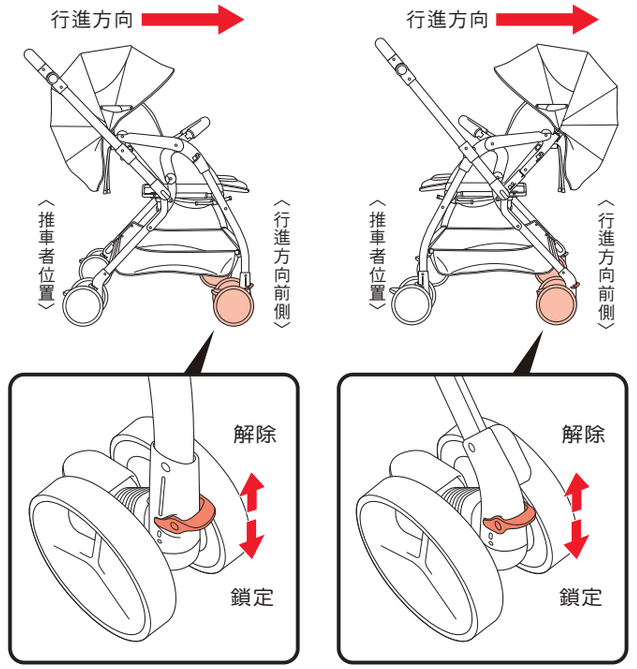

〈鎖定〉

○在凸凹不平、坡道、傾斜地面等場所行進時，暫時先將行進方向前側（左右2處）的車輪鎖上，這樣能使手推車比較好推。

●將行進方向前側的手動車輪固定器往下扳，鎖定車輪。（左右）

〈解除〉

○平常請在解除狀態下使用。

●將行進方向前側的手動車輪固定器往上扳，解除鎖定狀態。（左右）

○推車者位置的車輪自動鎖上。無法使用手動車輪固定器。

車輪煞車器的使用方法


警告

○當寶寶乘坐時或離座時，務必將左右煞車器都鎖上。
○當寶寶乘坐在手推車上時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對停住嬰幼兒手推車。
○即使鎖上車輪煞車器，當寶寶乘坐在手推車上時，仍然請勿離開寶寶的身邊。

注意


○即使寶寶未乘坐在手推車上，當要離開嬰幼兒手推車時，仍然請將左右車輪煞車器都鎖上。

〈鎖定〉

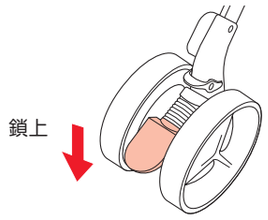


❶ 將推車者位置的車輪煞車器往下扳，即可鎖上車輪。（左右）
❷ 將手推車前後動一動，以確認車輪煞車器已鎖上。

〈解除〉

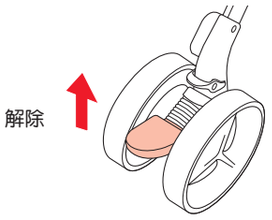

●將車輪煞車器往上扳，解除鎖定狀態。（左右）

按鈕式開放型扶手的開啟方法

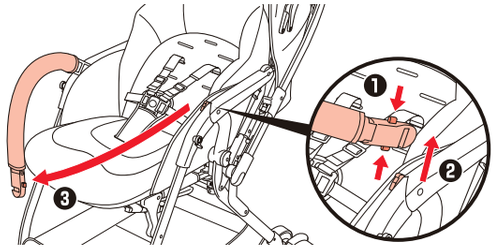


❶按住開放型扶手鎖定鈕的上下兩端。
❷將開放型扶手往上抽出。
❸將開放型扶手往下放。

注意
○扣合扶手時，請注意避免手指被開關夾傷。

雙腳支撐架的使用方法


○當座椅角度在平躺狀態時，請使用雙腳支撐架。

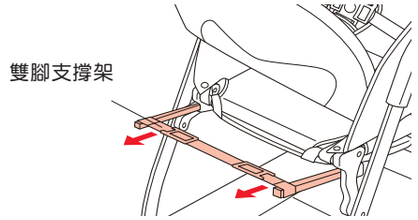

●拉出座面下方的雙腳支撐架。（左右）

置物籃的使用方法


注意
○請勿將形狀銳利的物品置於置物籃內。否則可能會破壞置物籃。
○請勿放置重量5kg以上的物品。
○收折嬰幼兒手推車之前，請先將物品取出。
○請勿將貴重物品放置於置物籃內。

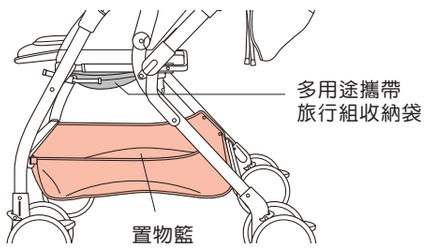

●請由置物籃上方收納物品。

建議
○放置物品時，請儘量使物品的重量平均分散於置物籃底。

〈關於多用途攜帶旅行組收納袋的使用方式〉

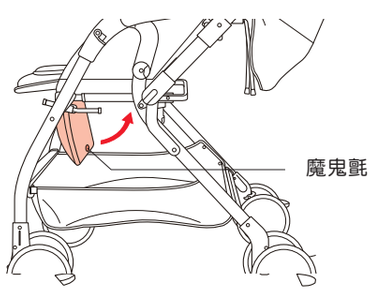

●多用途攜帶旅行組收納袋僅使用於收納多用途攜帶旅行組揹巾時。
不使用多用途攜帶旅行組時，請以座位底下的魔鬼氈固定住收納袋。


注意
○請勿將其他物品放置於多用途攜帶旅行組收納袋內。

守護墊類的安裝方法

○守護墊類在嬰幼兒手推車內，用來輔助寶寶維持適當正確的姿勢。

預防呼吸道閉塞型保護頭墊　寶寶頸部安定前，請務必使用。（約四個月左右）


○安裝預防呼吸道閉塞型保護頭墊時 ，請務必將安全肩帶安裝於下段肩帶導孔。
最高月齡使用至7個月為止。（請參閱P17「安全肩帶高度的調整方法」）

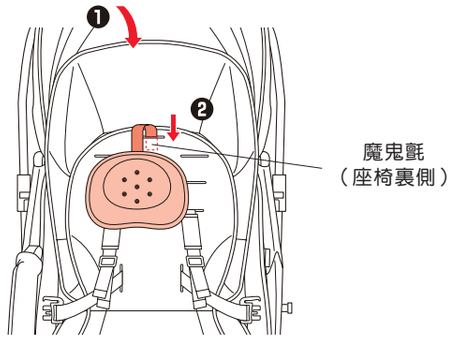

❶頭墊安裝適用於平躺狀態下使用。（請參閱P18）
❷將保護頭墊上的魔鬼氈白色布片取下，依照箭頭的方向，把魔鬼氈固定帶穿過頭墊安裝孔，黏在座椅裏側的魔鬼氈上。

建議
○頭墊不易安裝時，可拆下座椅縫製品的上半部，在可看到座椅裏側的情況下來安裝。（請參閱P25「座椅縫製品的拆卸方法❽❾❿」）

〈預防呼吸道閉塞型保護頭墊的安裝位置〉

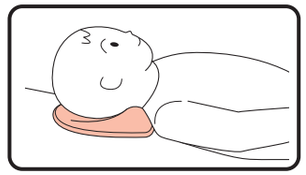


●安裝時，請讓頭墊下端的鼓起部分在寶寶的頸後。
※當鼓起部分不適合寶寶的頸後時，請立即拆除。

注意
○安全肩帶穿在中段、上段的肩帶導孔時，無法使用預防呼吸道閉塞型保護頭墊。
寶寶頸部開始安定後，請拆下預防呼吸道閉塞型保護頭墊。

腰部・臀部守護墊 （1個月～3歲左右的寶寶可使用。）


○依寶寶體格的不同，即使是3歲以下的寶寶，仍有可能已不適用腰部・臀部守護墊。當不適用時，請拆下。

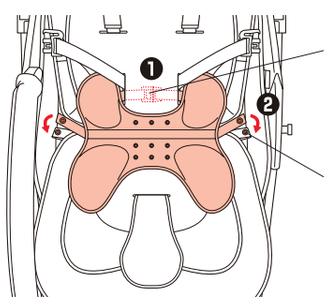

❶將上端固定帶扣穿過透氣舒壓守護墊的安全腰帶導孔，並且扣上。
❷將腰部・臀部守護墊側邊的固定扣，扣在透氣舒壓守護墊側邊的固定扣上。（左右）

讓嬰幼兒乘坐手推車的方法

1 準 備

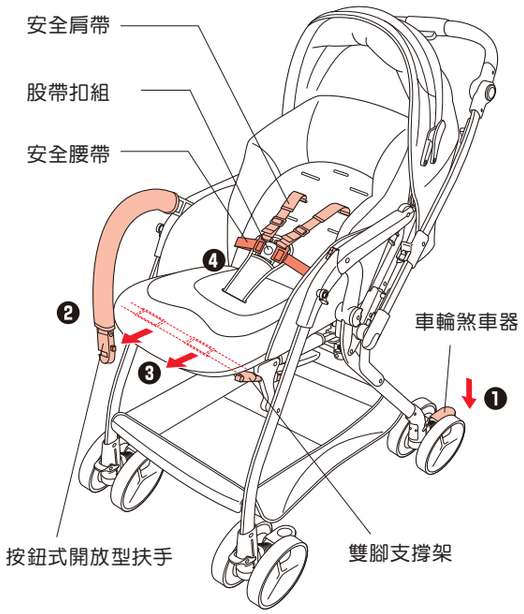



❶鎖上煞車器。（左右）
❷打開按鈕式開放型扶手。（請參閱P13）
　○按住鎖定鈕的上下兩端，打開開放型扶手。
❸拉出雙腳支撐架。（雙腳支撐架使用時）（請參閱P13）
　○抬起座椅的座墊部位，且拉出雙腳支撐架。（左右）
❹解開安全肩帶、安全腰帶。
　○按下股帶扣組，解開安全腰帶、安全肩帶。

○需要改變安全肩帶的位置時，請參閱P17「安全肩帶高度的調整方法」。
○需要改變座椅的角度時，請參閱P18「無段式平躺調節器的使用方法」。

2 乘坐方法

〈寶寶乘坐之後，務必繫上安全帶〉

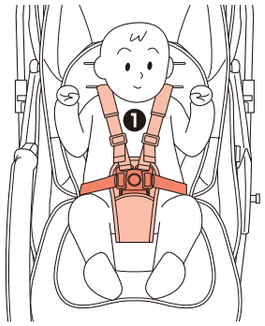

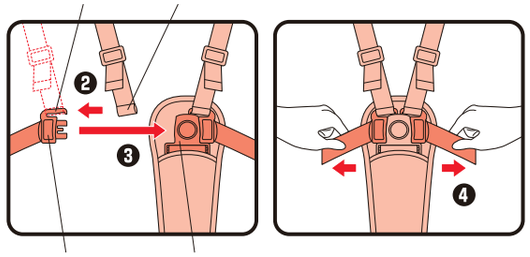


❶先讓寶寶乘坐於嬰幼兒手推車上。
❷將安全肩帶扣入肩帶固定勾環。
❸將安全腰帶扣入立體式股代扣組。
❹將安全腰帶往兩側拉，調節至適合寶寶的寬鬆度。
※請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。

建議
○安裝安全肩帶時，警示標籤應朝向外側。
○請確認安全肩帶沒有扭結的情況。

⚠警告
○繫上安全帶後，請確認左右兩側的安全腰帶有調節至適合寶寶的寬鬆度。
○使用時，務必將安全肩帶插在安全腰帶上。因恐安全肩帶可能會纏繞在寶寶頸部。
○請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。
　安全腰帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。
○寶寶乘坐時，應該讓寶寶的股間對準立體式股帶的位置。否則嬰幼兒手推車有可能會往後方翻覆。


〈安全腰帶的調整〉

〈拉緊〉

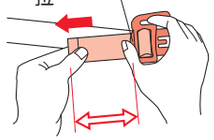


末端保留3cm以上

〈放鬆〉

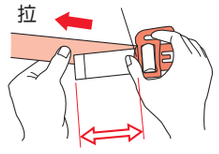

末端保留3cm以上


●輕壓安全腰帶調節扣，拉安全腰帶做調整。

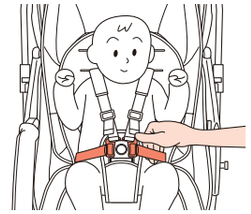


○安全腰帶的長度，以安全腰帶與寶寶之間可容納成人4隻手指頭的寬鬆度為適當。

〈安全肩帶的調整〉


〈拉緊〉

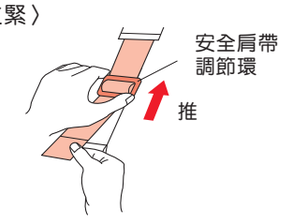

〈放鬆〉

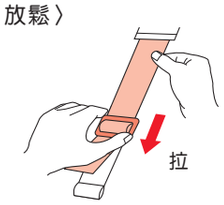


●移動安全肩帶調節環做調整。

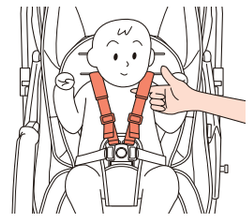


○安全肩帶的長度，以安全肩帶與寶寶之間可容納成人1隻手指頭的寬鬆度為適當。

〈立體式股帶的調整〉

〈放鬆〉

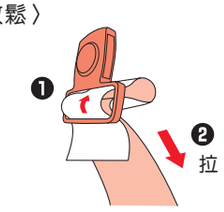


〈拉緊〉

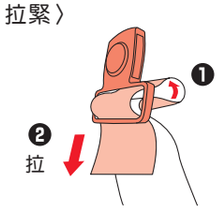

❶ 立體式股帶取出。
❷ 股帶拉出，調整長度。
○調整之後，請務必確認固定扣組與股帶保護套之間的固定扣已經扣上。（請參閱P28）

⚠注意
○請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。
　安全肩帶、安全腰帶、立體式股帶過鬆時，即使繫上安全帶，寶寶仍然可能站起來，而使寶寶有摔落之虞。
○關閉開放型扶手時，請注意避免夾到寶寶的手指。
○關閉開放型扶手後，請拉拉看，以確認開放型扶手已確實鎖上。
○當寶寶乘坐在手推車上時，請勿舉起開放型扶手。
○安全腰帶的尾端（插圖中⟺的部分），務必保留3cm以上。
○調整座椅靠背的角度時，應一併調整安全肩帶、安全腰帶、立體式股帶的長度。


〈關閉按鈕式開放型扶手〉

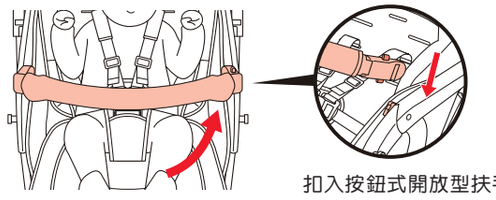

扣入按鈕式開放型扶手

〈解除車輪煞車器〉

解除鎖定狀態（左右）

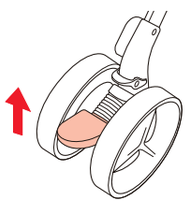


安全肩帶高度的調整方法

警告
○請依寶寶的成長情況，調整安全肩帶的高度。


〈安全肩帶的位置〉

○製品從包裝箱取出時，安全肩帶位置設定於下段。

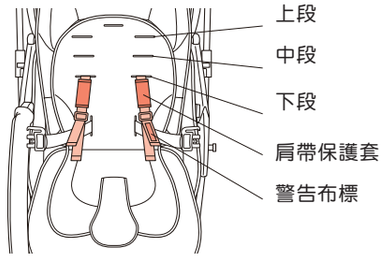

〈安全肩帶導孔的位置〉

○掀開座椅縫製品的狀態。

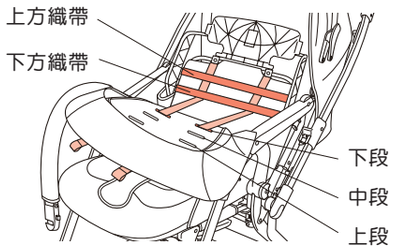

〈安全肩帶的使用標準〉

○穿過肩膀位置下段的安全肩帶導孔。



○安全肩帶的位置，請依以下3段標準進行調整。

月齡（體格）的標準	安全肩帶導孔的位置
18個月～36個月	上　段
7個月～18個月	中　段
1個月～7個月	下　段

請依個別差異對照上述表示的標準進行調整。


建議
○安裝安全肩帶時，警告布標應朝向外側。
○請確認安全肩帶沒有扭結的情況。

〈安全肩帶的高度調整方法〉

○將安全肩帶、安全腰帶從股帶扣組上解開（請參閱P15「準備❹」）
○肩帶保護套取出。
○解開靠背側邊的固定扣，掀開座椅靠背縫製品。（請參閱P25❽❾❿）
○將安全肩帶抽出。


〈使用下段導孔時〉

●穿過上、下方織帶與肩帶導孔（下段）。

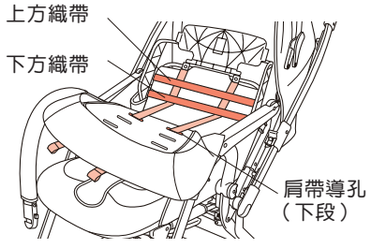


〈使用中段導孔時〉

●穿過上方織帶與肩帶導孔（中段）。

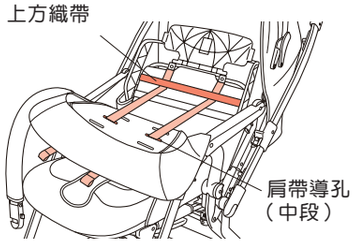

〈使用上段導孔時〉

●直接穿過肩帶導孔（上段）。

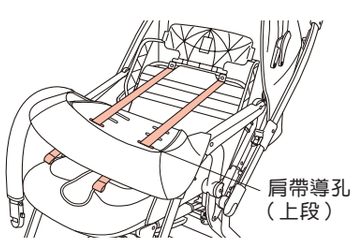

○高度調整後，蓋上靠背縫製品，扣上靠背側邊、後方的固定扣。（請參閱P27❺❻❼）
○將安全肩帶扣入肩帶固定勾環。

無段式平躺調整器的使用方法


○無段式平躺調整器的主要機能為支撐寶寶維持在舒適的姿勢。
○靠背平躺的狀態是為了讓寶寶乘坐時也能夠平躺所設計。

〈座椅的角度標準〉

月齡（體格）的標準	座椅的角度位置
1個月～頸椎成熟	平躺
頸椎成熟～可獨立坐立	平躺～半躺（中間位置）
可獨立坐立	平躺～坐立姿勢

建議
○靠背平躺時，頭枕即立起。

靠背平躺時

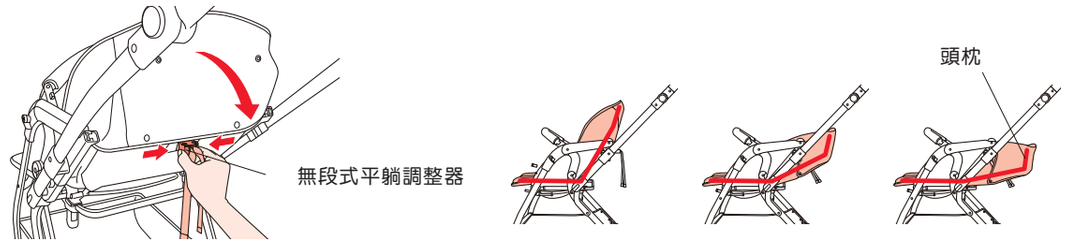


❶ 放鬆安全肩帶。（請參閱P16）
❷ 押住無段式平躺調整器兩側，將座椅靠背往下躺。
❸ 調整安全肩帶、安全腰帶、立體式股帶的長度。


警告
○在寶寶乘坐的狀態下，若要將靠背倒下時，請先鬆開安全肩帶。
○座椅靠背調整完成後，接著調整安全肩帶、安全腰帶的長度。安全肩帶、安全腰帶過鬆的話，即使繫上安全帶，寶寶仍然可能站起來，而使得寶寶有摔落之虞。

注意
○請勿一邊推著嬰幼兒手推車，一邊調整座椅靠背角度。
○在寶寶乘坐的狀態下，若要調整座椅角度時，請勿急速且大幅度地改變角度。
○在寶寶乘坐的狀態下，若要將靠背倒下時，請確實扶住寶寶。
○無法獨立坐立的寶寶，請使用座椅靠背平躺的方式。

建議
○可獨立坐立的寶寶，將頭置於頭枕的位置時，若將座椅靠背倒下，寶寶的姿勢將會變得不自然，因此請將座椅靠背角度調整在頭枕不會立起的位置。




靠背立起時

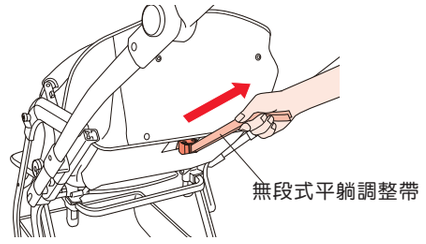


●請在寶寶不完全倚靠靠背支撐的狀態下，單手握住無段式平躺調整帶並且往上拉即可將座椅靠背立起。

建議
○當寶寶完全倚靠靠背支撐的狀態時，請勿豎起座椅靠背。
○在寶寶不完全倚靠靠背支撐的狀態時，也可將無段式平躺調整帶往左右拉。

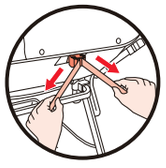

遮陽篷的使用方法


〈遮陽篷的各部位名稱〉

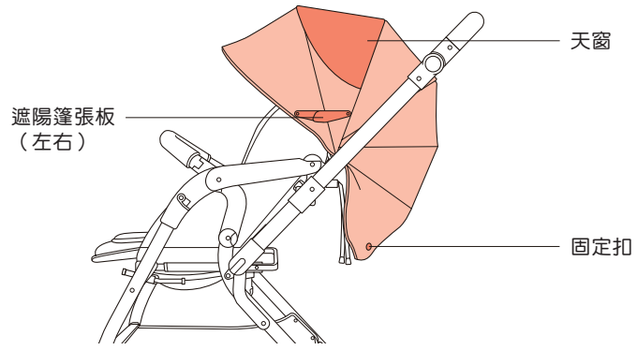

警告


○請在寶寶未接觸遮陽篷的狀態下，開啟或收起遮陽篷。
否則可動關節部位可能會夾到寶寶的手指或手。

打開方法

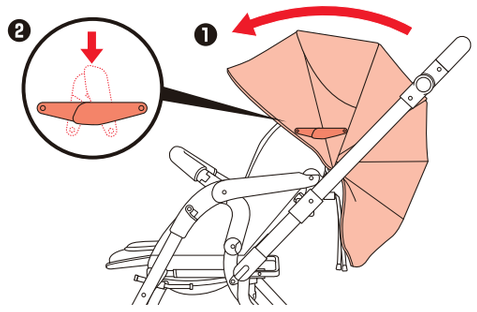

❶將遮陽篷往前展開。
❷押下遮陽篷張板。（左右）


收起方法

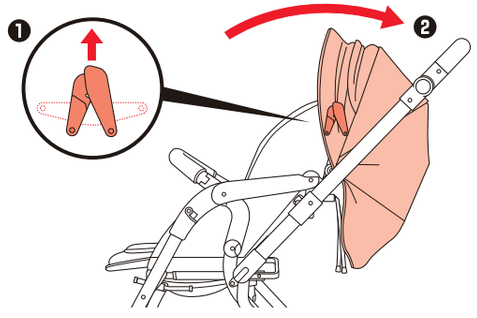


❶將遮陽篷張板往上折。（左右）
❷將遮陽篷往後收起。

遮陽篷的角度調整

○靠背往後躺或日照比較弱時，可調整遮陽篷的角度。

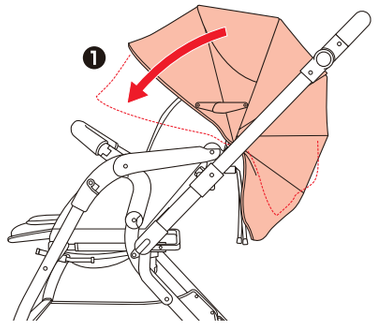


❶在遮陽篷打開的狀態下往前轉，在適當的位置固定。

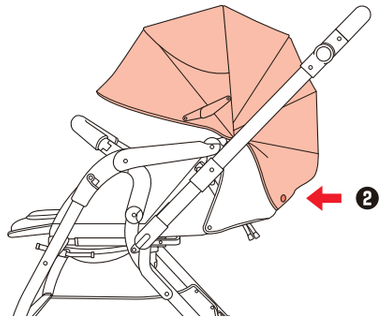

❷靠背往後躺時，將遮陽篷固定扣固定在頭枕後側的固定扣上。（左右）

天窗的開啟方法

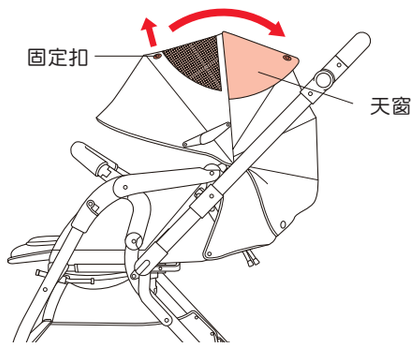

○開啟遮陽篷的窗罩，可看到寶寶的一舉一動。

嬰幼兒手推車的使用方法

嬰幼兒手推車的收折方法


⚠警告

○當寶寶碰觸手推車或者靠近手推車時，請勿收折或開啟車體。因恐可動關節部位夾到寶寶手指、手腳，或嬰幼兒手推車碰撞寶寶身體，而使得寶寶有受傷之虞。
○請勿讓兒童操作嬰幼兒手推車。因恐造成翻覆、意外事物，而有受傷之虞。

⚠注意


○請先將安全肩帶、安全腰帶插入安全股帶扣後，再收折嬰幼兒手推車。否則恐有使股帶扣組破損之虞。

○嬰幼兒手推車收折的狀態下，請勿將直控式連動切換拉柄以及雙向手把切換拉柄向上拉。
雙向手把切換拉柄若為未鎖定的狀態下，嬰幼兒手推車有無法開啟的可能。

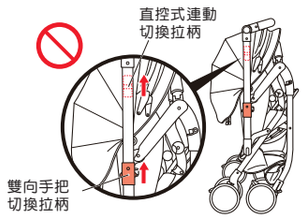

小叮嚀 ○因捆包裝箱的關係，剛開始使用可能有不易收開的情況。請重複操作2～3次。


1 收折之前

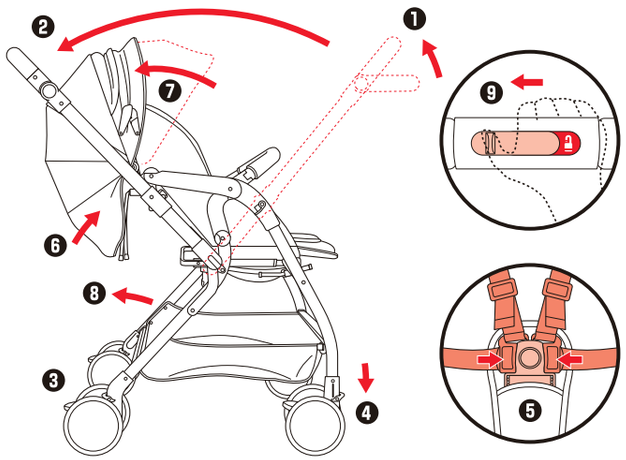


❶豎直可調角度型手把。（請參閱P7）
❷將手把切換至背對寶寶的方向。（請參閱P10）
❸請稍微往前進，確認推車者方向的車輪已自動鎖上。（請參閱P10）
❹將前側左右兩邊的手動車輪固定器鎖上。（請參閱P12）
❺將安全肩帶、安全腰帶，扣入股帶扣組。（請參閱P15）
❻豎直座椅靠背。（請參閱P18）
❼收起遮陽篷。（請參閱P19）
❽將置物籃內的物品取出。
❾解除安全控制鎖。

○本嬰幼兒手推車有兩種收折方法。


2 雙手收折操作法

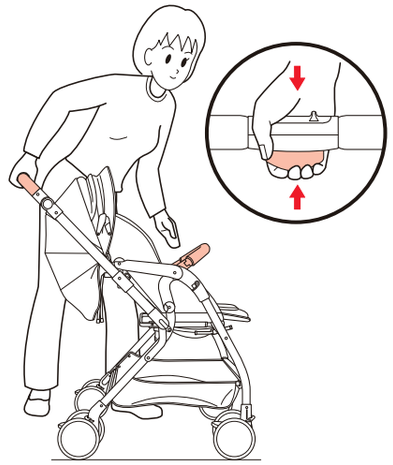

❿將手把控制鈕握到底，解除開關鎖扣。

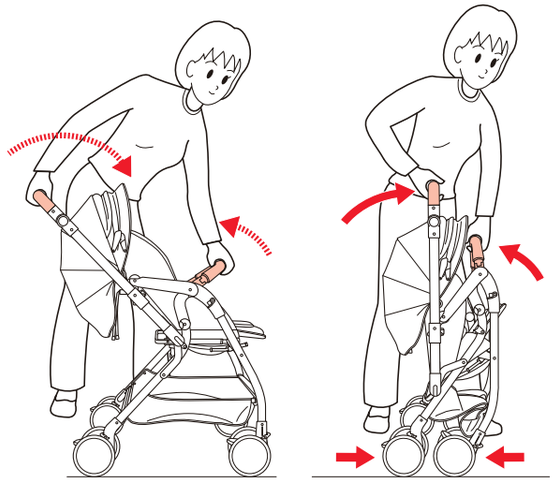


⓫繼續握著，用另一隻手握住開放型扶手，往內收折。

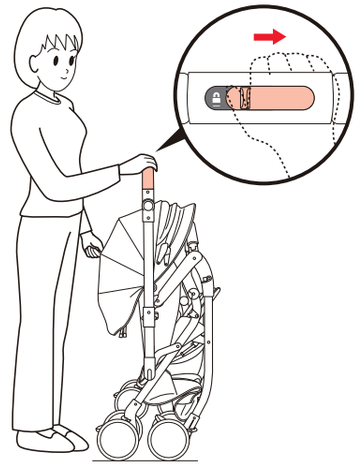


⓬鎖上安全控制鎖。

建議 ○收折後，將手把往下彎並且能使手把變低，收納更為方便。


2 單手收折操作法

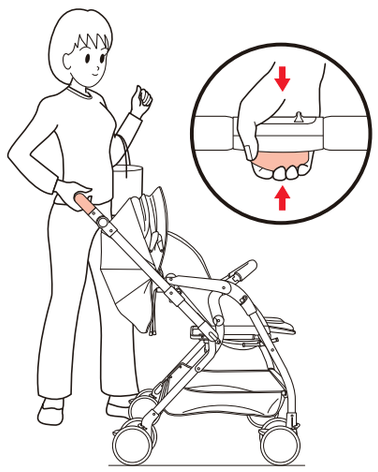

❿將手把控制鈕握到底，解除開關鎖扣。

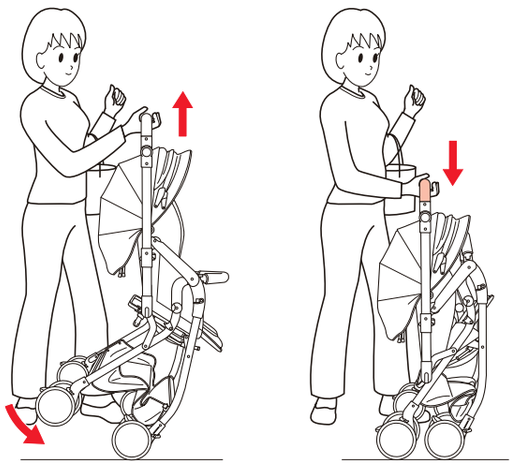


⓫繼續握著，將手把往上舉，然後再將手把往下壓之後，收折車體。

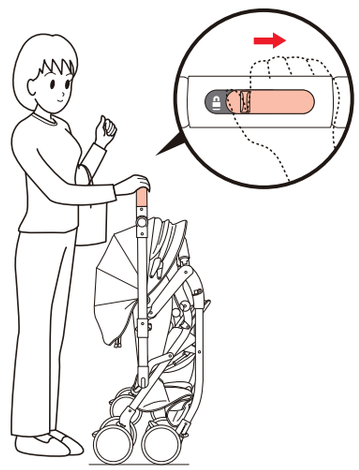

⓬鎖上安全控制鎖。


嬰幼兒手推車的使用方法

遮陽篷的拆卸方法

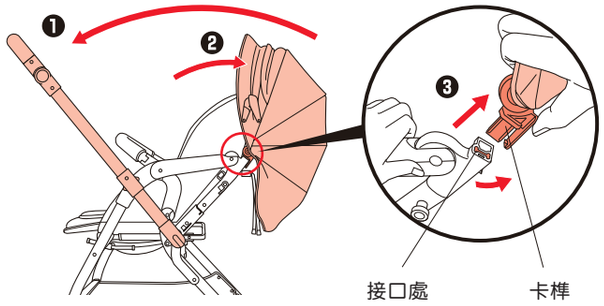


❶將手把切換至面對寶寶。(請參閱P9)
❷收起遮陽篷。(請參閱P19)
❸拉起左右兩邊卡榫下側的突起處向後輕扳即可自接口處拔出。

扶手保護套的拆卸方法

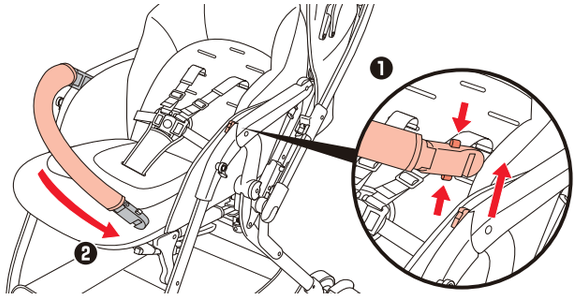

❶打開開放型扶手。
❷取出扶手保護套。

多用途攜帶旅行組收納袋的拆卸方法

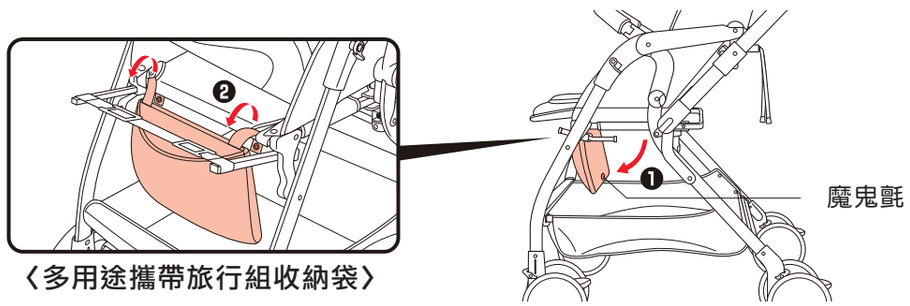


〈多用途攜帶旅行組收納袋〉

❶解開多用途攜帶旅行組收納袋上的魔鬼氈。
❷解開左右兩旁的固定扣，取下多用途攜帶旅行組收納袋。


座椅縫製品的拆卸方法

警告 ○請勿讓寶寶乘坐在已取下座椅縫製品的手推車上，因恐發生手推車損壞等意想不到的事故發生。


小叮嚀 ○拆卸及安裝座椅縫製品時，請特別注意，因恐會傷害指甲。

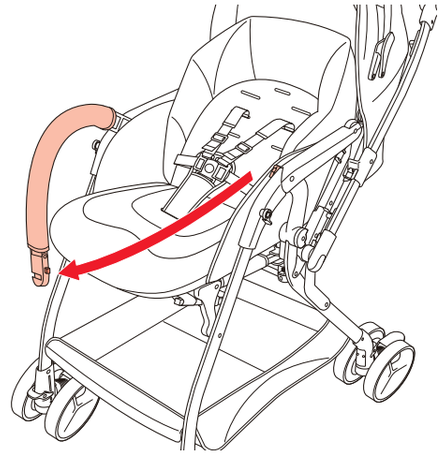

❶打開按鈕式開放型扶手。（請參閱P13）

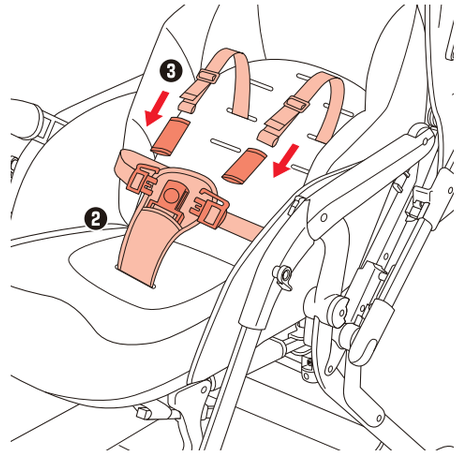


❷按下股帶扣組的安全扣鎖，即可解開安全肩帶、安全腰帶。（請參閱P15）
❸自安全肩帶上取下肩帶保護套。

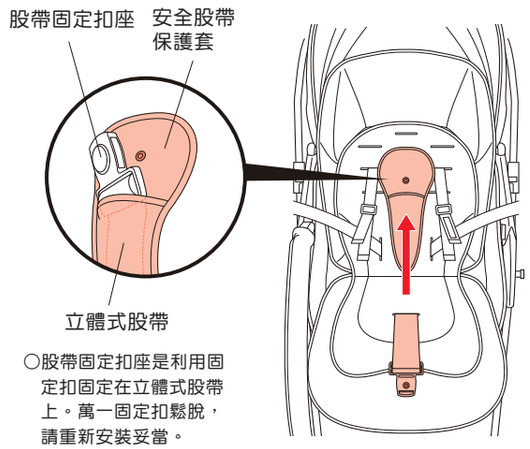


○股帶固定扣座是利用固定扣固定在立體式股帶上。萬一固定扣鬆脫，請重新安裝妥當。

❹解開立體式股帶固定扣座，取下立體式股帶保護套。

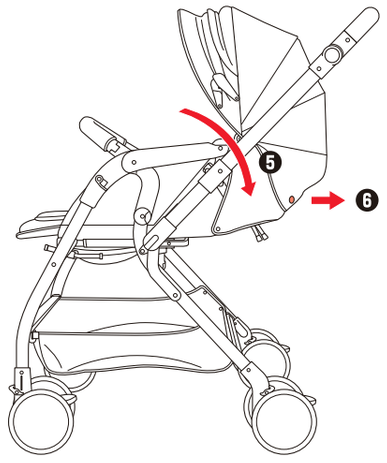


❺將座椅靠背往後倒。（請參閱P18）
❻解開座椅靠背裏側的遮陽篷固定扣。（請參閱P20）


座椅縫製品的拆卸方法

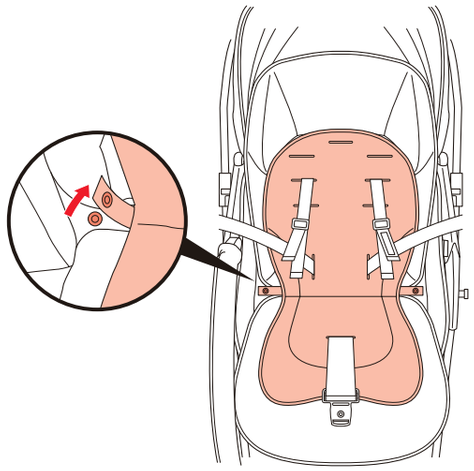


❼解開透氣舒壓守護墊的固定扣。（左右）

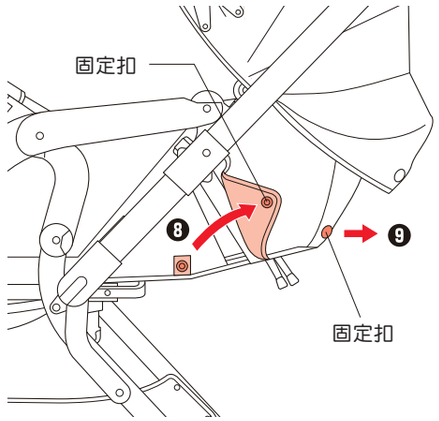


❽解開靠背側邊的固定扣。（左右）
❾解開靠背後側的固定扣。（左右）

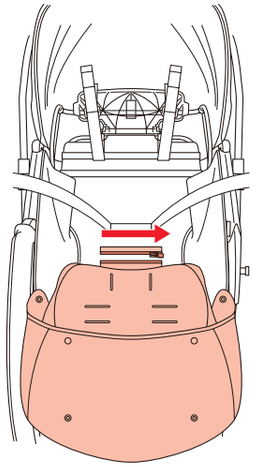


⓬拉開座墊下方的拉鏈。

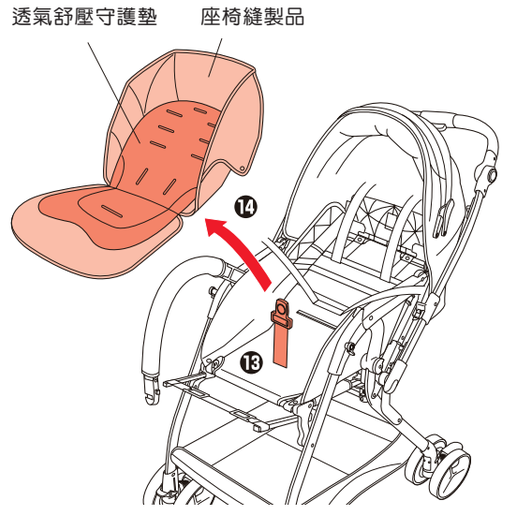


⓭將立體式股帶自縫製品中抽出。
⓮取下座椅縫製品。

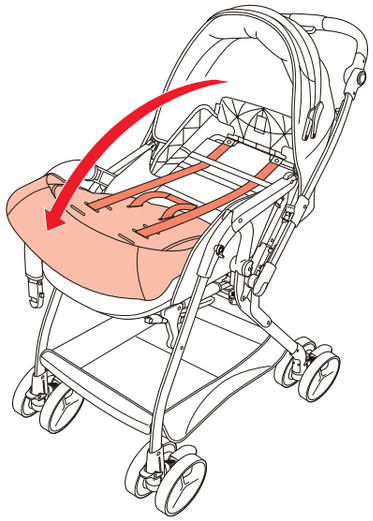


❿從靠背將縫製品掀開。

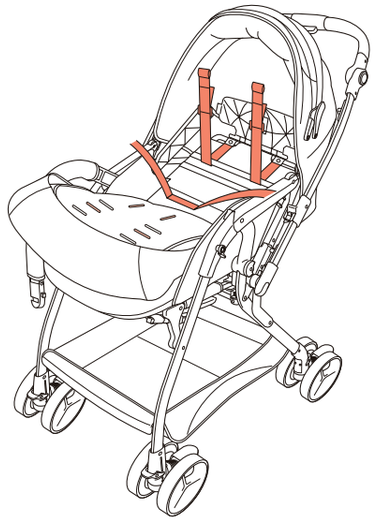

⓫將安全肩帶、安全腰帶自縫製品中抽出。

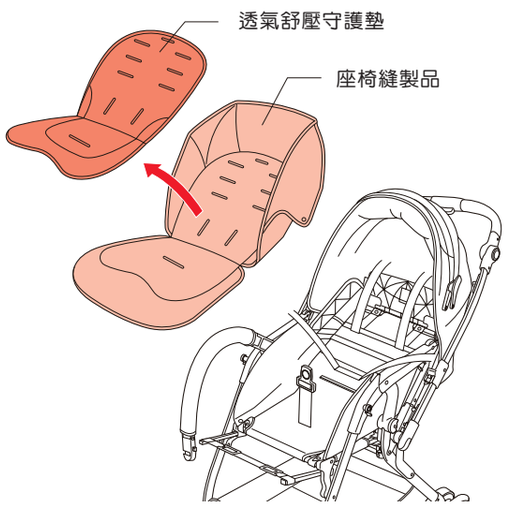

⓯取下透氣舒壓守護墊。

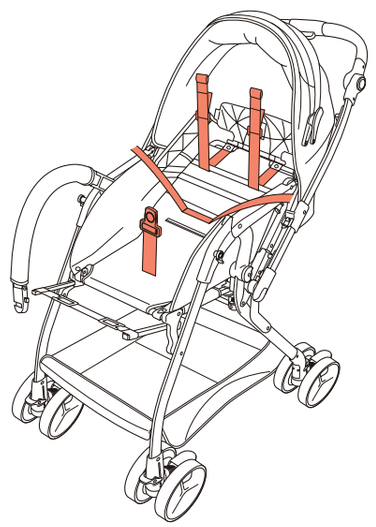


○安全肩帶、安全腰帶、立體式股帶都不可拆下。


座椅縫製品的安裝方法

○請務必先安裝透氣舒壓守護墊之後再使用。


小叮嚀 ○拆卸及安裝座椅縫製品時，請特別注意，因恐會傷害指甲。

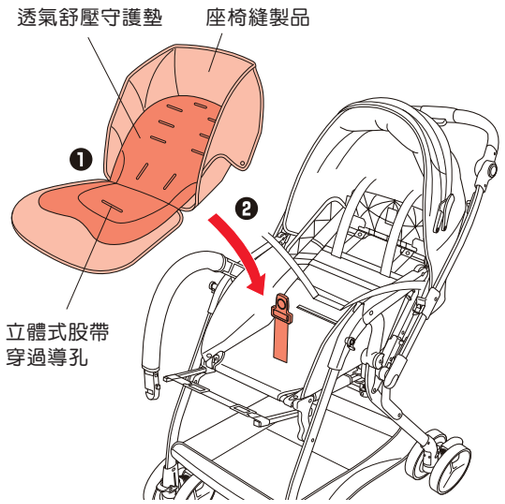


❶對齊透氣舒壓守護墊與座椅縫製品的立體式股帶導孔。
❷將立體式股帶穿過導孔。

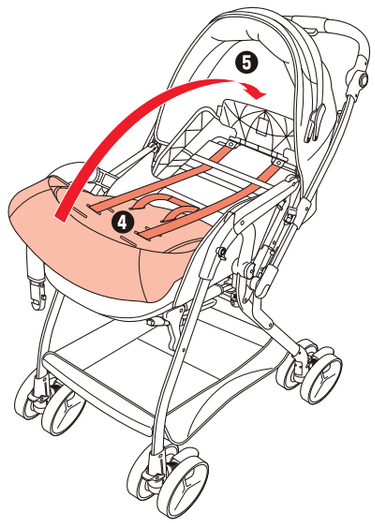


❹將安全肩帶、安全腰帶穿過導孔。
❺將縫製品上方套在座椅靠背上。

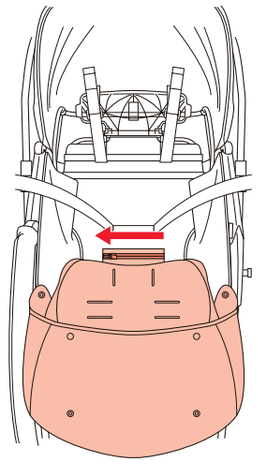


❸拉上座墊下方的拉鏈。

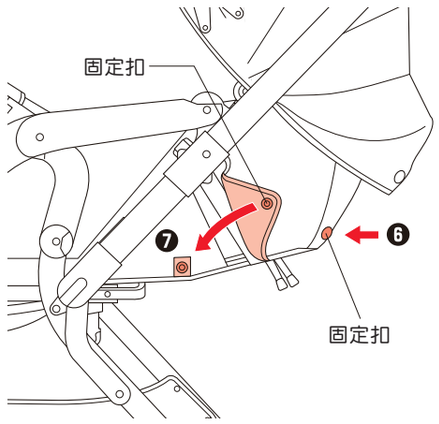


❻扣上靠背後邊的固定扣。（左右）
❼扣上靠背側邊的固定扣。（左右）

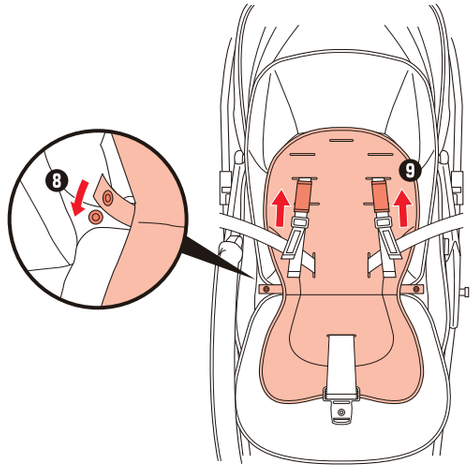


❽扣上透氣舒壓守護墊的固定扣。（左右）
❾穿入肩帶保護套。

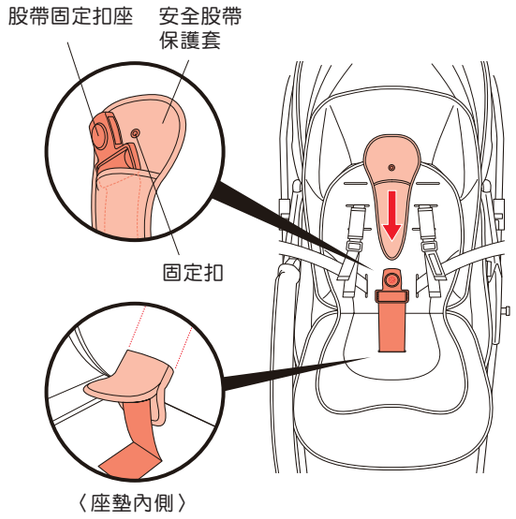

❿裝上股帶保護套，扣上固定扣。將股帶保護套的前端從座墊內側穿出。

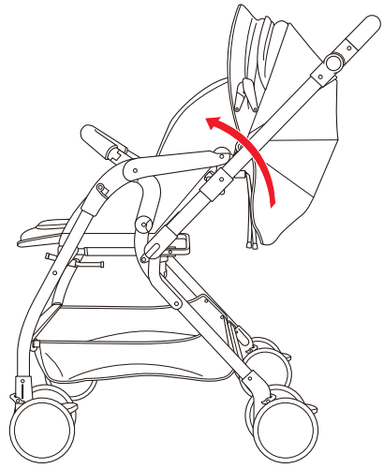

❿豎直座椅靠背。

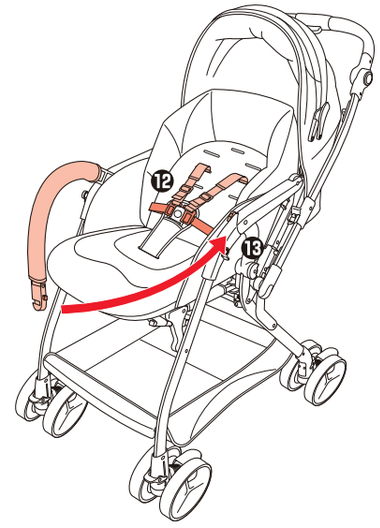

⓬將安全肩帶、安全腰帶插入立體式股帶扣組。
⓭裝上按鈕式開放型扶手。

縫製品的保養方法

縫製品的清洗方法

〈座椅縫製品、扶手保護套、肩帶保護套、股帶保護套、預防呼吸道閉塞型保護頭墊、腰部・臀部守護墊的清洗方法〉

○清洗時，請注意以下事項。



※禁止扭曲或變形。

〈透氣舒壓守護墊的清洗方法〉

○清洗時，請注意以下事項。



※使用洗衣袋時禁止扭曲或變形。

※建議放入洗衣袋中，洗衣機水溫設定40度以下，並以低速弱洗程序清洗。

注意

○若要將縫製品晾曬於室外時，請於陰涼處平放晾乾。
○請不要使用鹼性清潔劑、酸性清潔劑以及含氯漂白劑。

〈遮陽篷、安全肩帶、安全腰帶、置物籃、多用途攜帶旅行組收納袋的清洗方法〉

○請勿整件放進洗衣機裡清洗，請按照下述要領清洗。

●水溶性污垢（如果汁、唾液、尿液等）的情況：用40度左右的熱水將毛巾浸濕，輕輕擰乾後充分擦拭污垢處。再以乾毛巾充分擦拭水份後再置於陰涼處自然晾乾。

●非水溶性污垢（如牛奶、油脂、沙拉醬等）的情況：首先將中性洗潔劑溶解在40度左右的熱水中，再使用刷子或海綿輕輕刷洗污垢處。再用冷水或溫水洗掉中性洗潔劑，用乾毛巾充分擦拭水份後置於陰涼處自然晾乾。

注意

○若發現縫製品產生破損或異常現象，請立即停止使用，並請務必要聯繫維修中心進行檢查及維修。

車體的保養

〈框架及車輪的保養方法〉

○請勿對黏附在車輪上的泥土、灰塵等置之不理。務必使用濕毛巾等物品擦拭乾淨。

注意

○車架及車輪黏附泥土及灰塵時容易發生故障，故發現此情況時請停止使用。
○擦拭泥土及灰塵時請勿使用稀釋液或揮發油等有揮發性的溶劑。

○車輪屬於消耗品。當車輪的厚度磨損掉了5mm左右時，請向本公司維修中心聯繫更換。（須支付費用）

〈螺絲、螺帽類的保養〉

○請經常檢查螺絲、螺帽是否有鬆動，當發現鬆動時請盡速鎖緊。


〈安全護桿的保養〉

○當發現安全護桿與車台連接處有灰塵時，請使用乾毛巾擦拭。

〈添加潤滑油〉

○請適時地在可動關節部位注入潤滑油。並請使用塑膠用的潤滑油。
○在注油之前，請先去除泥土及灰塵，並將水分擦拭乾淨。
○注油時，請在每個部位注入2~3滴左右。

●若無法順利收折或開啟車體，且無法順利回轉迴轉固定器以及車輪與車體產生聲響，請在右圖 ⇨ 箭頭處添加市售潤滑油，再重複開閉動作2～3次即可。

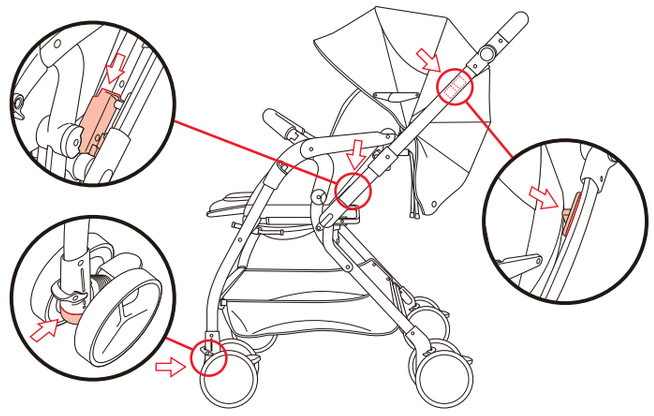

注意

○按鈕式開放型扶手與車台連接處的附近及內部請勿使用潤滑油。避免解開按鈕式開放型扶手時寶寶有掉落的危險。



覺得故障嗎？送修前先確認

○倘若採取以下的方法卻仍無法解決問題時，請與本公司維修中心連絡。（請參閱P33）

〈使用中發現問題時〉

問題	處理方法
手把控制鈕無法操作時	請先解除安全控制鎖之後再操作一次。（請參閱P7）
車輪無法迴轉時	請將左右兩邊的手動車輪固定器一併解除。（請參閱P12）
車輪的轉動不靈活時	請在車輪注入潤滑油。（請參閱P30）
車輪煞車器失靈時	請確認車輪煞車器部位是否夾到碎石等異物。
手把無法切換時	當本手推車打開時，請先確認開關鎖扣已完全降到底。（請參閱P8） 請先將直控式連動切換拉柄（左右）往上拉，再進行切換。（請參閱P9）
靠背無法豎直時	請先將寶寶抱離嬰幼兒手推車，然後拉動無段式平躺調節帶。 （請參閱P18）
安全肩帶無法插入安全腰帶時	請確認是否夾到衣物或安全帶。
無法收折嬰幼兒手推車時	請先完成〈收折之前〉的動作，然後再進行收折步驟。（請參閱P21） 請確認開關鎖扣部分是否夾到安全帶。
輪胎磨損時	輪胎的厚度低於5mm時，即需更換。 請與本公司維修中心連絡。（請參閱P33）

〈使用二手品〉

問題	處理方法
不了解之前的使用者是如何使用	對於使用狀態不明的商品，不建議使用。
嬰幼兒手推車出現裂痕或重大損傷時	切勿使用。

保管方法

○請將主體放入塑膠袋內，保管在沒有陽光直射的陰涼場所。
○請勿在上面放置重物、施加壓力的狀態下保管。恐造成故障或變形。

注意

○為避免遮陽篷變形，請勿橫倒手推車或放置重物在車上。且避免放置在高溫的場所裡做保管。
○請勿置於火源附近、勿在大熱天下放置於高溫車內。恐易使塑膠零件變形、無法維持性能。

廢棄方法

○請依照各區域的廢棄物處理方式做處理。
○為維護地球環境，請勿隨意放置丟棄。

保固與售後服務


〈保固事宜〉

○於品質保證期間內（自購買日起1年內），由於零件短少、加工不良等可歸責於本公司者、依照使用說明書及注意事項而在正常使用狀態下故障者，根據保固規定提供免費修繕服務。
自購買日起已超過3年之產品，雖仍受理修理，但產品修理部位以外之品質，則恕不保證。
此外，已停產之產品，可能因修理所需零件已無庫存而無法修理。（零件之保有期間為停產後3年期間。即使於3年內，零件之顏色、布料之花樣等方面，亦有可能無法符合您所指定的，敬請見諒。）

〈售後服務事宜〉

○使用中發生故障等情況，或檢查中發現時，需要更換零件或修理時，各部位之固定部位發生鬆動或異音、零件缺損或車輪轉動有異常時，以及感覺到其他異常時，請停止使用，並確認產品名稱、型號、批號（參考下圖）後，向本公司維修中心聯絡 。

○聯絡時，請務必告知本產品之品名、型號、批號，以利進行後續處理作業。

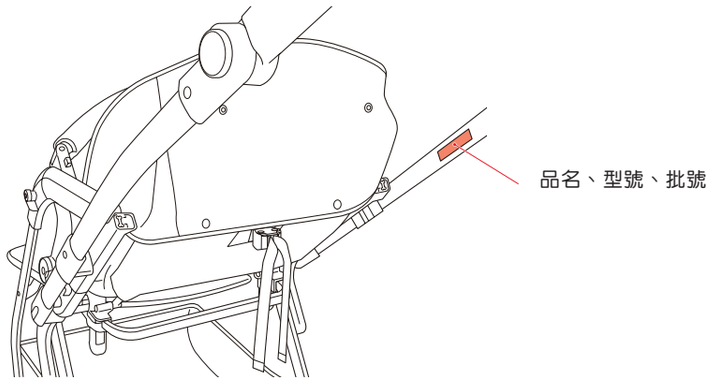

維修服務中心聯絡方式

台灣愛普力卡股份有限公司　維修服務中心
連絡電話：（03）6561261
服務地址：新竹縣竹北市福興路885號

MEMO

Optia
オプティア

Aprica

・This product is a Carry Travel System (CTS) which can be used in combination with a baby sling and dedicated stroller types.
・The baby sling has to be purchased separately.



User Manual

***For ASEAN countries ONLY**

Thank you for purchasing this product.
This product is suitable for babies 1 month to 36 months old, and under 15 kg.

※One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

Please read this manual carefully before use and use it correctly. Please do not use any method except the ones specified in this manual to operate this product. Doing so not only leads to malfunctioning of the product but also endangers your child.
Please keep this book carefully for future reference.

Carry Travel System

R41118

SG安全基準A形

Table of Contents

Before use

Precautions before use 1
Suggestions/ Standards/Warning marks indicator
Please note when using .....2~4
Warning/Caution
When unpacking the product.....5
Product features
Name of Parts 6

Stroller instructions

How to unfold the stroller.....7
How to switch the handlebars to the reverse position. 9
How to use the manual wheel lock.....12
How to use the Wheel brake 12
How to open the push-button open handle 13
How to use the foot rest 13
How to use the basket..... 13
How to install the protection pad products 14
How to sit baby in the stroller 15
How to adjust the height adjusting shoulder belt..... 17
How to use the stepless angled lay-flat regulator..... 18
How to use the anti-UV sunshade.....19
How to fold the stroller.....21

Maintenance of sewing parts

How to detach the anti-UV sunshade.....23
How to detach the handle protecting cover 23
How to detach the CTS storage pouch 23
How to detach the seat fabric.....24
How to install the seat fabric 27

Simple routine maintenance

Routine maintenance 29
Troubleshooting.....31
Disposal / Storage 32
MEMO 33

Precautions before use

Suggestions

An infant is not a miniature adult.
Especially for the baby without a fully developed neck.
Please consider your baby's condition carefully when using a stroller.

①Please pay attention to the baby's condition and avoid using it continuously.
②Please avoid leaving baby under direct sunlight exposure.
The temperature inside the stroller is higher than what adult feels outside.
③Please stay away from crowded areas to avoid noise and dust.
④Please slow down when going through rugged pavement, and avoid the surface that could cause vibration and impulsion.
⑤For a concise approach, the images or assembly used in this User Manual may not be identical to the real product, so please check with the real product for reference.

SG standard

・The stroller marked with SG symbol meets the following standards regulated by Japanese Product Safety Association. (This product qualifies as a SG standard A stroller.)

Range of application	This stroller is limited to one baby passenger, and is used for normal family and child movement such as outdoor activities or shopping.
Stroller style	**Stroller A** Stroller for one-month-old* baby whose neck is not well developed and needs to lie flat in the stroller.
Suitable age	1 month to 36 months old
Recommended continuous use time	Lie-flat: less than 2 hours. Sitting posture: less than 1 hour
Lay-flat angle	More than 150˚
Wheel external diameter	More than 115 mm

※One month old described here indicates babies following 37 weeks of pregnancies, weighed more than 2.5 kg in delivery, and born for over one month.

About the labels of this book.

・Symbol such as “Warning”, “Caution”, and “Prohibited” are used to predict the condition if you do not follow the notice items. These are divided by the damage severity. The indicated contents are very important, so you need to abide by them.

Mark	Indication
⚠ Warning	Failure to observe these instructions could lead to death or serious injury.
⚠ Caution	Failure to observe these instructions could lead to serious injury or product damage.

Prohibit Mark	Indication
⃠	Please do not perform these prohibited actions.

Tips	Tips and tricks when using the product.

Please note when using

・To avoid unexpected accidents, please read this user manual carefully, and follow the instructions thoroughly.

⚠ Warning ・Failure to observe these instructions could lead to death or serious injury.

To avoid the danger of the baby falling down.

Please buckle up shoulder belt, waist belt and 3D hip belt before use.



Do not let the baby stand on the stroller.



If waist belt gets loose, the baby may stand up and fall down.

Please keep an eye on the baby. Even if the seat belts are buckled up, the baby still could possible stand up, so please adjust waist belt according to the baby's developing condition.



If the wheel of stroller falls into the gutter on the pavement, the stroller will lose balance and could cause the baby or the user injury.

When roadway with latticed drainage ditch is encountered, please make sure the width of the stroller wheel is suitable. If suitable, then slowly push and stroll over.



When the front wheel gets stuck, please hold the handle with one hand and hold the stroller leg with another hand to lift the front wheel. Please do not lift the entire stroller.



When parking the stroller on a ramp area, the stroller may slide or overturn automatically.

Whether baby is in or out of the stroller, please lock the wheel brakes on both sides to make sure the stroller will not slide.



When baby or belongings are on the stroller, please do not trust brake too much, since the road surface and the duration of structural function varies, and the brake may not be able to completely stop the stroller.



Even if the brake is locked, please do not leave the baby inside the stroller and outside your range of visibility.



The stroller could lose its balance when you can not see the road condition and fall over.

When the baby is in the stroller, please do not lift up the stroller.



<Next page>

Warning · Failure to observe these instructions could lead to death or serious injury.

Since the stroller may overturn, and injure the baby.


Please do not let two babies ride at same time or let the baby sit beside the seat cushion.



Please do not use it in a place with height differences such as stairs or escalator.




When switching the handle switch lever to the 'rear-facing' or 'front-facing' mode, please ensure that the levers are engaged with the left and right support pins. Move the handle in a vertical direction to confirm that the pins have been engaged.

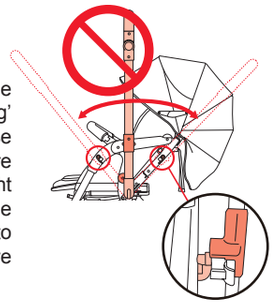


Since the baby may fall down or may be pinched when folding the stroller.

Before using the stroller, please make sure the switch lock on both sides are completely locked.

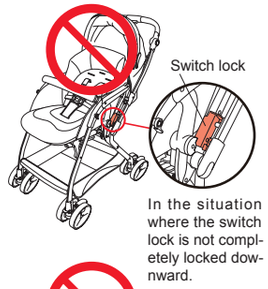

In the situation where the switch lock is not completely locked downward.

Before using the stroller, please make sure the safety control lock is completely locked.

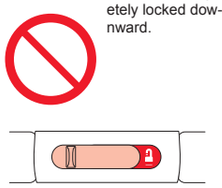

The road surface may cause the temperature inside the stroller to get high and harm the baby's body.

Please do not use for a long time in high temperature or under strong sunlight.



Since the stroller may overturn, and injure the baby.

When the baby is on the stroller, please do not place materials on any place other than the storage basket. Do not hang objects on the handle, and do not lean on the handle.



It may damage the stroller, harm the baby, or cause other accidents.

Please do not push too hard when using stroller.



To avoid the baby being wound up by the seatbelt and result in the danger of suffocation.

Please use shoulder belt and waist belt together, and adjust these to the positions that fit baby's figure.



All movable joint of stroller may pinch the baby, and the stroller main frame may hit the baby or user.

Please keep the baby away when you are folding the stroller.



Warning · Failure to observe these instructions could lead to death or serious injury.

It may cause the stroller damage and hurt the baby or user.

- Do not let a child operate the stroller.
- When the baby sits in the stroller, please align baby's legs to the position of 3D hip belt to avoid stroller turning upside down or backwards.
- Any person except our maintenance personnel should not disassemble, install or remold the stroller.
- Please do not use this product when seat fabric article is removed.
- Please do not use this product when it has been vigorously struck or fallen down.
- Please do not use it as a toy.
- Please do not use this stroller for any purpose other than for the baby to ride in it.

Caution Failure to observe these instructions could lead to serious injury or product damage.

◎Please do periodic inspections and maintenance.
◎Before use, please make sure the mainframe and seat fabric article of the stroller are completely and correctly installed.
◎Before using a stroller, which has not been used for a long time, please inspect and maintain the stroller first.
◎Even if baby is not on the stroller, please do not place the stroller in a dangerous area such as steep hill or sidewalk close to driveway.
◎Please do not use the stroller when screw or screw cap is loose.
◎Please do not combine two strollers and use them together at same time.
◎Please do not push the stroller by lifting up the front wheel, since this may cause the rear frame to be bent and deformed or breakdown.
◎For the baby's safety, please push the stroller at a normal walking speed (about 4 km per hour)
◎Please do not push the stroller to sandy or muddy areas (since sand may enter the joints and cause unfolding difficult.)
◎Please do not ignore it when the frame is contaminated with sand or mud. (since sand may enter the joints and cause unfolding difficult.)
◎Please do not touch the seat suspension shock absorber system (spring section) at the bottom of the seat. This is to prevent damage to the system.
◎A stroller is for a baby to ride on, so please do not install any extra components, sold on the market, on the stroller to avoid damage.
◎Please do not put object over 5 kg in the basket storage.
◎Parents or guardian should not lean on the stroller.
◎Please do not use it to move objects.
◎This product is only used for baby's riding.
◎Please do not use it on a bus.
This product is not designed for using on the bus. If using on bus, turning or urgent braking of the bus may cause overturn or other accidents.
◎Caution for using on subway.
This product is not designed for using on the train. If using on the train, turning or urgent braking of the train may cause overturn or other accidents, so please use the stroller brakes and pay a lot of attention to it. User will need to undertake the responsibility of any accident.
◎Please do not rush to get on and off the train when using in the subway. The train may not sense the situation when stroller is gripped by train door, and get the baby injured.
◎Please do not use it on snow-covered or frosty pavement.
◎Please do not use it in strong wind.
◎Please do not use under thunder.
◎To avoid increasing the temperature inside the stroller, please do not use the rain shade indoor, an area close to source of ignition or high temperature location.
◎To avoid deformation of plastic component and losing its original function, please do not place the stroller close to any source of ignition or inside the car with high temperature in the summer.
◎When switching the handle (front-facing to rear-facing, or rear-facing to front-facing), be sure to lock the two-way switchable handle.
◎Please do not do anything that could cause the stroller to breakdown.

· When baby sits on the stroller to cross a height-differenced area, please watch out that the stroller may be overturned.

In face-to-face situations, step on the pedal plate of the stroller and lightly push the handle to push the stroller over the height different area.

<Face-to-face situation>



In back-to-face situations, push the handle lightly and lift up the safety handle at the same time to push the stroller over the height different area.

<Back-to-face situation>




When unpacking the product

・Please check every component when unpacking the product.
・Please contact the distributor or our company if any component is missing, mistaken, or damaged.

Framework


・This product is folded when packed in the box.
Please see P7 on how to open the stroller.


・Unpacking the product.
Wheel brake is in locked status.
Please refer to P12 for unlocking the Manual wheel lock and brake.

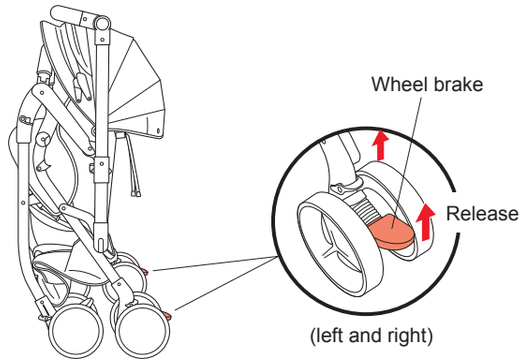

Caution
・Before use, please release the locking status. (See P12)

Accessory

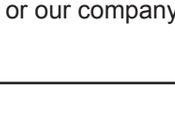
Waist and buttocks protection pad



User Manual

Warning
・Keep the packaging material and storage bag out of the child's reach. There may be a risk of these materials covering the child and cause suffocation.


〈Product features〉

・Handle is 2-way use with back-to-face and face-to-face
・Front-to-back folding method.
・The stroller can stand alone in folding status.
・The frame uses a lightweight aluminum tube.

Name of Parts

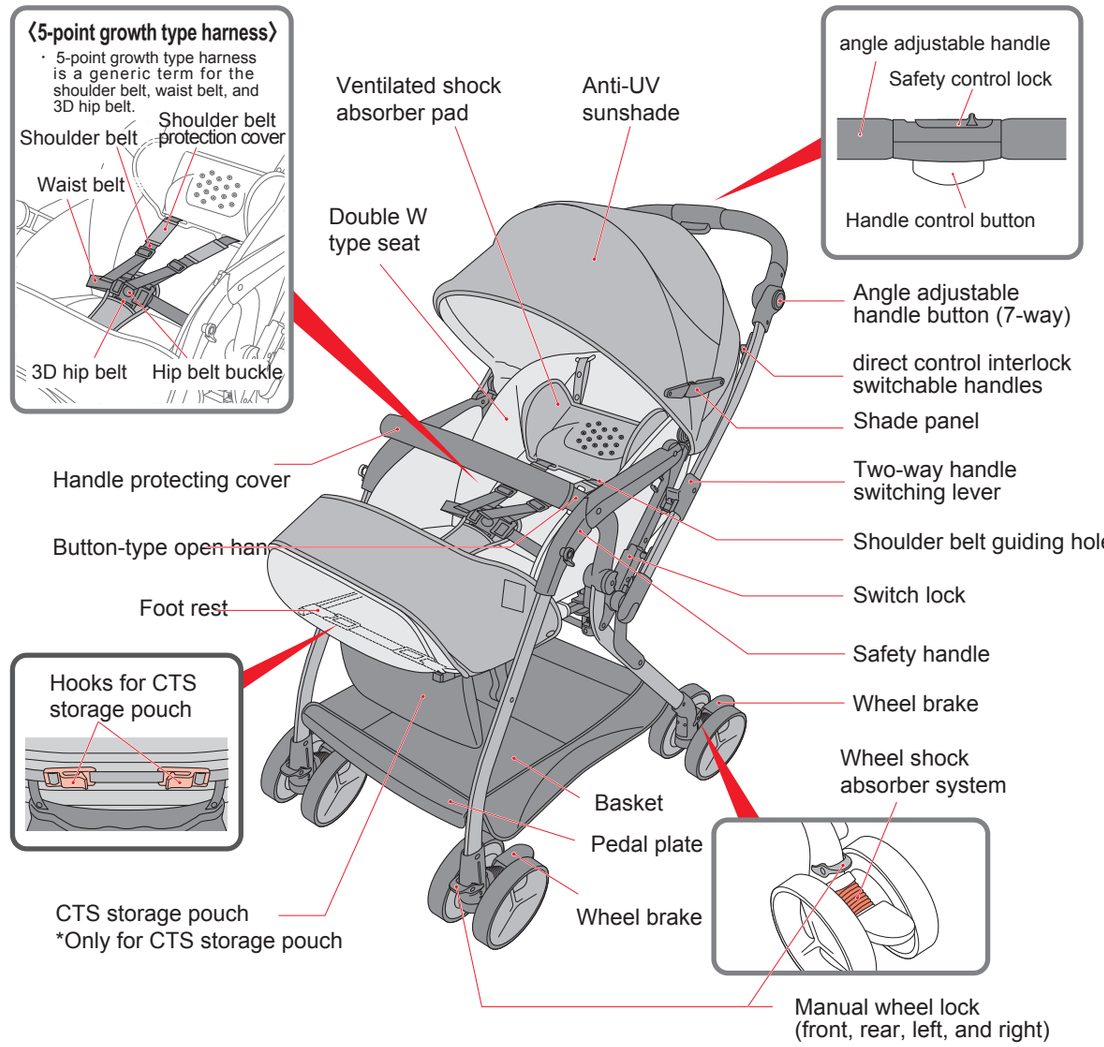

<The back of backrest>

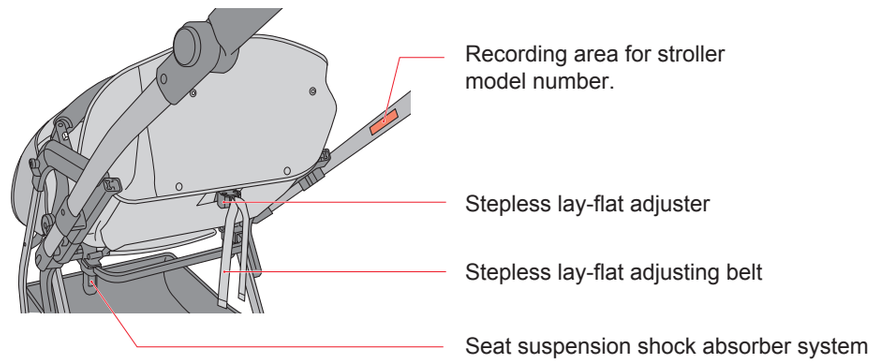

How to unfold the stroller


Warning

- Please do not fold or unfold the stroller when the baby touches or is close to the stroller, since the movable joint may hurt the baby's fingers, hands, or feet, or the stroller may hit the baby's body and hurt the baby.
- Please do not let the child operate the stroller, since this may result in the dangers of falling down or other accidents.

Little reminder

- Since the stroller is packed inside the box, it may not be able to unfold smoothly. Please repeatedly operate 2-3 times to unfold it.


1 1 Before unfolding

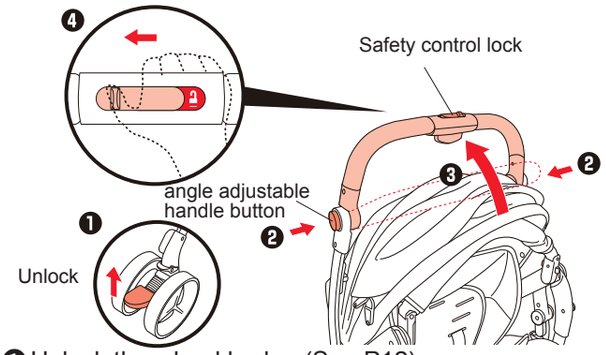

❶ Unlock the wheel brake. (See P12)
❷ Press the angle adjustable handle button with both hands, and then pull up.
❸ Push the safety control lock to the left side to unlock it.
❹ Gently push the middle of the handle where the handle control button is.

〈Usage of the angle adjustable handle〉


- It can change the angle and height of the handle (7-stage adjustment)

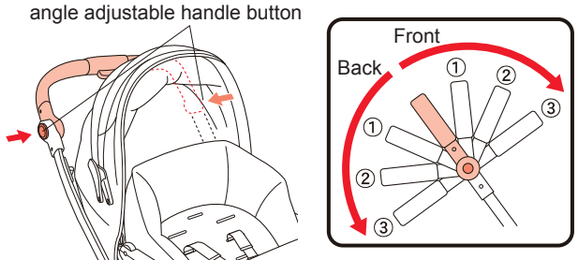


❶ Press the angle adjustable handle button with two hands at both sides while adjusting the angle of the handle.
❷ Release the angle adjustable handle when it gets in a position.

- There are two ways to unfold the stroller.


2 Unfolding with both hands

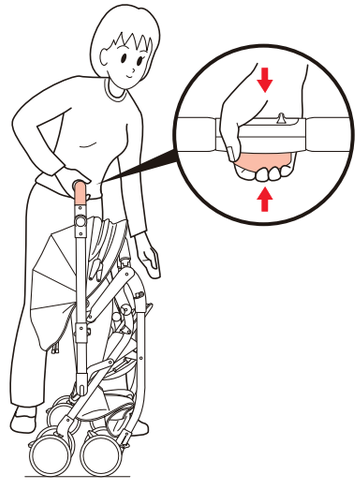

❺ Hold the handle and the open handle, and then pull toward the left and right sides.

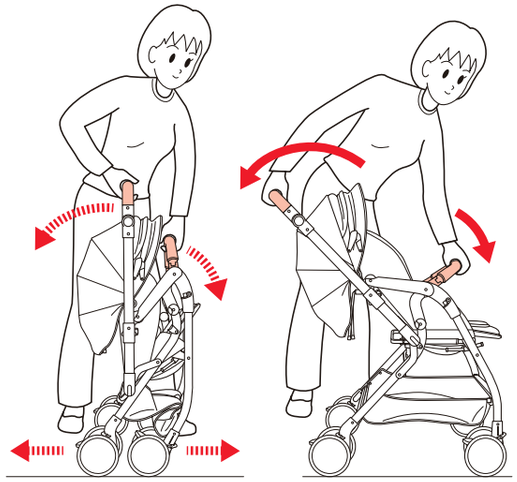

❻ Continue to hold while using the other hand to hold the open handle, and then open the stroller.

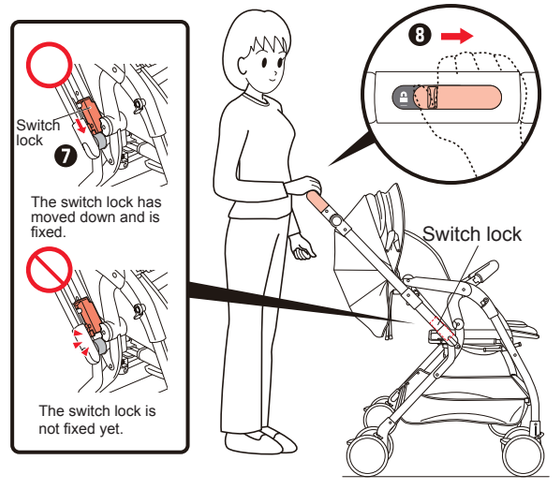

❼ Please make sure the lock switch is completely dropped to bottom
❽ Lock safety control lock.

Warning


- When opening the baby stroller, please take note of the hand which is holding the handle to ensure that the hand or fingers are not caught by the moving parts.




Warning

- After unfolding the stroller, move down the switch lock completely; otherwise, the stroller may fold back and injure the baby or cause the baby to fall to the ground.


2 Unfolding with one hand

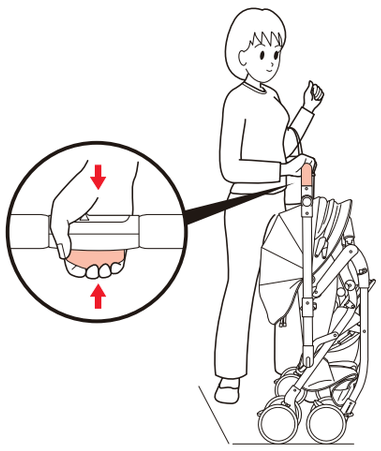

❺ Hold the handle and lift up to make the front wheels away from the ground.

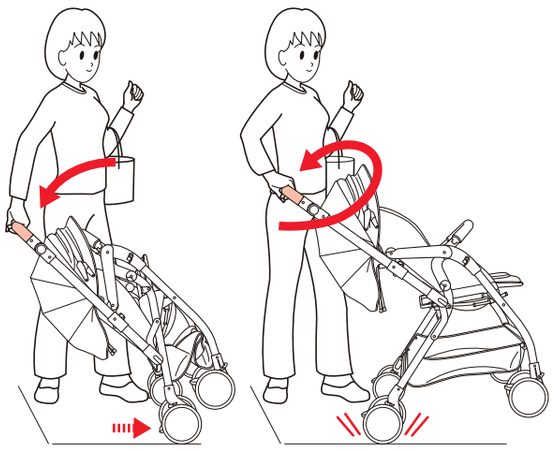

❻ Continue to hold the handle and lower the stroller. Pull the handle toward you to open the stroller.

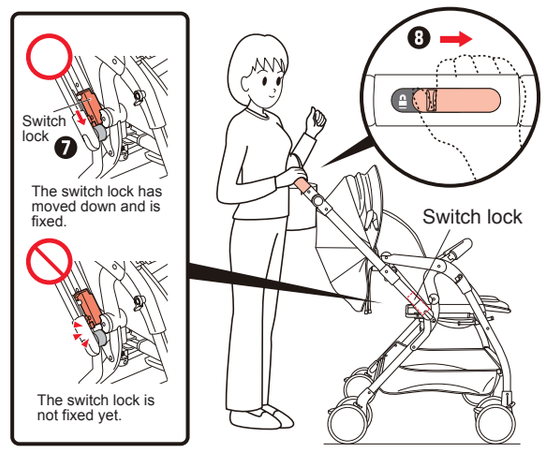


❼ Please make sure the lock switch is completely dropped to bottom
❽ Lock safety control lock.

Stroller instructions


How to switch the handlebars to the reverse position

〈Usage of the direct control interlock switchable handle〉

〈Front-facing〉

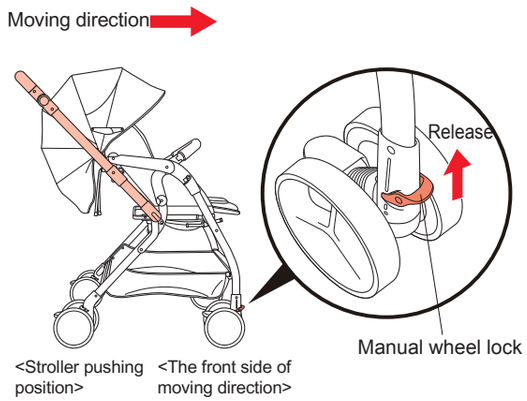

〈Rear-facing〉

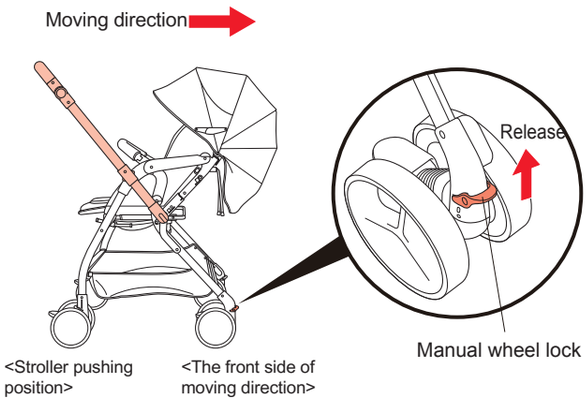


❶ Be sure the manual wheel locks of the front wheels are unlocked.

Warning

- When switching the handle, be sure to unlock the manual wheel locks of the front wheels (left and right). If they are not unlocked, the wheels next to the person pushing the stroller won't be locked automatically, then the stroller and baby may fall to the ground.
- When not pushing the baby stroller in the forward direction (ie. toward the reverse side of the moving direction), the wheels may display positive or negative camber. This is a normal structural condition and is not due to defect in wheel quality.

〈Switching from front-facing to rear-facing mode〉

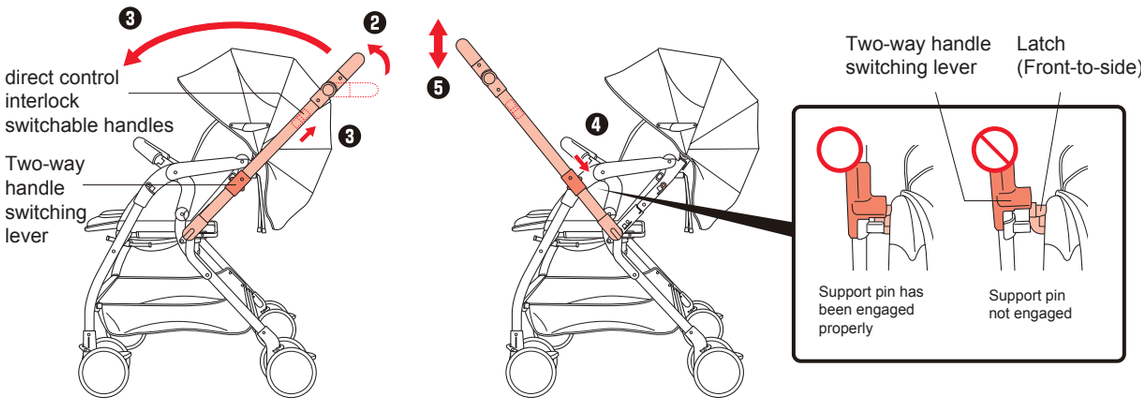

❷ To set the angle adjustable handle in upright position. (See P7)

❸ Pull up the direct control interlock switchable handles (left and right) while switching the direction of the handles.

❹ Lock the latch of the two-way switchable handle

❺ Move the handle up and down to ensure the latch is locked.


Warning

- Watch out to avoid pinching baby's finger, hand or foot when switching the handle.
- Please do not switch the handle in a ramp, since the stroller may slide or overturn unexpectedly and cause the baby fall down.
- Please do not switch the handle while pushing the stroller.
- When switching the handle 'from front-facing to rear-facing' or 'from rear-facing to front-facing', please move the handle in a vertical direction to confirm that the handle levers are properly engaged with the support pins. This is to prevent the risk of the baby stroller tumbling over or other accidents.

Warning


- When switching the handle, ensure the angle adjustable handle is in upright position.
- Please do not switch the handle in a ramp, since the stroller may slide or overturn unexpectedly and cause the baby fall down.
- Please do not hang any item on the handle. There may be a risk of damage to the item, the baby stroller tumbling over or other accidents when switching the handle.

〈Switching from rear-facing to front-facing mode〉

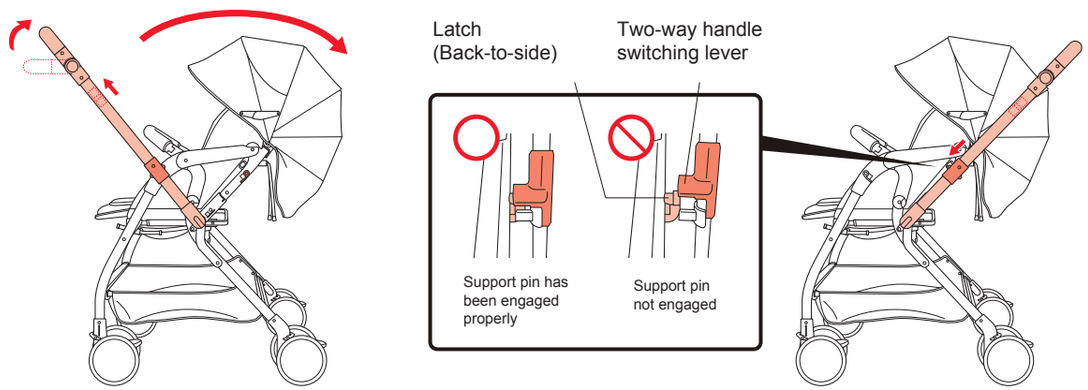


- When switching the handle to the 'rear-facing' or 'front-facing' mode, please ensure that the handle levers are securely engaged with the support pins (front-facing side).

<Facing the baby's back>

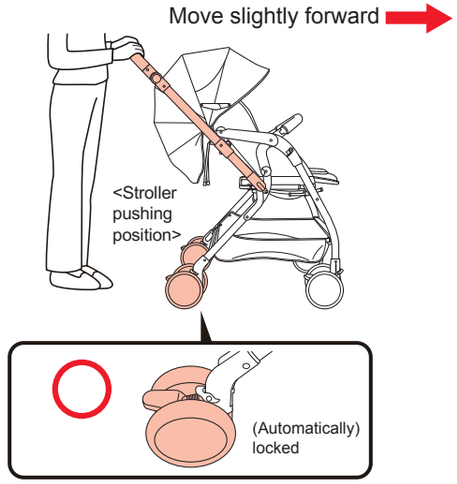

<Facing the baby>

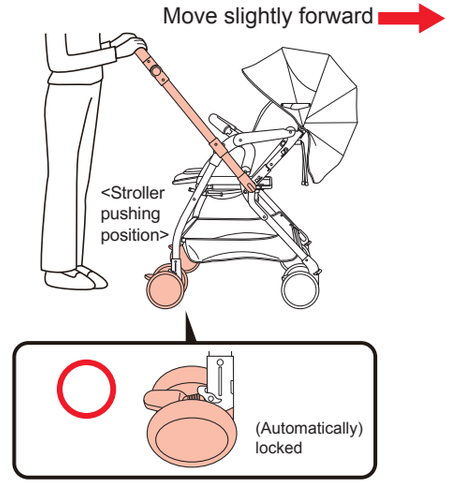

❻ Move the stroller slightly forward to lock the left and right wheels next to the person pushing the stroller.

- All wheels are still unlocked during or after the handle is switched, so follow step❻to lock the wheels.


Tips

- In crowded places such as going up/down the escalator or boarding/alighting the train, if there is a need to move the baby stroller backward, the stroller's movement may sometimes be affected because the wheels on the pusher's side are locked. We advise to lift the stroller's handle slightly so that the wheels nearer to the pusher are a little bit off the ground before moving the stroller.


How to switch the handlebars to the reverse position

〈Incorrect way of using the swivels〉

〈Front-facing〉

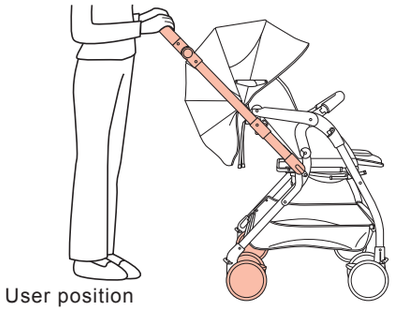


〈Rear-facing〉

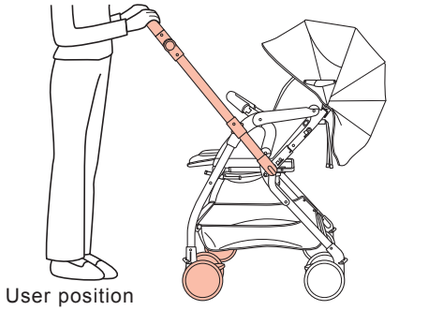

・Please see page 10 for the correct direction of the wheels.
・If the swivels of the wheels on the user side are locked with the wheels facing inward, please release the manual wheel lock on all four wheels before switching the handle.


〈When moving in reverse direction〉

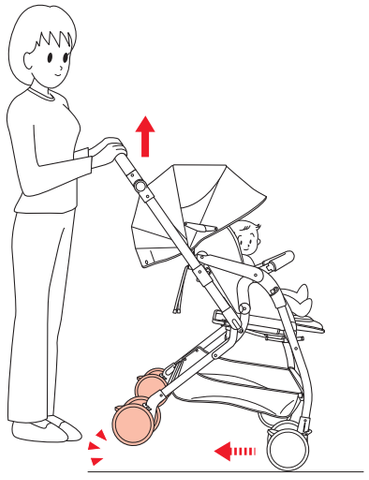



Tips


・In crowded places such as going up/down the escalator or boarding/alighting the train, if there is a need to move the baby stroller backward, the stroller's movement may sometimes be affected because the wheels on the pusher's side are locked. We advise to lift the stroller's handle slightly so that the wheels nearer to the pusher are a little bit off the ground before moving the stroller.

How to use the manual wheel lock

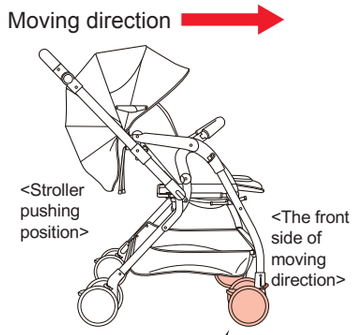

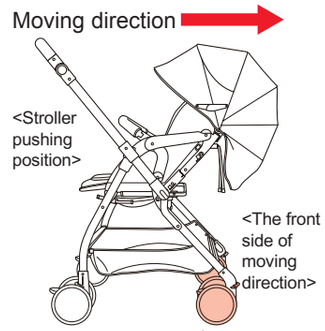

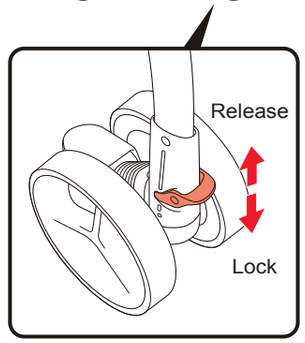

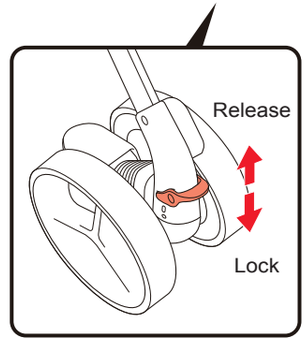

〈Lock〉

・When moving on rough and uneven surface, ramp, and inclined surfaces, please lock the left and right front side wheel of moving direction temporarily, so that the stroller will be easier to push.

●Pull down the front manual wheel lock to lock the wheels (left and right).

〈Release〉

・Please use the stroller in unlocked situation in normal situation.

●Pull up the front manual wheel lock to unlock the wheels (left and right).


・The wheels next to the person pushing the stroller are locked automatically. The manual wheel lock cannot be used.

How to use the wheel brake

Warning
・Please lock the left and right brakes when putting baby in or taking baby out of the stroller.
・When baby or material is on the stroller, please do not trust brake too much, since the road surface and the duration of structural function varies, and the brake may not be able to completely stop the stroller.
・Even if the wheel brakes are locked, please do not leave the baby alone when the baby is on the stroller.


Caution
・Even if the baby is not in the stroller, please still lock the left and right wheel brake when leaving the stroller.

〈Lock〉

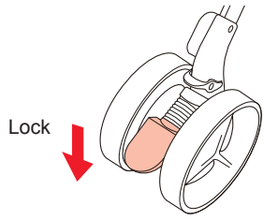


❶ Push down the wheel brake next to the person pushing the stroller to lock the wheels (left and right).
❷ Move the stroller back and forth a little bit to make sure the wheel brakes are locked.

〈Release〉

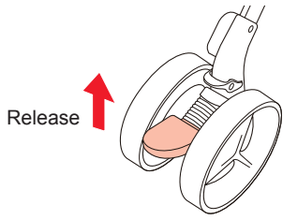

●Pull the wheel brake up to release the locking status (left and right).

How to open the push-button open handle

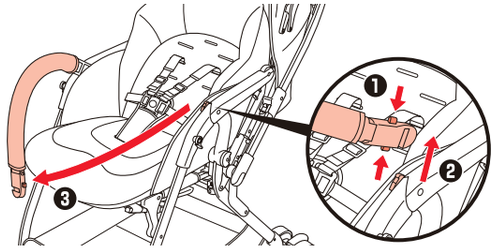


❶ Press and hold the top and bottom lock buttons.
❷ Pull the front guard outward to remove it.
❸ Lower the front guard.

⚠Caution
・When attaching the front guard, please be careful to avoid the fingers getting caught by the locks.

How to use the foot rest

・When the angle of the seat is flat, use the footrest.


Foot rest

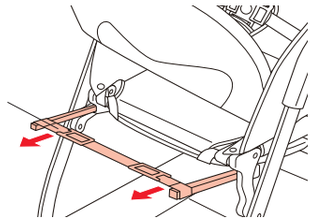

●Pull out the footrest under the seat (left and right).

How to use the basket


⚠Caution
・Do not put sharp items into the basket for those may damage the basket.
・Do not load items over 5kg.
・Remove all items before folding the stroller.
・Please do not place valuable items in the basket.

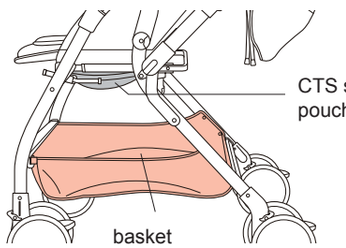

●Please place items into the basket from the top.

Tips
・When placing materials in the storage basket, please distribute the material weight evenly in the storage basket.

〈How to use the CTS storage pouch〉

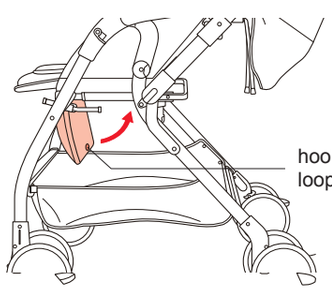

●The CTS storage pouch is only applicable to baby carrier equipped with Carry Travel System. When the Carry Travel System is not in use, please stow the storage pouch with the hook-and-loop fastener under the seat.

⚠Caution
・Please do not place other items in the CTS storage pouch.


How to install the protection pad products

・The protection pad inside the stroller is used to assist the baby in maintaining a proper and accurate posture.

Prevent respiratory tract blocking type head-protecting pad

Please use this when baby's neck starts to get stable (about 4 months old)

・When installing head protection pad to prevent respiratory tract blockage, please install shoulder belt in the lower shoulder belt guiding hole.
Used up to 7 months old. (See P17 “To adjust the height of the shoulder belt”)

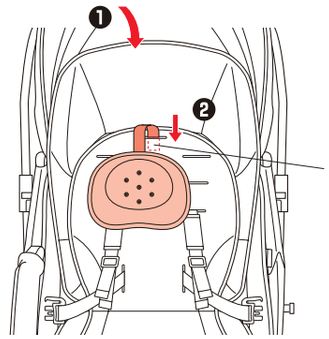


Hook-and-loop Fastener (inner side of the seat)

❶ Head pad installation is suitable for the use of lying flat. If the head pad doesn't fit, please remove it. (See P18)
❷ Unfasten the hook-and-loop fastener strap on the head mamolu pad. Pass the strap through the pad attachment hole in the direction of the arrow and affix it to the hook-and-loop fastener at the reverse side of the seat.

Tips
・When the head pad is not easy to install, remove the upper half of seat fabric article, and reinstall it again in the situation of being able to see the inside of seat. (See P25 ❽❾❿ “How to detach the seat fabric article ”)

〈Installing position for “preventing respiratory tract blockage” type head protecting pad〉

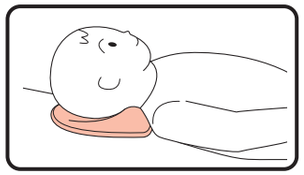


●Please leave the part in the lower end of head pad in baby's neck when installing it.

※Remove it immediately if the part does not fit baby's neck.

⚠Caution
・When shoulder belt is installed through middle or upper shoulder belt guiding hole, “prevent respiratory tract blockage”-type head protecting pad cannot be used.

Waist and buttocks protecting pad (for new-born to 3 yrs old.)

・Depending on baby's figure, even the baby under 3 years old is still possibly not suitable for waist and buttocks protecting pad. Please remove it if not suitable.

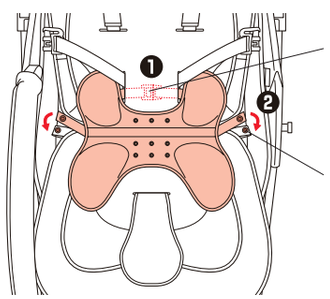


Belt buckle

The side buckles of the ventilated shock absorber pad

❶ Place the upper end of the buckle through the guide hole of the waist belt on theventilated shock absorber pad.
❷ Lock the buckles around the waist and hip protectors to theventilated shock absorber pad (left and right).

How to sit baby in the stroller

1 Preparation

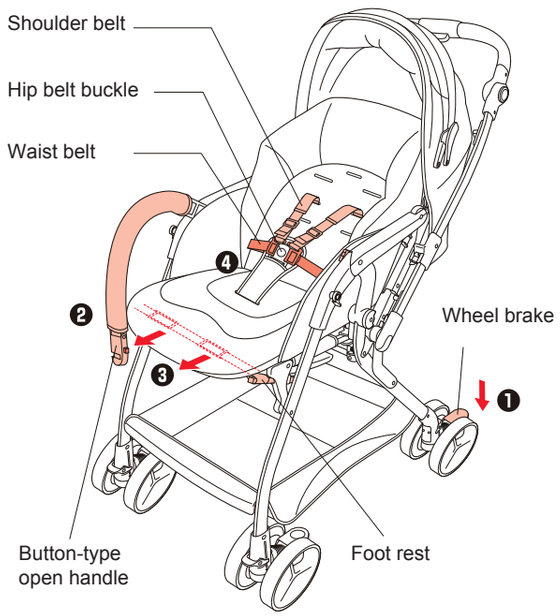


❶ Lock wheel brake (left and right).
❷ Open button-type open handle. (See P13)
・Press both ends of the lock to open the open handle.
❸ Pull out the footrest. (See P13)
・Lift the seat pad and pull out the footrest (left and right).
❹ Unfasten shoulder belt and waist belt.
・Press the hip belt buckle to unlock the waist and shoulder belts.

・If shoulder belt position needs to be changed, please see P17 “To adjust the height of the shoulder belt”.
・When the angle of the seat needs to be adjusted, please see P18 “Use of stepless lay-flat angle adjuster”.

2 How to ride

〈When the baby is in the stroller, be sure to buckle him/her up〉

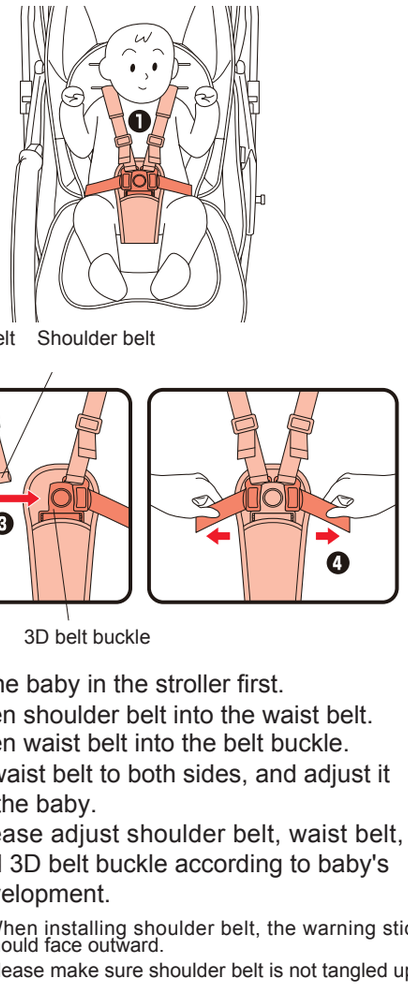


❶ Put the baby in the stroller first.
❷ Fasten shoulder belt into the waist belt.
❸ Fasten waist belt into the belt buckle.
❹ Pull waist belt to both sides, and adjust it to fit the baby.
※Please adjust shoulder belt, waist belt, and 3D belt buckle according to baby's development.

Tips
・When installing shoulder belt, the warning stick should face outward.
・Please make sure shoulder belt is not tangled up.

⚠Warning
・After buckling up seatbelt, please make sure waist belt on left and right side is adjusted to fit the baby.
・Please buckle shoulder belt on waist belt in use, since shoulder belt could possibly hurt the baby's neck.
・Please keep an eye on the baby. Even if the seat belts are buckled up, the baby could still stand up, so please adjust waist belt according to the baby's developing condition. If waist belt gets loose, the baby may stand up and fall down carelessly.
・When the baby sits on the stroller, please align the baby's inner thighs to the position of the 3D hip belt to prevent stroller from turning upside down and backwards.


〈Adjusting the waist belt〉

〈Fasten〉

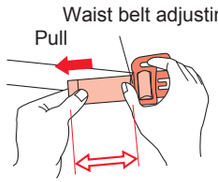


Keep more than 3 cm at the end.

〈Loosen〉

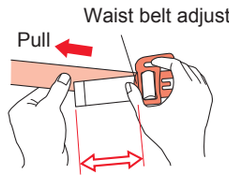

Keep more than 3 cm at the end.


●Gently press the waist belt buckle while adjusting the belt.

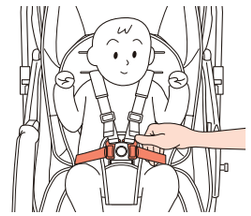


・A proper length of waist belt is to leave a space of 4 fingers between waist belt and the baby.

〈Adjusting shoulder belt〉


〈Fasten〉

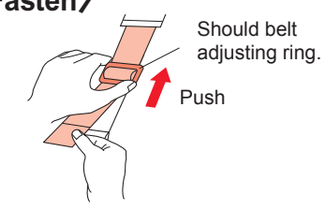

〈Loosen〉

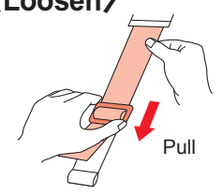


●Adjust it by moving the shoulder belt adjusting ring.

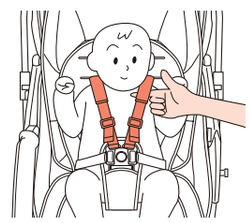


・The proper length of the shoulder belt is about the width of an adult's finger between shoulder belt and the baby.

〈Adjusting the 3D hip belt〉

〈Loosen〉

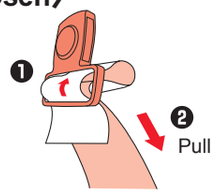


〈Fasten〉

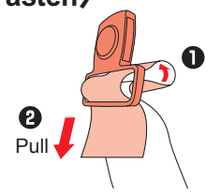

❶ Take the 3D hip belt out.
❷ Pull out the hip belt to adjust the length.
・After the adjustment, make sure the buckle between the buckle set and hip belt protector is locked. (See P28)


⚠Caution
・Please adjust shoulder belt, waist belt, and 3D belt buckle according to baby's development. When the shoulder belt, waist belt, or 3D hip belt is too loose, even with a fastened seatbelt, the baby could still possibly stand up and fall down.
・Please be careful not to pinch the baby's fingers when closing the open handle.
・After closing the open handle, please pull it to make sure it is actually locked.
・When the baby is riding the stroller, please do not lift the open handle.
・Please save more than 3 cm for the end of the waist belt (⟺ part in the diagram)
・When adjusting the angle of the seat backrest, please adjust the length of shoulder belt, waist belt, and 3D hip belt.

〈Close up the button-type open handle〉

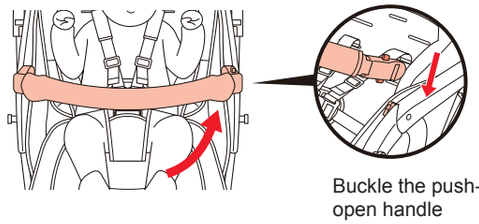

Buckle the push-button open handle

〈Unlock wheel brake〉

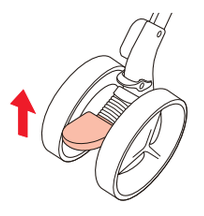

Release the locking status. (left and right)

Stroller instructions


To adjust the height of the shoulder belt

Warning

・Please adjust the height of the shoulder belt according to your baby's development.


〈Position of the shoulder belt〉

・The position of the shoulder belt is set on lower section when the product is pulled out from its packing box.

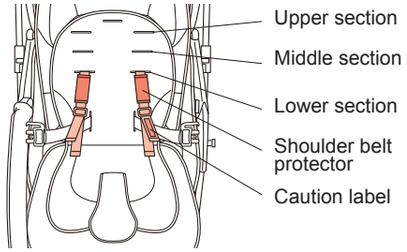

〈The position of the shoulder belt guiding hole〉

・Opening the sewn seat products

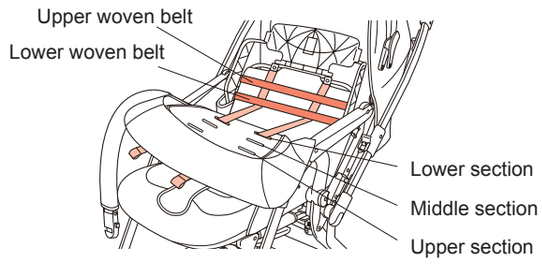

〈Correct use of the shoulder belt〉

・Put it through the lower ection shoulder belt guiding hole near the shoulder's position.



・Please use the following 3 level standards to adjust the shoulder position.

The standard of age by months (body build).	The position of the shoulder belt guiding hole.
18 mo~36 mo	Upper section
7 mo~18 mo	Middle section
1 mo~7 mo	Lower section

Please adjust the belt according to the above table.

Tips

・The caution label should face outward when installing the shoulder belt.


・Please make sure the shoulder belt is not tangled.

〈The height adjustment of shoulder belt〉

・Unlock the shoulder and waist belts from the hip belt buckle set. (See P15 “Preparation ❹”)
・Remove the shoulder belt protector.
・Unfasten the snap buttons at the side of the backrest and lift up the backrest cover. (See P25❽❾❿)
・Pull out the shoulder belts.


〈When using the guide hole in the lower section〉

●Through the guide holes of the upper and lower woven belts and shoulder belt (lower section)

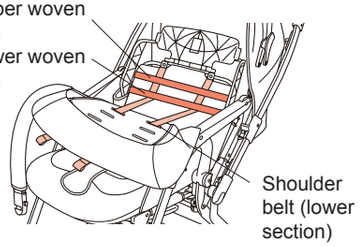


〈When using the guide hole in the middle section〉

●Through the guide holes of the upper woven belt and shoulder belt (middle section)

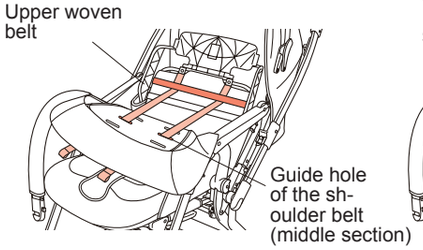

〈When using the guide hole in the upper section〉

● Directly put through the guide hole of the shoulder belt (upper section).

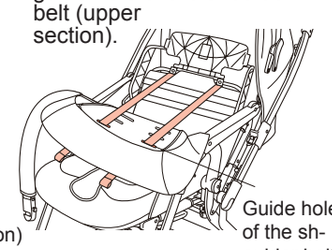

・After adjusting the height, cover it with the sewn backrest product and lock the buckle on the backrest side and rear side. (See P27❺❻❼)
・Lock the shoulder belt buckle.

How to use the stepless reclining adjuster

・The main function of the stepless reclining adjuster is to keep the baby in a comfortable position.
・The lay-flat design of the backrest is to allow the baby to lay flat while he/she rides in the stroller.


〈Standard of seat angles〉

Age (physical)	Seat angles
One month ~ Fully developed neck	Flat
Fully developed neck ~ Sit independently	Flat ~ Reclining (45 degrees)
Sit independently	Flat ~ Upright

Tips

・When the backrest lies flat, the headrest rises.

When the backrest lies flat

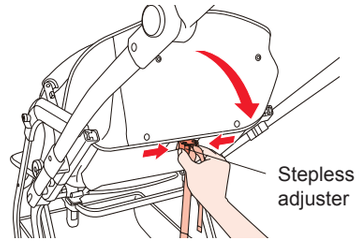



❶ Loosen the shoulder belt. (See P16)
❷ Hold both sides of the stepless reclining adjuster and push down the backrest of the seat.
❸ Adjust the length of the shoulder and waist belts. (See P16)

Warning


・If the baby sits in the stroller, loosen the shoulder belt before laying down the backrest.
・After adjusting the backrest of the seat, adjust the length of the shoulder and waist belts. If the shoulder and waist belts are too loose, the baby may still get up with the seat belt on and fall to the ground.

Caution


・Do not push the stroller while adjusting the angle of the backrest.
・If the baby sits in the stroller, do not rapidly and dramatically change the angle of the seat.
・If the baby sits in the stroller, be sure to hold the baby when putting down the backrest.
・If the baby cannot sit independently yet, lay down the backrest so that the baby can lie down.

Tips

・When a baby who can sit independently rests his/her head on the headrest, the baby will feel uncomfortable if the backrest lays down. When this happens, please adjust the backrest to a position where the headrest doesn't rise.




When the backrest is upright

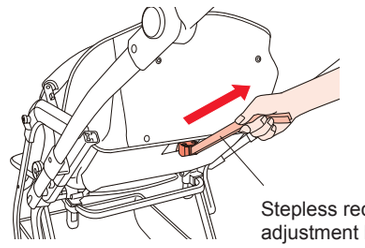

●When the baby doesn't rely completely on the backrest, you may hold the stepless reclining adjustment belt with one hand to pull up the backrest of the seat.


Tips

・When the baby relies completely on the backrest, do not pull up the backrest of the seat.
・When the baby doesn't rely completely on the backrest, you may pull the stepless reclining adjustment belt to both sides.

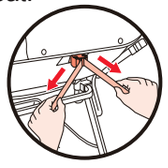

How to use the sunshade


〈Names of parts of the sunshade〉

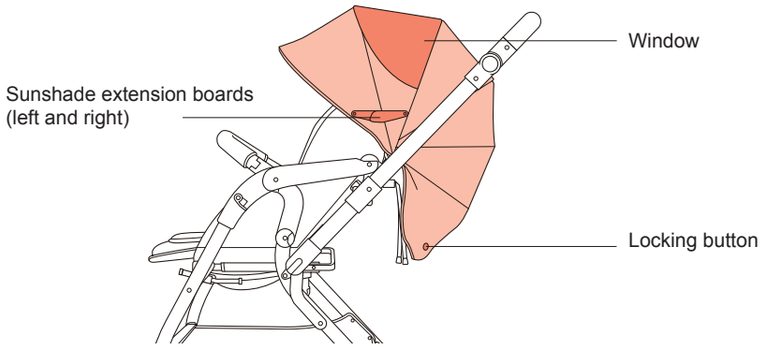

Warning


・Only when the baby isn't touching the sunshade, you may open or close the sunshade. Otherwise, the moving parts, such as joints, may hurt the baby's fingers or hands.

How to open

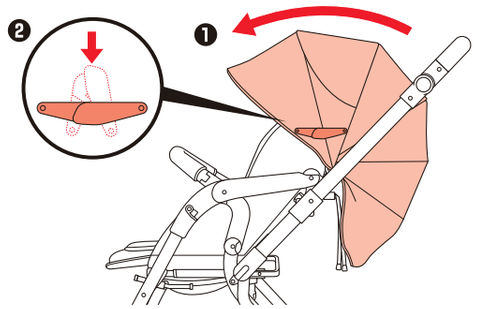

❶ Pull the sunshade forward.
❷ Push down the sunshade extension boards (left and right).


How to close

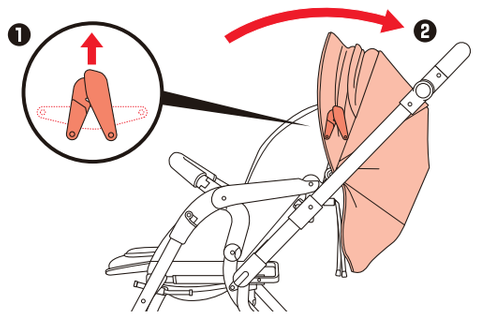


❶ Fold up sunshade extension boards (left and right).
❷ Push back the sunshade.

How to adjust the angle of the shade

・The angle of the shade can be adjusted when the backrest reclines or the sunlight is weak.

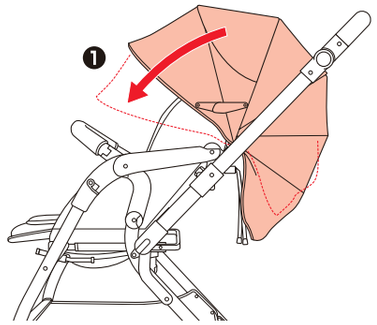


❶ When the sunshade is open, pull it forward to an appropriate position.

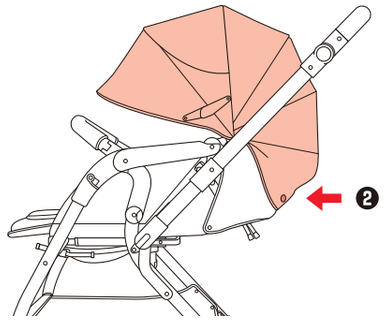

❷ When laying down the backrest, lock the sunshade buckle to the buckle on the backside of the headrest.

How to open the front or rear windows

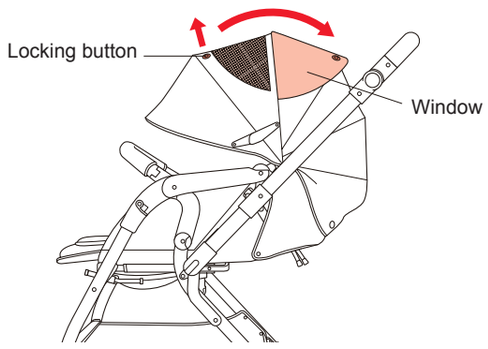

・You can check baby's status through the opened window cover on the shade

Stroller instructions


How to fold the stroller

Warning

- When the baby is touching or beside the stroller, do not fold or unfold the stroller.
  Please do not fold or unfold the stroller when the baby touches or is close to the stroller, since the movable joint may hurt the baby's fingers, hands, or feet, or the stroller may hit the baby's body and hurt the baby.
- Please do not let the child operate the stroller, since this may cause overturn or accident and hurt the baby.

Caution


- Insert the shoulder belt and waist belt into a safety buckle before folding the stroller to avoid damaging the hip belt buckle.
- When the stroller is folded, do not pull up the direct control interlock switchable handle or two-way switchable handle.
  If the 2-way switchable handle is not locked, the stroller may not open.

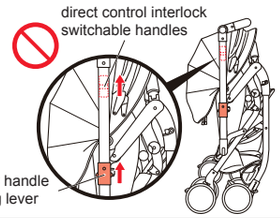

Little reminder

- Because of the packing, the stroller may be difficult to be unfolded in the beginning. Please repeat the unfolding operation 2 to 3 times.


1 Before folding

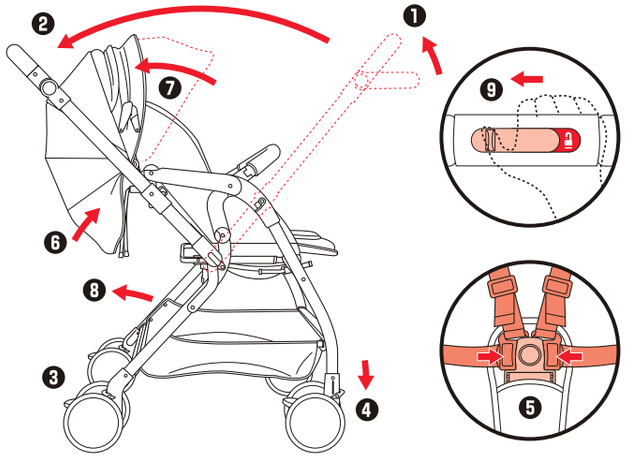


❶Erect angle adjustable handle. (See P7)
❷Switch the handle to the backside of the baby. (SeeP10)
❸Move the stroller forward a little bit to make sure the wheels are automatically locked. (See P10)
❹Lock the stoppers on the front wheels. (See P12)
❺Fasten seat belt into the belt buckle. (See P15)
❻Sit up seat backrest. (See P18)
❼Push back the sunshade. (See P19)
❽Remove all items from the basket.
❾Unlock safety control lock.

- This stroller can be unfolded using the following two ways.


2 Unfolding operation with both hands.

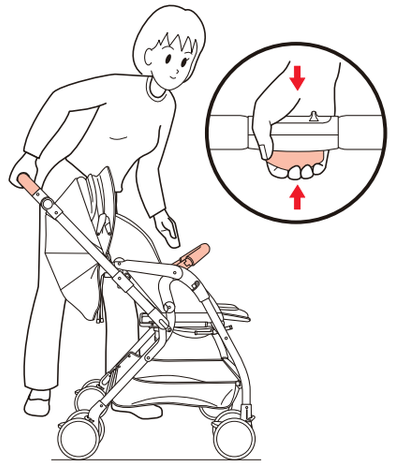

❿Push the control button completely down to unlock the switch.

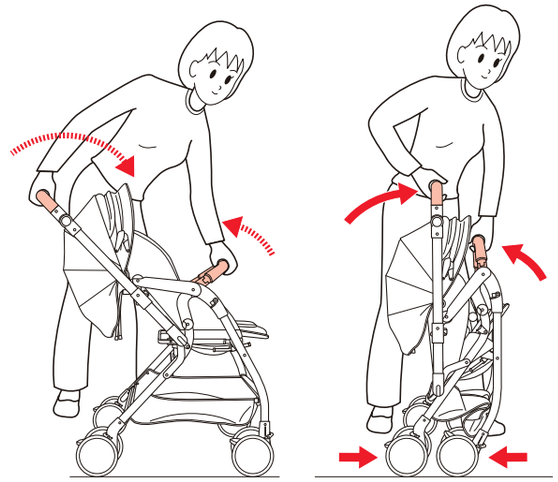


⓫Continue to hold it, and use another hand to hold the handle and push it inward to unfold it.

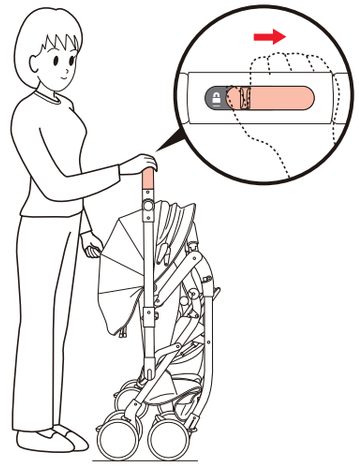


⓬Lock the safety lock.

Tips
- After unfolding it, push the handle down more to make it more convenient to be unfolded.


2 Unfolding operation with single hand.

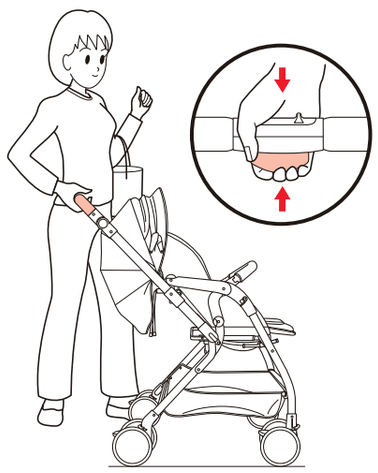

❿Push the control button of handle down completely, and then unlock the switch.

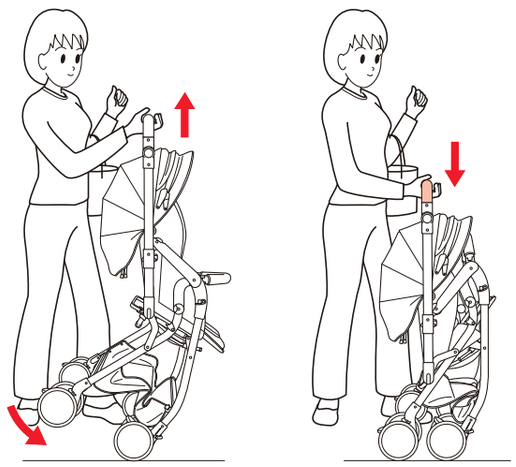


⓫Continue to hold it, lift it up, and then push it down to unfold the stroller.

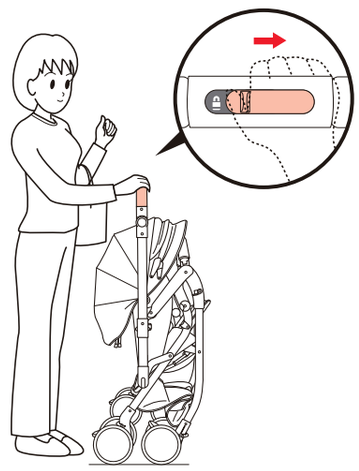


⓬Lock safety control lock.

How to detach the anti-UV sunshade

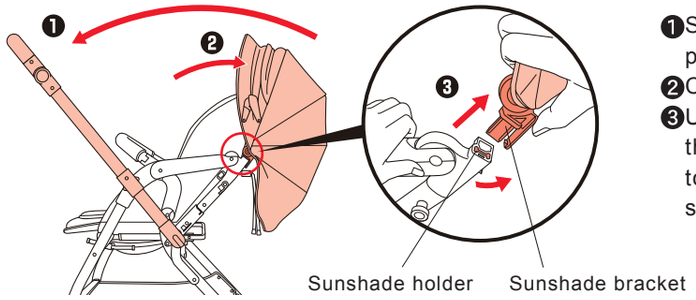


❶Switch the handle to rear-facing position. (See page 9)
❷Close the sunshade. (See page 19)
❸Use your fingertip to flick the tab at the bottom of the sunshade bracket towards you, and pull it out from the sunshade holder.

How to detach the handle protecting cover

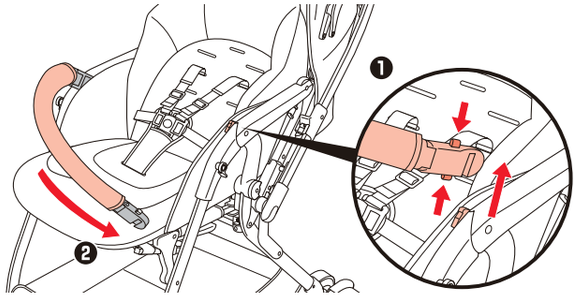

❶Open the front guard.
❷Remove the front guard cover.

How to detach the CTS storage pouch

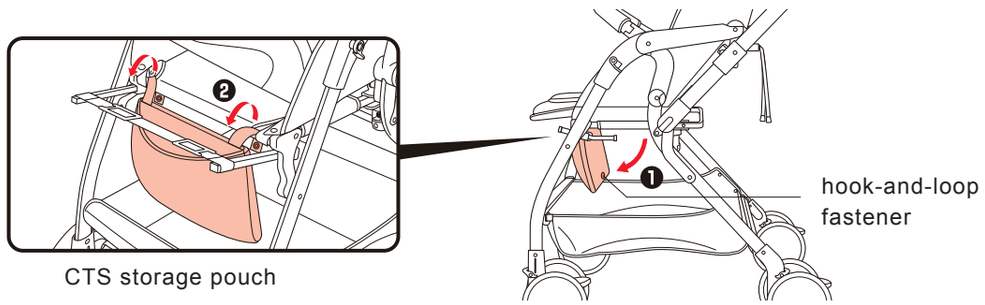

❶Unfasten the hook-and-loop fastener on the CTS storage pouch.
❷Unfasten the left and right snap buttons to remove the CTS storage pouch.


How to detach the seat fabric

Warning


・Please do not let the baby sit on the stroller with the seat fabric article removed, since this may cause unexpected damage on the stroller.

Tips


・Please pay special attention when removing and installing the fabric parts, there may be a risk of damage to the fingernails.

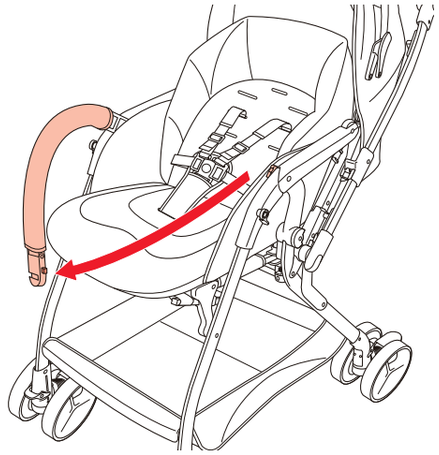

❶ Take out the push-button open handle. (See P13)

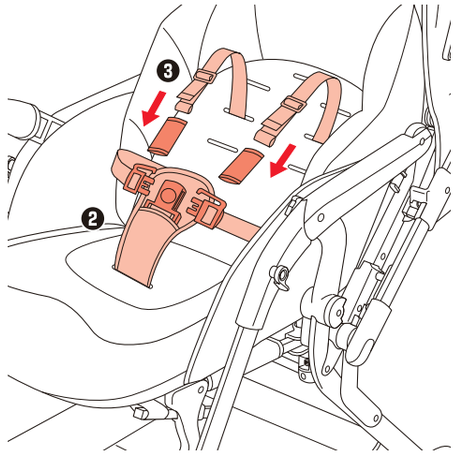


❷ Push down the hip belt buckle to unlock the shoulder belt and waist belt. (See P15)
❸ Remove the protector from the shoulder belt, and then pull out the shoulder belt.

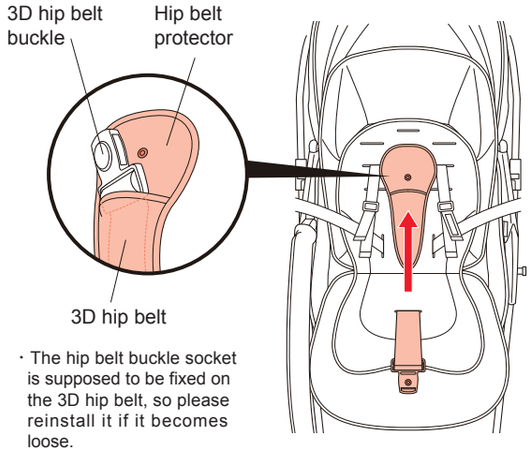


・The hip belt buckle socket is supposed to be fixed on the 3D hip belt, so please reinstall it if it becomes loose.

❹ Unlock the 3D hip belt buckle and remove the 3D hip belt protector.

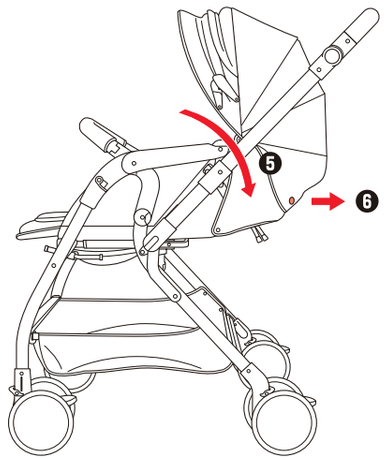


❺ Lay down the seat backrest. (See P18)
❻ Unlock the sunshade buckle beside the backrest of the seat. (See P20)


How to detach the seat fabric

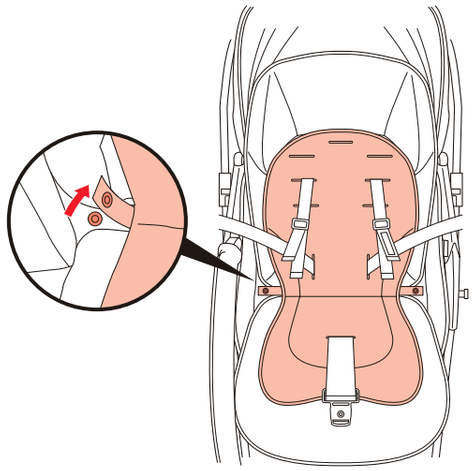


❼Unlock the buckle on the Ventilated shock absorber pad. (left and right)

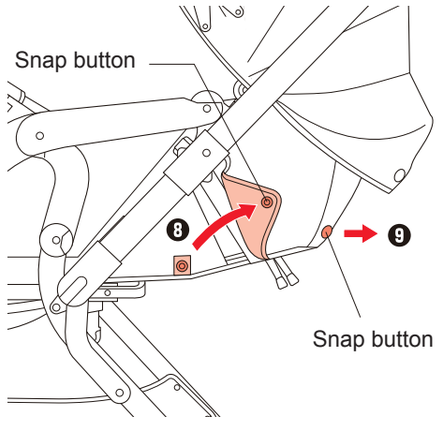


❽Unfasten the snap buttons at the side of the backrest. (Left & right)
❾Unfasten the snap buttons on the back of the backrest. (Left & right)

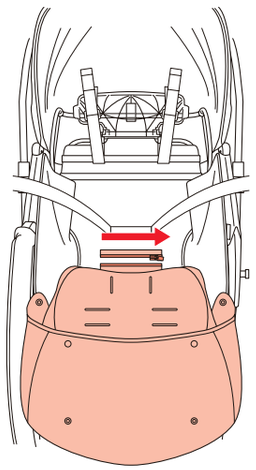


❿Unzip the zipper beneath the seat cushion

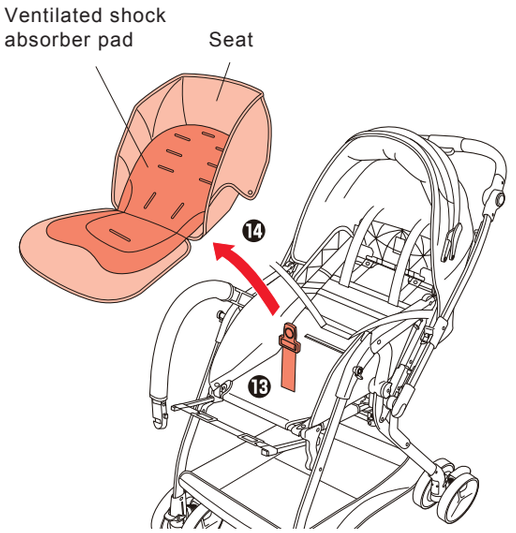


⓭Remove the sewn seat product.
⓮Pull the 3D hip belt out from the sewn product.

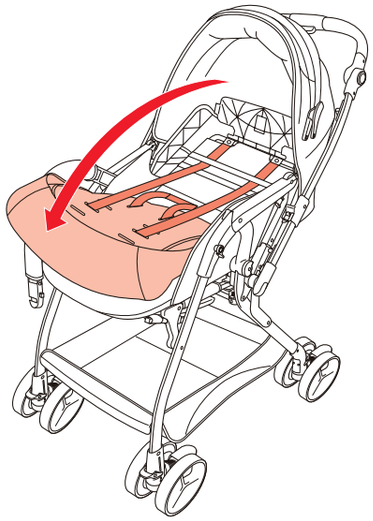


⓾Open up the sewn seat product from the backrest.

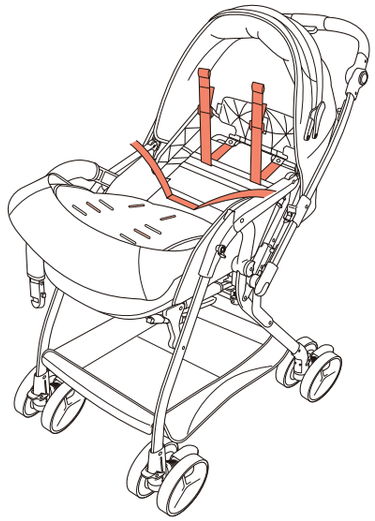

⓫Unlock the buckles on both sides (left and right) of the backrest.

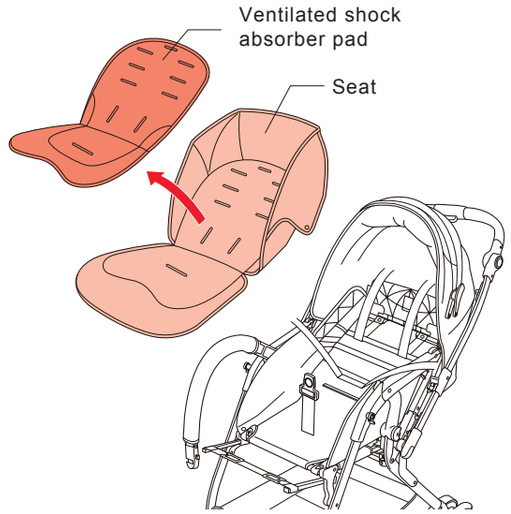

⓯Remove the Ventilated shock absorber pad.

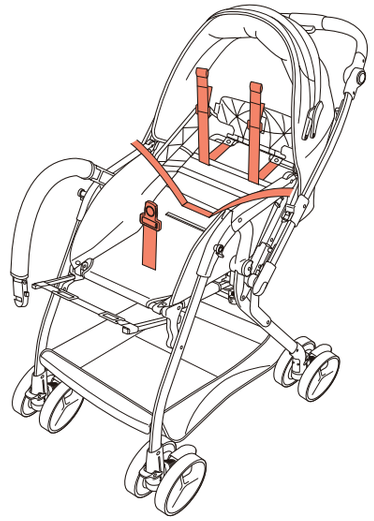


・Do not remove shoulder belt, waist belt and 3D hip belt.

Maintenance of sewing parts


How to install the seat fabric

・Please install the Ventilated shock absorber pad before use.


Tips ・When installing or uninstalling seat fabric article, please watch out not to hurt your nails.

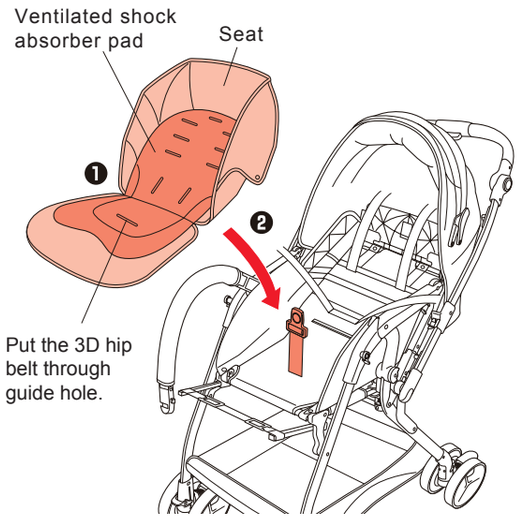


❶Line up the Ventilated shock absorber pad with the 3D hip belt guide hole on the seat.
❷Put the 3D hip belt through the guide hole.

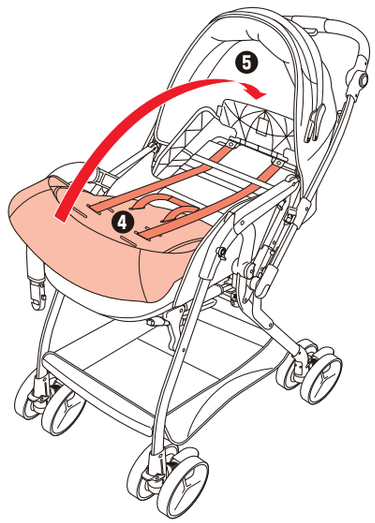


❹Put the shoulder belt and waist belt through the guide hole.
❺Cover the seat backrest from the top with the sewn product.

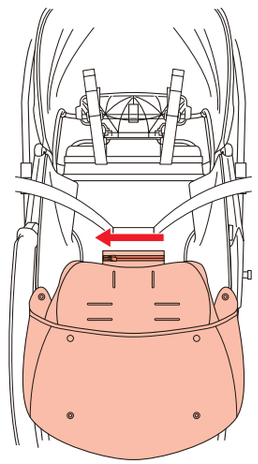


❸Pull up the zipper underneath the seat cushion.

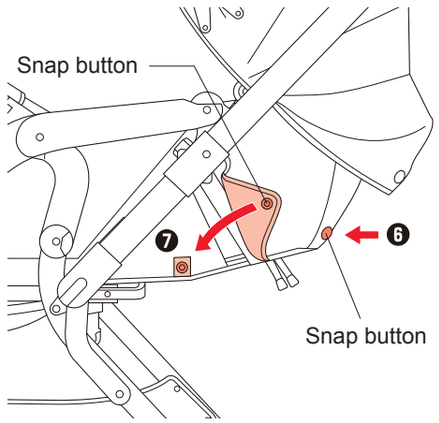

❻fasten the snap buttons on the back of the backrest. (Left & right)
❼fasten the snap buttons at the side of the backrest. (Left & right)

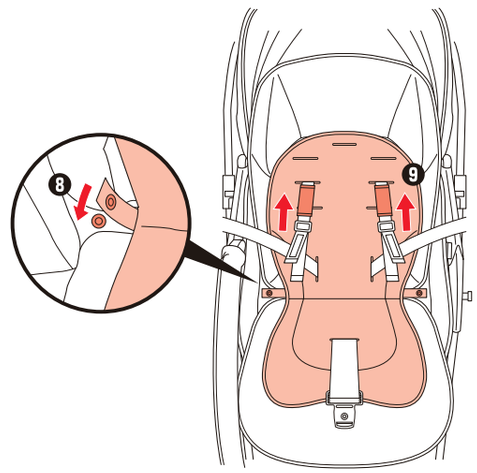


❽Lock the buckles (left and right) of the Ventilated shock absorber pad.
❾Cover with the shoulder belt protector.

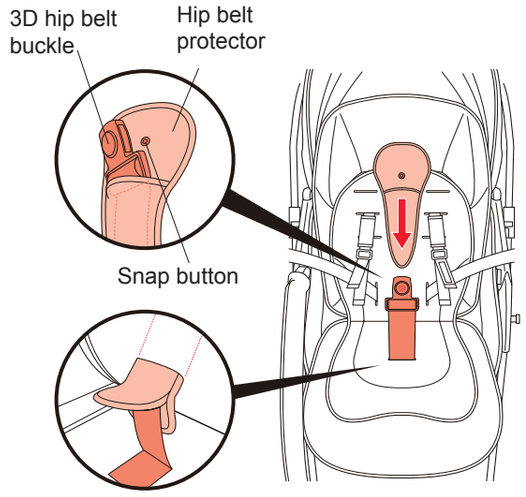


〈The inner side of the seat〉

❿Install hip belt protector, lock the buckle, and put the front end of the hip belt protector through the inner side of the seat.

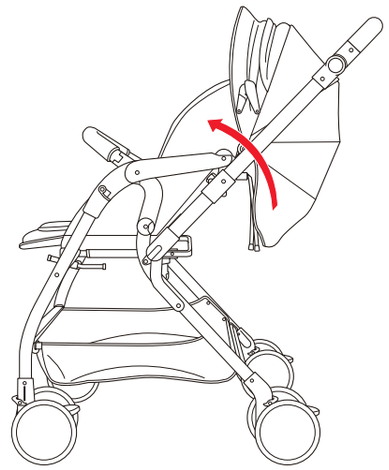

❿Pull up the seat backrest.

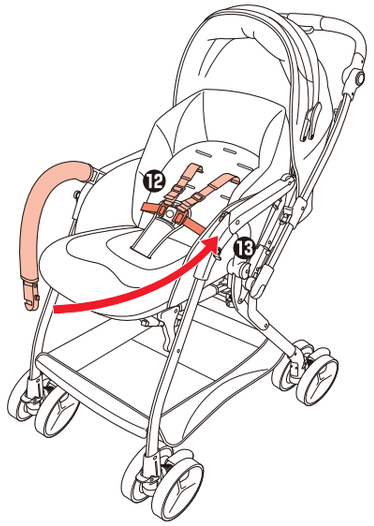

⓬Insert the shoulder belt and waist belt into 3D hip belt buckle.
⓭Install the push-button open handle.

Maintenance of sewing parts

Cleaning method for sewing parts

〈Cleaning method for sewn seat products, handle protector, shoulder belt protector, hip belt protector, preventing respiratory tract block protection cushion and Waist and buttocks protection pad〉

・Please note the following laundering & cleaning symbols.



※Do not wring or twist.

〈Cleaning the ventilated shock absorber pad〉

・Please note the following laundering & cleaning symbols.



※Do not wring or twist when using in laundry bag.

※Water temperature of under 40 degree is recommended.
Also, use low speed water flow to clean it.

Caution

・If drying the sewing outdoor, please place it flat on a shady area to dry it.
・Please do not use alkaline detergent, acidic detergent or bleach containing chlorine.

〈Cleaning method for the shade, shoulder belt, waist belt, CTS storage pouch and storage basket〉

・Please do not put the entire component into the laundry machine. Please clean it according to the instructions below.

- Situation for water soluble smudges (such as juice, saliva, or urine): Please use a soft wet cloth, submerged in 40 degrees warm water and dried out slightly, to wipe out the smudge. Use a dry towel to wipe it out, and then put it in a shady place to dry naturally.
- Situation for non-water-soluble smudges (such as milk, fat, or salad dressing): Please add neutral detergent into 40 degree warm water, and then use brush or sponge to clean the smudge. Use cold or warm water to wash out the neutral detergent, use a dry towel to wipe water, and then place it in shady area to dry naturally.

Caution

・If any damage or abnormal situation is discovered on sewing, please stop using it and contact our maintenance center for help

Maintenance of the stroller frame

〈Maintenance of the frame and wheel〉

・Please do not ignore the mud or dirt attached to the wheel. Wipe it out and clean it up with a wet towel.

Caution

・Breakdowns will occur often when mud or dirt is attached to the frame or wheel, so please stop using the stroller in this situation.
・Please do not use volatile solvents such as diluents or essential oil to clean mud or dirt.

・The tire is consumable, so when the tire approaches a thickness of 5 mm, please contact our maintenance center to replace it (at your cost).

〈Maintenance of the screw and screw cap〉

・Please check if the screw or screw cap if loose routinely. Please screw it tight when they get loose.


〈Maintenance of the safety bar〉

・Please wipe off dirt in the joint of the safety bar and the stroller with a dry towel.

〈Add lubricating oil〉


・Please occasionally add lubricating oil used for plastic products onto the movable joint.
・Please remove mud or dirt and wipe out any water before adding lubricating oil.
・Please add about 2~3 drops in every component.

●If any problem occurs while folding or unfolding the stroller, such as being unable to turn the turning fixer smoothly, or hearing noises on the wheel and main frame, please add lubricating oil used for plastic products on the places shown with ⇨ arrow, and repeat the folding/ unfolding action 2 to 3 times.

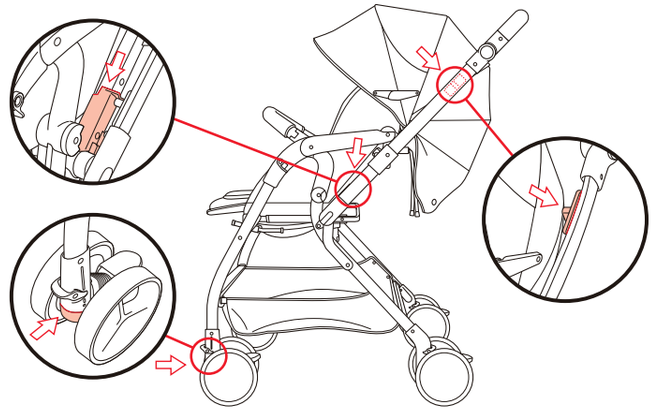

Caution

・Please do not use lubricating oil in the joint and neighborhood of button-type open handle and stroller frame to avoid unlocking the button-type open handle and cause the baby fall down.

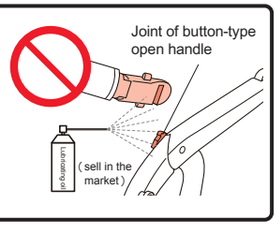

Troubleshooting

・If the following method still does not resolve the problem, please contact our maintenance center.

〈Encounter problem in use〉

Problem	Troubleshooting
Cannot operate handle control button	Please release the safety control lock and then do it again. (See P7)
Wheel is not turning	Please unlock the manual wheel lock on both sides (See P12).
Wheel does not turn smoothly.	Please add lubricating oil to the wheel (See P30).
Wheel brake does not work	Please check if any rubble gets stuck in the wheel brake.
Handle cannot be switched.	Make sure the switch lock moves to the bottom completely when the stroller is unfolded (See P8). Please release the left and right safety control lock on the handle before switching it (See P9).
Backrest cannot be pulled up.	Please take the baby out of stroller first, and then pull the stepless lay-flat angle adjusting belt (See P18)
Shoulder belt can not be inserted into waist belt	Please make sure the clothes and seatbelt are not caught.
Cannot unfold stroller.	Please complete the procedure before folding, and then do the folding again (See P21). Please make sure the seatbelt is not caught by switch lock.
When the tire is worn.	Replace the tire when the thickness of tire is less than 5 mm. Please contact our maintenance center.

〈For used product〉

Problem	Troubleshooting
Do not understand how previous user was using it.	Do not recommend the use of any product with unclear using condition.
The stroller shows cracks or serious damage.	Please do not use it.

Maintenance

・Please place the framework inside a plastic bag and store in a cool place without direct sunlight.
・Please do not place heavy objects on top of this product during storage. Overload may cause malfunction or deformation.

Caution

・To avoid the distortion of the shade, please do not put stroller by its side or place heavy material on the stroller. Also, keep the stroller from high temperature areas when stored.
・Please do not place the stroller near a source of ignition. Please do not put the stroller inside the car on a hot day, since the plastic component may deform and would not fulfill its function.

Disposal guide

・Please dispose this product according to local regulations.
・Please do no dispose arbitrarily for environmental awareness.

MEMO

保證書

〈僅限台灣地區使用〉

保固規定

1) 消費者請於購買時要求經銷商在本保證書上蓋章，並填上銷售日期。
2) 本公司產品之保固期間為自購買日起一年間。
3) 產品在保固期間內需要維修服務時，請出示本保證書。
4) 產品維修前，未出示本產品保證書或保證書尚未蓋店章、未填寫銷售日期時，即使於一年內購買，亦無法享有一年保固之免費修繕服務。
5) 於品質保證期間內，由於零件短少、加工不良等製造商所引起之原因，由進口商提供免費修繕服務（含運費）。若為消費者之責任，則計費維修。
6) 免費修繕服務不包含以下項目。
   ◎非歸責於製造商責任之任何損壞與故障。
   ◎坐墊、遮陽篷等刮傷。
   ◎使用者任意變更所引起。
   ◎由自然災害或事故等原因所引起。
   ◎框架自然劣化（塗料部分需時常保養）。
   ◎錯誤的使用方法或保養不良所致。
   ◎輪胎、車輪的自然消耗。

使用時，如發生故障或強烈撞擊、不慎掉落等情況，及發現有零件需要更換時，台灣地區請向本公司維修中心聯絡，海外地區請洽當地代理商聯絡，我們竭誠為您服務。

產品	Optia オプティア	型號	
		購買日期	年　月　日
顧客資料	姓名 地址 電話 E-mail	經銷商 確認章	（請務必蓋章或將保固貼紙貼於此處，保證方為有效）

○請確認購買時之經銷商店名稱，填寫型號、購買日期。
○本保證書不另行補發，因此請小心保管，避免遺失。
○本保證書填寫之個人資料，僅使用於產品保固及修理事宜。