## ——保證書——

〈僅限台灣地區使用〉

### 保固規定

1) 消費者請於購買時要求經銷商在本保證書上蓋章，並填上銷售日期。
2) 本公司產品之保固期間為自購買日起一年間。
3) 產品在保固期間內需要維修服務時，請出示本保證書。
4) 產品維修前，未出示本產品保證書或保證書尚未蓋店章、未填寫銷售日期時，即使於一年內購買，亦無法享有一年保固之免費修繕服務。
5) 於品質保證期間內，由於零件短少、加工不良等製造商所引起之原因，由製造商提供免費修繕服務（含運費）。若為消費者之責任，則計費維修。
6) 免費修繕服務不包含以下項目。
   ◎非歸責於製造商責任之任何損壞與故障。
   ◎坐墊、遮陽篷等刮傷。
   ◎使用者任意變更所引起。
   ◎由自然災害或事故等原因所引起。
   ◎框架自然劣化（塗料部分需時常保養）。
   ◎錯誤的使用方法或保養不良所致。
   ◎輪胎、車輪的自然消耗。

使用時，如發生故障或強烈撞擊、不慎掉落等情況，及發現有零件需要更換時，台灣國內請向公司維修中心聯絡，海外地區請洽當地代理商聯絡，我們竭誠為您服務。

| | | | |
|---|---|---|---|
| 產品 | SMOOOVE | 型號 | |
| | | 購買日期 | 年　月　日 |
| 顧客資料 | 姓名<br>地址<br><br><br>電話<br>E-mail | 經銷商<br>確認章 | （請務必蓋章，保證方為有效） |

○請確認購買時之經銷商店名稱，填寫型號、購買日期。
○本保證書不另行補發，因此請小心保管，避免遺失。
○本保證書填寫之個人資料，僅使用於產品保固及修理事宜。


總公司
アップリカ·チルドレンズプロダクツ合同会社
本社/大阪店 — 〒542-0082大阪市中央区島之内1-13-13 TEL0120-415-814
Aprica Children's Products G.K.
1-13-13, Shimanouchi, Chuo-Ku, Osaka, Japan

進口商
台灣愛普力卡股份有限公司
總公司營業部 地址：新竹縣竹北市台元街28號5樓之3
電話：(03)5525688　傳真：(03)5525690
維修服務中心 地址：新竹縣竹北市福興路885號
電話：(03)6561261　傳真：(03)6561267
公司網址：http://www.aprica.com.tw
意見信箱：0800@aprica.com.tw　統一編號：22662003


NWL00507150A

Aprica

# SMOOOVE


スムーヴ

## 使用說明書／保證書

**非常感謝您購買此產品。**
**此產品適用於出生後1個月～36個月，體重15公斤以下的嬰幼兒。**

**※本說明書所敘述的出生後一個月，指的是母親懷孕37周以上，出生時體重超過2.5公斤以上，出生超過1個月的嬰幼兒。**

**使用前請詳細閱讀本說明書並正確地使用。請勿使用本說明書內容以外的方法操作本產品。不僅無法充分發揮本產品的功能也十分的危險。**
**使用後請妥善保存此書。**

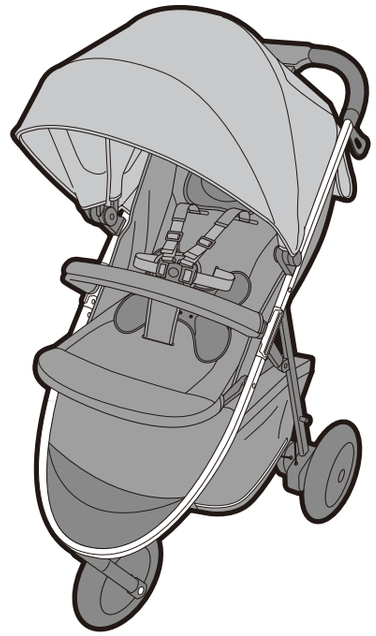

R41118

SG安全基準A形

## 目　錄


### 使用前

使用前的注意事項 ・・・・・・・・・・・・ 1
　給保護者的建議／SG基準／本說明書的標示
使用上請注意 ・・・・・・・・・・・・ 2～4
　警告／注意
製品取出時 ・・・・・・・・・・・・・・・ 5
　製品特徵
各部位名稱 ・・・・・・・・・・・・・・・ 6

### 嬰幼兒手推車的使用方法

嬰幼兒手推車的開啟方法 ・・・・・・・・・ 7
車輪煞車器的使用方法 ・・・・・・・・・・ 8
手把煞車的使用方法 ・・・・・・・・・・・ 8
按鈕式開放型扶手的開啟方法 ・・・・・・・ 9
雙腳支撐架的使用方法 ・・・・・・・・・・ 9
守護墊的安裝方法 ・・・・・・・・・・・・ 10
讓嬰幼兒乘坐手推車的方法 ・・・・・・・・ 11
安全肩帶的高度調節方法 ・・・・・・・・・ 13
無段式平躺角度調整器的使用方法 ・・・・・ 14
遮陽篷的遮陽篷的使用方法 ・・・・・・・・ 15
置物網籃的使用方式 ・・・・・・・・・・・ 16
嬰幼兒手推車的收折方法 ・・・・・・・・・ 17

### 縫製品的保養方法

坐席的拆卸方法 ・・・・・・・・・・・・・ 19
扶手保護套的拆卸方法 ・・・・・・・・・・ 20
坐席的安裝方法 ・・・・・・・・・・・・・ 21

### 日常簡易保養

使用選購品時的收折方法 ・・・・・・・・・ 22
日常保養 ・・・・・・・・・・・・・・・・・ 23
　縫製品的清洗方法 ・・・・・・・・・・・・ 23
　車體的保養 ・・・・・・・・・・・・・・・ 23
　車輪的保養 ・・・・・・・・・・・・・・・ 25
覺得故障嗎？送修前先確認 ・・・・・・・・ 27
保管方法／廢棄方法 ・・・・・・・・・・・ 28
品質保證 ・・・・・・・・・・・・・・・・・ 29
保證書 ・・・・・・・・・・・・・・・・・・ 封底

# 使用前的注意事項

## 給保護者的建議

嬰幼兒並非成人的縮小版。
特別是頸部尚未發育完全的寶寶更是如此。

請充分了解嬰幼兒的情況，並小心使用嬰幼兒手推車。
①請隨時注意嬰幼兒的情況，並避免連續使用。
②請避免讓嬰幼兒直接照射到陽光。
　為嬰幼兒手推車內的溫度，比大人的感覺來得高。
③請避開人群多的地方，以避免噪音、粉塵。
④經過不平整的路面，請盡可能放慢速度，並且請避開引起震動、衝擊的路段。
⑤本說明書所使用的插圖、組裝等，為求簡單明瞭，並非與實品完全相同。請以實際物品為主。

## SG基準

○有顯示SG標章的手推車，表示有按照日本製品安全協會的規定，達到以下各項基準。
（此製品為SG基準Ａ車合格品。）

| | | |
|---|---|---|
| 適用範圍 | 此嬰幼兒手推車限寶寶一人乘坐，提供戶外、購物等一般家庭親子移動上的使用。 | |
| 車種的形式 | **A車** | 出生後一個月＊　頸椎尚未發育完成的嬰幼兒，採取平躺姿勢使用的嬰幼兒手推車。 |
| 適用年齡 | 出生後1個月至36個月以內 | |
| 建議連續使用時間 | 平躺姿勢：2小時以內　　坐立姿勢：1小時以內 | |
| 平躺角度 | 150˚以上 | |
| 車輪外徑 | 115mm以上 | |

＊此處所稱出生後1個月，是指懷孕週數37週以上，且出生時之體重滿2.5kg以上，出生後1個月之嬰幼兒。

## 關於本書的標識

○「警告」、「注意」、「禁止」等符號是預測您未遵守注意事項的情況下，依據危害、損害的嚴重性來作區分。標示所表示的內容十分重要，請您務必遵守。

| 標示 | 標示之內容 |
|---|---|
| ⚠警告 | 使用方法錯誤時，可能會造成人員死亡或重傷等情形。 |
| ⚠注意 | 使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。 |

| 禁止 | 標示之意義 |
|---|---|
| ⃠ | 請勿操作本說明書所禁止的行為。 |

| | |
|---|---|
| 建議 | 使用產品時的便利小建議。 |




# 使用上請注意

**○為避免意外事故發生，使用前請務必詳閱使用說明書，並且正確地使用。**

**⚠警告**　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐寶寶有不慎掉落的危險。


請務必將安全肩帶、安全腰帶以及立體式股帶繫好再使用。

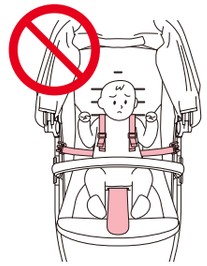

請勿讓寶寶站立於嬰幼兒手推車上。



嬰幼兒手推車收折的狀態下，可能導致嬰幼兒跌落或有夾傷之虞。

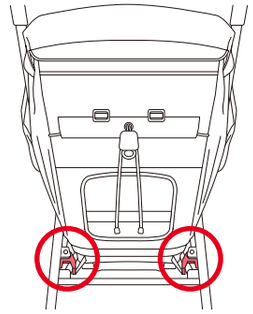

〈開關鎖扣鎖住狀態〉



〈開關鎖扣未鎖住狀態〉



- 使用前，請將手把部分上下移動2～3次，確認車體已完全展開。
- 確認開關鎖扣已固定。（左右）

腰部安全帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。

請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。



因恐失去平衡、看不到路面情況，而有導致摔倒之虞。

當寶寶乘坐時，請勿直接將嬰幼兒手推車提起懸空。



〈接下一頁〉

## ⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

**在坡道等場所，嬰幼兒手推車可能因隨意滑行而有翻覆之虞。**

嬰幼兒乘坐時或要抱起時，務必鎖住車輪煞車器，並確認嬰幼兒手推車無移動狀況。



當嬰幼兒乘坐或放置物品時，請勿過度倚賴車輪煞車器。車輪煞車器受路面狀態、結構機能與耐久度等因素影響，並非絕對不會移動。



嬰幼兒乘坐狀態下，嬰幼兒手推車絕不離手。



**因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。**

請勿讓兩名寶寶同時乘坐或搭乘於坐墊以外的地方。



當寶寶乘坐時，請勿在置物籃以外的地方放置物品，勿在手把懸吊物品。此外，請勿倚靠在手把上。




請勿在樓梯、手扶梯等有高低落差的地方使用。



**因恐寶寶有被安全帶纏繞導致窒息的危險。**

安全肩帶及安全腰帶請務必一起使用，並調整到適合寶寶體型的位置。

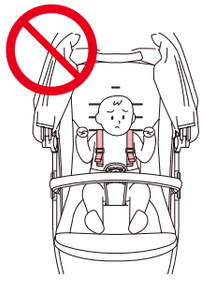

**嬰幼兒手推車因恐受到路面影響使得車內的溫度變高，導致寶寶身體受到傷害的危險。**

高溫或日照強烈時，請勿長時間使用。





## ⚠警告　使用方法錯誤時，可能會造成人員死亡或重傷等情形。

**各可動關節部位因恐有夾傷寶寶手腳、車體撞擊寶寶或使用者本人等情況發生。**

當您折疊收納嬰幼兒手推車時，請勿讓寶寶靠近。



**因恐導致嬰幼兒手推車破損、受傷、意外事故等發生。**

當使用嬰幼兒手推車時，請勿過度施力。



**因恐導致嬰幼兒手推車破損，使得寶寶或使用者受傷之虞。**

○請勿讓兒童操作嬰幼兒手推車。
○當寶寶乘坐時，請務必讓寶寶的股間對準立體式股帶的位置。否則因恐使得嬰幼兒手推車往後翻覆之虞。
○本公司維修人員外，請勿自行分解、安裝或改造。
○請勿在座椅縫製品拆下的狀態下使用本產品。
○請勿在猛力撞擊或掉落後使用。
○請勿當成兒童玩具使用。
○請勿將本車用於寶寶乘坐之外的任何用途上。

## ⚠注意　使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。


○請務必定期檢查與保養。
○使用前，請先確認嬰幼兒手推車主體與座椅縫製品已正確安裝完成。
○請適時替可動關節部位上油，並務必使用塑膠製品用的潤滑油。
○長時間未使用的嬰幼兒手推車時，請務必進行檢查或保養後再使用。
○即使是空車，也請勿將嬰幼兒手推車放置於斜坡上或鄰近車道的人行道等危險場所。
○請勿在螺絲或螺帽鬆動的狀態下使用。
○請勿將兩輛手推車併在一起使用。
○請勿將前輪呈高舉狀態行走。因恐造成後部框架彎曲變形或斷裂。
○當寶寶乘坐於嬰幼兒手推車並且在行進中時，為了寶寶的安全，請以一般的步行速度行進（時速約4公里左右的速度）。
○請勿將嬰幼兒手推車推至沙地或泥濘處。
（關節轉折處易因沙粒進入導致開關收納困難。）
○框架處沾染沙粒或泥土時請勿置之不理。
（關節滑動處易因沙粒進入導致開關收納困難。）
○嬰幼兒手推車是為了讓寶寶乘坐。為了避免造成損壞，請勿加裝任何市售零件。
○請勿在置物籃放入重量5kg以上的物品。
○家長、照護者請勿倚靠在嬰幼兒手推車上。
○請勿用來搬運物品等。
○本產品僅限於嬰幼兒乘坐。
○請勿做出其他可能導致嬰幼兒手推車故障之行為。
○請勿在公車上使用。
本產品之設計，並非以公車上使用為目的。若在公車上使用本產品，因恐轉彎、緊急煞車等原因，而有發生翻覆或意外事故之虞。
○電車上使用的注意事項。
本產品之設計，並非以電車上使用為目的。於電車中使用本產品，恐因轉彎或緊急煞車等情況而有翻覆之虞，因此請務必使用煞車器，並盡充分之注意，若發生意外，責任由使用者自行承擔。
○在電車等場所使用時，請勿強行上下車，嬰幼兒手推車可能未被感應到，造成被電車的自動門夾住，因恐造成寶寶受傷之虞。
○請勿在積雪處或是結霜的路面上使用。
○風勢強勁時，請勿使用。
○打雷時，請勿使用。
○由於易導致嬰幼兒手推車車內溫度變高，故請勿在室內、靠近火源處或高溫場所等地方使用遮雨罩。
○遇高低差不易推過時，請以腳底抵住連結後輪的連結桿，手把朝自己下壓後推過。
○由於易造成塑膠部分變形而無法維持其原有功能，故請勿放置靠近火源處或炎夏高溫車內。

## 製品取出時

○製品取出時，請務必進行各部位檢查工作。
○部品有缺少、弄錯或者破損時，請與經銷商或者總公司連絡。（請參閱封底「產品保證書」）

### 主 體

○從箱子裡取出時，本產品為折疊狀態。使用前請務必裝上按鈕式開放型扶手。
○嬰幼兒手推車的組裝方法請參閱P7。
○組裝時不需要使用其他器具或工具。
○按鈕式開放型扶手從箱子裡取出時，為收納在置物網籃中。取出按鈕式開放型扶手時，請注意不要拉開置物網籃下部的魔鬼氈。

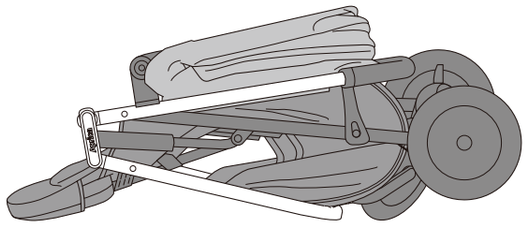

### 附屬品



按鈕式開放型扶手
（從箱子裡取出時，收納在置物網籃內）



預防呼吸道閉塞型保護頭墊
（安裝在本體上。）



腰部•臀部守護墊



使用說明書

**⚠警告**


○產品放置的箱子、捆包材料、塑膠袋請勿放置在嬰幼兒伸手可及之處。
否則嬰幼兒可能因此被罩覆住而有窒息之虞。

### 〈製品特徵〉

○手把為背面固定式。
○前後收折方式。
○車體在折疊狀態可自行站立。
○框架使用的是輕量鋁管。



## 各部位名稱

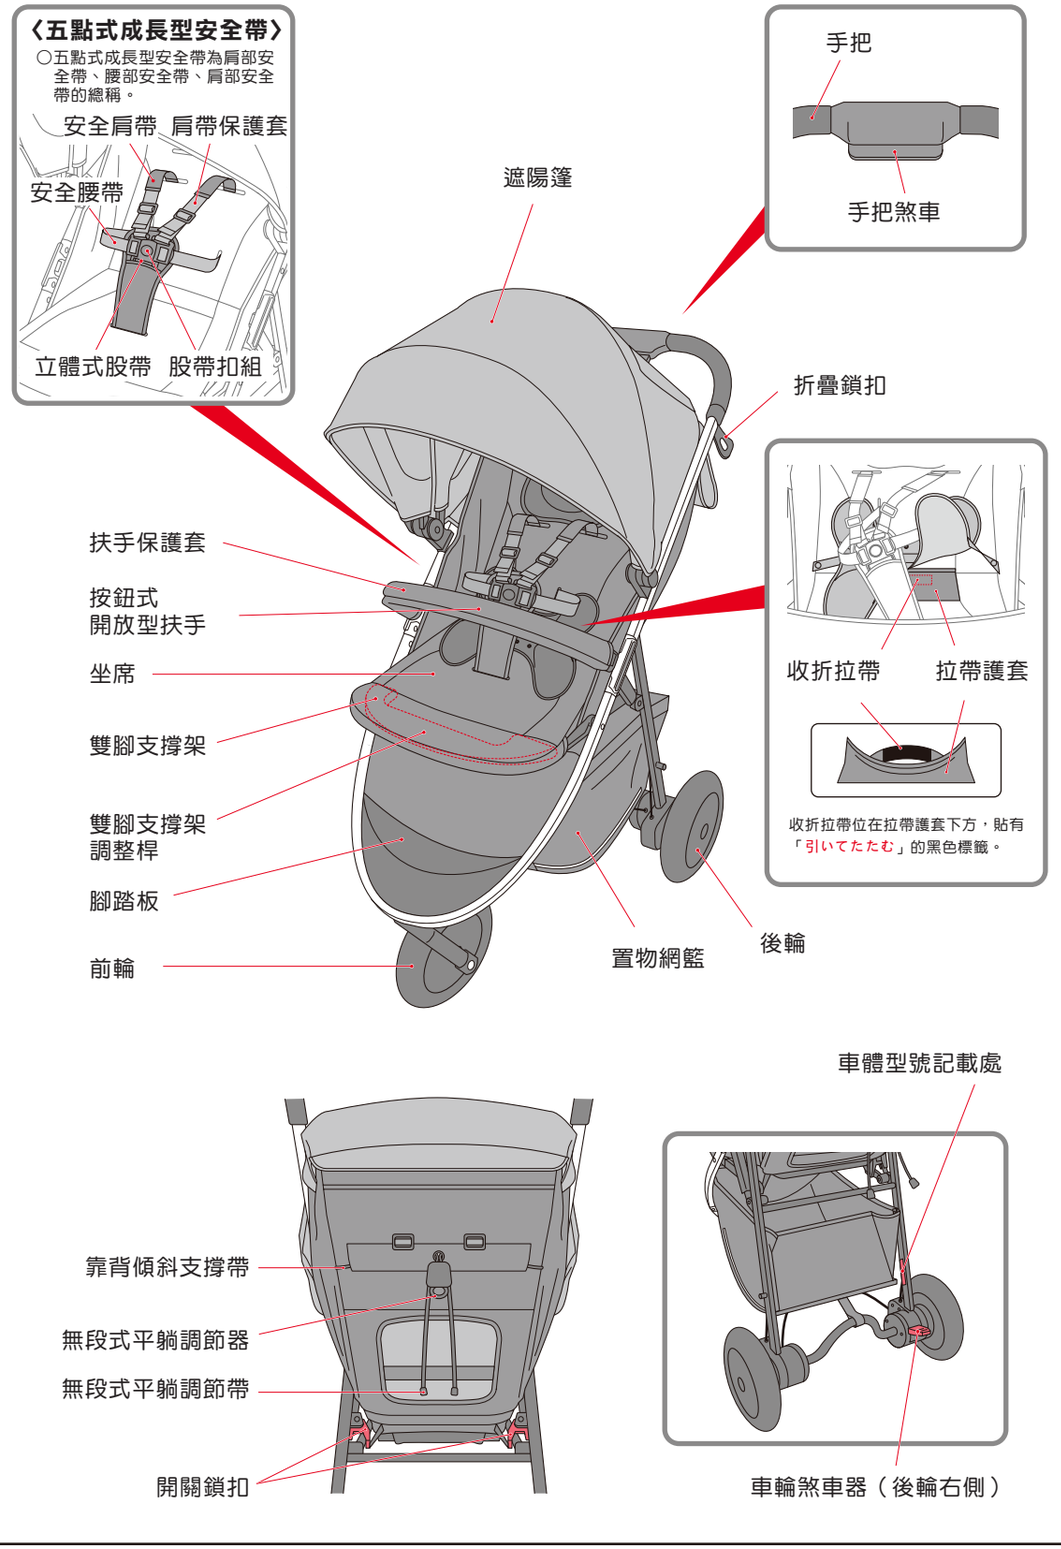

## 嬰幼兒手推車的開啓方法

**警告**


○組裝或開闔操作請務必由大人操作，嬰幼兒可接觸狀態下或在身旁時，請勿操作。
否則可動部位可能夾傷嬰幼兒手指或手腳、或遭嬰幼兒手推車撞傷身體。
○請勿讓嬰幼兒操作嬰幼兒手推車。否則可能因此發生翻覆事故或導致受傷之虞。

**警告**


○使用前請務必確認輪胎氣壓，氣壓過低時，請適度地充氣。

**小叮嚀** ・因捆包裝箱的關係，初次使用可能無法順利開啟的情況發生。請重複操作2～3次後再進行開啟。


### 〈組裝及開啓方式〉

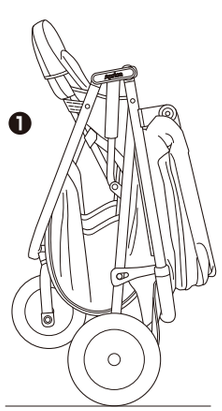



❶立起車體。

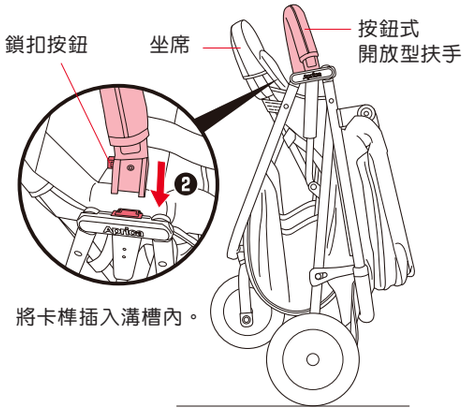



❷將按鈕式開放型扶手扣入車體。
○按鈕式開放型扶手的鎖扣按鈕朝座位側邊插入。

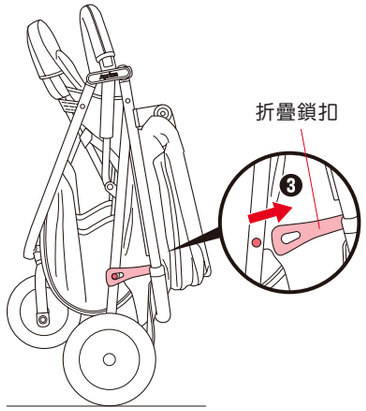


❸解開折疊鎖扣。

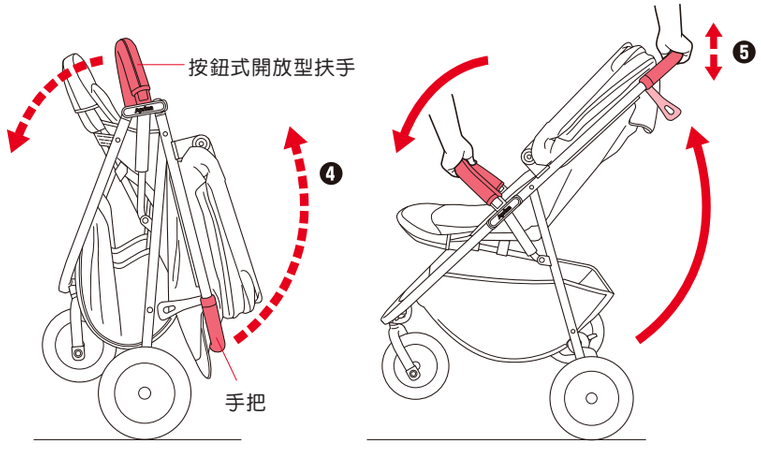


❹握住並打開手把與按鈕式開放型扶手。
❺使用前，請將手把部分上下晃動2~3次，確認車體已完全展開。

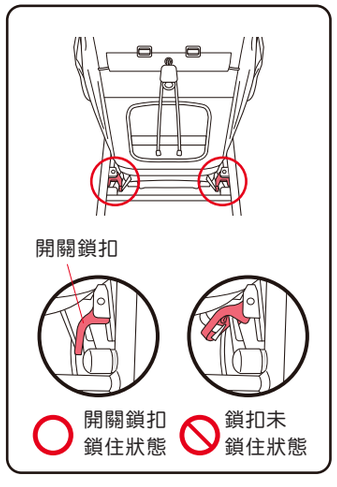


・確認開關鎖扣已固定。（左右）





## 車輪煞車器的使用方法

**警告**


○當寶寶乘坐時或離座時，務必鎖住車輪煞車器。
○當寶寶乘坐在手推車上時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對停住嬰幼兒手推車。
○即使鎖上車輪煞車器，當寶寶乘坐在手推車上時，仍然請勿離開寶寶的身邊。

**注意**

○即使寶寶未乘坐在手推車上，當要離開嬰幼兒手推車時，仍然請將左右車輪煞車器都鎖上。


・扳下後輪右側的車輪煞車器，就能鎖住左右兩邊的後輪。

### 〈解除〉

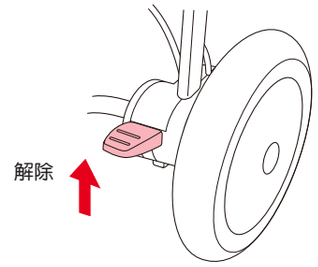


●將車輪煞車器往上扳，解除鎖定狀態。

### 〈鎖定〉

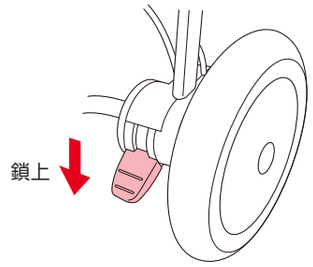



❶扳下車輪的煞車器即可鎖定。
❷前後移動一下，確認車輪煞車器已鎖定。

## 手把煞車的使用方法

**警告**

○使用手把煞車器時，請以雙手握住中心部。只握住單側的手把煞車器時，會僅煞住單邊，可能導致失衡而有翻覆之虞。
○推行中緊急煞車會有發生翻覆等事故之虞，敬請注意。
○嬰幼兒手推車長時間停止時，或者在號誌或平交道等處停止時，請勿僅握住手把煞車器，應確實扳下車輪煞車器使其停止。

・握住手把煞車器時，就會煞住左右雙邊的後輪。

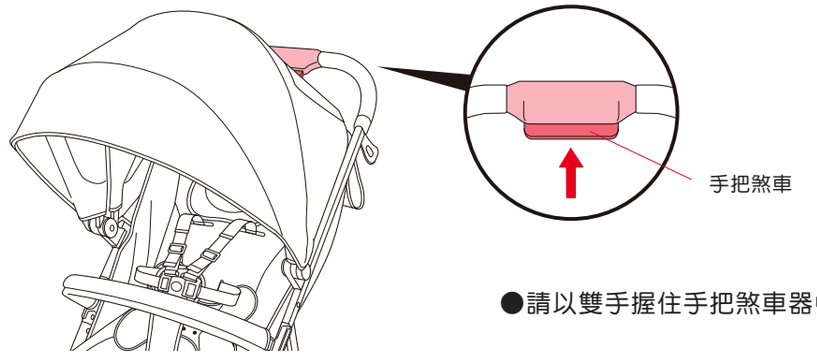



●請以雙手握住手把煞車器中心部。

## 按鈕式開放型扶手的開啓方法


**警告**

○請勿在開啟的狀態下，把玩按鈕式開放型扶手。因恐嬰幼兒碰撞到按鈕式開放型扶手而有受傷之虞。

・按鈕式開放型扶手左右皆可開啟。

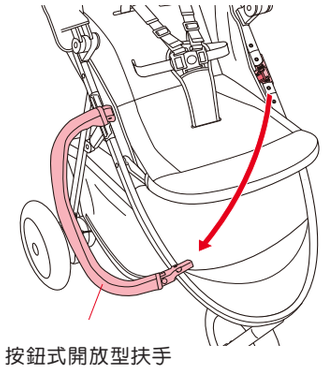

按鈕式開放型扶手

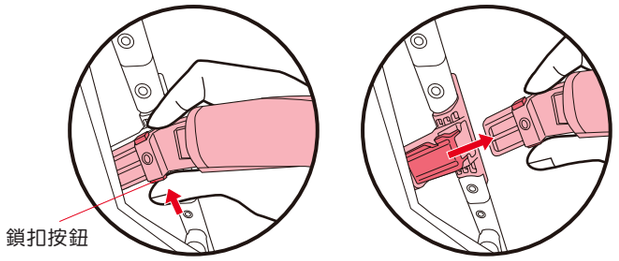



・按壓下方的鎖扣按鈕，將按鈕式開放型扶手往前拔出。


## 雙腳支撐架的使用方法

・當座椅角度在平躺狀態時，請使用雙腳支撐架。

**〈不使用雙腳支撐架時〉**

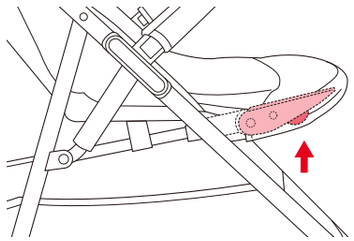


❶握住坐席內部的雙腳支撐架（左右）

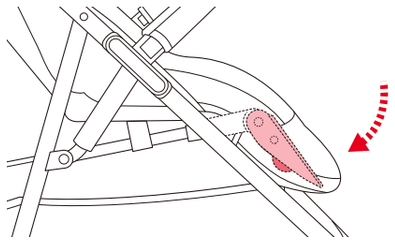


❷取下雙腳支撐架。

**〈使用雙腳支撐架時〉**

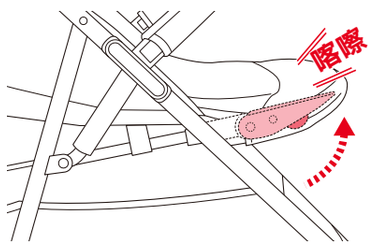


❶拿穩坐席前端，向上翻起雙腳支撐架。

**〈內部的雙腳支撐架位置〉**

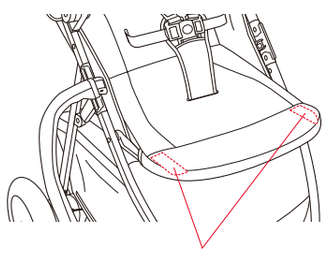





## 守護墊類的安裝方法

○守護墊類在嬰幼兒手推車內，用來輔助寶寶維持適當正確的姿勢。

### 預防呼吸道閉塞型保護頭墊　頸部開始安定之際，請務必使用。（約四個月左右）

○安裝預防呼吸道閉塞型保護頭墊時 ，請務必將安全肩帶安裝於下段肩帶導孔。
最高月齡使用至7個月為止。（請參閱P13「安全肩帶高度的調整方法」）

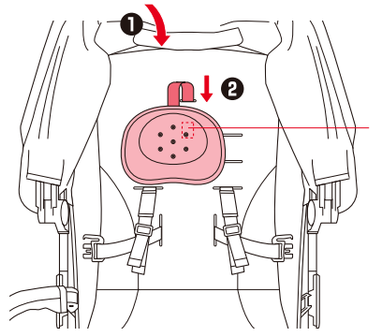



❶保護頭墊適用於平躺狀態下使用。(請參閱P14)
❷將保護頭墊上的魔鬼氈白色布片取下，依照箭頭的方向，把魔鬼氈固定帶穿過頭墊安裝孔，黏在坐席裏側的魔鬼氈上。

**建議**

○頭墊不易安裝時，可拆下坐席的上半部，在可看到座椅裏側的情況下來安裝。（請參閱P19「坐席的拆卸方法」）

**〈預防呼吸道閉塞型保護頭墊的安裝位置〉**

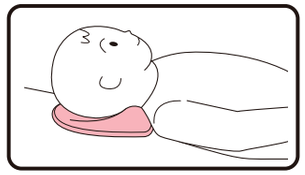


●安裝時，請讓頭墊下端的鼓起部分在寶寶的頸後。
※當鼓起部分不適合寶寶的頸後時，請立即拆除。

**注意**

○安全肩帶穿在中段、上段的肩帶導孔時，無法使用預防呼吸道閉塞型保護頭墊。

### 腰部・臀部守護墊 （1個月～3歲左右的寶寶可使用。）

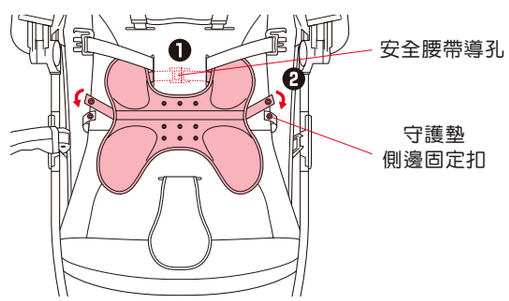


❶將上方的安全帶扣組穿過坐席的安全腰帶導孔並扣上固定。
❷將腰部守護墊側邊的固定扣，扣在側邊的固定扣上。（左右）


○依寶寶體格的不同，即使是3歲以下的寶寶，仍有可能已經不適用腰部守護墊。當不適用時，請將腰部守護墊拆下。

・拆除守護墊類配件時，請以反向步驟操作。



嬰幼兒手推車的使用方法

## 1 準 備

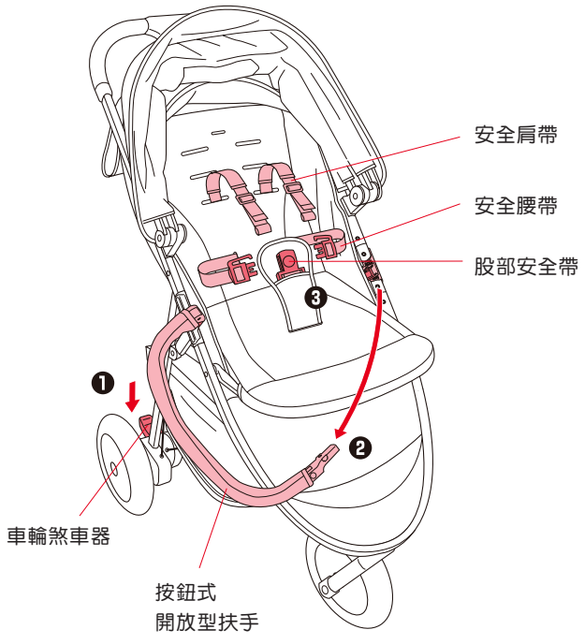


❶鎖上車輪煞車器。（請參閱P8）
❷打開按鈕式開放型扶手。（請參閱P9）
○按開下側的鎖扣按鈕。
（按鈕式開放型扶手左右均可開啟。）
❸解開安全肩帶、安全腰帶。

○按下立體式股帶的固定扣，解開安全腰帶、安全肩帶。

○安全肩帶自肩帶固定勾環取出。

○需要改變安全肩帶的位置時，請參閱P13「安全肩帶高度的調整方法」。


○需要改變座椅的角度時，請參閱P14「無段式平躺調節器的使用方法」。


**警告**

○請勿在開啟的狀態下，把玩按鈕式開放型扶手。否則可能因為嬰幼兒碰撞到按鈕式開放型扶手而有受傷之虞。

## 2 乘坐方法

### 〈寶寶乘坐之後，務必繫上安全帶〉

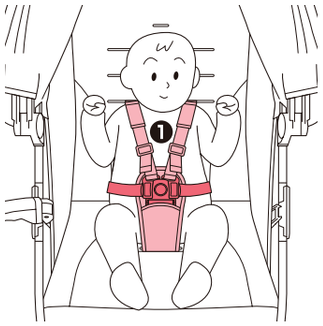

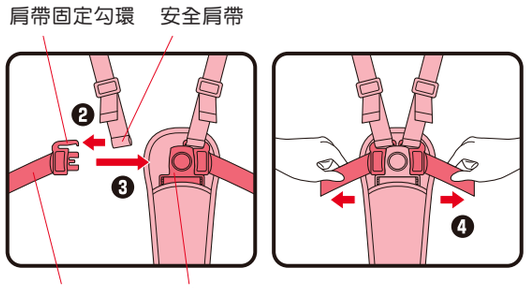


❶先讓寶寶乘坐於嬰幼兒手推車上。
❷將安全肩帶扣入肩帶固定勾環。
❸將安全腰帶扣入固定扣組。
❹將安全腰帶往兩側拉，調節至適合寶寶的寬鬆度。
※請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。

**建議**

○安裝安全肩帶時，警告標籤應朝向外側。
○請確認安全肩帶沒有扭結的情況。

**警告**

○繫上安全帶後，請確認左右兩側的安全腰帶有調節至適合寶寶的寬鬆度。

○使用時，務必將安全肩帶扣在肩帶固定勾環上。因恐安全肩帶可能會纏繞在寶寶頸部。


○請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。

安全腰帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。


○寶寶乘坐時，應該讓寶寶的股間對準立體式股帶的位置。否則嬰幼兒手推車有可能會往後方翻覆。

### 〈安全腰帶的調整〉


〈拉緊〉

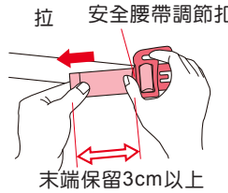


〈放鬆〉

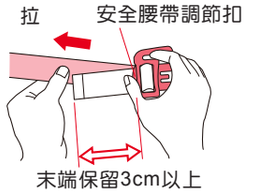



●輕押安全腰帶調節扣，拉安全腰帶做調整。

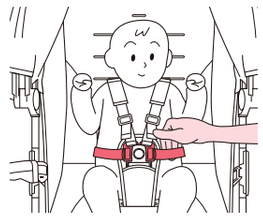


○安全腰帶的長度，以安全腰帶與寶寶之間可容納成人4隻手指頭的寬鬆度為適當。

### 〈安全肩帶的調整〉


〈拉緊〉

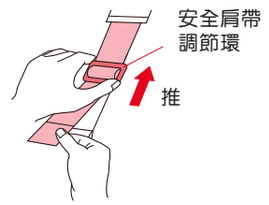


〈放鬆〉

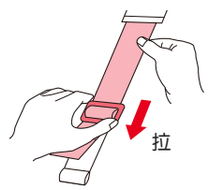



●移動安全肩帶調節環做調整。

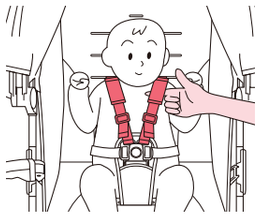


○安全肩帶的長度，以安全肩帶與寶寶之間可容納成人1隻手指頭的寬鬆度為適當。

### 〈立體式股帶的調整〉

〈拉緊〉

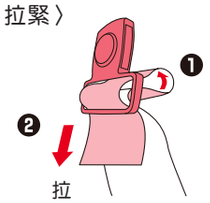


〈放鬆〉

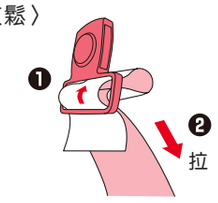




❶立體式股帶取出。
❷股帶拉出，調整長度。
○調整之後，請務必確認固定扣組與股帶保護套之間的固定扣已經扣上。（請參閱P22）

**警告**

○請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。
安全肩帶、安全腰帶、立體式股帶過鬆時，即使繫上安全帶，寶寶仍然可能站起來，而使寶寶有摔落之虞。
○關閉開放型扶手時，請注意避免夾到寶寶的手指。
○關閉開放型扶手後，請拉拉看，以確認開放型扶手已確實鎖上。
○當寶寶乘坐在手推車上時，請勿舉起開放型扶手。
○安全腰帶的尾端（插圖中⟺的部分），務必保留3cm以上。
○調整座椅靠背的角度時，應一併調整安全肩帶、安全腰帶、立體式股帶的長度。


### 〈關閉按鈕式開放型扶手〉

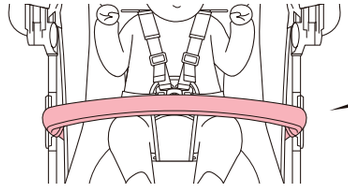

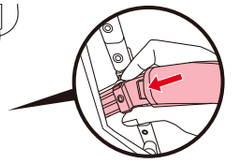

扣入按鈕式開放型扶手

### 〈解除車輪煞車器〉

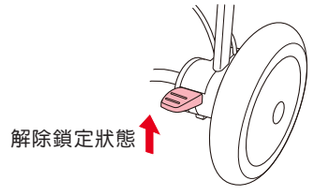


## 安全肩帶的高度調節方法

**警告**

○請依寶寶的成長情況，調整安全肩帶的高度。
○安全肩帶調整後，請拉提2～3次，確認安全肩帶不會鬆脫。若安全肩帶鬆脫，可能會導致嬰幼兒跌落。


### 〈安全肩帶的位置〉

○製品從包裝箱取出時，安全肩帶位置設定於下段。

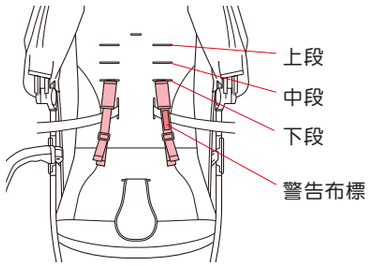


### 〈安全肩帶的使用標準〉

○穿過肩膀位置下段的安全肩帶導孔。

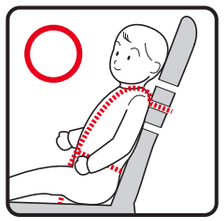

○安全肩帶的位置，請依以下3段標準進行調整。

| 月齡（體格）的標準 | 安全肩帶導孔的位置 |
|---|---|
| 18個月～36個月 | 上　段 |
| 7個月～18個月 | 中　段 |
| 1個月～7個月 | 下　段 |


請依個別差異對照上述表示的標準進行調整。


**建議**


○安裝安全肩帶時，警告布標應朝向外側。
○請確認安全肩帶沒有扭結的情況。

### 〈安全肩帶的高度調整方法〉

○將安全肩帶、安全腰帶，從安全股帶扣組上解開。（請參閱P11「準備❸」）
○解開靠背側邊的固定扣，掀開坐席。（請參閱P19）

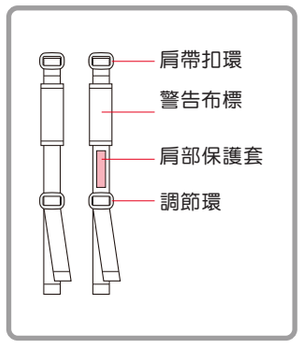


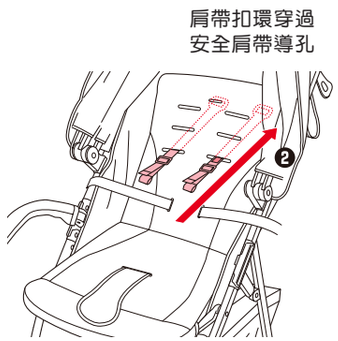

❶將安全肩帶扣環轉換與肩帶平行的方向。
❷將安全肩帶環穿過坐席導孔以及背板導孔。(左右)
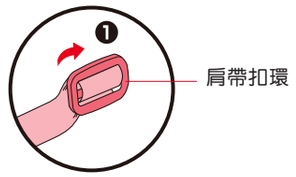
### 〈使用上段導孔時〉





●穿過坐席導孔（上段）與背板導孔（上段）。
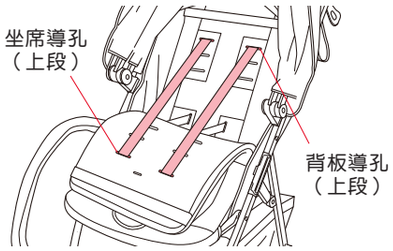
### 〈使用中段導孔時〉

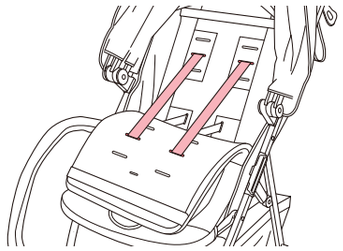

●穿過坐席導孔（中段）與背板導孔（中段）。

### 〈使用下段導孔時〉

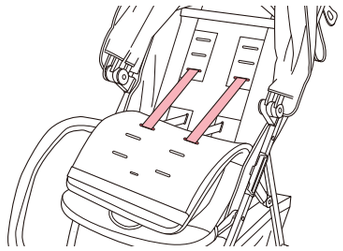

●穿過坐席導孔（下段）與背板導孔（下段）。

○調整之後，請務必確認固定扣組與股帶保護套之間的固定扣已經扣上。（請參閱P22）
○安全肩帶調整後，請拉提2～3次，確認安全肩帶不會鬆脫。




## 無段式平躺角度調節器的使用方法

### 〈座椅的角度標準〉

| 月齡（體格）的標準 | 坐席的角度位置 |
|---|---|
| 1個月～頸椎成熟 | 平躺 |
| 頸椎成熟～可獨立坐立 | 平躺～半躺（中間位置） |
| 可獨立坐立 | 平躺～坐立姿勢 |

### 靠背平躺時

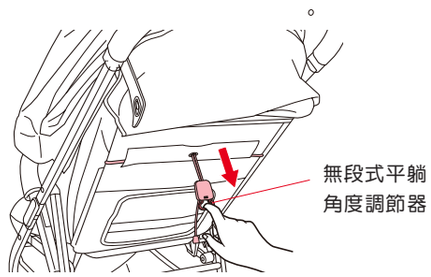


❶放鬆安全肩帶。（請參閱P12）
❷用單手扶住寶寶，另一手拉住無段式平躺角度調節器。



❸一邊拉著拉環，一邊將靠背往後倒，調整至適當的角度。
❹調整安全肩帶、安全腰帶的長度。


**警告**

○在寶寶乘坐的狀態下，若要將靠背倒下時，請先鬆開安全肩帶。
○調整座椅靠背的角度時，請一併調整安全肩帶、安全腰帶與立體式股帶的長度。安全肩帶、安全腰帶與立體式股帶鬆弛的話，即使繫上座椅安全帶仍可能站得起來，且會導致嬰幼兒跌落。

**注意**

○請勿一邊推著嬰幼兒手推車，一邊調整坐席角度。
○在寶寶乘坐的狀態下，若要調整坐席角度時，請勿急速且大幅度的改變角度。
○在寶寶乘坐的狀態下，若要將靠背倒下時，請確實扶住寶寶。
○無法獨立坐立的寶寶，請使用坐席平躺的方式。

### 靠背立起時

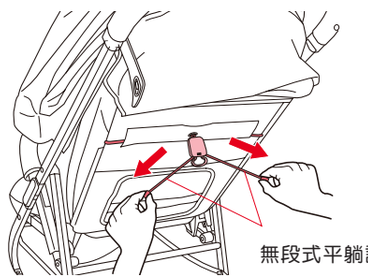



●請在寶寶不完全倚靠靠背支撐的狀態下，單手握住無段式平躺調整帶並且往上拉即可將座椅靠背立起。

**建議**

○當寶寶完全倚靠靠背支撐的狀態下，請勿豎起靠背。

## 遮陽篷的使用方法

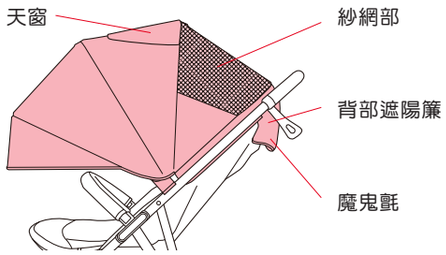



**警告**

○請在寶寶未接觸遮陽篷的狀態下，開啟或收起遮陽篷。
否則可動關節部位可能會夾到寶寶的手指或手。

**注意**

○請勿拆除遮陽篷。
若勉強拆除，可能發生意外傷害，或導致遮陽篷破損。


### 打開方法

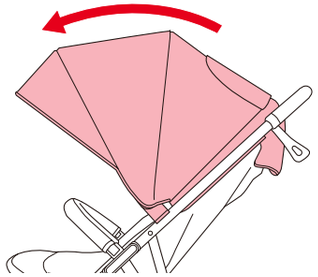

●將遮陽篷往前展開。


### 遮陽篷的角度調整

○靠背往後躺或日照比較弱時，可調整遮陽篷的角度。

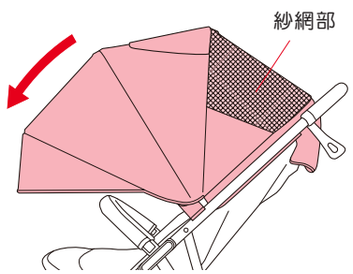


●握住遮陽篷前端部分，拉出紗帳部。


### 收起方法

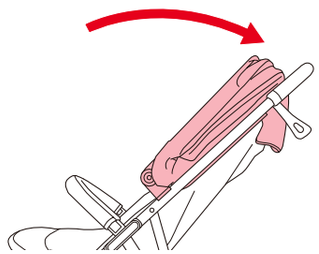

●將遮陽篷往後收起。

### 收起方法

○打開天窗可從紗窗查看嬰幼兒狀況。

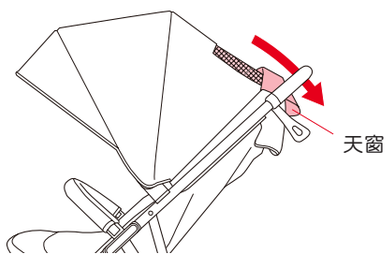




●打開天窗。



### 背部遮陽簾的調整

○調整背部遮陽簾的位置，可調節座席的通風。

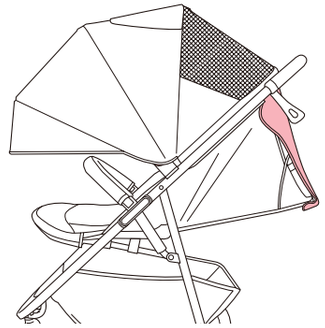

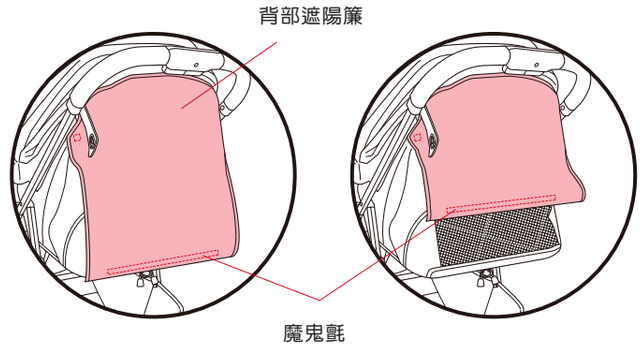



## 置物網籃的使用方法

**警告**


○請勿讓嬰幼兒坐在置物網籃裡。
否則嬰幼兒手推車可能因此破損，導致嬰幼兒或使用者受傷。

**注意**

○請勿將形狀銳利的物品置於置物網籃內。否則可能會破壞置物網籃。
○請勿放置重量5kg以上的物品。
○收折嬰幼兒手推車之前，請先將物品取出。
○置物袋裡請勿放入重物或貴重物品等，以免造成置物袋破損或物品遺失。

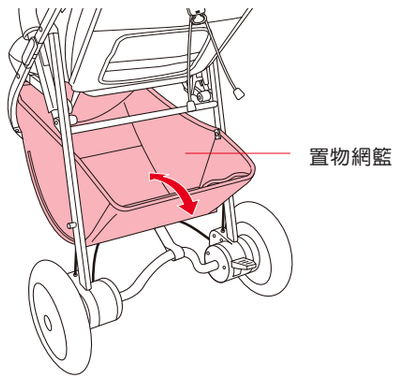


●從置物網籃上方取放物品。
○置物網籃無法拆卸。

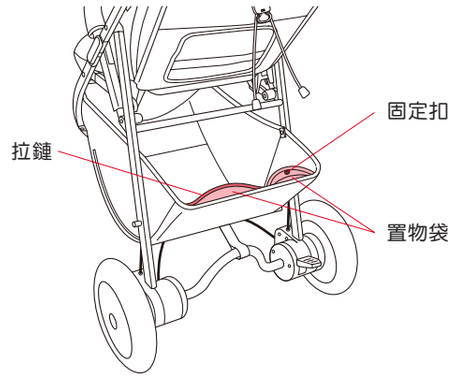


●使用置物袋時，請拉開拉鏈、解開固定扣後放入物品。

# 嬰幼兒手推車的收折方法

**警告**

○當寶寶碰觸手推車靠近手推車時，請勿收折或打開車體。恐因可動關節部位夾到寶寶手指、手腳，或因嬰幼兒手推車碰撞寶寶身體，而使寶寶有受傷之虞。
○請勿讓孩童操作嬰幼兒手推車。因恐造成翻覆、意外事物，而有受傷之虞。


**注意**

○請先將安全肩帶、安全腰帶插入安全股帶扣後，再收折嬰幼兒手推車。否則恐有使安全股帶扣破損之虞。


**小叮嚀** ○因梱包裝箱的關係，剛開始使用可能有不易收開的情況。請重複操作2～3次。

○本嬰幼兒手推車有兩種收折方法。


## 1 收折之前

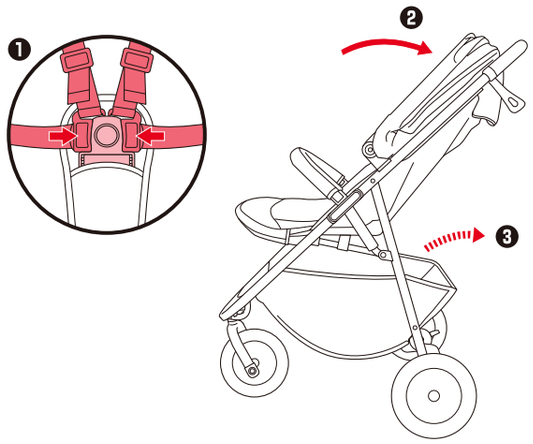


〈從上方俯看車體的圖示〉

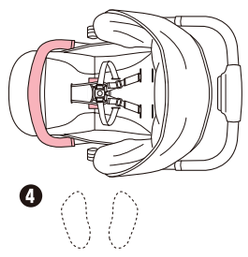



相對於嬰幼兒手推車的站立位置

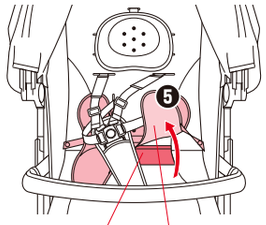



❶安全肩帶、安全腰帶插入股部安全帶。（請參閱P11）
❷將遮陽篷收起。（請參閱P15）
❸取出置物網籃中的物品。
❹如從上方俯看車體圖的位置站立。請注意，此時腳部位置不要在車輪的前方。
❺若有使用腰部・臀部守護墊時，請將其掀起。

## 2 單手收折時

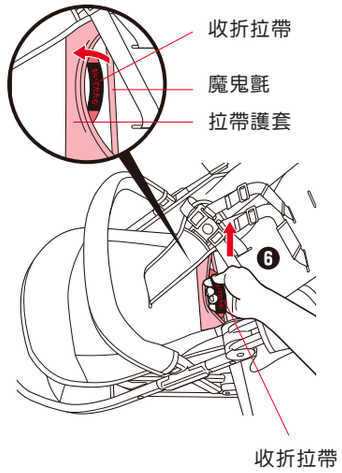



❻解開拉帶護套的魔鬼氈，握住收折拉帶。

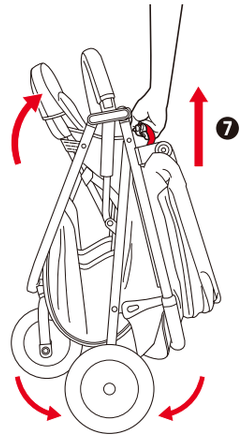



❼直接提起收折拉帶，車體即折疊起來。

建議 ○無法順利折疊起車體時，請調整一下收折拉帶再次提拉。

## 2 雙手收折時

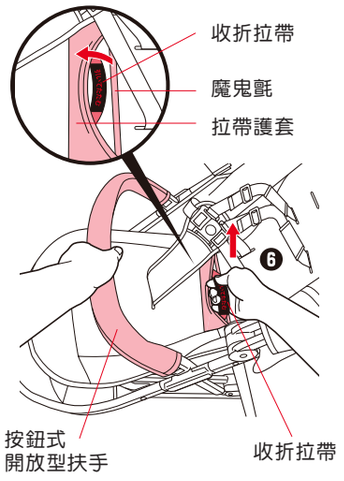



❻解開拉帶護套的魔鬼氈，一手握住收折拉帶，另一手握著按鈕式開放型扶手。

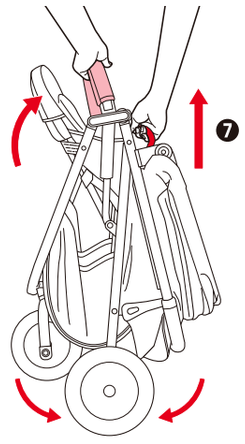



❼直接提起收折拉帶，車體即折疊起來。

建議 ○無法順利折疊起車體時，請調整一下收折拉帶再次提拉。


## 3 鎖定與確認

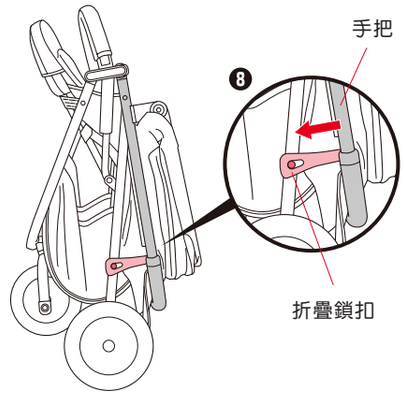


❽確認折疊鎖扣已鎖定。未鎖定時，將手把朝箭頭方向扳上即鎖定。

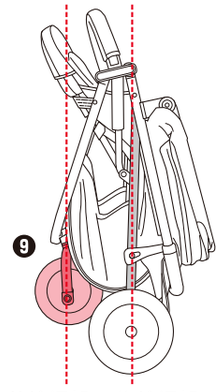


〈正確方向〉

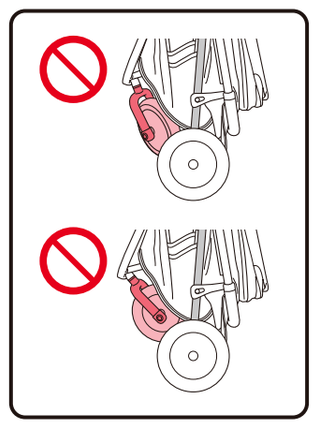

〈錯誤方向〉

❾確認前輪的方向。
前輪框架相對於後輪框架大致呈平行時為正確方向。

建議 ○前輪的方向不正確時，無法自行站立。請將前輪方向調整為正確方向。

## 坐席的拆卸方法

**警告**


○請勿在拆除坐席的狀態下使用。嬰幼兒手推車可能因此破損而發生事故，或因而發生意外事故。

**注意**


○破損或脫線的坐席請勿再使用。可能因此導致嬰幼兒誤食填塞的綿絮，或使坐席無法發揮原有機能。

**小叮嚀** ○拆卸或安裝坐席時，請注意可能會造成指甲刮傷。


・使用預防呼吸道閉塞型保護頭墊及腰部・臀部守護墊時，請拆除坐席。（請參閱P10）

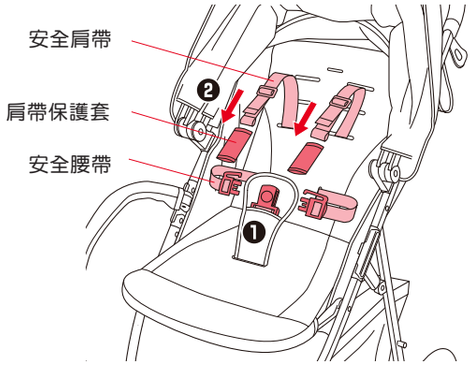



❶按下扣組，解開安全肩帶與安全腰帶。
❷自肩部勾環上拔下安全肩帶，取下肩帶保護套。

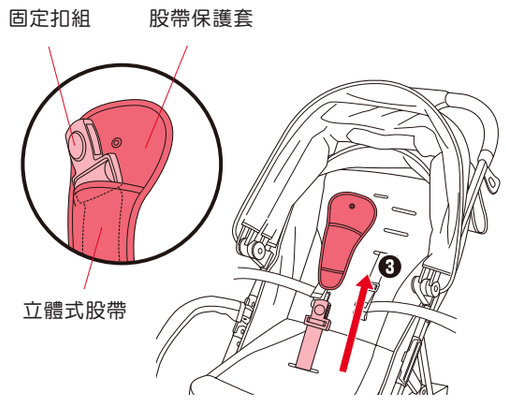



❸解開固定扣，拆下立體式股帶，取下股帶保護套。

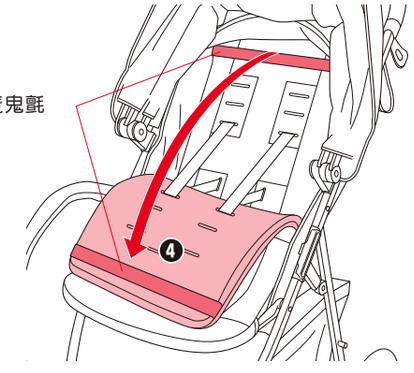



❹掀起座椅靠背側的坐席，撕開座椅靠背背面的魔鬼氈。

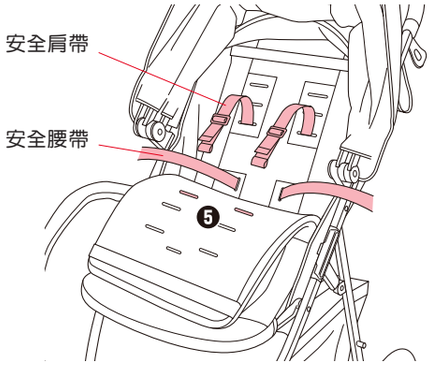



❺從坐席上拔出安全肩帶、安全腰帶。

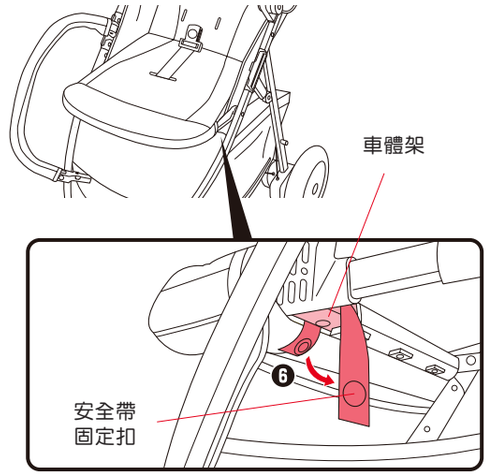



❻解開安全帶固定扣，從車體架上抽出。（左右）

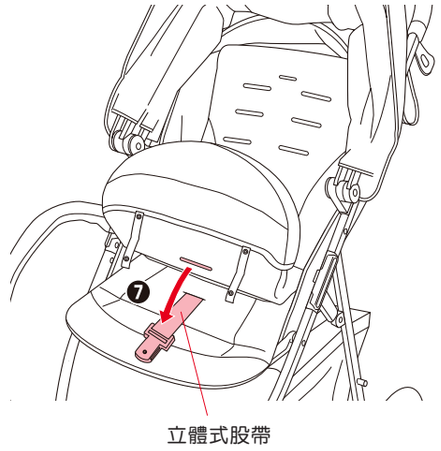


❼掀起坐席，從坐席上拔出立體式股帶。

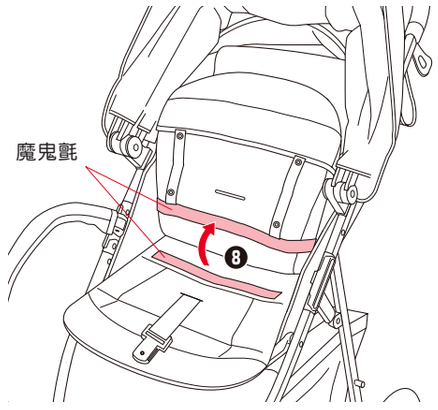



❽解開魔鬼氈。

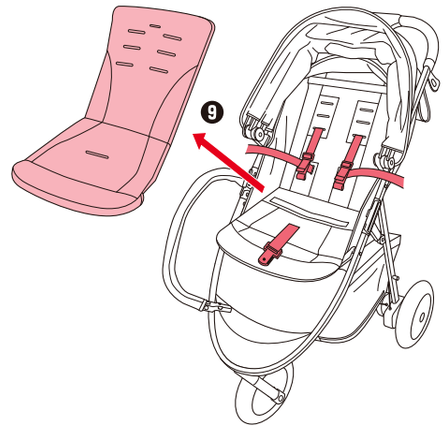


❾將坐席拆下。
・安全腰帶、立體式股帶無法拆除。

## 扶手保護套的拆卸方法

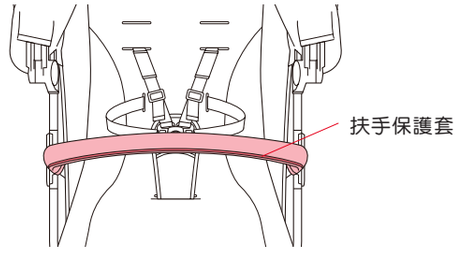


●解開扶手保護套的拉鍊並拆下扶手保護套。






縫製品的保養方法

## 坐席的安裝方法


**△警告**

○請勿在拆除坐席的狀態下使用或拆除坐席後自行加裝它牌坐墊使用，可能因此發生事故，或因而發生意外事故。
○安裝坐席時，請確實固定住勾環與魔鬼氈。安裝不全的狀態下使用時，可能因此造成破損等。


**小叮嚀** ○拆卸或安裝坐席時，請注意可能會造成指甲刮傷。

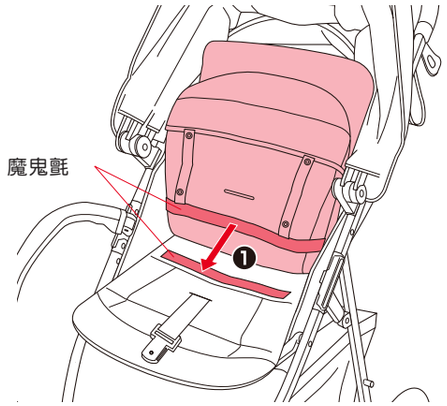



❶固定魔鬼氈。

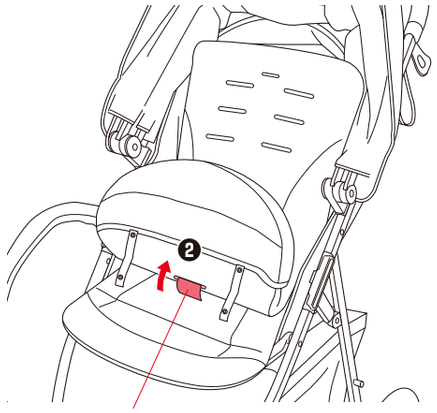



❷立體式股帶穿過立體式股帶導孔。

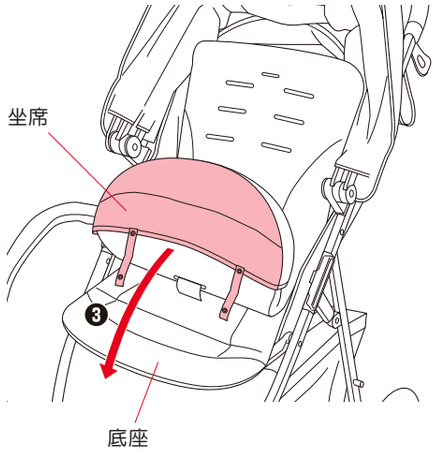



❸坐席覆蓋在底座上。

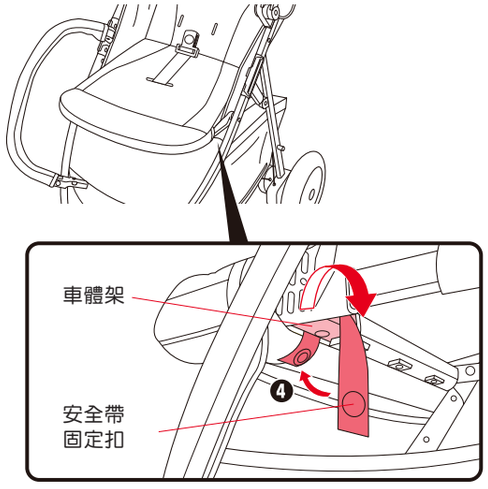



❹安全帶固定扣捲附在車體架上並扣上固定。（左右）

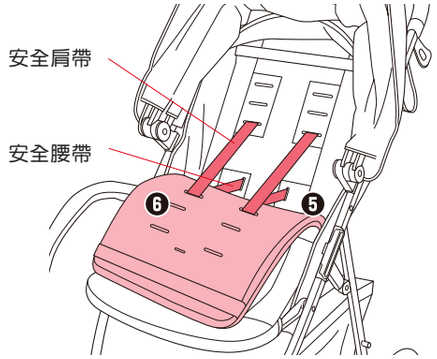



❺安全腰帶穿過安全腰帶導孔。
❻安全肩帶穿過安全肩帶導孔。

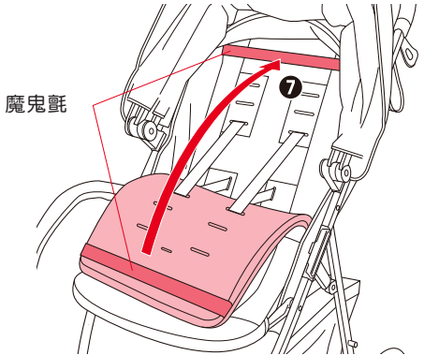


❼固定好座椅靠背背面的魔鬼氈。

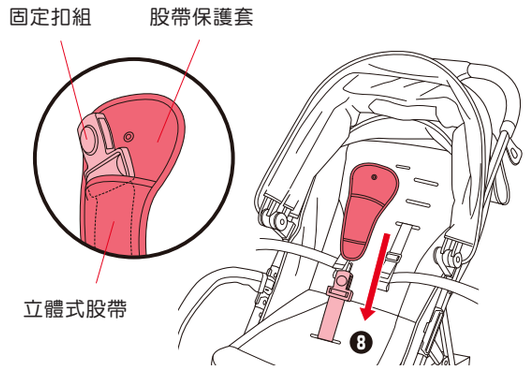



❽立體式股帶上安裝立體式股帶保護套，固上固定扣。

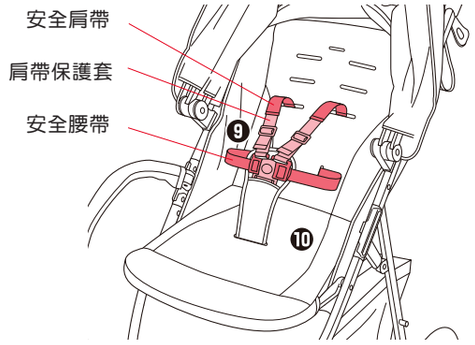


❾肩帶保護套插入安全肩帶，再將安全肩帶插入安全肩帶勾環。
❿安全腰帶插入股部扣組。

## 使用選配品時的收折方法

○使用愛普力卡原廠的「輕鬆洗多用途兩用吸汗軟墊」、「多用途冬夏兩用吸汗軟墊」及「雙用途防風腳套」時，請依照以下說明拉出收折拉帶。（請參閱P17「嬰幼兒手推車的折疊方法」）

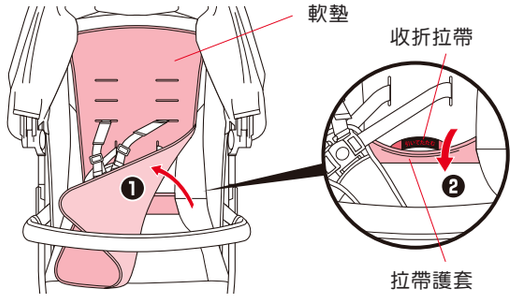


❶將軟墊及防風腳套橫向捲起
❷捲起拉帶護套，拉出收折拉帶。





縫製品的保養方法

## 縫製品的清洗方法

### 〈坐席、扶手保護套、預防呼吸道閉塞型保護頭墊、腰部・臀部守護墊、股帶保護套的清洗方法〉

○清洗時，請注意以下事項。




**注意**

○若要將縫製品晾曬於室外時，請於陰涼處平放晾乾。
○請不要使用鹼性清潔劑、酸性清潔劑以及含氯漂白劑。

### 〈遮陽篷、安全肩帶、置物網籃的清洗方法〉

○請勿整件放進洗衣機裡清洗，請按照下述要領清洗。

●水溶性污垢（如果汁、唾液、尿液等）的情況：用40度左右的熱水將毛巾浸濕，輕輕擰乾後充分擦拭污垢處。再以乾毛巾充分擦拭水份後再置於陰涼處自然晾乾。

●非水溶性污垢（如牛奶、油脂、沙拉醬等）的情況：首先將中性洗潔劑溶解在40度左右的熱水中，再使用刷子或海綿輕輕刷洗污垢處。再用冷水或溫水洗掉中性洗潔劑，用乾毛巾充分擦拭水份後置於陰涼處自然晾乾。

**注意**

○若發現縫製品產生破損或異常現象，請立即停止使用，並請務必要聯繫維修中心進行檢查及維修。

## 車體的保養

### 〈框架及車輪的保養方法〉

○請勿對黏附在車輪上的泥土、灰塵等置之不理。務必使用濕毛巾等物品擦拭乾淨。

**注意**

○車架及車輪黏附泥土及灰塵時容易發生故障，故發現此情況時請停止使用。
○擦拭泥土及灰塵時請勿使用稀釋液或揮發油等有揮發性的溶劑。

### 〈螺絲、螺帽類的保養〉

○請經常檢查螺絲、螺帽是否有鬆動，當發現鬆動時請盡速鎖緊。

### 〈按鈕式開放型扶手的保養〉

○當發現開放型扶手與車台連接處有灰塵時，請使用乾毛巾擦拭。






### 〈添加潤滑油〉


○請適時地在可動關節部位注入潤滑油。並請使用塑膠用的潤滑油。
○在注油之前，請先去除泥土及灰塵，並將水分擦拭乾淨。
○注油時，請在每個部位注入2~3滴左右。

●車輪無法順暢轉動時，請使用市售的潤滑油，點在圖中 ⇨ 所示部位。

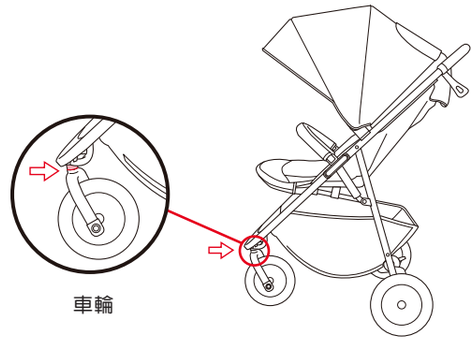



**警告**

○卸除後輪時，請勿在下圖的部位上點油。否則可能致使手把煞車器無法動作。

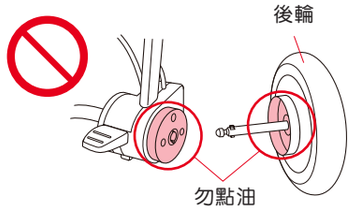



**注意**

○按鈕式開放型扶手插入部位附近及內部，請勿附著潤滑油等。否則可能致使按鈕式開放型扶手鬆脫。

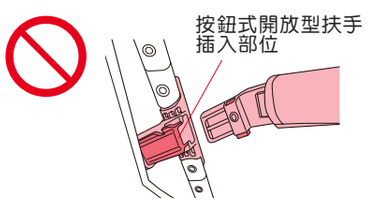



### 〈手把煞車器的調整方式〉

・使用產品時，發現手把煞車器煞車不靈時，請以下列方法調整煞車的靈敏度。（左右後輪有調整螺絲A、B）
・調整手把煞車器時，請使用8mm扳手或鉗子等工具，注意不要夾傷螺絲。
・調整後仍未改善時，請洽詢本公司維修中心。（請參閱P29）

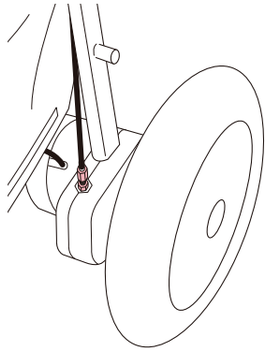


〈後輪〉

〈過緊時〉

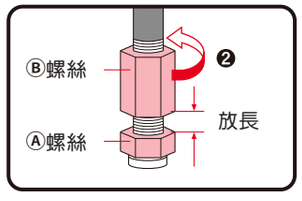


〈過鬆時〉

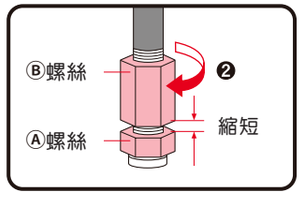


❶逆時鐘方向旋鬆下方的Ⓐ螺絲。

❷〈煞車器過緊時〉
・逆時鐘方向旋開上方Ⓑ螺絲，加長螺絲間長度。

〈煞車器過鬆時〉
・順時鐘方向旋緊上方Ⓑ螺絲，縮短螺絲間長度。

❸順時鐘方向旋緊固定鬆開的下方Ⓐ螺絲。
❹對側的後輪也做同樣的調整。
❺推動車體，然後用手把煞車器煞車，確認左右兩邊都同樣地煞住。

**警告**

○請勿在嬰幼兒乘坐狀態下調整煞車器。同時，請在安全的場所進行煞車器調整。否則可能造成嬰幼兒手推車翻覆或發生意外事故。

## 車胎的保養

### 〈車胎的保養方法〉


**警告**

○在自行車店裡維修時，請勿使用空氣加壓機（自動打氣機）。
灌入過多的空氣會造成車胎破裂



**注意**

○使用前請務必確認胎壓，胎壓過低時請適度充氣。

### 〈充氣方法〉

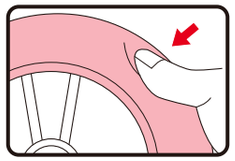

◎使用前請務必確認胎壓，若胎壓過低，請適當正確地充氣。
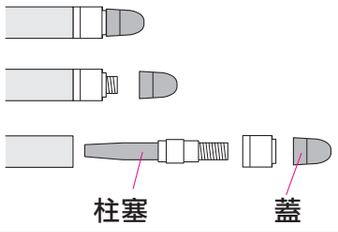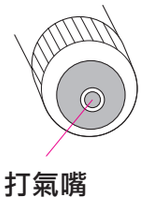
| 種 類 | 充氣嘴之種類 | 打氣筒（打氣嘴）之種類 | 充氣方式 |
|---|---|---|---|
| 英式 |  |  | 將打氣筒之打氣嘴裝在柱塞上，打入空氣，確認胎壓。 |

※本產品打氣嘴為英式規格，請務必使用英式規格打氣筒打氣，或至自行車店協助充氣。

◎胎壓偏低時，輪胎面積變寬，增加行走抵抗力，使嬰幼兒手推車變得不好推。另外亦可能造成輪胎磨損、爆胎、輪圈變形。
◎胎壓過高時，可能造成車胎爆裂或破裂。（請勿超過28psi〈約200KPa、約2.0kgf〉以上。）以拇指按壓車胎溝槽而完全無彈性時，或推行中會發生震動，請使用氣閥排出空氣，進行調整。
◎爆胎或有爆胎可能性時，請洽附近之自行車店。本公司客服中心恕不受理。
◎輪胎為消耗品，若有換胎之必要時，請洽本公司維修中心。（請參閱P29）
（更換輪胎為付費服務）


| | |
|---|---|
| ・胎紋消失。 | ▶ 必須更換。 |
| ・輪胎之空氣很快就漏光。 | ▶ 可能已爆胎。 |
| ・輪胎有很深的傷痕。 | ▶ 有爆胎或破裂之可能性。 |





### 〈後輪的拆卸方法〉

○後輪無法順暢旋轉時，或者後輪發出異音時，請拆除後輪確認有無夾入砂石等異物。此外，並用乾布等擦拭轉換器及下圖的部位，並清除髒污。

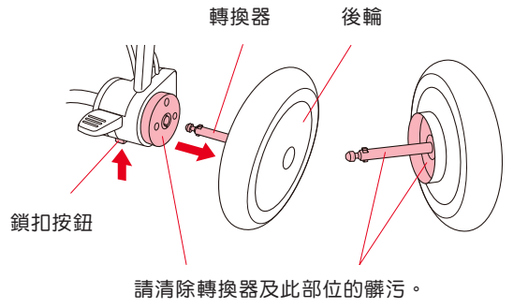


●按壓下鎖扣按鈕，拆除後輪。（左右）


○拆除後輪時，請將嬰幼兒及物品自嬰幼兒手推車上移動到安全場所。

**警告**


○拆除後輪時，請將嬰幼兒及物品自嬰幼兒手推車上移動到安全場所。
否則可能因嬰幼兒手推車翻覆，導致嬰幼兒或物品掉落。

### 〈後輪的安裝方法〉

**煞車側**
○DRIVE標誌使用外側的車輪。

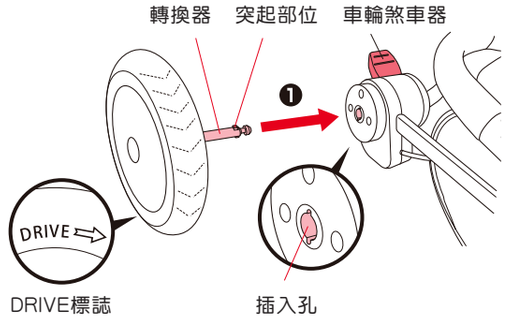


**折疊鎖扣側**
○DRIVE標誌使用內側的車輪。

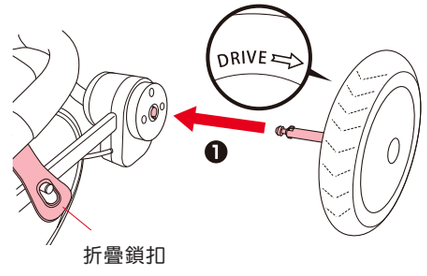


❶後輪轉換器的突起部位對準插入孔的溝槽後插入。（左右）
○插入後，拉2～3次，確認後輪不會鬆脫。

**警告**

○左右的後輪未確實完成安裝前，不得讓嬰幼兒乘坐。
否則嬰幼兒手推車恐有翻覆之虞。

## 覺得故障嗎？送修前先確認

○倘若採取以下的方法卻仍無法解決問題時，請與本公司維修中心連絡。（請參閱P29）

**〈使用中發現問題時〉**

| 問題 | 處理方法 |
|---|---|
| 車體打不開時 | 解除折疊鎖扣後再進行。（請參閱P7） |
| 車輪的轉動不靈活時 | 請在車輪注入潤滑油。（請參閱P24） |
| 後輪回轉不順暢時，或者後輪發出異音時 | 請拆除後輪，清除髒污。（請參閱P26） |
| 後輪煞車器失靈時 | 請確認後輪煞車器部位是否夾到碎石等異物。 |
| 手把煞車器不靈敏時 | 請將嬰幼兒從嬰幼兒手推車上抱下來，調整手把煞車器。（請參閱P24） |
| 傾斜式座椅靠背無法豎直時 | 請將嬰幼兒從嬰幼兒手推車上抱下來，左右拉一拉傾斜式座椅靠背繩，豎直座椅靠背。（請參閱P14） |
| 安全肩帶無法插入安全腰帶時 | 請確認是否夾到衣物或安全帶。 |
| 無法收折嬰幼兒手推車時 | 請先完成〈收折之前〉的動作，然後再進行收折步驟。（請參閱P17） |
| 嬰幼兒手推車在折疊狀態下無法自行站立時 | 請確認前輪的方向已為正確的方法。（請參閱P18） |

**〈使用二手品〉**

| 問題 | 處理方法 |
|---|---|
| 不了解之前的使用者是如何使用 | 對於使用狀態不明的商品，不建議使用。 |
| 嬰幼兒手推車出現裂痕或重大損傷時 | 切勿使用。 |





## 保管方法

○請將主體放入塑膠袋內，保管在沒有陽光直射的陰涼場所。
○請勿在上面放置重物、施加壓力的狀態下保管。恐造成故障或變形。

> ⚠注意
> ○為避免遮陽篷變形，請勿橫倒手推車或放置重物在車上。且避免放置在高溫的場所裡做保管。
> ○請勿置於火源附近、勿在大熱天下放置於高溫車內。恐易使塑膠零件變形、無法維持性能。

## 廢棄方法

○請依照各區域的廢棄物處理方式做處理。
○為維護地球環境，請勿隨意放置丟棄。

## 保固與售後服務


**〈保固事宜〉**

○於品質保證期間內（自購買日起1年內），由於零件短少、加工不良等可歸責於本公司者、依照使用說明書及注意事項而在正常使用狀態下故障者，根據保固規定提供免費修繕服務。
自購買日起已超過3年之產品，雖仍受理修理，但產品修理部位以外之品質，則恕不保證。
此外，已停產之產品，可能因修理所需零件已無庫存而無法修理。（零件之保有期間為停產後3年期間。即使於3年內，零件之顏色、布料之花樣等方面，亦有可能無法符合您所指定的，敬請見諒。）

**〈售後服務事宜〉**

○使用中發生故障等情況，或檢查中發現時，需要更換零件或修理時，各部位之固定部位發生鬆動或異音、零件缺損或車輪轉動有異常時，以及感覺到其他異常時，請停止使用，並確認產品名稱、型號、批號（參考下圖）後，向本公司維修中心聯絡 。

○聯絡時，請務必告知本產品把手管側貼紙所示之品名、型號、批號，以利進行後續處理作業。

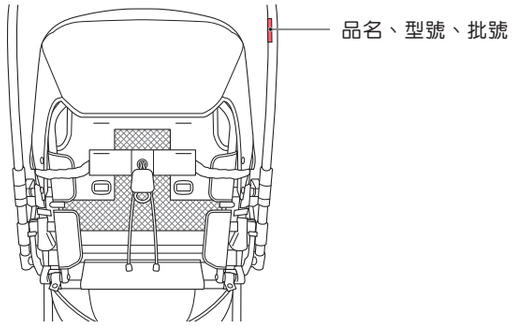


## 維修服務中心聯絡方式

**台灣愛普力卡股份有限公司　維修服務中心**
**連絡電話：（03）6561261**
**服務地址：新竹縣竹北市福興路885號**





## MEMO

Aprica

# SMOOOVE
スムーヴ


## User Manual

***For ASEAN countries ONLY**

Thank you for purchasing this product.
This product is suitable for babies 1 month to 36 months old, and under 15 kg.

※One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

Please carefully read this specification before use and use it correctly.
Please do not use any method except the ones specified in this specification, to operate this product, since it may not be able to maintain this product's function correctly, and is very dangerous.
Please carefully keep this book after using it.

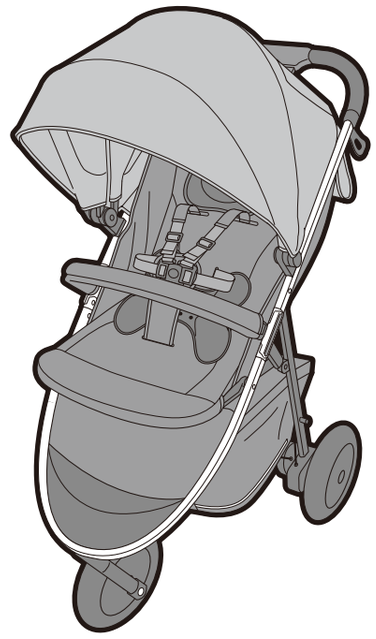

R41118

SG安全基準A形

## Index


### Introduction

Precautions before use .....1
Advice for parents and guardians/About SG standards/
Markings used in this manual
Cautions regarding usage .....2~4
Warnings/Cautions
When unpacking the product.....5
Product features
Names of parts .....6

### How to use the baby stroller

Opening the baby stroller .....7
Using the stoppers .....8
Using the handle brake .....8
Opening the Button-type open handle.....9
Using the footrest support .....9
Attaching the protective pads.....10
Placing the baby in the baby stroller .....11
Adjusting the shoulder belt height .....13
Adjusting the recline angle.....14
Using the sunshade .....15
Using the basket.....16
How to fold the baby stroller.....17

### How to remove the fabric parts

Removing the seat .....19
Removing the Handle protecting cover .....20
Installing the seat .....21

### Care and maintenance

Folding the stroller when
optional accessories are in use.....22
Daily care and maintenance .....23
Washing the fabric parts.....23
Maintenance of the main body.....23
Maintenance of the tyres .....25
Troubleshooting .....27
Storage.....28
Disposal .....28

## Precautions before use

### Suggestions

An infant is not a miniature adult, especially for the baby without a fully developed neck.

Please consider your baby's condition carefully when using a stroller.
①Please pay attention to the baby's condition and avoid using it continuously.
②Please avoid leaving baby under direct sunlight exposure; the temperature inside the stroller is higher than what adult feels outside.
③Please stay away from crowded areas to avoid noise and dust.
④Please slow down when going through rugged pavement, and avoid the surface that could cause vibration and impulsion.
⑤For a concise approach, the images or assembly used in this User Manual may not be identical to the real product, so please check with the real product for reference.

### SG standard

○The stroller marked with SG symbol meets the following standards regulated by Japanese Product Safety Association. (This product qualifies as a SG standard A stroller.)

| | |
|---|---|
| Range of application | This stroller is limited to one baby passenger, and is used for normal family parent and child movement such as outdoor activities or shopping. |
| Stroller style | **A stroller** Stroller for one-month-old* baby whose neck is not well developed and needs to lie flat in the stroller. |
| Suitable age | 1 month to 36 months old |
| Recommended continuous use time | Lie-flat: less than 2 hours Sitting posture: less than 1 hour |
| Lay-flat angle | More than 150° |
| Wheel external diameter | More than 115 mm |

＊One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

### About the labels of this book

○Symbol such as "Warning", "Caution", and "Prohibited" are used to predict the condition if you do not follow the notice items. These are divided by the damage severity. The indicated contents are very important, so you need to abide by them.

| Mark | Indication |
|---|---|
| ⚠ Warning | Failure to observe these instructions could lead to death or serious injury. |
| ⚠ Caution | Failure to observe these instructions could lead to serious injury or product damage. |

| Prohibit | Indication |
|---|---|
| ⃠ | Please do not perform these prohibited actions. |

| | |
|---|---|
| Tips | Tips and tricks when using the product. |




## Please note when using

○To avoid unexpected accidents, please read this user manual carefully, and follow the instructions thoroughly.

**⚠ Warning** Failure to observe these instructions could lead to death or serious injury.

To avoid the danger of the baby falling down.


Please buckle up shoulder belt, waist belt and 3D hip belt before use.

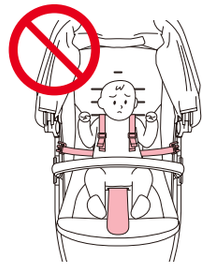


Do not let the baby stand on the stroller.



There may be a risk of the baby stroller folding up causing the child in the baby stroller to fall off or get caught in the baby stroller.

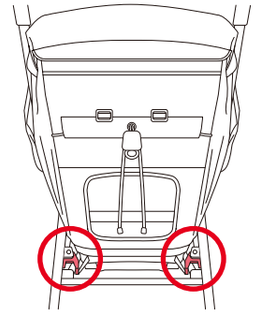

<Open/close lock is engaged> <Open/close lock is not engaged>

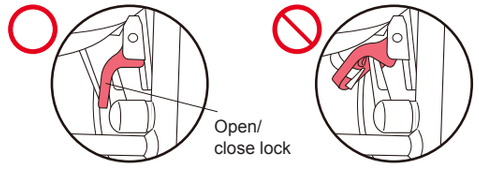


・Before use, please move the handle up and down for 2-3 times to ensure that the main body is completely opened.
・Check to make sure that the open/close locks are secured. (Left & right)

If waist belt gets loose, the baby may stand up and fall down.

Please keep an eye on the baby. Even if the seat belts are buckled up, the baby still could possible stand up, so please adjust waist belt according to the baby's developing condition.



The stroller could lose its balance when you can not see the road condition and all over.

When the baby is in the stroller, please do not directly lift up the stroller.



<Next page>

**⚠Warning** Failure to observe these instructions could lead to death or serious injury.

When parking the stroller on a ramp area, the stroller may slide or overturn automatically.

When placing the child in or lifting the child out of the baby stroller, please ensure that the stopper are locked and check that the baby stroller does not move.



Do not rely solely on the stopper when the child is in the baby stroller or when the stroller is loaded with items. Due to reasons such as road conditions, functions and durability of the stroller's structure, the stopper may not absolutely prevent the baby stroller from moving by itself.




Do not let go of the baby stroller when the child is seated in it.



To avoid the baby being wound up by the seat-belt and result in the danger of suffocation.

Please use shoulder belt and waist belt together, and adjust these to the positions that fit baby's figure.

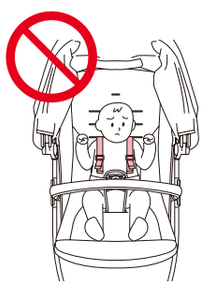

Since the stroller may overturn, and injure the baby.

Please do not let two babies ride at same time or let the baby sit beside the seat cushion.



When the baby is on the stroller, please do not place materials on any place other than the storage basket. Do not hang objects on the handle, and do not lean on the handle.



Please do not use it in a place with height differences such as stairs or escalator.



The road surface may cause the temperature inside the stroller to get high and harm the baby's body.

Please do not use for a long time in high temperature or under strong sunlight.







**⚠Warning** Failure to observe these instructions could lead to death or serious injury.

All movable joint of stroller may pinch the baby, and the stroller main frame may hit the baby or user.

Please keep the baby away when you are folding the stroller.



It may damage the stroller, harm the baby, or cause other accidents.

Please do not push too hard when using stroller.



It may cause the stroller damage and hurt the baby or user.

- Do not let a child operate the stroller.
- When the baby sits in the stroller, please align baby's legs to the position of 3D hip belt to avoid stroller turning upside down or backwards.
- Any person except our maintenance personnel should not disassemble, install or remold the stroller.
- Please do not use this product when seat fabric article is removed.
- Please do not use this product when it has been vigorously struck or fallen down.
- Please do not use it as a toy.
- Please do not use this stroller for any purpose other than for the baby to ride in it.

**⚠Caution** Failure to observe these instructions could lead to serious injury or product damage.


- Please do periodic inspections and maintenance.
- Before use, please make sure the mainframe and seat fabric article of the stroller are completely and correctly installed.
- Please periodically apply plastic-product-use oil to movable joint.
- Before using a stroller, which has not been used for a long time, please inspect and maintain the stroller first.
- Even if baby is not on the stroller, please do not place the stroller in a dangerous area such as steep hill or sidewalk close to driveway.
- Please do not use the stroller when screw or screw cap is loose.
- Please do not combine two strollers and use them together at same time.
- Please do not push the stroller by lifting up the front wheel, since this may cause the rear frame to be bent and deformed or breakdown.
- For the baby's safety, please push the stroller at a normal walking speed (about 4 km per hour)
- Please do not push the stroller to sandy or muddy areas (since sand may enter the joints and cause unfolding difficulty)
- Please do not ignore it when the frame is contaminated with sand or mud. (since sand may enter the joints and cause unfolding difficulty)
- A stroller is for a baby to ride on, so please do not install any extra components, sold on the market, on the stroller to avoid damage.
- Please do not put object over 5 kg in the basket storage.
- Parents or guardian should not lean on the stroller.
- Please do not use it to move objects.
- This product is only used for baby's riding.
- Please do not do anything that could cause the stroller to breakdown.
- Please do not use it on a bus.
  This product is not designed for using on the bus. If using on bus, turning or urgent braking of the bus may cause overturn or other accidents.
- Caution for using on subway.
  This product is not designed for using on the train. If using on the train, turning or urgent braking of the train may cause overturn or other accidents, so please use the stroller brakes and pay a lot of attention to it. User will need to undertake the responsibility of any accident.
- Please do not rush to get on and off the train when using in the subway.
  The train may not sense the situation when stroller is gripped by train door, and get the baby injured.
- Please do not use it on snow-covered or frosty pavement.
- Please do not use it in strong wind.
- Please do not use under thunder.
- To avoid increasing the temperature inside the stroller, please do not use the rain shade indoor, an area close to source of ignition or high temperature location.
- To avoid deformation of plastic component and losing its original function, please do not place the stroller close to any source of ignition or inside the car with high temperature in the summer.

## When unpacking the product

- Please check every component when unpacking the product.
- Please contact the distributor or our company if any component is missing, mistaken, or damaged.

### Framework

- After taking the product out from the box, the product is in its folded state. Please attach the front guard before use.
- To assemble the baby stroller, please refer to page 7.
- No other tools or equipment are required for assembly.
- The front guard is stowed in the basket when it is first taken out from the box. Please be careful not to unfasten the hook-and-loop fasteners at the base of the basket when removing the front guard from the basket.

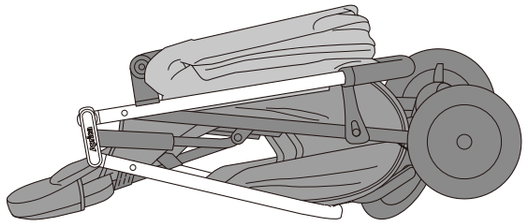

### Accessory



Button-type open handle
(Stowed in the basket when first taken out from the box)



Protective head pad that prevents respiratory tract blockage



Waist and buttocks protection pad



User Manual

**⚠ Warning**


- Keep the packaging material and storage bag out of the child's reach. There may be a risk of these materials covering the child and cause suffocation.

## <Product features>

- The handle is fixed at rear-facing position.
- Front-to-back folding method.
- The stroller can stand alone in folding status.
- The frame uses a lightweight aluminum tube.



## Name of Parts

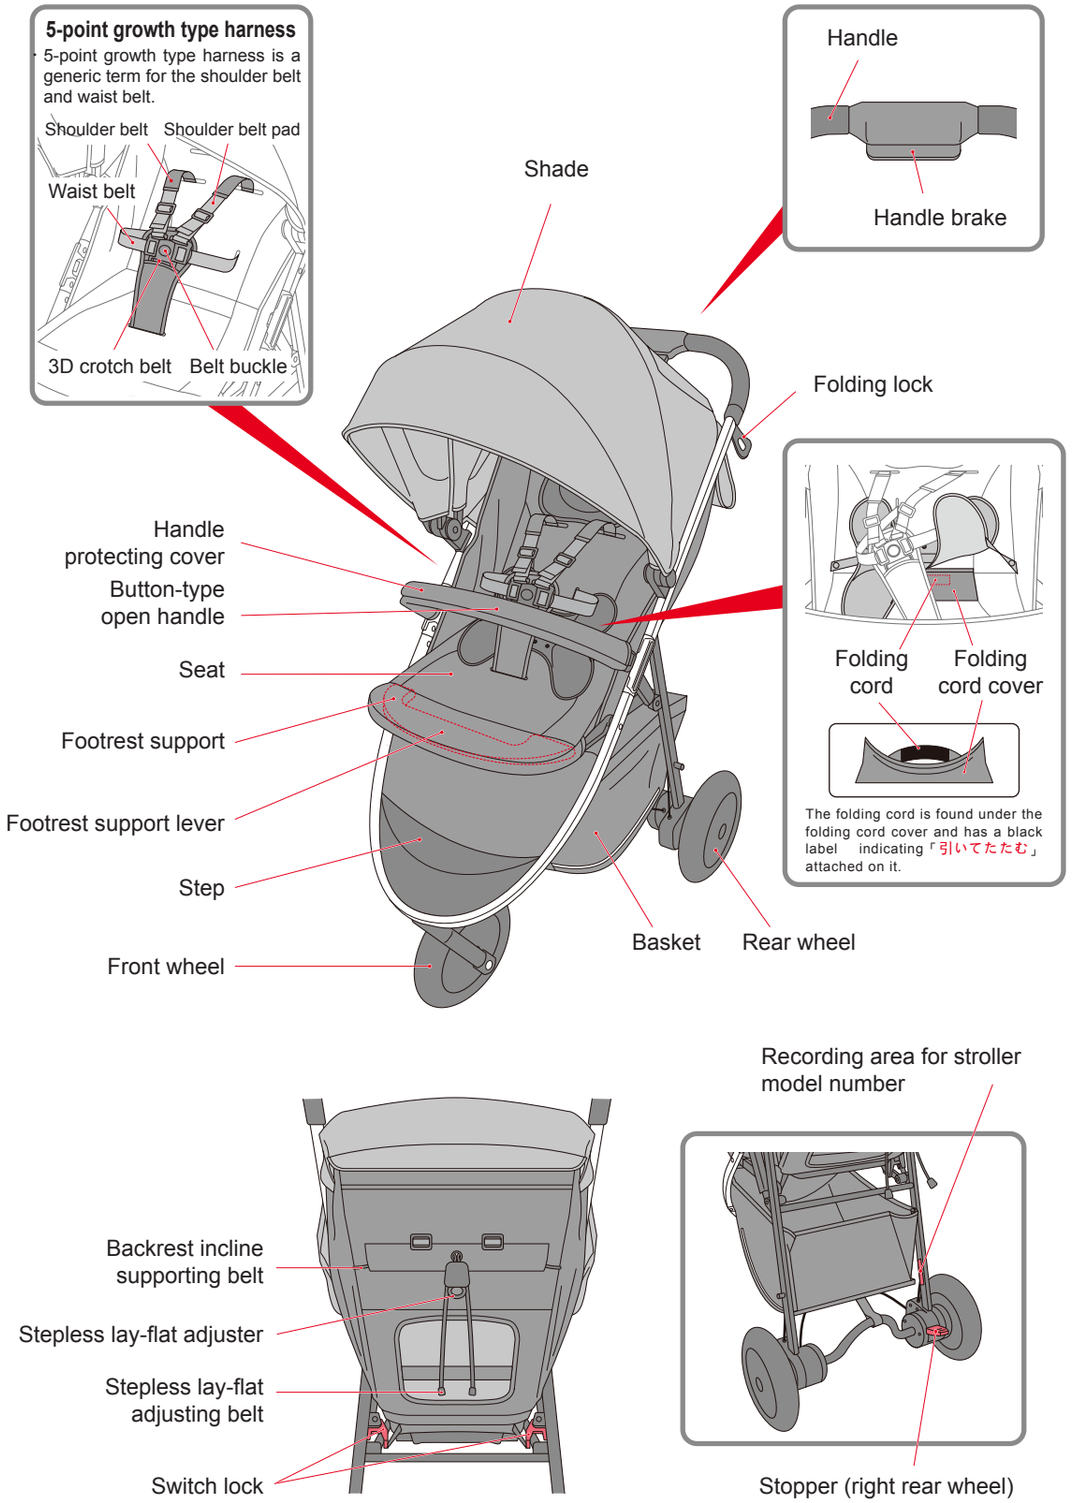

## How to unfold the stroller

**Warning**

- The opening/closing or assembly of the baby stroller must be performed by an adult. Please do not carry out these operations when the child is within touching distance or is close by. There may be a risk of the child's fingers or toes getting caught in the movable parts, or bumping into the baby stroller.
- Do not allow a child to operate the baby stroller. There may be a risk of the stroller tumbling over, accident or injury.


**Warning**

- Please check the tyre pressure before use. Please inflate the tyres appropriately if the pressure is too low.


**Little reminder**

- Since the stroller is packed inside the box, it may not be able to unfold smoothly. Please repeatedly operate 2-3 times to unfold it.


### 〈opening and assembly of the baby stroller〉

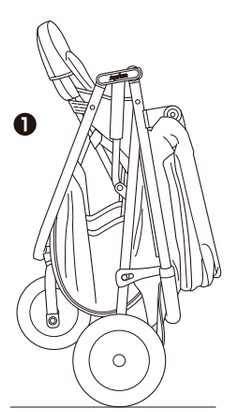



❶Lift the main body so that the stroller is in a standing position.

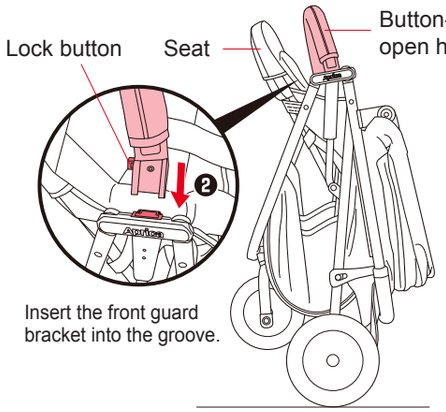



❷Attach the front guard to the main body.
- Insert the front guard with the lock button facing the seat.

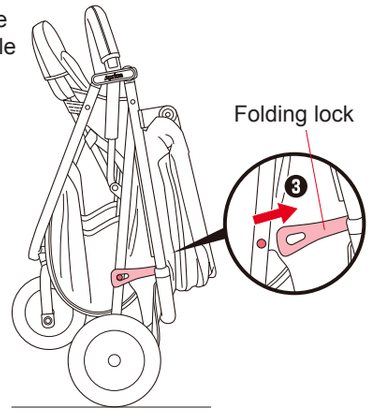



❸Release the folding lock.

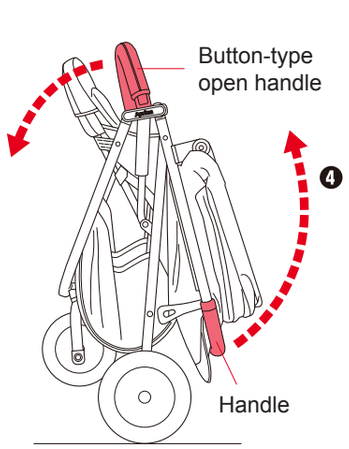

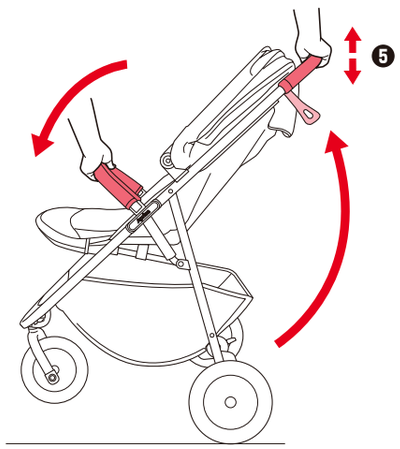
❺Grab the handle and the front guard, and then open up the main body.
❻Before use, please move the handle up and down for 2-3 times to ensure that the main body is completely opened.

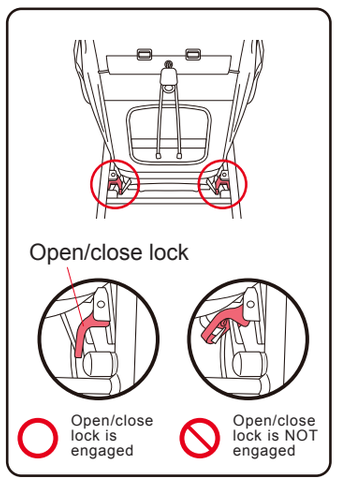


- Check to make sure that the open/close locks are secured. (Left & right)



## Using the stoppers

**Warning**


- Always lock the stopper when placing the child in or lifting the child out of the baby stroller.
- Do not rely solely on the stopper when the baby is in the baby stroller. Due to road conditions, the wear and tear of the product and other mechanical reasons, the stopper may not absolutely prevent the baby stroller from moving by itself.
- Even with the stopper locked, do not walk away from the baby stroller when the baby is still inside.

**Caution**

- Even if the baby is not in the stroller, please still lock the wheel brake when leaving the stroller.


- Depress the stopper lever on the right rear wheel to lock the left and right rear wheels.

### 〈Releasing the stoppers〉

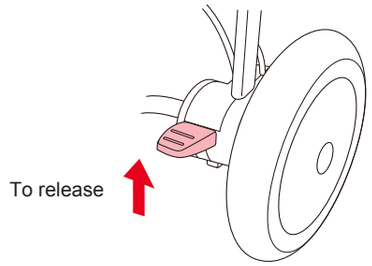


- Lift the stopper lever to release the stopper.

### 〈Locking the stoppers〉

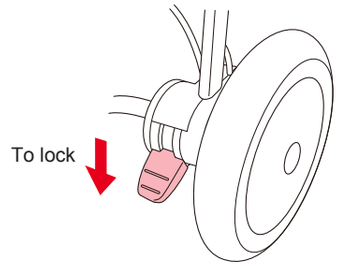



❶Depress the stopper lever to engage the stopper.
❷Confirm that the stopper is locked by moving the baby stroller back and forth lightly.

## Using the handle brake

**Warning**

- When using the handle brake, please squeeze at the centre with both hands. Squeezing only one side of the handle brake will stop one side of the baby stroller from moving, and this may cause the stroller to lose balance and tumble over.
- Please take note that applying emergency brake while the baby stroller is moving may cause the stroller to tumble over or other accidents.
- When stopping the baby stroller for an extended period of time, or when waiting at the traffic light or railway crossing, please depress the stopper lever to stop the stroller. Do not use the handle brake.

- Squeezing the handle brake will stop the left and right rear wheels from rolling.

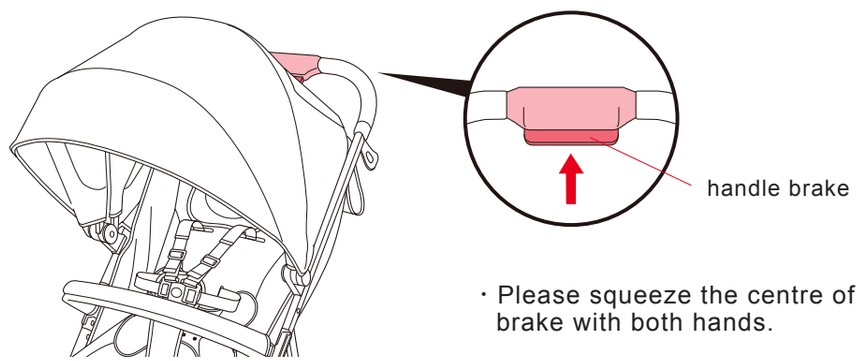



- Please squeeze the centre of the handle brake with both hands.

## Opening the Button-type open handle


**Warning**

・Please do not play with the Button-type open handle when it is opened. There may be a risk of the child getting injured by bumping into the Button-type open handle.

・The Button-type open handle can be opened on either the left or right side.

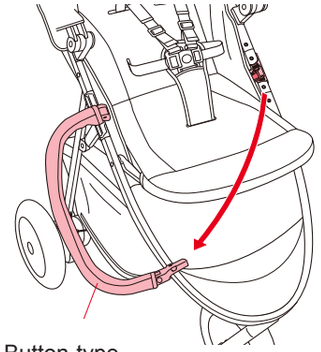

Button-type open handle

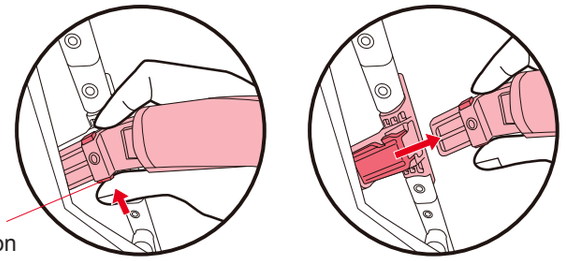



・Press and hold the lock buttons below and pull the Button-type open handle outward to remove it.


## Using the footrest support

・Please use the footrest support when the stroller is at the lowest recline position.

**〈When the footrest support is not in use〉**

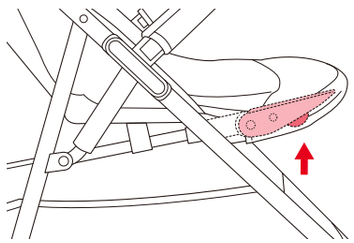


❶Grab the footrest support under the seat. (Left & right)

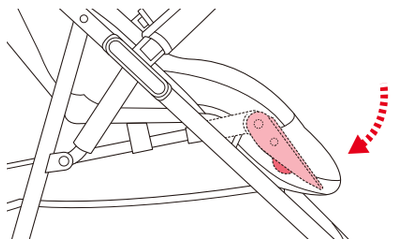


❷Push down the footrest support.

**〈When the footrest support is in use〉**

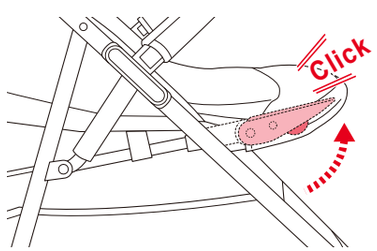


❶Hold the front end of the seat tightly and lift the footrest support.

**〈Internal position of the footrest support〉**

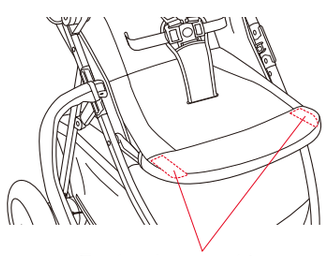

Footrest support lever






## Attaching the protective pads

・The protective pads in the baby stroller help to support the baby in maintaining the correct posture.

**Head mamolu pad For use until the baby can hold his head up without any support.**

(Approximately 4 months old as a guide)

・Please use the head mamolu pad only when the shoulder belts are installed at the lower shoulder belt holes. The head mamolu pad can be used for babies up to a maximum of 7 months old. (See “Adjusting the shoulder belt height” on page 13)

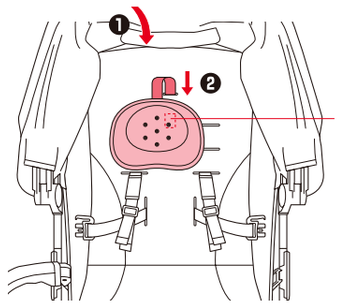

Hook-and-loop fastener (reverse side of the seat)


❶Using protective pad in flat bed mode。(See P14)

❷Unfasten the hook-and-loop fastener strap on the head mamolu pad. Pass the strap through the pad attachment hole in the direction of the arrow and affix it to the hook-and-loop fastener at the reverse side of the seat.

**Tips**

・If there is difficulty in attaching the pad, remove the top portion of the seat, and attach it while looking at the reverse side of the seat. (See “Removing the seat” on page 19)

**〈Position to attach the head mamolu pad〉**

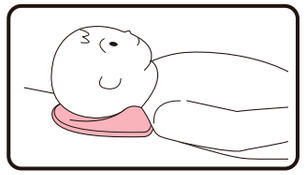


●Attach the pad such that the inflated portion at the lower end of the pad fits in nicely with the back of the baby’s neck.

※Remove the pad if the inflated portion at the lower end of the pad does not fit in nicely with the back of the baby’s neck.

**Caution**

・The head mamolu pad cannot be used when the shoulder belts are installed at the middle or upper shoulder belt holes.

## Waist mamolu pad (for use between 1 month to about 3 years old)

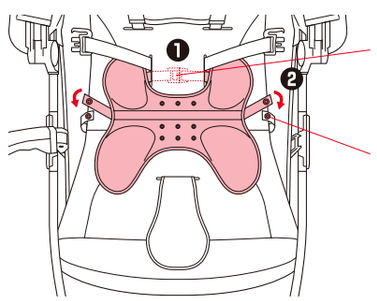

waist belt hole

waist mamolu pad side buttons


❶Pass the upper portion of the belt buckle through the waist belt hole, and then fasten it.

❷Fasten the snap buttons on the side of the waist mamolu pad to the snap buttons at the side of the seat. (Left & right)

・When removing the padding accessories, please follow the steps in reverse order.

・Depending on the physique of the baby, there may be cases where the waist mamolu pad may not fit in nicely with the baby anymore even before he turns 3 years old. For such cases, please remove the waist mamolu pad.

## 1 Preparing for use

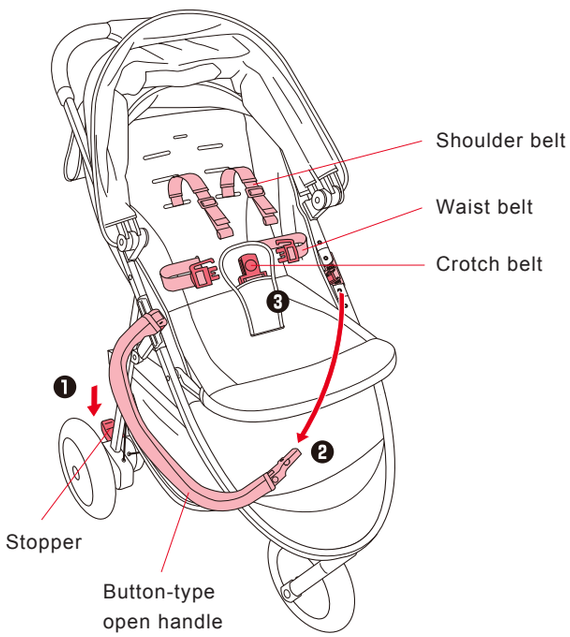



❶Lock the stoppers. (See P8)
❷Open the Button-type open handle. (See P9)
・Press the lock button below.
(The Button-type open handle can be opened on either the left or right side.)
❸Unfasten the shoulder and waist belts.
・Press the crotch buckle to release the shoulder and waist belts.
・Remove the shoulder belts from the shoulder belt hooks.
・To change the recline angle, please see “Adjusting the recline angle” on P13.
・Using the footrest support. (See P14)

**⚠Warning**
・Please do not play with the Button-type open handle when it is opened. There may be a risk of the child getting injured by bumping into the Button-type open handle.

## 2 Seating the baby

### 〈Place the baby in the seat and fasten the seat belts〉

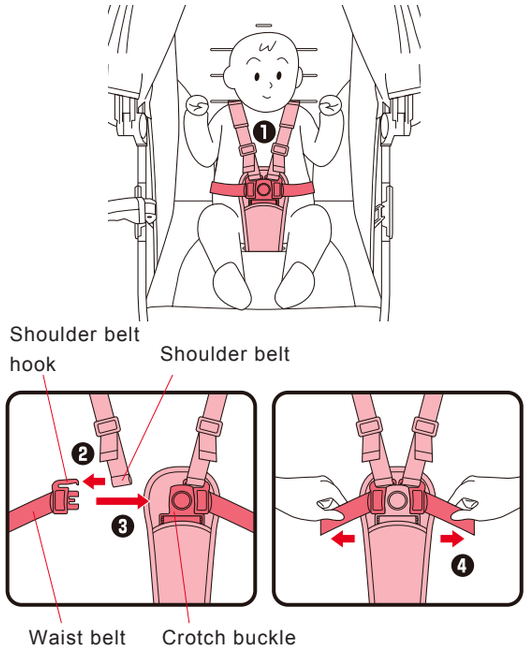



❶Place the baby in the baby stroller.
❷Insert the shoulder belts into the shoulder belt hooks.
❸Insert the waist belt into the crotch buckle.
❹Pull the waist belt to the left and right to confirm that is fastened properly.
※The length of shoulder and waist belts should be adjusted to fit the baby’s size and seating position.

**Tips**
・The label on the shoulder belts should be facing outward when fastened correctly.
・Check to ensure that the shoulder belts are not twisted.


**⚠Warning**
・After fastening the seat belts, pull the waist belt to the left and right to confirm that is fastened properly.
・The shoulder belts should always be inserted into the shoulder belt hooks during use. Otherwise, there may be a risk of the shoulder belt entangling around the baby’s neck.
・Do not take your attention off the baby. The baby may stand up even with the seat belts fastened. Please adjust the waist belt in line with the baby’s growth.
If the waist belt is loose, there may be a risk of the baby standing and falling off the baby stroller or other dangers.
・The position of the crotch belt should be adjusted to suit the baby. Otherwise, there may be a risk of the baby stroller falling backward.

### 〈Adjusting the waist belt〉

〈To tighten〉 〈To loosen〉

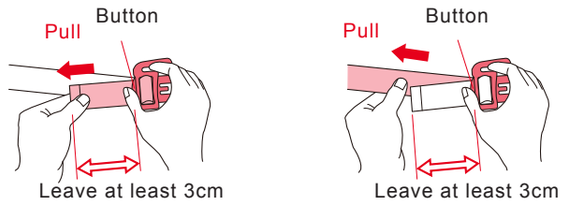



●Pull the waist belt while pressing the button gently to adjust the length

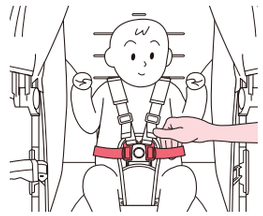


・The length of the waist belt should allow for 4 adult fingers to be inserted between the belt and the baby.

### 〈Adjusting the shoulder belts〉

〈To tighten〉 〈To loosen〉

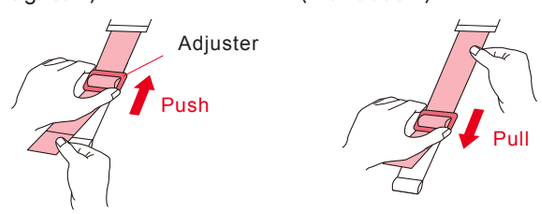


●Move the adjuster to adjust the length.

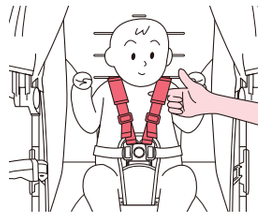

・The length of the shoulder belt should allow for 1 adult finger to be inserted between the belt and the baby.

### 〈Adjusting the crotch belt〉


〈To tighten〉 〈To loosen〉




❶Remove the crotch belt.
❷Pull the crotch belt to adjust the length.
・After adjusting the belt, please check to ensure that the snap buttons of the crotch belt cover are fastened to the snap buttons of the crotch buckle. (see P22)


**⚠Warning**
・The length of the shoulder, waist and crotch belts should be adjusted as the baby grows older.
If the shoulder, waist and crotch belts are loose, there may be a risk of the baby standing up or falling off the baby stroller even with the belts fastened.
・Be careful not to get the baby’s fingers caught when closing the Button-type open handle.
・After fastening the Button-type open handle, confirm that it is properly engaged by pulling on it.
・Do not raise the Button-type open handle when the baby is in the baby stroller.
・Leave at least 3cm at the end of the waist belt (⟺ area).
・Adjust the length of the shoulder, waist and crotch belts accordingly whenever the recline angle is changed.

### 〈Button-type open handle〉

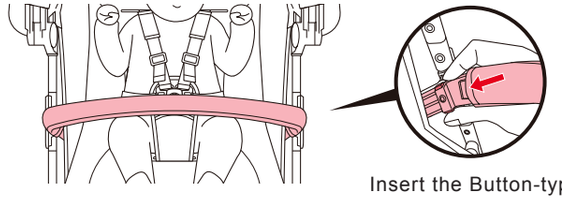

Insert the Button-type open handle.

### 〈Releasing the stoppers〉

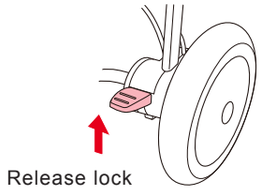

Release lock


Stroller instructions


## Adjusting the shoulder belt height

**Warning**

- Adjust the height of the shoulder belts as the baby grows older.
- After adjusting the shoulder belts, please pull on the belts 2-3 times to ensure that the shoulder belts are not loose. If the shoulder belts are loose, there may be a risk of the child falling off the baby stroller.


### 〈Shoulder belt position〉

- When taken out from the packaging, the shoulder belts are set at the lower position.

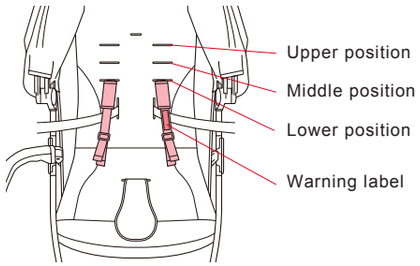


### 〈Shoulder belt guideline〉

- Shoulder belts should be inserted at the position below the shoulder.
- Adjust the position of the shoulder belts based on the three levels below.

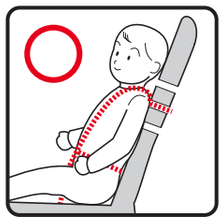

| Approximate age (body size) | Shoulder belt position |
|---|---|
| 18 – 36 months | Upper position |
| 7 – 18 months | Middle position |
| 1 – 7 months | Lower position |


The figures above serve as a guideline and they differ across individuals.

**Tips**


- The label on the shoulder belts should be facing outward when fastened correctly.
- Check to ensure that the shoulder belts are not twisted.


### 〈Adjusting the height of the shoulder belts〉

- Release the shoulder, waist and crotch belts from the thigh buckle. (See step ❸ in “Preparing for use” on P11).
- Unfasten the snap buttons at the side of the seat and lift up the seat. (See P19)

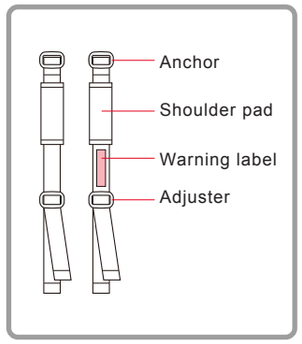



Insert the anchor through the shoulder belt hole

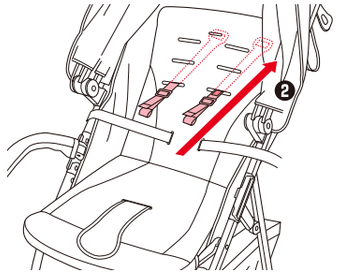

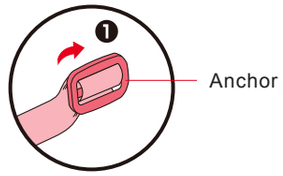

❶Turn the shoulder belt anchor such that it is parallel to the shoulder belt.
❷Pass the shoulder belt anchor through the shoulder belt hole of the seat and backrest.

### 〈Using the upper position〉

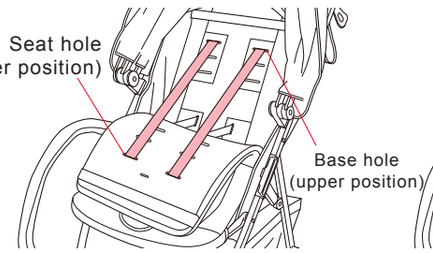



●Pass the shoulder belts through the seat hole (upper position) and base hole (upper position)

### 〈Using the middle position〉

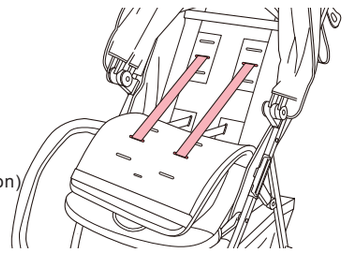

●Pass the shoulder belts through the seat hole (middle position) and base hole (middle position)

### 〈Using the lower position〉

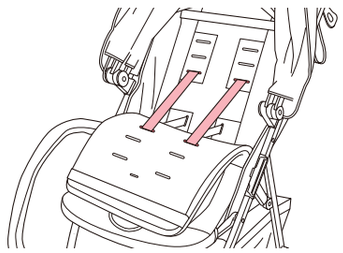

●Pass the shoulder belts through the seat hole (lower position) and base hole (lower position)

- After adjusting the belt, please check to ensure that the seat is reattached and the snap buttons are fastened. (See page 22)
- After adjusting the shoulder belts, please pull on the belts 2-3 times to ensure that the shoulder belts are not loose.




## Adjusting the recline angle

### 〈Guideline for the position of recline angle〉

| Approximate age (body size) | Recline angle position |
|---|---|
| 1 month – able to hold the head up | Fully reclined |
| Able to hold the head up – able to sit upright unaided | Fully reclined – halfway back (intermediate position) |
| Able to sit upright unaided onwards | Fully reclined – upright |

### Lowering the backrest

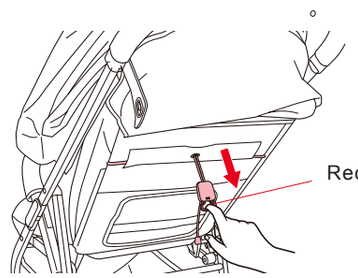


❶Loosen the shoulder belts. (See page 12)
❷Pull the reclining ring while supporting the baby with one arm.
❸Lower the backrest and adjust the recline angle while pulling on the ring.
❹Adjust the length of the shoulder and waist belts.




**Warning**

- When lowering the backrest with the baby in the baby stroller, please loosen the shoulder belts first.
- Please adjust the length of the shoulder belts, waist belts and crotch belt while adjusting the recline angle. If the shoulder, waist and crotch belts are loose, there may be a risk of the child standing up or falling off the baby stroller even with the belts fastened.

**Caution**

- Do not adjust the recline angle while pushing the baby stroller.
- When adjusting the recline angle with the baby in the baby stroller, do not change the recline angle abruptly.
- Support the weight of the baby when lowering the backrest with the baby in the baby stroller.
- Please use the fully reclined position for babies who are not yet able to sit upright unaided.

### Raising the backrest

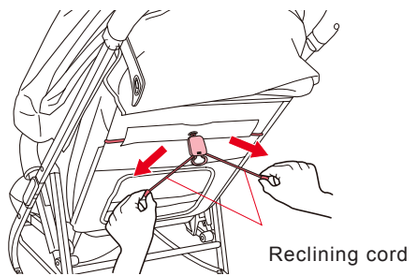



●To raise the backrest, please pull the reclining cord to the left and right while the baby’s weight is not resting on the backrest.

**Tips**

- The backrest cannot be raised when the baby’s weight is resting on the backrest

## Using the sunshade

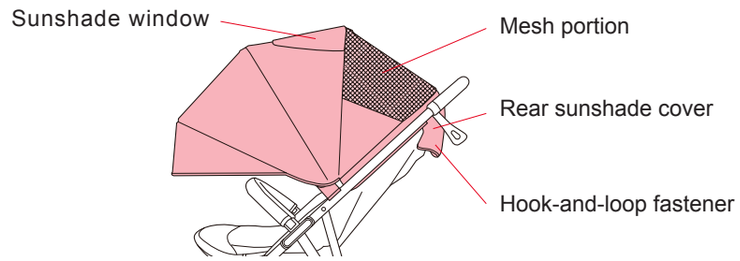



**Warning**

・Do not open and close the sunshade when the baby is touching it. There may be a risk of the baby's fingers or toes getting stuck in the movable parts.

**Caution**

・Do not remove the sunshade forcefully.
Otherwise, there may be a risk of injury, accident, or damage to the sunshade.


### Opening the sunshade

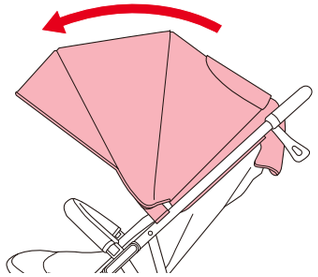

・Open the sunshade towards the front.


### Adjusting the angle of sunshade

・The angle of the sunshade may be adjusted if the backrest is reclined and when there is little sunlight.

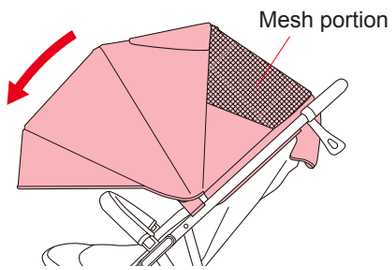


・Hold the front end of the sunshade and pull to expand the mesh portion.


### Closing the sunshade

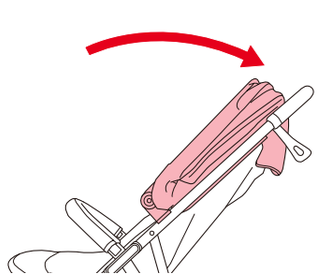

・Close the sunshade.

### Closing the sunshade

・Open the sunshade window to observe the conditions of the child.

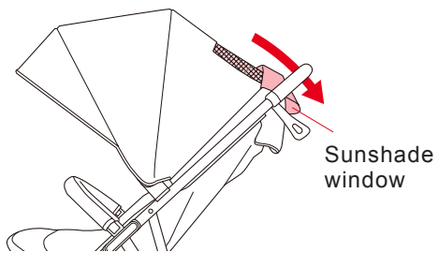




・Open the sunshade window.



### Adjusting the rear sunshade cover

・Adjust the position of the rear sunshade cover to regulate the ventilation at the seat.

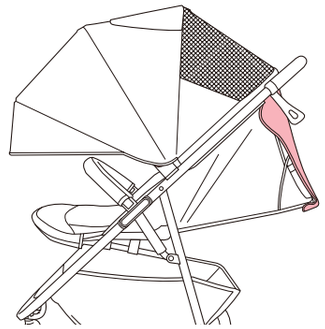

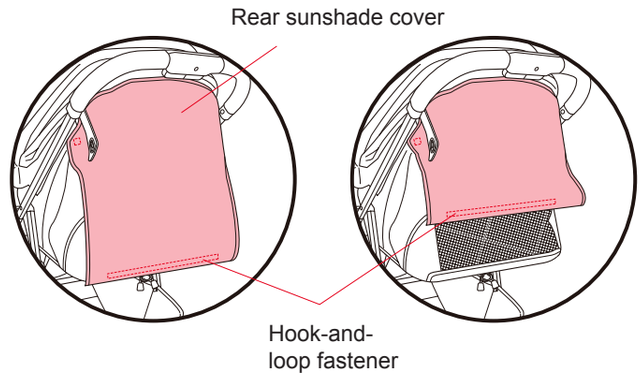



## Using the basket

**Warning**


・Do not let the child sit on the basket.
This is to prevent damage to the baby stroller which may cause injury to the child or the user.

**Caution**

・Do not place sharp objects into the basket. Otherwise, they may cause damage to the basket.
・Do not place items weighing more than 5kg into the basket.
・Please remove all the items in the basket before folding the baby stroller.
・Do not place heavy or valuable items into the pouch. This is to prevent damage to the pouch or loss of items.

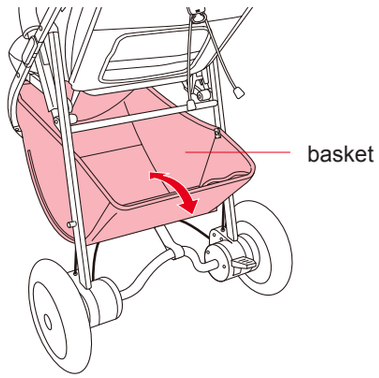


・Place items into and take items out of the basket from above.
・The basket cannot be removed.

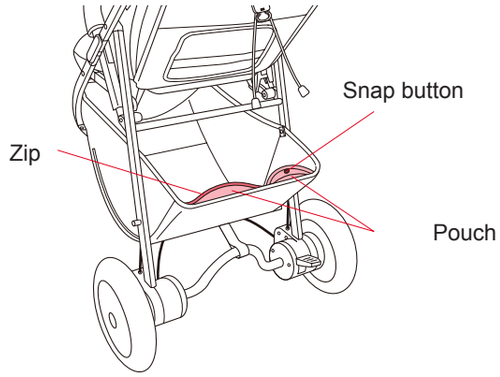


・To use the pouch, please unzip the pouch and unfasten the snap button before placing items in.

# How to fold the baby stroller

**Warning**

- Please do not open or close the baby stroller if the baby is touching or near the baby stroller. There may be a risk of the baby's fingers or toes getting caught in the movable parts, or the baby bumping into the baby stroller, hence posing injury risk to the baby.
- Do not allow a child to operate the baby stroller. There may be a risk of injury due to the baby stroller tumbling over or accident.

**Caution**


- Insert the shoulder and waist belts into the crotch buckle before folding the baby stroller. Otherwise, there may be a risk of damage to the buckle.

**Request**


- Due to packing, there may be occasions where the frame cannot be opened or closed smoothly at the initial stage. In such cases, please repeat the process 2-3 times to open the frame

- There are two ways to fold this baby stroller.


## 1 Before folding the baby stroller

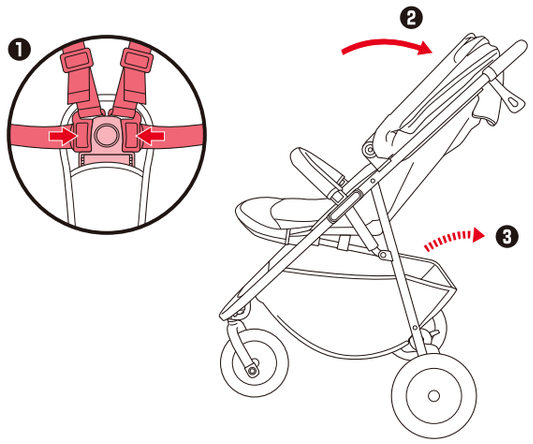


〈Diagram showing the top view of the main body〉

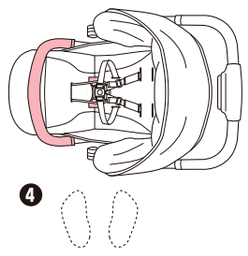



Standing position relative to the baby stroller

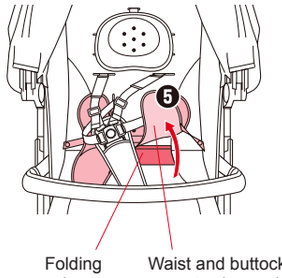



❶Insert the shoulder and waist belts into the crotch buckle. (See page 11)
❷Close the sunshade. (See page 15)
❸Remove all items from the basket.
❹Stand at the position indicated in the top-view diagram of the main body above. Please take note that the feet are not positioned in front of the wheel.
❺Please lift up the waist mamolu pad if it is in use.

## 2 When folding with one hand

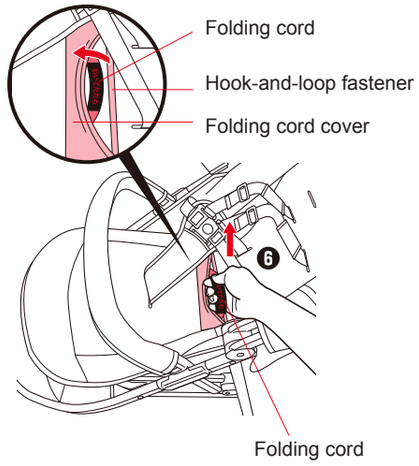


❻Unfasten the hook-and-loop fastener on the folding cord cover and grab the folding cord.

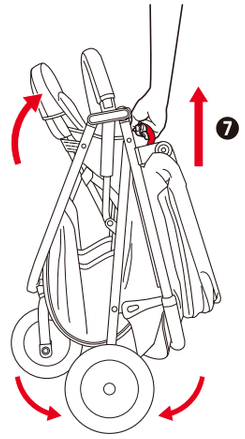



❼Pull up the folding cord to fold the main body.


**Tips**

- If the main body does not fold properly, please adjust the folding cord and try pulling it up again.

## 2 When folding with two hands

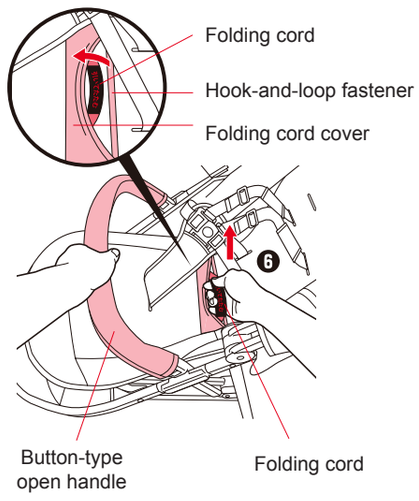


❻Unfasten the hook-and-loop fastener on the folding cord cover. Grab the folding cord with one hand and hold the Button-type open handle with the other hand.

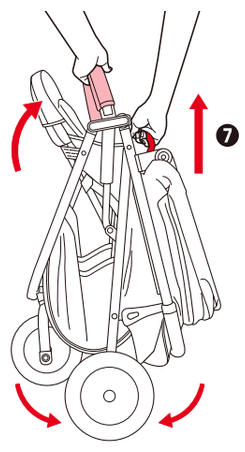



❼Pull up the folding cord to fold the main body.


**Tips**

- If the main body does not fold properly, please adjust the folding cord and try pulling it up again.


## 3 Locking and checking the baby stroller

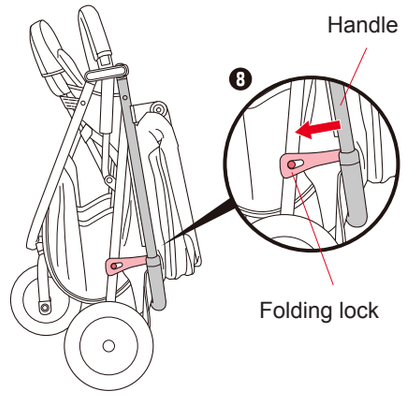


❽Check to make sure that the folding lock is engaged. If the lock is not engaged, move the handle in the direction of the arrow to engage the folding lock.

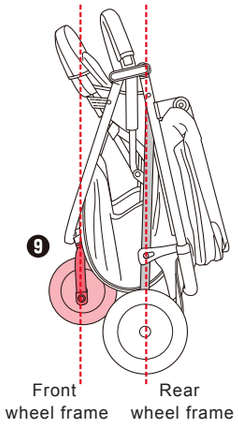


〈Correct direction〉

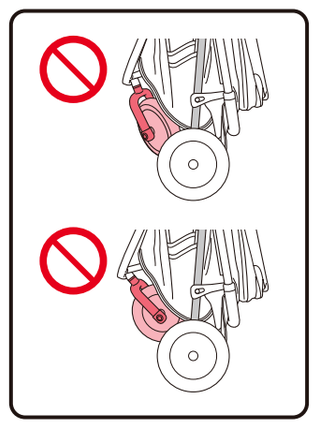

〈Incorrect direction〉

❾Check the direction of the front wheel.
The direction is correct if the front wheel frame is basically parallel to the rear wheel frame.

**Tips**

- The baby stroller will not be self-standing if the front wheel direction is incorrect. Please correct the direction of the front wheel.



Stroller instructions

## Removing the seat fabric

**Warning**

・Do not use the baby stroller with the seat removed. There may be a risk of damage to the baby stroller or other accidents.


**Caution**

・Do not use the seat if it is torn or has loose threads. There may be a risk of the child ingesting the filler material or the seat failing to fulfill its original function.


**Request**

・During installation or removal of the seat, please take note that the seat may be damaged or scratched by the finger nails.


・Please remove the seat when using the head mamolu pad and waist mamolu pad. (See page 10)

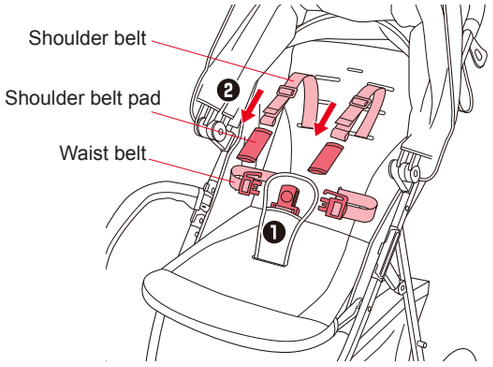



❶Press the buckle to unfasten the shoulder and waist belts.
❷Remove the shoulder belts from the shoulder belt hooks and remove the shoulder belt pads.

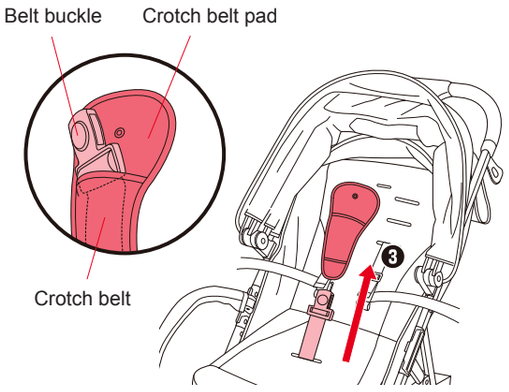



❸Unfasten the snap button, pull out the crotch belt and remove the crotch belt cover.

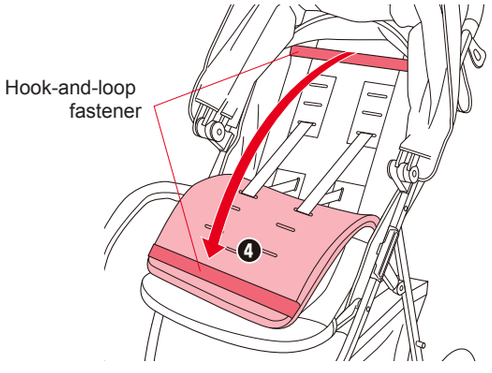



❹Lift the backrest portion of the seat and unfasten the hook-and-loop fastener at the rear of the seat's backrest portion.

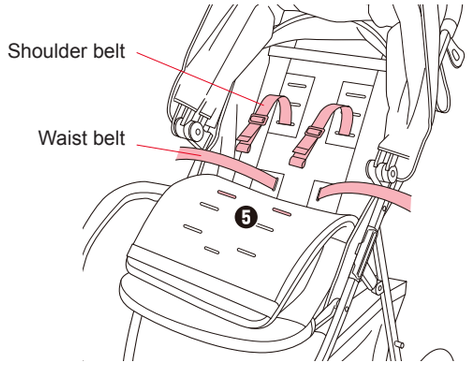



❺Pull out the shoulder and waist belts from the seat.

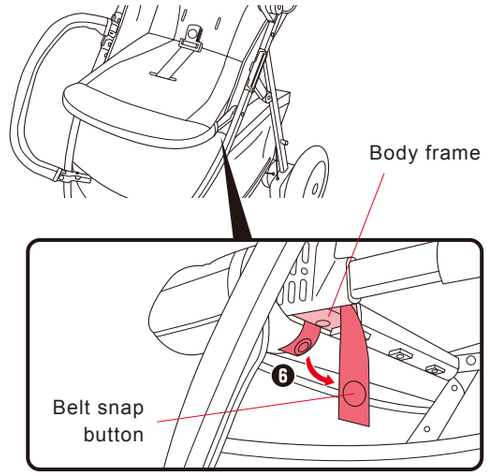



❻Unfasten the belt snap buttons and pull them out from the body frame. (Left & right)

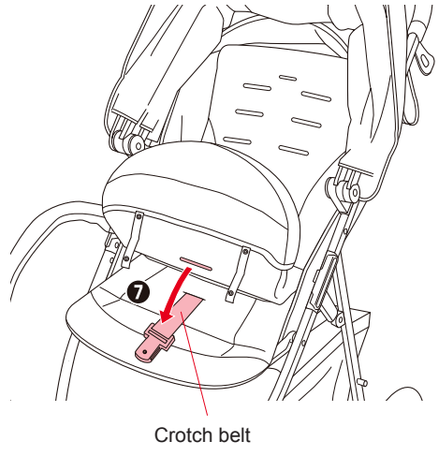


❼Lift the seat and pull out the crotch belt out from the seat.

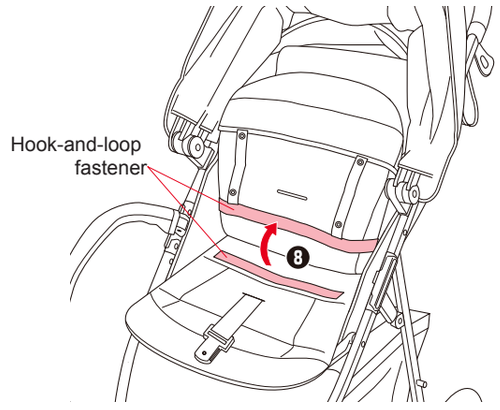



❽Unfasten the hook-and-loop fastener.

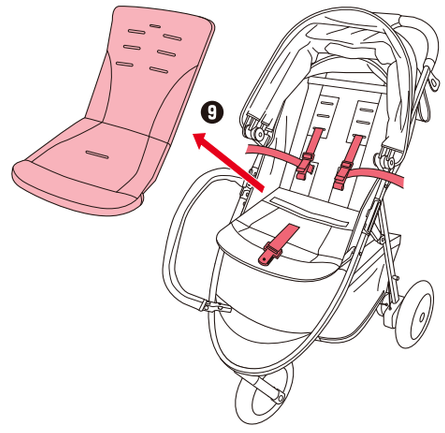


❾Remove the seat.
・The waist and crotch belts cannot be removed.

## Removing the Handle protecting cover

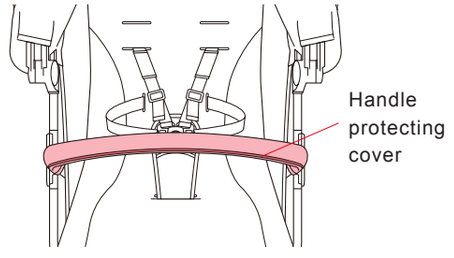


・Unfasten the zip on the Handle protecting cover and remove the cover.





Maintenance of sewing parts


## Installing the seat

**Warning**


- Do not use the baby stroller with the seat removed. There may be a risk of damage to the baby stroller or other accidents.
- When installing the seat, please ensure that the hooks and hook-and-loop fasteners are securely fastened. Using a seat which is improperly fastened may lead to damage or other consequences.

**Request**


- During installation or removal of the seat, please take note that the seat may be damaged or scratched by the finger nails.

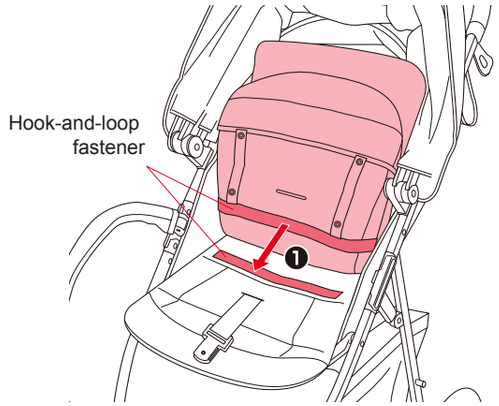



❶Fasten the hook-and-loop fasteners.

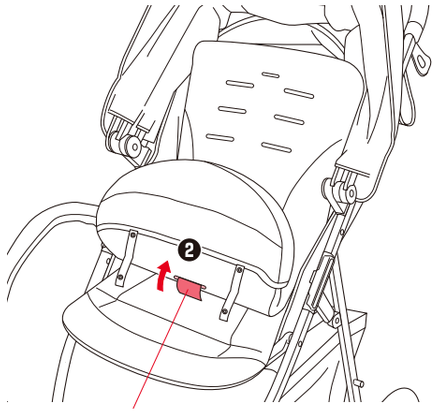



❷Insert the crotch belt through the hole on the seat.

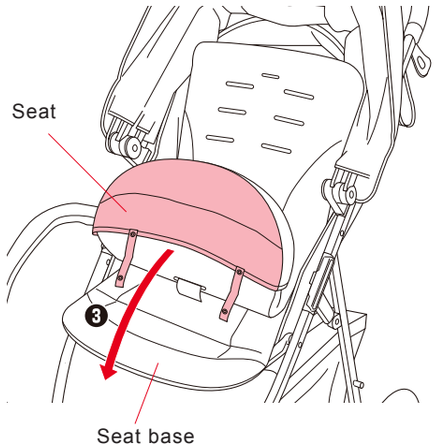



❸Place the seat over the seat base.

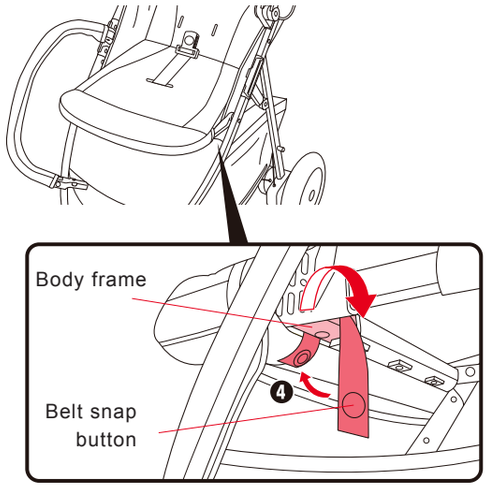



❹Wrap the belt snap buttons around the body frame and fasten them. (Left & right)

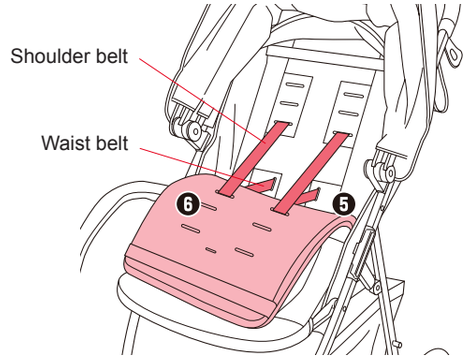



❺Insert the waist belts through the waist belt holes on the seat.
❻Insert the shoulder belts through the shoulder belt holes on the seat.

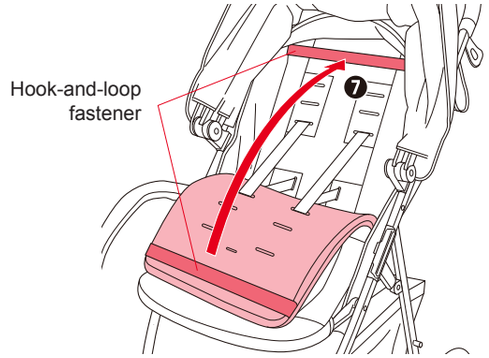


❼Fasten the hook-and-loop fastener at the rear of the seat's backrest portion.

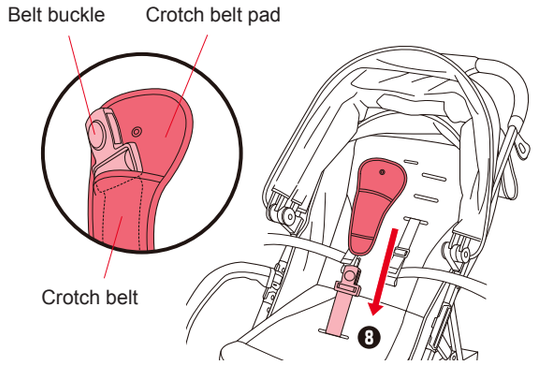



❽Install the crotch belt cover on the crotch belt and fasten the snap button.

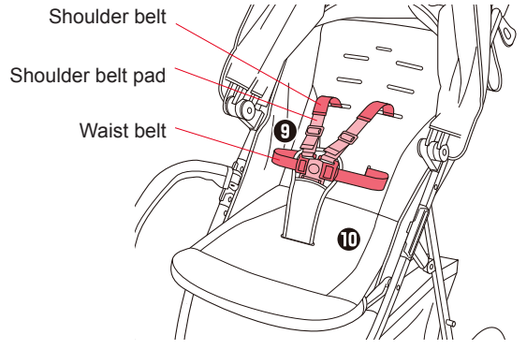


❾Insert the shoulder belts through the shoulder belt pads and attach the shoulder belts to the shoulder belt hooks.
❿Insert the waist belts into the crotch buckle.

## Folding the stroller when optional accessories are in use

- When using the original "Easy wash, multi-purpose, dual-use sweat absorbent mat", "Multi-purpose summer & winter dual-use sweat absorbent mat" and "Windproof dual-use foot muff" from Aprica, please pull out the folding cord in accordance with the instructions below. (See page 17 "Folding the baby stroller")

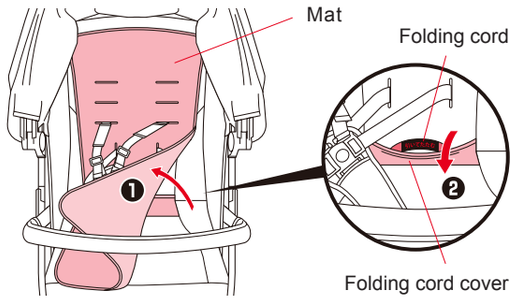


❶Roll up the mat and windproof foot-muff in the horizontal direction.
❷Open the folding cord cover and pull out the folding cord.





Maintenance of sewing parts

# Daily care and maintenance

## Washing the fabric parts

**〈Washing the seat,Handle protecting cover, head mamolu pad, waist mamolu pad and crotch belt cover〉**

・Please note the following laundering & cleaning symbols.




**⚠Caution**

・If drying the sewing outdoor, please place it flat on a shady area to dry it.
・Please do not use alkaline detergent, acidic detergent or bleach containing chlorine.

**〈Cleaning method for the shade, shoulder belt, and storage basket〉**

・Please do not put the entire component into the laundry machine. Please clean it according to the instructions below.
●Situation for water soluble smudges (such as juice, saliva, or urine): Please use a soft wet cloth, submerged in 40 degrees warm water and dried out slightly, to wipe out the smudge. Use a dry towel to wipe it out, and then put it in a shady place to dry naturally.
●Situation for non-water-soluble smudges (such as milk, fat, or salad dressing): Please add neutral detergent into 40 degree warm water, and then use brush or sponge to clean the smudge. Use cold or warm water to wash out the neutral detergent, use a dry towel to wipe water, and then place it in shady area to dry naturally.

**⚠Caution**

・If any damage or abnormal situation is discovered on sewing, please stop using it and contact our maintenance center for help.

## Maintenance of the stroller frame

**〈Maintenance of the frame and wheel〉**

・Please do not ignore the mud or dirt attached to the wheel. Wipe it out and clean it up with a wet towel.

**⚠Caution**

・Breakdowns will occur often when mud or dirt is attached to the frame or wheel, so please stop using the stroller in this situation.
・Please do not use volatile solvents such as diluents or essential oil to clean mud or dirt.

・The tire is consumable, so when the tire approaches a thickness of 5 mm, please contact our maintenance center to replace it (at your cost).

**<Maintenance of the screw and screw cap>**

・Please check if the screw or screw cap if loose routinely. Please screw it tight when they get loose.

**<Maintenance for the button-type open handle>**


・Please use a dry towel to wipe out the dust in the joint of the open handle and stroller frame.



**<Add lubricating oil>**


・Please occasionally add lubricating oil used for plastic products onto the movable joint.
・Please remove mud or dirt and wipe out any water before adding lubricating oil.
・Please add about 2~3 drops in every component.

● If the wheels no longer rotate freely, please apply off-the-shelf lubricating oil at the parts marked by the arrow ⇨ in the diagram.

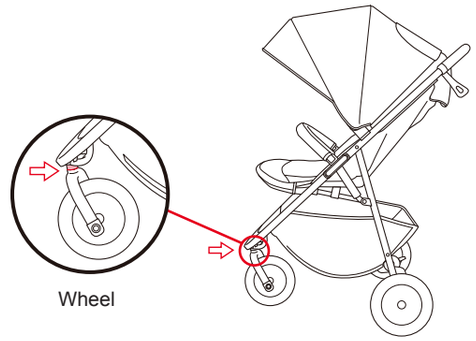



**⚠Warning**

● After removing the rear wheel, please do not apply lubricating oil at the parts marked in the diagram. Otherwise, it may cause the handle brake to stop working.

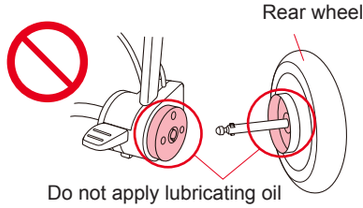



**⚠Caution**

● Do not apply lubricating oil at the area around and inside theButton-type open handle insertion point. There may be a risk of theButton-type open handle getting detached.

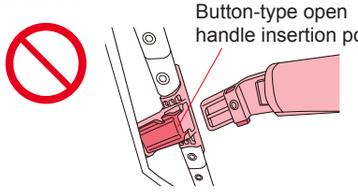



**〈How to adjust the handle brake〉**

・If it is found that the handle brake does not grip well while using the product, please adjust the brake sensitivity using the following methods. (Adjustment screws A & B are found on the left and right rear wheels)
・Please use an 8mm spanner or pincer to adjust the handle brake, be careful not to damage the screws.
・If the brake performance does not improve after adjustment, please contact our customer support centre. (See page 29)

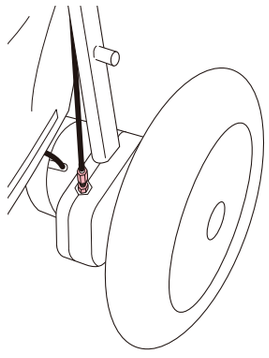


〈Rear wheel〉

**〈Too tight〉**

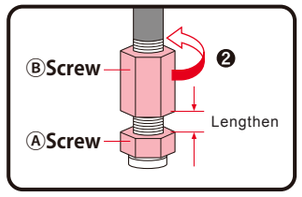


**〈Too loose〉**

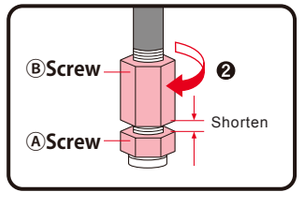


❶Loosen the lower screw A by turning it in a counter-clockwise direction ⒶScrew.

❷ **〈If the brake is too tight〉**
・Turn the upper screw B in a counter-clockwise direction to lengthen the gap between the screws.

**〈If the brake is too loose〉**
・Turn the upper ⒷScrew in a clockwise direction to shorten the gap between the screws.

❸Tighten the previously loosened lower ⒶScrew by turning it in a clockwise direction.
❹Repeat the steps above on the opposite rear wheel.
❺Push the main body and then apply the handle brake. Check to make sure that both the left and right sides are stopped together.

**⚠Warning**

・Do not adjust the handle brake when the child is seated in the baby stroller. Also, please adjust the handle brake at a safe place. There may be a risk of the baby stroller tumbling over or other accidents

## Maintenance of the tyres

### 〈How to maintain the tyres〉


**Warning**

・When sent for repair at the bicycle shop, please do not use the air compressor (automatic tyre inflator). Over inflation may cause the tyre to crack.



**Caution**

・Please check the tyre pressure before use. Please inflate the tyres appropriately if the pressure is too low.

### 〈How to inflate〉

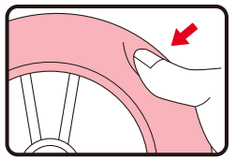

◎Please check the tyre pressure before use. Please inflate the tyres appropriately if the pressure is too low.
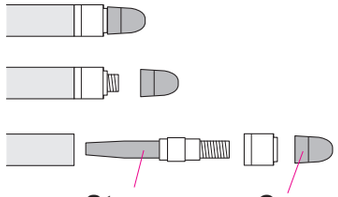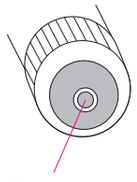
| Type | Valve type | Inflator type (inflator nozzle) | Inflation method |
|---|---|---|---|
| English |   |   | Attach the inflator nozzle of the inflator to the stem and pump air into the tyre. Check the tyre pressure. |


◎This product uses an English valve, therefore when inflating the tyre, please use an inflator of English specification or seek assistance at the bicycle shop.

・The tyre contact surface will expand if the tyre pressure is too low and this increases the rolling resistance which makes it difficult to push the baby stroller. Besides, excessively low tyre pressure may also cause tyre wear, tyre puncture or rim deformation.
・Excessively high tyre pressure may lead to tyre puncture or crack. (Please do not exceed 28PSI, which is about 200KPa or 2.0kgf). If the tyre does not display elasticity on pressing the tyre treads with a thumb or there is minor vibration when the baby stroller is moving, please release some air through the valve to adjust the tyre pressure.
・Please send the baby stroller to a nearby bicycle shop if there is a tyre puncture or risk of tyre puncture. Our customer support centre does not handle these cases.
・Tyres are consumables. Please contact our customer support centre if there is a need to replace the tyres. (See page 29, tyre replacement is a chargeable service)

| | |
|---|---|
| **・Tyre treads disappear.** | **▶ Must be replaced.** |
| **・Tyre deflates completely in a short time.** | **▶ There may be a tyre puncture.** |
| **・Deep scratch on the tyre.** | **▶ Possibility of a tyre puncture or crack.** |

### 〈How to remove the rear wheels〉

・If the rear wheels no longer rotate freely or give out squeaky noise, please remove the rear wheels and check if there are foreign particles such as sand and stones lodged in them. Besides, use a dry cloth to wipe clean the converter and other parts marked in the diagram below.

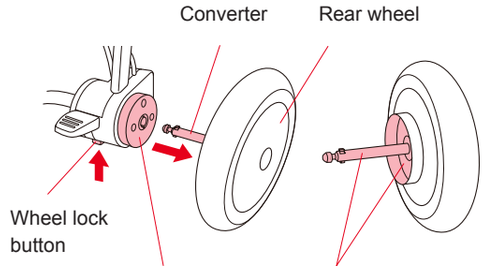


Please wipe clean the converter and these parts.

・Press and hold the wheel lock buttons and remove the rear wheels. (Left & right)
・Before removing the rear wheels, please move the child and other items on the baby stroller to a safe place.


**Warning**

・Before removing the rear wheels, please move the child and other items on the baby stroller to a safe place. There may be a risk of the baby stroller tumbling over, causing the child or other items to fall off the stroller.

### 〈How to install the rear wheels 〉


#### Stopper side

・Use the wheel with the DRIVE label on the outside.

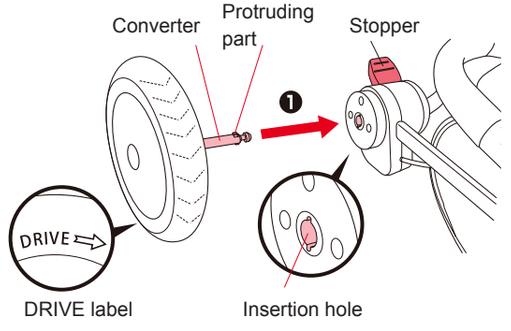


#### Folding lock side

・Use the wheel with the DRIVE label on the inside.

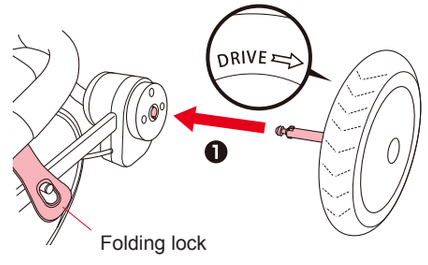


❶Align the protruding part of the converter on the rear wheel to the insertion hole and insert it. (Left & right)
・After inserting the rear wheels, pull on them 2-3 times to ensure that the rear wheels do not come off.

**Warning**

・Do not place the child in the baby stroller before the left and right rear wheels are installed completely. There may be a risk of the baby stroller tumbling over.

## Troubleshooting

・If the following method still does not resolve the problem, please contact our maintenance center.

**〈Encounter problem in use〉**

| Problem | Solution |
|---|---|
| Main body cannot be opened | Release the folding lock before opening. (See page 7) |
| Wheels do not roll smoothly | Apply lubricating oil to the wheels. (See page 24) |
| Rear wheel swivels do not rotate smoothly or give out squeaky noise | Remove and clean the rear wheels. (See page 26) |
| Rear wheel stopper does not grip well | Check for stones and foreign particles that may be lodged in the stopper. |
| Handle brake does not grip well | Lift the child out of the baby stroller and adjust the handle brake. (See page 24) |
| Backrest cannot be raised | Lift the child out of the baby stroller and pull the left and right reclining cords to raise the backrest. (See page 14) |
| Shoulder belts cannot be inserted into waist belt | Ensure that clothing fabric or other belts have not been caught in the seat belt. |
| Baby stroller cannot be folded | Carry out the steps in the <Before folding the baby stroller> section, and then proceed to fold the baby stroller. (See page 17) |
| Baby stroller is not self-standing after folding | Ensure that the front wheel direction is correct. (See page 18) |

**<For used product>**

| Problem | Troubleshooting |
|---|---|
| Do not understand how previous user was using it. | Do not recommend the use of any product with unclear using condition. |
| The stroller shows cracks or serious damage. | Please do not use it. |





## Maintenance

・Please place the framework inside a plastic bag and store in a cool place without direct sunlight.
・Please do not place heavy objects on top of this product during storage. Overload may cause malfunction or deformation.

⚠Caution
・To avoid the distortion of the shade, please do not put stroller by its side or place heavy material on the stroller. Also, keep the stroller from high temperature areas when stored.
・Please do not place the stroller near a source of ignition. Please do not put the stroller inside the car on a hot day, since the plastic component may deform and would not fulfill its function.

## Disposal guide

・Please dispose this product according to local regulations.
・Please do no dispose arbitrarily for environmental awareness.