保證書

〈僅限台灣地區使用〉

保固規定

1) 消費者請於購買時要求經銷商在本保證書上蓋章並填上銷售日期。
2) 本公司產品之保固期間為自購買日起一年間。
3) 產品在保固期間內需要維修服務時，請出示本保證書。
4) 產品維修前，未出示本產品保證書或保證書尚未蓋店章、未填寫銷售日期時，即使於一年內購買，亦無法享有一年保固之免費修繕服務。
5) 於品質保證期間內，由於零件短少、加工不良等製造商所引起之原因，由進口商提供免費修繕服務（含運費）。若為消費者之責任，則計費維修。
6) 免費修繕服務不包含以下項目。
   ◎非歸責於製造商責任之任何損壞與故障。
   ◎坐墊、遮陽篷等刮傷。
   ◎使用者任意變更所引起。
   ◎由自然災害或事故等原因所引起。
   ◎框架自然劣化（塗料部分需時常保養）。
   ◎錯誤的使用方法或保養不良所致。
   ◎輪胎、車輪的自然消耗。

使用時，如發生故障或強烈撞擊、不慎掉落等情況及發現有零件需要更換時，台灣地區請向本公司維修中心聯絡，海外地區請洽當地代理商聯絡，我們竭誠為您服務。

產品	nano+ smart	型號	
		購買日期	年　月　日
顧客資料	姓名 地址 電話 E-mail	經銷商確認章	（請務必蓋章或將保固貼紙貼於此處，保證方為有效）

○請確認購買時之經銷商店名稱，填寫型號、購買日期。
○本保證書不另行補發，因此請小心保管，避免遺失。
○本保證書填寫之個人資料，僅使用於產品保固及修理事宜。

總公司

ニューウェルブランズ･ジャパン合同会社

〒108-0023 東京都港区芝浦4-9-25 芝浦スクエアビル

進口商

台灣愛普力卡股份有限公司

總公司營業部　地址：新竹縣竹北市台元街28號5樓之3
電話：(03)5525688　傳真：(03)5525690

維修服務中心　地址：新竹縣竹北市福興路885號
電話：(03)6561261　傳真：(03)6561267

公司網址：http://www.aprica.com.tw
意見信箱：0800@aprica.com.tw　統一編號：22662003

20190920-00

nano+ smart

ナノ スマート プラス

Aprica

使用説明書／保證書



非常感謝您購買Aprica產品。
本產品適用於出生後1個月～36個月，體重15公斤以下的一位嬰幼兒使用。

※本說明書所敘述的出生後1個月，指的是母親懷孕37周以上，出生時體重超過2.5公斤以上，出生超過1個月的嬰幼兒。

使用前請詳細閱讀本說明書並正確地使用。
請勿使用本說明書所述內容以外的方法操作本產品。不僅無法充分發揮本產品的功能也十分的危險。
閱讀後請妥善保存於可隨時取閱的地方。

R41118

SG安全基準A形

目　錄

使用前

使用前的注意事項 ・・・・・・・・・・・・・ 1
　給保護者的建議／SG基準／關於本說明書的標示
使用上請注意 ・・・・・・・・・・・・・ 2～4
　警告／注意
製品取出時 ・・・・・・・・・・・・・・・・ 5
　製品特徵
各部位名稱 ・・・・・・・・・・・・・・・・ 6

嬰幼兒手推車的使用方法

嬰幼兒手推車的組裝、開啟方法
（從包裝中取出時） ・・・・・・・・・ 7～10
嬰幼兒手推車的開啟方法 ・・・・・・ 11～12
前輪迴轉固定器的使用方法 ・・・・・・・・ 13
後輪煞車器的使用方法 ・・・・・・・・・・ 13
按鈕式開放型扶手的開啟方法 ・・・・・・・ 14
置物籃的使用方法 ・・・・・・・・・・・・・ 14
遮陽篷的使用方法 ・・・・・・・・・・・・ 15
預防呼吸道閉塞型保護頭墊的安裝方法 ・・ 16
讓嬰幼兒乘坐手推車的方法 ・・・・ 17～18
安全肩帶的高度調節方法 ・・・・・・・・・ 19
多段式平躺角度調節器的使用方法 ・・・・ 20
嬰幼兒手推車的收折方法 ・・・・・・・・・ 21
嬰幼兒手推車的攜帶方法 ・・・・・・・・・ 22
收納袋的使用方法 ・・・・・・・・・・・・ 23

日常簡易保養

日常保養 ・・・・・・・・・・・・・・ 24～25
覺得故障嗎？送修前先確認 ・・・・・・・・ 26
保管方法 ・・・・・・・・・・・・・・・・・ 27
廢棄方法 ・・・・・・・・・・・・・・・・・ 27
保固與售後服務 ・・・・・・・・・・・・・・ 28
MEMO ・・・・・・・・・・・・・・ 29～30
保證書 ・・・・・・・・・・・・・・・・・・ 封底

使用前的注意事項

給保護者的建議

嬰幼兒並非成人的縮小版。
特別是頸部尚未發育完全的新生兒更是如此。
請充分了解嬰幼兒的情況，並小心使用嬰幼兒手推車。
①請隨時注意嬰幼兒的情況，並避免連續使用。
②請避免讓嬰幼兒直接照射到陽光。
　因為嬰幼兒手推車內的溫度，比大人的感覺來得高。
③請避開人群多的地方，以避免噪音、粉塵。
④經過不平整的路面，請盡可能放慢速度，並且請避開引起震動、衝擊的路段。
⑤本說明書所使用的插圖、組裝等，為求簡單明瞭，並非與實品完全相同。請以實際物品為主。

SG基準

・有顯示SG標章的手推車，表示有按照日本製品安全協會的規定，達到以下各項基準。
（此製品為SG基準A車合格品。）

適用範圍	此嬰幼兒手推車限寶寶一人乘坐，提供戶外、購物等一般家庭親子移動上的使用。
車種的形式	A車　出生後一個月*　頸椎尚未發育完成的嬰幼兒，採取平躺姿勢使用的嬰幼兒手推車。
適用年齡	出生後1個月至36個月以內
建議連續使用時間	平躺姿勢：2小時以內　　坐立姿勢：1小時以內
靠背平躺角度	150˚以上
車輪的外徑	115mm以上

※此處所稱出生後1個月，是指懷孕週數37週以上，且出生時之體重滿2.5kg以上，出生後1個月之嬰幼兒。

關於本書的標示

・「警告」、「注意」、「禁止」等符號是預測您未遵守注意事項的情況下，依據危害、損害的嚴重性來作區分。標示所表示的內容十分重要，請您務必遵守。

標示	標示之內容
⚠警告	使用方法錯誤時，可能會造成人員死亡或重傷等情形。
⚠注意	使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。

禁止	標示之意義
⃠	請勿操作本說明書所禁止的行為。

建議	使用產品時的便利小建議。

使用上請注意

・為避免意外事故發生，使用前請務必詳閱使用說明書，並且正確地使用。

⚠警告　・使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐寶寶有不慎掉落的危險。

請務必將安全肩帶、安全腰帶以及立體式股帶繫好再使用。



請勿讓寶寶站立於嬰幼兒手推車上。



安全腰帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。

請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。



因恐嬰幼兒手推車的車輪掉落於路面上的溝內，而使得嬰幼兒手推車失去平衡並且不慎造成寶寶及使用者受傷等危險發生。

當遇到有格子狀排水溝蓋的道路且必要通過的情況下，請先確認嬰幼兒手推車的車輪寬度是否適合。如果適合，請慢慢且仔細地推行嬰幼兒手推車。



前輪卡住時，請一手握著把手以及一手握著前腳管，提高前車輪。請勿將整台嬰幼兒手推車舉高。



在坡道等地方，嬰幼兒手推車因恐自行滑動、翻覆。

當寶寶乘坐時或離座時，請務必將車輪煞車器左右兩邊同時鎖上，並確認嬰幼兒手推車不會滑動。



當寶寶乘坐或置放物品時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對煞住嬰幼兒手推車。



即使鎖上煞車器，也請勿讓寶寶離開您的視線範圍，獨留於手推車內。



因恐失去平衡、看不到路面情況，而有導致摔倒之虞。

當寶寶乘坐時，請勿直接將嬰幼兒手推車提起懸空。



〈接下一頁〉

⚠警告 使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。

請勿讓兩名寶寶同時乘坐或搭乘於坐墊以外的地方。



請勿在樓梯、手扶梯等有高低落差的地方使用。



因恐嬰幼兒手推車翻覆，而使寶寶摔落或夾傷的意外發生之虞。

使用時請上下搖動把手，確認折疊鎖與車架卡榫皆上鎖，嬰幼兒手推車已經完全開啟。(請參閱P12❹❺❻❼)。



因恐嬰幼兒手推車翻覆，而使寶寶摔落受傷之虞。

當寶寶乘坐時，請勿在置物籃以外的地方放置物品，勿在把手懸吊物品。此外，請勿倚靠在把手上。



嬰幼兒手推車因恐受到路面影響使得車內的溫度變高，導致寶寶身體受到傷害的危險。

高溫或日照強烈時，請勿長時間使用。



因恐寶寶有被安全帶纏繞導致窒息的危險。

安全肩帶及安全腰帶請務必一起使用，並調整到適合寶寶體型的位置。



因恐導致嬰幼兒手推車破損、受傷、意外事故等發生。

當使用嬰幼兒手推車時，請勿過度施力。



各可動關節部位因恐有夾傷寶寶手腳、車體撞擊寶寶或使用者本人等情況發生。

當您折疊收納嬰幼兒手推車時，請勿讓寶寶靠近。



裝置按鈕式開放型扶手時，請務必注意寶寶的手腳。



⚠警告 使用方法錯誤時，可能會造成人員死亡或重傷等情形。

因恐導致嬰幼兒手推車破損，使得寶寶或使用者受傷之虞。

- 請勿讓兒童操作嬰幼兒手推車。
- 當寶寶乘坐時，請務必讓寶寶的股間對準立體式股帶的位置。否則因恐使得嬰幼兒手推車往後翻覆之虞。
- 本公司維修人員外，請勿自行分解、安裝或改造。
- 請勿在座椅縫製品拆下的狀態下使用本產品。
- 請勿在猛力撞擊或掉落後使用。
- 請勿當成兒童玩具使用。
- 在電車等場所使用時，請勿強行上下車，嬰幼兒手推車可能未被感應到，造成被電車的自動門夾住，因恐造成寶寶受傷之虞。


⚠注意 使用方法錯誤時，可能會造成人員受傷、使物品損壞等情形。

- 請務必定期檢查與保養。
- 使用前，請先確認嬰幼兒手推車主體與座椅縫製品及遮陽篷已正確安裝完成。
- 請適時替可動關節部位上油，並務必使用塑膠製品用的潤滑油。
- 長時間未使用的嬰幼兒手推車時，請務必進行檢查或保養後再使用。
- 即使是空車，也請勿將嬰幼兒手推車放置於斜坡上或鄰近車道的人行道等危險場所。
- 請勿在螺絲或螺帽鬆動的狀態下使用。
- 請勿將兩輛手推車併在一起使用。
- 請勿將前輪呈高舉狀態行走。因恐造成後部框架彎曲變形或斷裂。
- 當寶寶乘坐於嬰幼兒手推車並且在行進中時，為了寶寶的安全，請以一般的步行速度行進（時速約4公里左右的速度）。
- 請勿將嬰幼兒手推車推至沙地或泥濘處。（砂石進入車輪會造成車輪無法平穩地轉動。）
- 框架處沾染沙粒或泥土時請勿置之不理。（關節滑動處易因沙粒進入導致開關收納困難。）
- 嬰幼兒手推車是為了讓寶寶乘坐。為了避免造成損壞，請勿加裝任何市售零件。
- 請勿在置物籃放入重量5kg以上的物品。
- 家長、照護者請勿倚靠在嬰幼兒手推車上。
- 請勿用來搬運物品等。
- 本產品僅限於嬰幼兒乘坐。
- 請勿做出其他可能導致嬰幼兒手推車故障之行為。
- 請勿將本車用於寶寶乘坐之外的任何用途上。
- 請勿在公車上使用。本產品之設計，並非以公車上使用為目的。若在公車上使用本產品，因恐轉彎、緊急煞車等原因，而有發生翻覆或意外事故之虞。
- 電車上使用的注意事項。本產品之設計，並非以電車上使用為目的。於電車中使用本產品，恐因轉彎或緊急煞車等情況而有翻覆之虞，因此請務必使用煞車器，並盡充分之注意，若發生意外，責任由使用者自行承擔。
- 請勿在積雪處或是結霜的路面上使用。
- 風勢強勁時，請勿使用。
- 打雷時，請勿使用。
- 由於易導致嬰幼兒手推車車內溫度變高，故請勿在室內、靠近火源處或高溫場所等地方使用遮雨罩。
- 由於易造成塑膠部分變形而無法維持其原有功能，故請勿放置靠近火源處或炎夏高溫車內。

- 請勿勉強越過高低落差的地面。以免造成損壞或故障。

〈越過高低落差地面的方法〉

將把手往下壓，同時提起前方的車架。

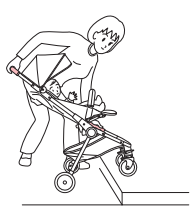


製品取出時

・製品取出時，請務必檢查配件是否齊全或損壞。
・部品有缺少、弄錯或者破損時，請與經銷商或者進口商連絡。（請參閱封底「產品保證書」）


主　體


・從箱子裡取出時，本產品處於折疊狀態。
　嬰幼兒手推車的打開方式，請參閱P7。

・從包裝箱取出時，本產品為摺疊狀態，前輪、後輪尚未組裝。
　使用前必須組裝前輪（左右相同）、後輪（紅色、藍色記號）。
・嬰幼兒手推車的組裝方法請參閱P7。
・組裝時無需器具或工具。

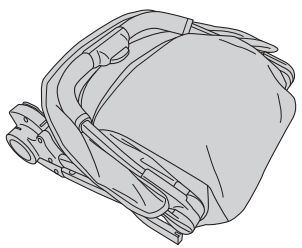

附屬品


（左右相同）
前輪


（紅色記號）　（藍色記號）
後輪


（裝設於手推車本體上）
預防呼吸道閉塞型保護頭墊


收納袋


使用說明書


警告

・請勿將產品包裝箱、捆包材料、塑膠袋放置於寶寶伸手可及之處。否則恐導致寶寶將其套在頭上而窒息。


〈製品特徵〉

・把手固定在後側。
・車體在折疊狀態可自行站立。
・使用輕量鋁管做為框架。


各部位名稱（產品與圖示如有不同，請以實品為主）

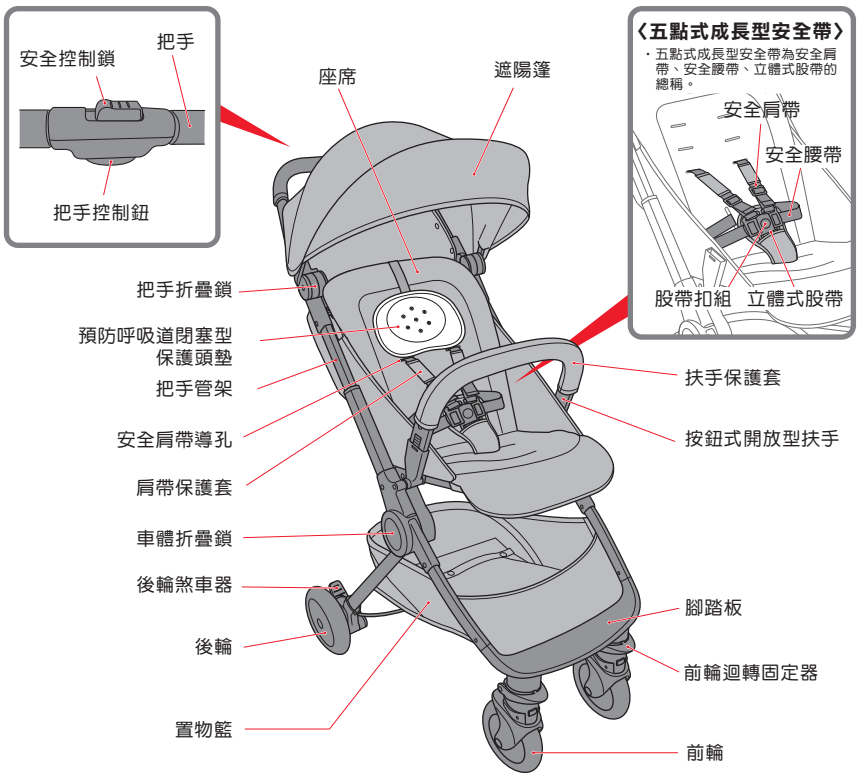

〈靠背背面〉

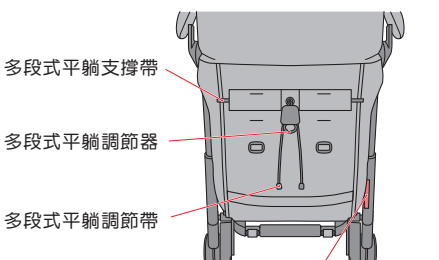

〈折疊狀態〉

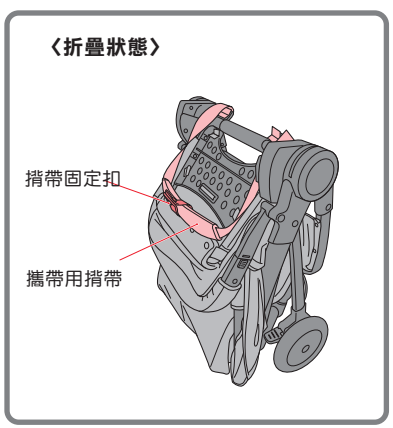

⚠警告


・組裝與折疊展開須由成人操作，不可在寶寶接觸或靠近時操作。可動關節部位可能會夾傷寶寶的手、腳，手推車也可能會撞傷寶寶。
・使用前請確認嬰幼兒手推車是否正確組裝，未正確組裝恐導致意外事故。

⚠注意


・組裝時請先鋪設保護墊以保護地面與產品，否則地面與產品可能在組裝過程中受損。

・從包裝箱取出時，手推車尚未組裝前輪、後輪，使用前必須組裝前輪、後輪。

〈前輪、後輪的組裝方法〉

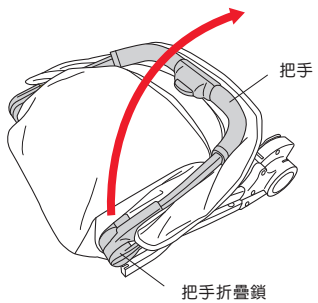


❶將把手面朝上放置。
❷向上提起把手折疊鎖。

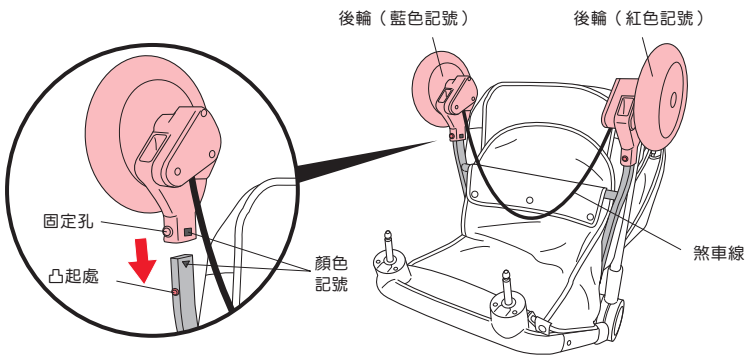


❸對齊後輪與腳管的記號，插入後輪。（左右）請確認腳管凸起處完全嵌合在後輪固定孔。

⚠注意


・插入後輪之前，請確認煞車線是否變形。

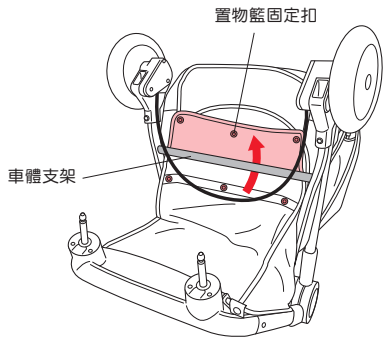


❹打開置物籃後方的固定扣（3個），將縫製品穿過車體支架下方。

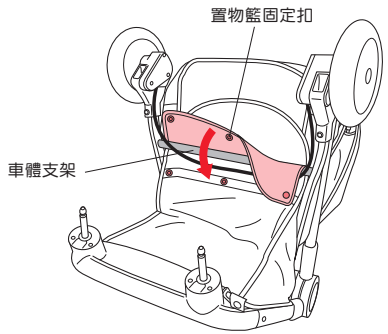

❺包覆車體支架與煞車線之後，固定置物籃後方的固定扣（3個）。

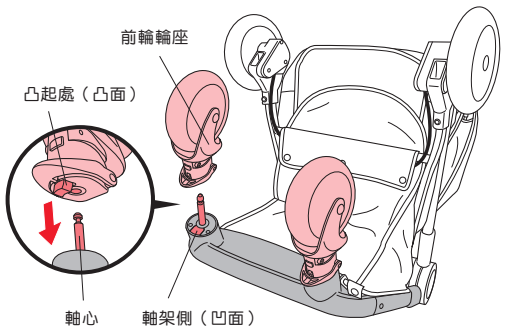

❻對齊前輪輪座凸起處（凸面）與軸架（凹面），將輪座插入軸心。（左右相同）

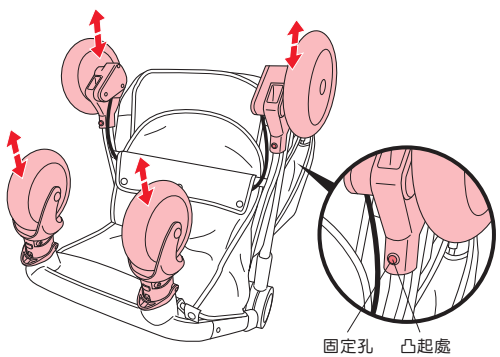


❼組裝完成後，前輪、後輪各向外拉2~3次，確認是否會脫落。

・確認後輪固定孔確實與腳管凸起處完全嵌合狀態。


・從包裝箱取出時，把手管架為收縮狀態。
　使用前務必將把手管架拉長並固定。
・只有最初從包裝箱取出時才能固定把手管架。

⚠注意
・把手管架收縮時，無法使用嬰幼兒手推車。
・把手管架收縮時，無法折疊嬰幼兒手推車。


〈把手管架的伸縮與固定〉

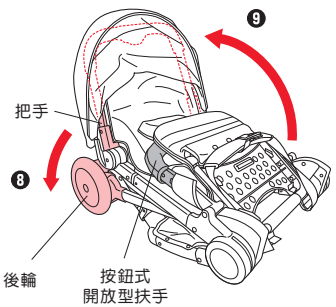


❽放下後輪。
❾拉起把手。

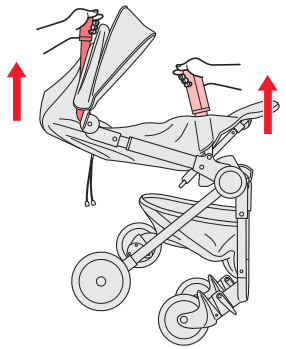


❿握住把手與按鈕式開放型扶手，將車體向上拉。

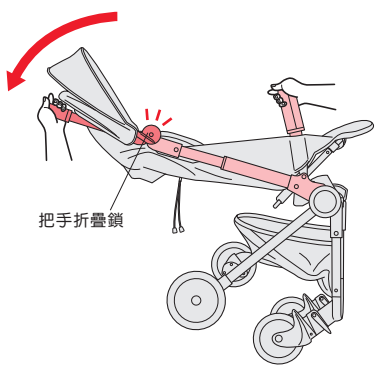

⓫拉起把手，將把手折疊鎖展開固定。

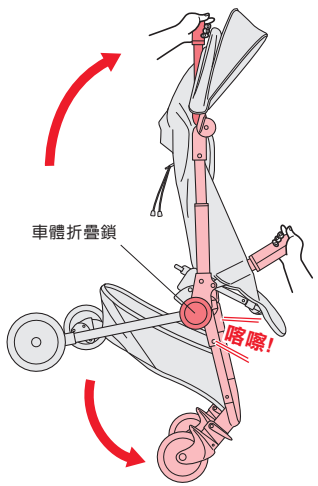

⓬拉開前後輪，直到車體折疊鎖發出「喀嚓」的聲音。

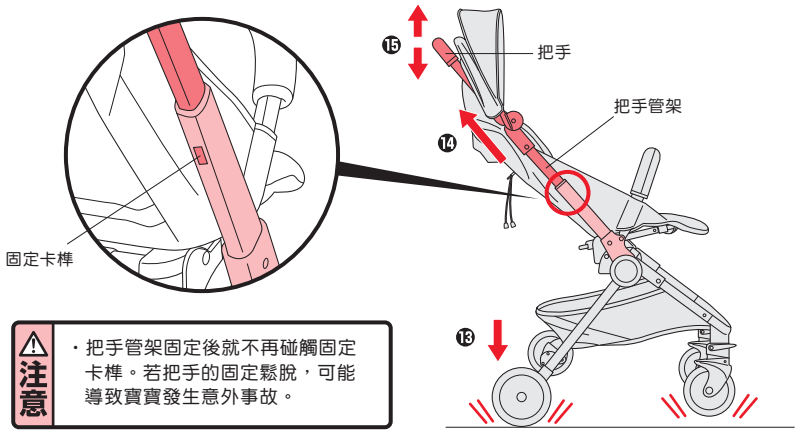


⚠注意
・把手管架固定後就不再碰觸固定卡榫。若把手的固定鬆脫，可能導致寶寶發生意外事故。

⓭放下車體。
⓮拉開把手延伸直到把手管架卡榫固定。（左右）
⓯請上下搖動把手，確認把手折疊鎖與車體折疊鎖皆上鎖，嬰幼兒手推車已經完全展開。

〈確認組裝狀況〉

・請在使用嬰幼兒手推車前，依照目前組裝的順序，確認是否正確組裝。

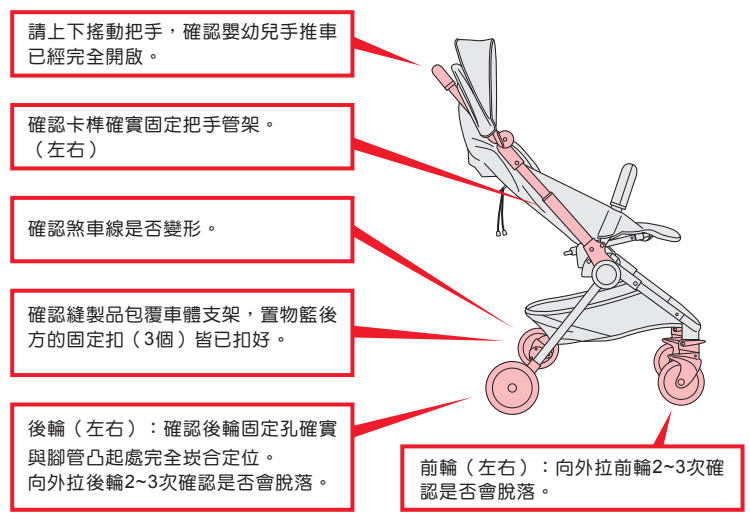


嬰幼兒手推車的使用方法

警告

・當寶寶碰觸手推車或靠近手推車時，請勿收折或打開車體。因恐可動關節部位夾到寶寶手、腳或是嬰幼兒手推車碰撞寶寶身體，而使寶寶有受傷之虞。
・請在平坦處折疊展開，否則可能因為重心不穩而摔倒。
・請勿讓兒童操作嬰幼兒手推車。因恐導致跌倒或意外事故發生等危險。

小叮嚀


・因捆包裝箱的關係，初次使用時可能無法順利開啟的情況發生。請重複操作2～3次後再進行開啟。

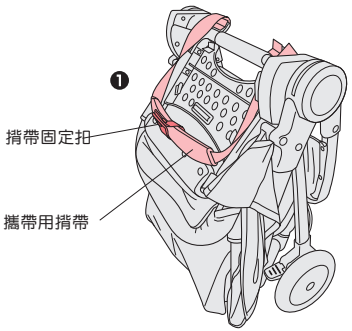


❶請確認攜帶用揹帶已確實跟揹帶固定扣扣住。（請參閱P22）

警告

・在嬰幼兒手推車展開的狀態下，請務必以揹帶固定扣扣住攜帶用揹帶，並收納在主體座面下方。否則可能導致跌倒或其他意外事故。

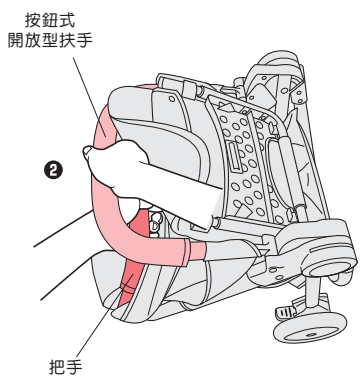


❷拉起按鈕式開放型扶手，稍微打開車體。

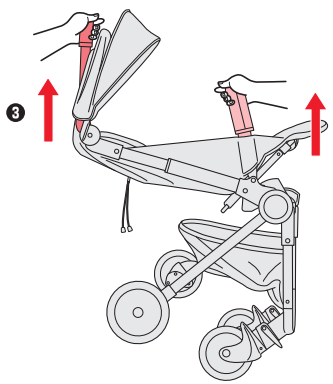


❸向上提起把手，拉起車體。


警告

・使用時請上下搖動把手，確認把手折疊鎖與車體折疊鎖皆喀嚓固定扣合，嬰幼兒手推車已經完全展開。因恐嬰幼兒手推車收折時，導致寶寶有摔落、夾傷之虞。

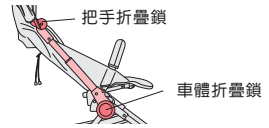

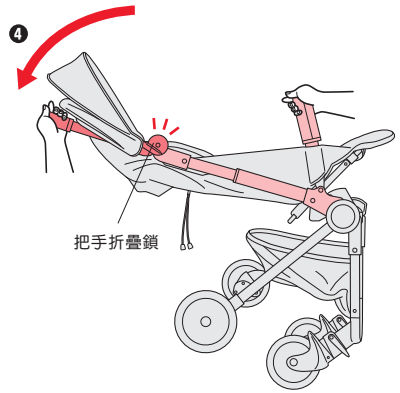


❹拉起把手，鎖住把手折疊鎖。

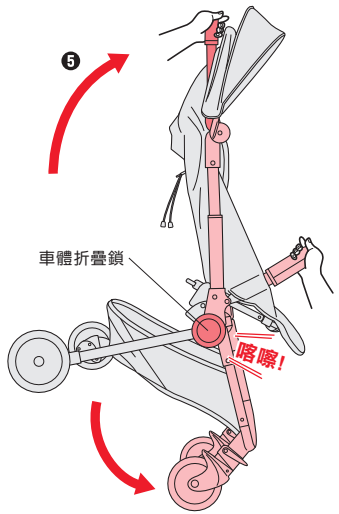

❺拉開前後輪，直到車體折疊鎖發出「喀嚓」的聲音。

建議

・前輪向前往地面壓較容易拉開。

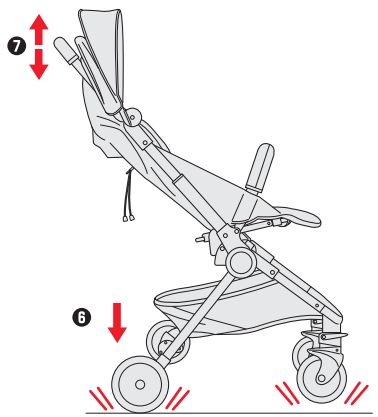


❻放下車體。
❼請上下搖動把手，確認把手折疊鎖與車體折疊鎖皆已固定扣合，嬰幼兒手推車已經完全展開。

前輪迴轉固定器的使用方法

〈解除前輪迴轉固定器時〉


・在平坦的路面上使用輪座，可自由改變前輪的方向，以順暢地變換方向。
平常請於這樣的狀態下使用。

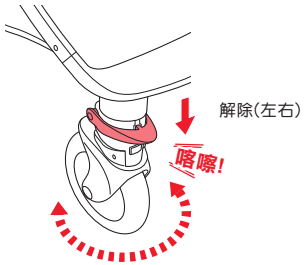

●將前輪迴轉固定器往下壓，解除鎖定狀態。（左右）

〈鎖定前輪迴轉固定器時〉

・在凸凹不平、坡道、傾斜地面等場所行進時，暫時先將行進方向前側（左右2處）的前輪迴轉固定器鎖上，這樣能使手推車比較好推。

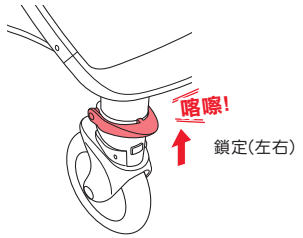

●將前輪迴轉固定器往上扳，鎖定車輪迴轉狀態。（左右）

後輪煞車器的使用方法

警告


・當寶寶乘坐時或離座時，務必將後輪煞車器鎖上。
・當寶寶乘坐在手推車上時，請勿過度相信煞車器。因路面狀態、構造功能及耐久性等之不同，因此煞車器未必能絕對停住嬰幼兒手推車。
・即使鎖上後輪煞車器，當寶寶乘坐在手推車上時，仍然請勿離開寶寶的身邊。

注意

・即使寶寶未乘坐在手推車上，當要離開嬰幼兒手推車時，仍然請將後輪煞車器鎖上。

・只要將後輪右側的後輪煞車器往下壓，即可鎖住左右兩側的後輪。

〈鎖定後輪煞車器時〉

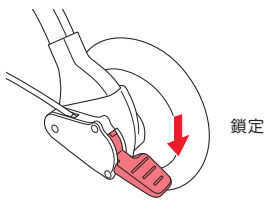


❶將後輪煞車器往下壓即可鎖上車輪。
❷將手推車前後動一動，以確認後輪煞車器已鎖上。

建議

・若後輪煞車器難以鎖上時，請將嬰幼兒手推車前後來回推動之後，再一次鎖上。


〈解除後輪煞車器時〉

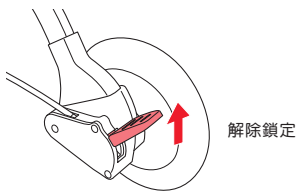

●將後輪煞車器往上扳，解除鎖定狀態。（左右）

注意

・鎖上或解除後輪煞車器時，請注意手指。因恐不慎手指放在紅色箭頭處而夾傷。




按鈕式開放型扶手的開啟方法

警告


・扣合扶手時，請注意避免手指被開關夾傷。
・請勿在打開按鈕式開放型扶手的狀態下，將已乘坐寶寶的推車抬起或拉動。

〈拆卸方法〉

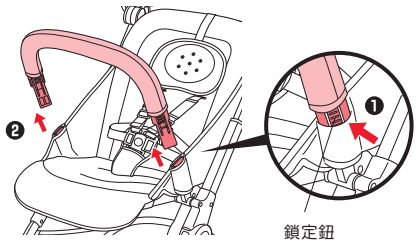


❶一邊按住鎖定鈕，
❷一邊將按鈕式開放型扶手向上拉。

〈安裝方法〉

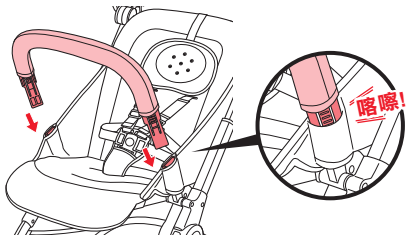

●將按鈕式開放型扶手插入底座，直到聽見「喀嚓」的聲音。

〈扶手保護套的拆卸方法〉

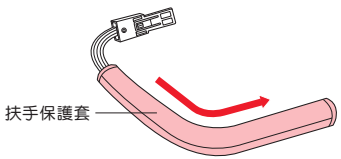


●抽拉出扶手保護套。

・安裝時以相反步驟操作即可。

置物籃的使用方法

注意

・請勿將形狀銳利的物品置於置物籃內。否則可能會造成置物籃損壞。
・請勿放置重量5kg以上的物品。
・收折嬰幼兒手推車之前，請先將物品取出。※請勿將貴重物品放在置物籃內。

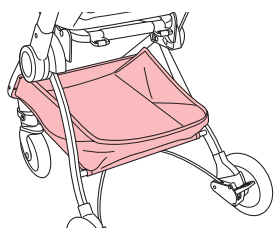

●請由置物籃上方收納物品。

建議


・放置物品時，請儘量使物品的重量平均分散於置物籃底。

遮陽篷的使用方法

警告


・請在寶寶未接觸遮陽篷的狀態下，開啟或收起遮陽篷。
否則可動關節部位可能會夾到寶寶的手部。

打開方法

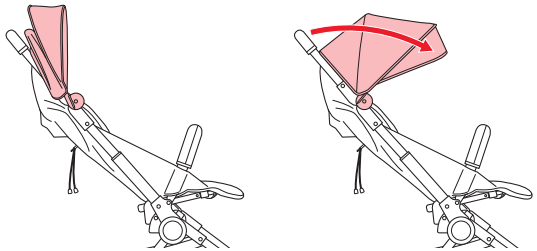


●將遮陽篷往前展開。

收起方法

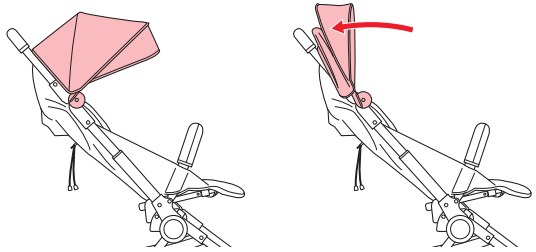

●收起遮陽篷。

遮陽篷防曬遮罩的收納方法

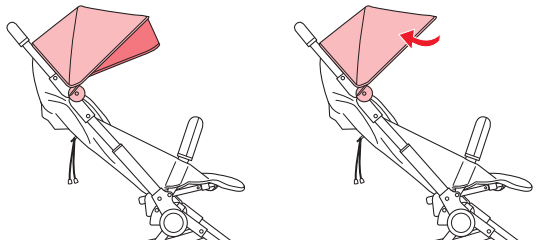


●將遮陽篷防曬遮罩向內收折。

預防呼吸道閉塞型保護頭墊的安裝方法

・預防呼吸道閉塞型保護頭墊在嬰幼兒手推車內，用來輔助寶寶維持適當正確的姿勢。


預防呼吸道閉塞型保護頭墊　頸部尚未發展成熟前，請務必使用。（約四個月左右）

・安裝預防呼吸道閉塞型保護頭墊時 ，請務必將安全肩帶安裝於下段肩帶導孔。
最高月齡使用至7個月為止。（請參閱P19「安全肩帶高度的調節方法」）

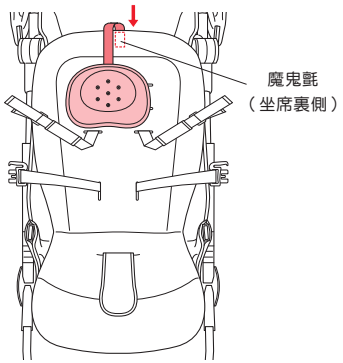

●將預防呼吸道閉塞型保護頭墊表面的魔鬼氈.
黏貼在座位背面的魔鬼氈上。

〈預防呼吸道閉塞型保護頭墊的安裝位置〉

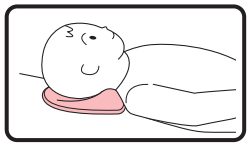


●安裝時，請讓頭墊下端的鼓起部分在寶寶的頸後。
※當鼓起部分不適合寶寶的頸後時，請立即拆除。

注意

・安全肩帶穿在中段、上段的肩帶導孔時，無法使用預防呼吸道閉塞型保護頭墊。安全肩帶穿在下段的肩帶導孔時若寶寶頸部已成熟，即可取下預防呼吸道閉塞型保護頭墊。


1 準備

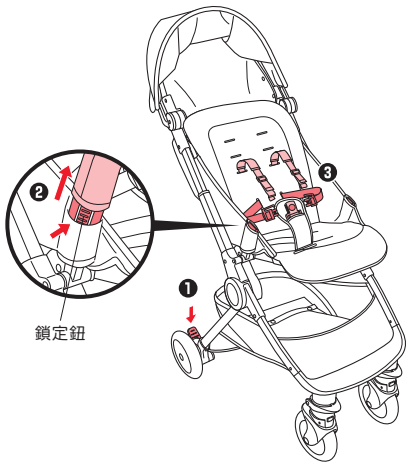

❶鎖上後輪煞車器。
❷按下按鈕式開放型扶手鎖定紐。
・拆下按鈕式開放型扶手。
❸解開安全肩帶、安全腰帶。
・按下立體式股帶的固定扣，解開安全腰帶、安全肩帶。


・需要改變安全肩帶的位置時，請參閱P19「安全肩帶高度的調節方法」。
・需要改變座椅的角度時，請參閱P20「多段式平躺角度調節器的使用方法」。


建議 ・請先將拆下來的按鈕式開放型扶手，暫時放在置物籃中。



2 乘坐方法

〈寶寶乘坐之後，務必繫上安全帶〉

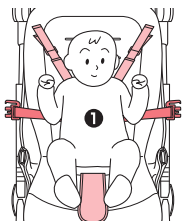

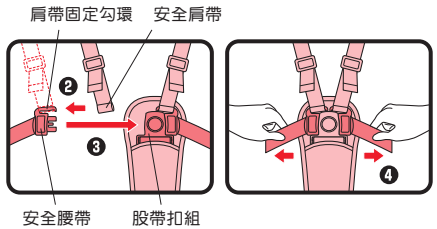



❶當寶寶當乘坐嬰幼兒手推車時，請讓寶寶的胯下對齊立體式股帶。
❷將安全肩帶扣入肩帶固定勾環。
❸將安全腰帶扣入股帶扣組。
❹將安全腰帶往兩側拉，調節至適合寶寶的寬鬆度。


※請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。(請參閱P18)

建議 ・安裝安全肩帶時，警示標籤應朝向外側。
・請確認安全肩帶沒有扭曲打結的情況。


警告
・繫上安全帶後，請確認左右兩側的安全腰帶有調節至適合寶寶的寬鬆度。
・使用時，務必將安全肩帶扣在肩帶固定勾環上。因恐安全肩帶可能會纏繞在寶寶頸部。
・請勿讓寶寶離開您的視線。即使繫上安全帶，寶寶仍然可能會站起來。請依寶寶成長狀態調節安全腰帶。
安全腰帶若有鬆脫，因恐寶寶站起來並且不慎造成跌倒或掉落等危險發生。
・寶寶乘坐時，應該讓寶寶的股間對準立體式股帶的位置。否則嬰幼兒手推車有可能會往後方翻覆。

3 安全帶的調整

〈安全腰帶的調整〉

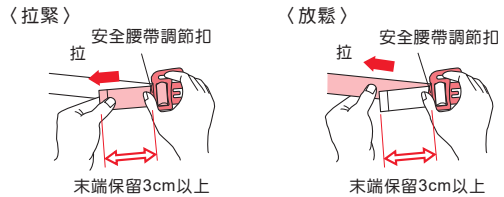


●輕押安全腰帶調節扣，拉動安全腰帶調整是當長度。

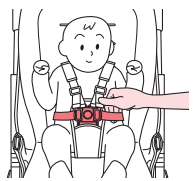


・安全腰帶的長度，以安全腰帶與寶寶之間可容納成人4隻手指頭的寬鬆度為適當。

〈安全肩帶的調整〉

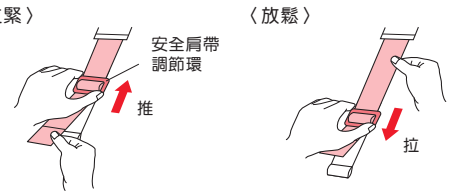


●推動安全肩帶調節環進行長度調整。

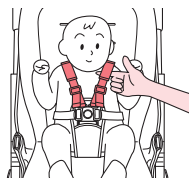

・安全肩帶的長度，以安全肩帶與寶寶之間可容納成人1隻手指頭的寬鬆度為適當。

〈立體式股帶的調整〉

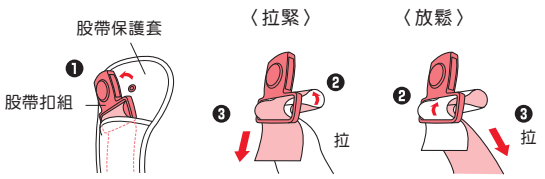


❶解開股帶扣組與股帶保護套之間的固定扣。
❷立體式股帶取出。
❸股帶拉出，調整長度。
・調整之後，請務必確認股帶扣組與股帶保護套之間的固定扣已經確實扣上。

警告
・請依寶寶的成長情況來調整安全肩帶、安全腰帶、立體式股帶。
安全肩帶、安全腰帶、立體式股帶過鬆時，即使繫上安全帶，寶寶仍然可能站起來，而使寶寶有摔落之虞。
・關閉按鈕式開放型扶手時，請注意避免夾到寶寶的手指。
・關閉按鈕式開放型扶手後，請拉拉看，以確認按鈕式開放型扶手已確實組裝好。
・當寶寶乘坐在手推車上時，請勿舉起按鈕式開放型扶手。
・安全腰帶的尾端（插圖中 ⟺ 的部分），務必保留3cm以上。
・調節座椅靠背的角度時，應一併調整安全肩帶、安全腰帶、立體式股帶的長度。

〈安裝按鈕式開放型扶手〉




〈解除後輪煞車器〉

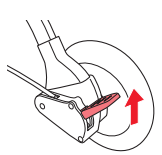

安全肩帶的高度調節方法

⚠警告
・請依寶寶的成長情況，調整安全肩帶的高度。

〈安全肩帶的位置〉
・製品從包裝箱取出時，安全肩帶位置設定於下段。

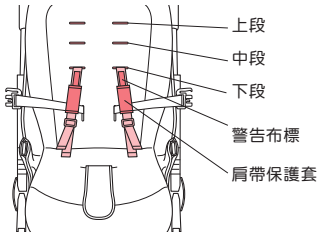

〈安全肩帶的使用標準〉
・穿過肩膀位置下段的安全肩帶導孔。




・安全肩帶的位置，請依以下3段標準進行調整。


月齡（體格）的標準	安全肩帶導孔的位置
18個月～36個月	上　段
7個月～18個月	中　段
1個月～7個月	下　段

※請依個別差異對照上述表示的標準進行調整。


建議
・安裝安全肩帶時，警告布標應朝向外側。
・請確認安全肩帶沒有扭結的情況。

〈安全肩帶的高度調節方法〉
・將安全肩帶、安全腰帶，從股帶扣組上解開。（請參閱P17「準備❸」）
・由安全肩帶扣環上取下安全肩帶。（請參閱P17）

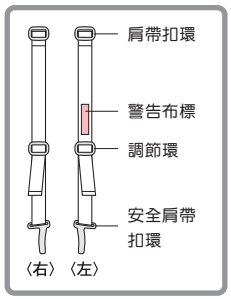

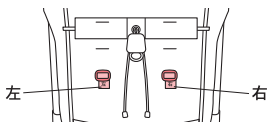


・由嬰幼兒手推車的背面觀看時，左側穿過標示為左邊的安全肩帶，右側則穿過標示為右邊的安全肩帶。

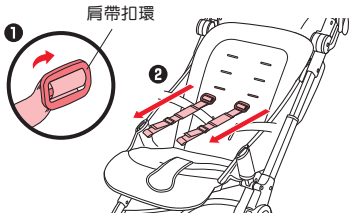


❶將安全肩帶扣環轉向與肩帶平行的方向。
❷將安全肩帶扣環穿過坐席導孔以及靠背導孔後拉出安全肩帶。(左右)

〈使用上段導孔時〉

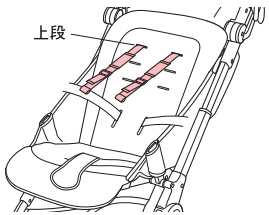


●穿過坐席導孔（上段）與靠背導孔（上段）。

〈使用中段導孔時〉

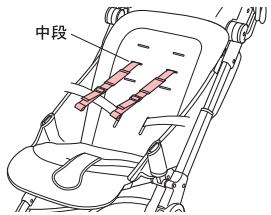

●穿過坐席導孔（中段）與靠背導孔（中段）。

〈使用下段導孔時〉

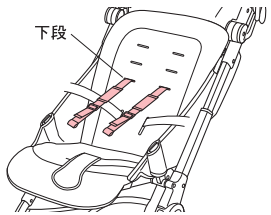

●穿過坐席導孔（下段）與靠背導孔（下段）。

・安全肩帶高度調整後，請拉動2~3次，務必確認安全肩帶不會脫落。

多段式平躺角度調節器的使用方法


・多段式平躺調整器的主要機能為支撐寶寶維持在舒適的姿勢。
・靠背平躺的狀態是為了讓寶寶乘坐時也能夠平躺所設計。

〈靠背的角度標準〉

月齡（體格）的標準	靠背的角度位置
1個月～頸椎成熟	平躺狀態
頸椎成熟～可獨立坐立	平躺狀態～中間位置
可獨立坐立	平躺狀態～坐立狀態

※請依個別差異對照上述表示的標準進行調整。

靠背平躺時

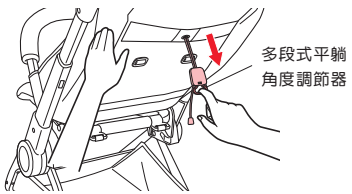




❶放鬆安全肩帶。（請參閱P18）
❷用單手扶住寶寶，另一手拉住多段式平躺角度調節器。
❸一邊拉著拉環，一邊將靠背往後倒，調整至適當的角度。
❹調整靠背後，請調整安全肩帶、安全腰帶的長度。（請參閱P18）


⚠警告
・在寶寶乘坐的狀態下，若要將靠背倒下時，請先鬆開安全肩帶。
・靠背角度調整完成後，接著調整安全肩帶、安全腰帶的長度。安全肩帶、安全腰帶過鬆的話，即使繫上安全帶，寶寶仍然可能站起來，因而使得寶寶有摔落之虞。

⚠注意
・請勿一邊推著嬰幼兒手推車，一邊調整靠背角度。
・在寶寶乘坐的狀態下，若要調整靠背角度時，請勿急速且大幅度的改變角度。
・在寶寶乘坐的狀態下，若要將靠背倒下時，請確實扶住寶寶。
・無法獨立坐立的寶寶，請使用坐席平躺的方式。

建議
・可獨立坐立的寶寶，將頭置於靠背上端的位置時，若將靠背倒下，寶寶的姿勢將會變得不自然，因此請將靠背角度調整在適當的位置。

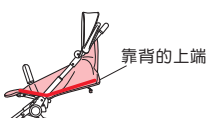

靠背立起時

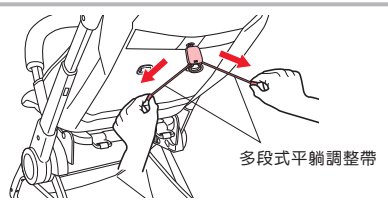

●請在寶寶重量未完全依靠靠背支撐下，兩手同時拉住多段式平躺調整帶往箭頭(如左圖)方向拉出，既可將座椅靠背立起。


建議
・當寶寶重量完全倚靠靠背支撐的狀態下，請勿豎起靠背。

嬰幼兒手推車的收折方法

警告
- 當寶寶靠近碰觸手推車時，請勿收折或打開車體。恐因可動關節部位夾到寶寶手腳或因嬰幼兒手推車碰撞寶寶身體，而使寶寶有受傷之虞。
- 請在平坦處折疊展開，否則可能因為重心不穩而摔倒。
- 請勿讓孩童操作嬰幼兒手推車。因恐造成翻覆、意外事故，而有受傷之虞。

注意
- 請先將安全肩帶、安全腰帶插入股帶扣組後，再收折嬰幼兒手推車。否則恐有使安全股帶扣破損之虞。


小叮嚀
- 因捆包裝箱的關係，初次使用時可能無法順利開啟的情況發生。請重複操作2～3次後再進行開啟。

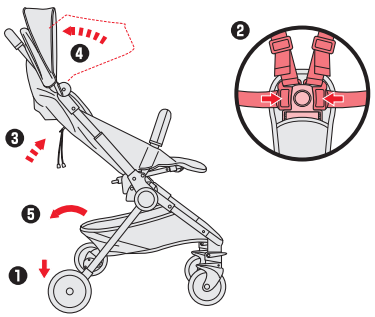


〈收折之前〉


❶鎖上後輪煞車器。（請參閱P13）
❷將安全肩帶、安全腰帶，扣入安全股帶扣組。（請參閱P17）
❸豎直靠背。（請參閱P20）
❹收起遮陽篷。（請參閱P15）
❺將置物籃內的物品取出。


建議
- 若後輪煞車器未上鎖，折疊手推車時可能會鬆開。

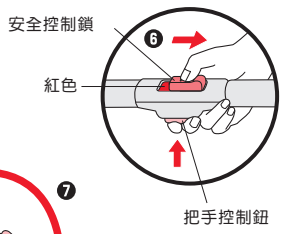

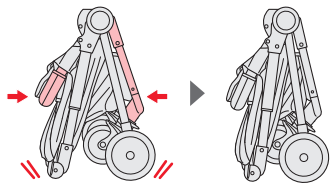

建議
- 兩手壓擠按鈕式開放型扶手與腳踏板，即可收折成小巧體積。

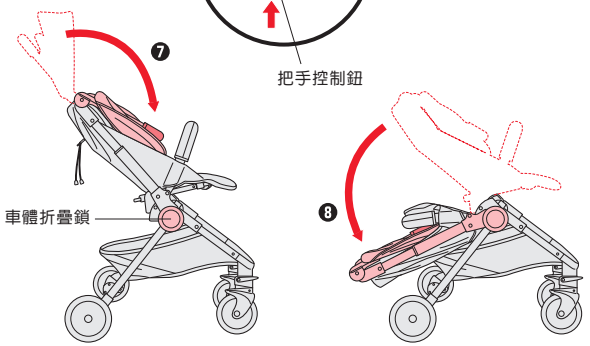

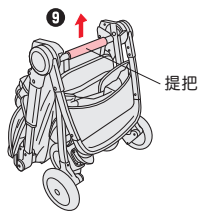

〈解除安全控制鎖〉

❻在安全控制鎖往箭頭方向滑動的狀態下（標示為紅色）用力按住把手控制鈕。
❼將把手往前放下。
❽車體折疊鎖解鎖並折疊後，雙手即可離開。

〈收折方法〉

❾拉起提把收折手推車。


嬰幼兒手推車的攜帶方法


攜帶用揹帶的使用方法

- 使用攜帶用揹帶，即可將折疊好的嬰幼兒手推車掛在肩膀或手臂上攜帶。

警告
- 在嬰幼兒手推車打開的狀態下，請務必以揹帶固定扣固定好攜帶用揹帶，並收納在主體座面下方。否則可能導致跌倒或其他意外事故。

注意
- 請勿拉著攜帶用揹帶以車輪著地的方式拖行嬰幼兒手推車。否則嬰幼兒手推車可能會因此損壞。
- 使用攜帶用揹帶搬運嬰幼兒手推車時，不可突然轉身或搖擺，以免撞到旁人或弄髒衣物。

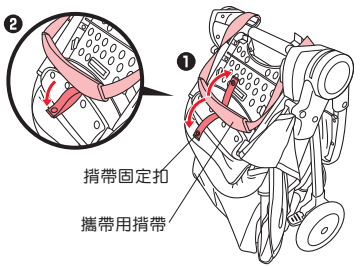

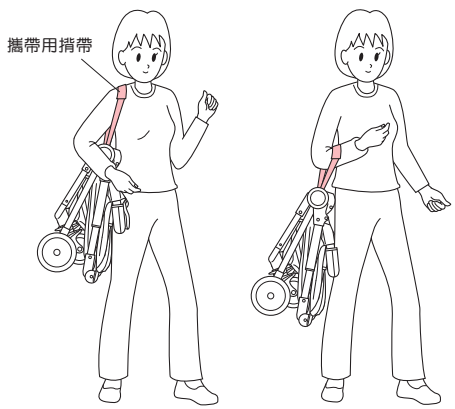

❶解開揹帶固定扣。
❷扣上揹帶固定扣。
※收納時請以相反步驟進行。

提把的使用方法




- 握住提把即可搬運折疊好的嬰幼兒手推車。

注意
- 使用提把搬運嬰幼兒手推車時，應留意避免撞到旁人或弄髒衣物。

收納袋的使用方法


收納方法

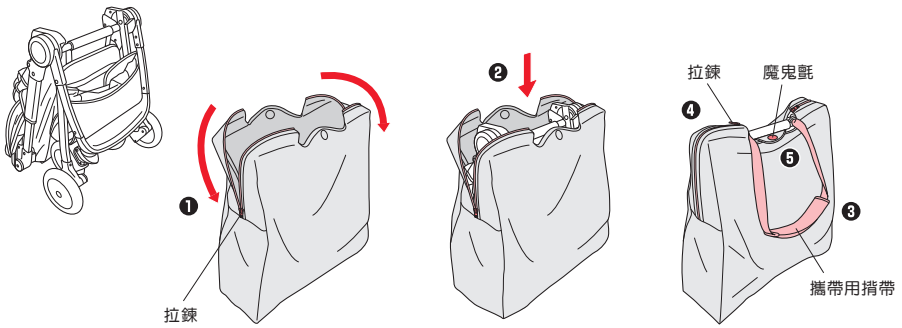

❶拉開收納袋的拉鍊（左右）
❷將折疊好的嬰幼兒手推車放入袋中。

❸將攜帶用揹帶拉出。
❹拉上拉鍊。（左右）
❺固定魔鬼氈。

〈以攜帶用揹帶搬運時〉

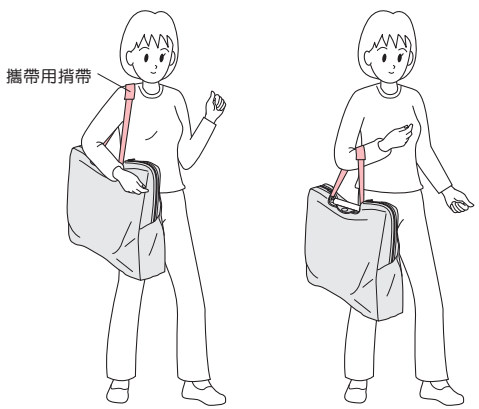

〈以提把搬運時〉



注意
・搬運嬰幼兒手推車時，應留意避免撞到旁人或物品。
・使用攜帶用揹帶搬運嬰幼兒手推車時，不可突然轉身或搖擺，以免撞到旁人或物品。否則可能會導致意外事故。

日常保養

縫製品的清洗方法

〈座椅縫製品、預防呼吸道閉塞型保護頭墊、肩帶保護套、股帶保護套及扶手保護套的清洗方法〉

・清洗時，請注意以下事項。



注意
・若要將縫製品晾曬於室外時，請於陰涼處平放晾乾。
・請不要使用鹼性清潔劑、酸性清潔劑以及含氯漂白劑。

〈遮陽篷、安全肩帶、安全腰帶、立體式股帶、置物籃及攜帶用揹帶的清洗方法〉

・請勿整件放進洗衣機裡清洗，請按照下述要領清洗。

●水溶性污垢（如果汁、唾液、尿液等）的情況：用40度左右的熱水將毛巾浸濕，輕輕擰乾後充分擦拭污垢處。再以乾毛巾充分擦拭水份後再置於陰涼處自然晾乾。

●非水溶性污垢（如牛奶、油脂、沙拉醬等）的情況：首先將中性洗潔劑溶解在40度左右的熱水中，再使用刷子或海綿輕輕刷洗污垢處。再用冷水或溫水洗掉中性洗潔劑，用乾毛巾充分擦拭水份後置於陰涼處自然晾乾。

注意
・若發現縫製品產生破損或異常現象，請立即停止使用，並請務必要聯繫維修中心進行檢查及維修。

車體的保養

〈車體及車輪的保養方法〉

・請勿對黏附在車輪上的泥土、灰塵等置之不理。務必使用濕毛巾等物品擦拭乾淨。

注意
・車體及車輪黏附泥土及灰塵時容易發生故障，故發現此情況時請停止使用。
・擦拭泥土及灰塵時請勿使用稀釋液或揮發油等有揮發性的溶劑。

・車輪屬於消耗品。當行進時感到異常或覺得需要替換車輪時，請向本公司維修中心聯繫更換。（須支付費用）(請參閱P28)

〈螺絲、螺帽類的保養〉
・請經常檢查螺絲、螺帽是否有鬆動，當發現鬆動時請盡速鎖緊。

〈按鈕式開放型扶手的保養〉
・當發現開放型扶手與車台連接處有灰塵時，請使用乾毛巾擦拭。

日常保養

〈不可添加潤滑油〉

⚠注意


・請避免潤滑油附著於按鈕式開放型扶手連接處周圍以及內部，否則按鈕式開放型扶手可能會因此鬆脫。



〈前輪輪座的保養方法〉


・若前輪輪座無法順暢旋轉或出現異常噪音，請拆下前輪確認是否有沙子、石頭卡在裡面。另外請用乾布擦拭軸心與下圖的部位，去除污垢。

〈前輪輪座的拆卸方法〉

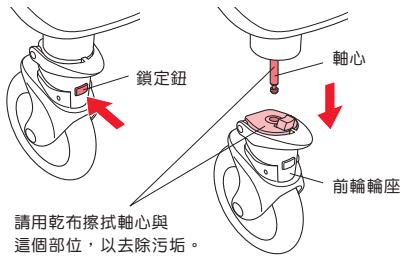

●按著鎖定鈕，拆除前輪輪座。（左右）

〈前輪輪座的安裝方法〉

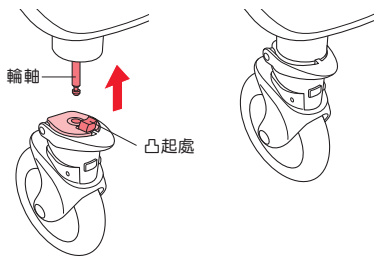

●對準凸起處，插入軸心。（左右）
・插入後向外拉前輪輪座2~3次，確認是否會脫落。

⚠警告

・拆卸前輪時，必須先將車上的寶寶放下及物品卸下，並在安全場所進行拆除。否則可能導致寶寶與物品摔落。
・在左右兩側的前輪確實裝好之前，請勿讓寶寶乘坐手推車。否則可能導致嬰幼兒手推車翻覆。

覺得故障嗎？送修前先確認

・倘若採取以下的方法卻仍無法解決問題時，請與本公司維修中心連絡。（請參閱P28）

〈使用中發現問題時〉

問題	處理方法
握住把手控制鈕無法下壓時	請滑動安全控制鎖之後再操作一次。（請參閱P21）
車輪無法迴轉時	請將左右兩邊的前輪迴轉固定器一併解除。（請參閱P13）
車輪的轉動不靈活時	請拆除前輪輪座，確認是否夾到沙子、石頭等異物。請清除輪心上的髒汙。（請參閱P25）
車輪煞車器失靈時	請先將嬰幼兒手推車稍微往前移動之後，再將後輪煞車器上鎖。 請確認後輪煞車器部位是否夾到碎石等異物。
靠背無法豎直時	請先將寶寶抱離嬰幼兒手推車，然後拉動多段式平躺角度調節帶。（請參閱P20）
嬰幼兒手推車無法開啟時	請確認座椅布料是否有被其他雜物夾在車體上。
安全肩帶無法插入安全腰帶時	請確認是否夾到衣物或安全帶。
無法折疊嬰幼兒手推車時	確認把手管架左右兩側卡榫確實固定。（請參閱P10）
	確實執行〈收折之前〉的動作再行收折（請參閱P21） 請確認折疊鎖扣是否捲入安全帶。
	請確認攜帶用揹帶已確實收納在主體座面下方。（請參閱P22）
輪胎磨損時	輪胎過度磨損，行進中感到異常時，可能須更換輪胎。 請與本公司維修中心連絡。（請參閱P28）

〈使用二手品〉

問題	處理方法
不了解之前的使用者是如何使用	對於使用狀態不明的商品，不建議使用。
嬰幼兒手推車出現裂痕或重大損傷時	請勿使用。

保管方法

・請將主體放入塑膠袋內，保管在沒有陽光直射的陰涼場所。
・請勿在上面放置重物、施加壓力的狀態下保管。恐造成故障或變形。

注意

・為避免遮陽篷變形，請勿橫倒手推車或放置重物在車上。且避免放置在高溫的場所裡做保管。
・請勿置於火源附近、勿在大熱天下放置於高溫車內。恐易使塑膠零件變形、無法維持性能。

廢棄方法

・請依照各區域的廢棄物處理方式做處理。
・為維護地球環境，請勿隨意放置丟棄。

保固與售後服務


〈保固事宜〉

・於品質保證期間內（自購買日起1年內），由於零件短少、加工不良等可歸責於本公司者、依照使用說明書及注意事項而在正常使用狀態下故障者，根據保固規定提供免費修繕服務。
自購買日起已超過3年之產品，雖仍受理修理，但產品修理部位以外之品質，則恕不保證。
此外，已停產之產品，可能因修理所需零件已無庫存而無法修理。（零件之保有期間為停產後3年期間。即使於3年內，零件之顏色、布料之花樣等方面，亦有可能無法符合您所指定的，敬請見諒。）

〈售後服務事宜〉

・使用中發生故障等情況或檢查中發現時，需要更換零件或修理時，各部位之固定部位發生鬆動或異音、零件缺損或車輪轉動有異常時，以及感覺到其他異常時，請停止使用，並確認產品名稱、型號、批號（參考下圖）後，向本公司維修中心聯絡 。

・聯絡時，請務必告知本產品下述位置內貼紙所示之品名、型號、批號，以利進行後續處理作業。

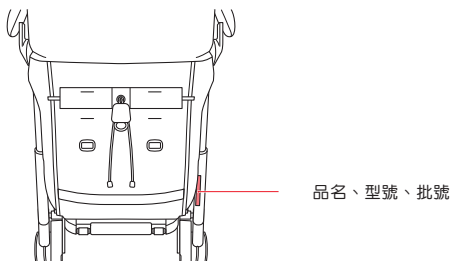

維修服務中心聯絡方式

台灣愛普力卡股份有限公司　維修服務中心
連絡電話：（03）6561261
服務地址：新竹縣竹北市福興路885號

MEMO

MEMO

nano+ smart
ナノ スマート プラス

Aprica

User Manual

***For ASEAN countries ONLY**

Thank you for purchasing this product.
This product is suitable for babies 1 month to 36 months old, and under 15 kg.

※One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

Please carefully read this specification before use and use it correctly.
Please do not use any method except the ones specified in this specification, to operate this product, since it may not be able to maintain this product's function correctly, and is very dangerous.
Please carefully keep this book after using it.



R41118

SG安全基準A形

Index

Introduction

Precautions before use 1
Advice for parents and guardians/About SG standards/
Markings used in this manual
Cautions regarding usage ..... 2~4
Warnings/Cautions
When unpacking the product 5
Product features
Names of parts 6

How to use the baby stroller

Assembling and opening the baby stroller
(when taking the product out from the packaging) .. 7~10
Opening the baby stroller ..... 11~12
Using the Front Wheel swivels 13
Using the Rear Wheel stoppers 13
Opening the button-type open handle 14
Using the basket 14
Using the sunshade 15
Attaching the protective pads 16
Placing the baby in the baby stroller ..... 17~18
Adjusting the shoulder belt height 19
Adjusting the recline angle 20
How to fold the baby stroller 21
Carrying the baby stroller 22
Using the storage bag 23

Care and maintenance

Daily care and maintenance ..... 24~25
Troubleshooting 26
Storage 27
Disposal 27
MEMO 28

Precautions before use

Suggestions

An infant is not a miniature adult, especially for the baby without a fully developed neck.

Please consider your baby's condition carefully when using a stroller.
①Please pay attention to the baby's condition and avoid using it continuously.
②Please avoid leaving baby under direct sunlight exposure; the temperature inside the stroller is higher than what adult feels outside.
③Please stay away from crowded areas to avoid noise and dust.
④Please slow down when going through rugged pavement, and avoid the surface that could cause vibration and impulsion.
⑤For a concise approach, the images or assembly used in this User Manual may not be identical to the real product, so please check with the real product for reference.

SG standard

・The stroller marked with SG symbol meets the following standards regulated by Japanese Product Safety Association. (This product qualifies as a SG standard A stroller.)

Range of application	This stroller is limited to one baby passenger, and is used for normal family parent and child movement such as outdoor activities or shopping.
Stroller style	**A stroller** Stroller for one-month-old* baby whose neck is not well developed and needs to lie flat in the stroller.
Suitable age	1 month to 36 months old
Recommended continuous use time	Lie-flat: less than 2 hours Sitting posture: less than 1 hour
Lay-flat angle	More than 150°
Wheel external diameter	More than 115 mm

＊One month old after birth, in this manual, refers to babies following 37 weeks of pregnancies, birth weight over 2.5 kg, and older than one month.

About the labels of this book

・Symbol such as "Warning", "Caution", and "Prohibited" are used to predict the condition if you do not follow the notice items. These are divided by the damage severity. The indicated contents are very important, so you need to abide by them.

Mark	Indication
⚠ Warning	Failure to observe these instructions could lead to death or serious injury.
⚠ Caution	Failure to observe these instructions could lead to serious injury or product damage.

Prohibit	Indication
⃠	Please do not perform these prohibited actions.

Tips	Tips and tricks when using the product.

Please note when using

・To avoid unexpected accidents, please read this user manual carefully, and follow the instructions thoroughly.

⚠ Warning Failure to observe these instructions could lead to death or serious injury.

To avoid the danger of the baby falling down.

Please buckle up shoulder belt, waist belt and 3D hip belt before use.



Do not let the baby stand on the stroller.



If waist belt gets loose, the baby may stand up and fall down.

Please keep an eye on the baby. Even if the seat belts are buckled up, the baby still could possible stand up, so please adjust waist belt according to the baby's developing condition.



If the wheel of stroller falls into the gutter on the pavement, the stroller will lose balance and could cause the baby or the user injury.

When roadway with latticed drainage ditch is encountered, please make sure the width of the stroller wheel is suitable.
If suitable, then slowly push stroll over.



When the front wheel gets stuck, please hold the handle with one hand and hold the stroller leg with another hand to lift the front wheel. Please do not lift the entire stroller.



When parking the stroller on a ramp area, the stroller may slide or overturn automatically.

Whether baby is in or out of the stroller, please lock the wheel brakes on both sides to make sure the stroller will not slide.



When baby or belongings are on the stroller, please do not trust brake too much, since the road surface and the duration of structural function varies, and the brake may not be able to completely stop the stroller.



Even if the brake is locked, please do not leave the baby inside the stroller and outside your range of visibility.



The stroller could lose its balance when you can not see the road condition and all over.

When the baby is in the stroller, please do not directly lift up the stroller.



<Next page>

⚠Warning Failure to observe these instructions could lead to death or serious injury.

Since the stroller may overturn, and injure the baby.

Please do not let two babies ride at same time or let the baby sit beside the seat cushion.




Please do not use it in a place with height differences such as stairs or escalator.



Since the stroller may overturn, and injure the baby.

When using the baby stroller, please move the handle in a vertical direction to confirm that the handle lock, main body lock and support pins on stroller frame have been engaged, and the baby stroller is fully opened. (See P12 ❹❺❻❼)

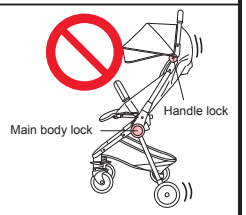

Since the stroller may overturn, and injure the baby.

When the baby is on the stroller, please do not place materials on any place other than the storage basket. Do not hang objects on the handle, and do not lean on the handle.



The road surface may cause the temperature inside the stroller to get high and harm the baby's body.

Please do not use for a long time in high temperature or under strong sunlight.



To avoid the baby being wound up by the seatbelt and result in the danger of suffocation.

Please use shoulder belt and waist belt together, and adjust these to the positions that fit baby's figure.



It may damage the stroller, harm the baby, or cause other accidents.

Please do not push too hard when using stroller.



All movable joint of stroller may pinch the baby, and the stroller main frame may hit the baby or user.

Please keep the baby away when you are folding the stroller.



Please watch out for baby's hands and feet while installing the button-type open handle.



⚠Warning Failure to observe these instructions could lead to death or serious injury.

It may cause the stroller damage and hurt the baby or user.

- Do not let a child operate the stroller.
- When the baby sits in the stroller, please align baby's legs to the position of 3D hip belt to avoid stroller turning upside down or backwards.
- Any person except our maintenance personnel should not disassemble, install or remold the stroller.
- Please do not use this product when seat fabric article is removed.
- Please do not use this product when it has been vigorously struck or fallen down.
- Please do not use it as a toy.
- Please do not rush to get on and off the train when using in the subway.
  The train may not sense the situation when stroller is gripped by train door, and get the baby injured.


⚠Caution Failure to observe these instructions could lead to serious injury or product damage.

- Please do periodic inspections and maintenance.
- Before use, please make sure the mainframe and seat fabric article of the stroller are completely and correctly installed.
- Please periodically apply plastic-product-use oil to movable joint.
- Before using a stroller, which has not been used for a long time, please inspect and maintain the stroller first.
- Even if baby is not on the stroller, please do not place the stroller in a dangerous area such as steep hill or sidewalk close to driveway.
- Please do not use the stroller when screw or screw cap is loose.
- Please do not combine two strollers and use them together at same time.
- Please do not push the stroller by lifting up the front wheel, since this may cause the rear frame to be bent and deformed or breakdown.
- For the baby's safety, please push the stroller at a normal walking speed (about 4 km per hour)
- Please do not push the stroller to sandy or muddy areas (since sand may enter the joints and cause unfolding difficulty)
- Please do not ignore it when the frame is contaminated with sand or mud. (since sand may enter the joints and cause unfolding difficulty)
- A stroller is for a baby to ride on, so please do not install any extra components, sold on the market, on the stroller to avoid damage.
- Please do not put object over 5 kg in the basket storage.
- Parents or guardian should not lean on the stroller.
- Please do not use it to move objects.
- This product is only used for baby's riding.
- Please do not do anything that could cause the stroller to breakdown.
- Please do not use it on a bus.
  This product is not designed for using on the bus. If using on bus, turning or urgent braking of the bus may cause overturn or other accidents.
- Caution for using on subway.
  This product is not designed for using on the train. If using on the train, turning or urgent braking of the train may cause overturn or other accidents, so please use the stroller brakes and pay a lot of attention to it. User will need to undertake the responsibility of any accident.
- Please do not use it on snow-covered or frosty pavement.
- Please do not use it in strong wind.
- Please do not use under thunder.
- To avoid increasing the temperature inside the stroller, please do not use the rain shade indoor, an area close to source of ignition or high temperature location.
- To avoid deformation of plastic component and losing its original function, please do not place the stroller close to any source of ignition or inside the car with high temperature in the summer.

- Do not push the baby stroller over a place with raised elevation by force. This is to prevent damage or fault in the baby stroller.

(Passing over raised elevation)

Push the handle down and lift the front frame at the same time.

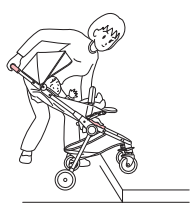


When unpacking the product


- Please check every component when unpacking the product.
- Please contact the distributor or our company if any component is missing, mistaken, or damaged.


Main body

- This product is folded when packed in the box.
- Please see P7 on how to open the stroller.
- After taking the product out from the box, the product is in its folded state and with the front and rear wheels removed. The front wheels (identical for both wheels) and rear wheels (marked with red and blue indicators) must be installed before using the baby stroller.
- To assemble the baby stroller, please refer to page 7.
- No tools or equipment is required for assembly

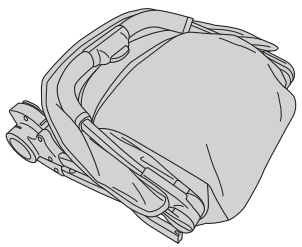

Accessory


Front Wheel


Rear Wheel


Protective head pad that prevents respiratory tract blockage (Installed on the baby stroller)


Storage bag


User Manual


Warning

- Keep the packaging material and storage bag out of the child's reach. There may be a risk of these materials covering the child and cause suffocation.

〈Product features〉

- The handle is fixed at the rear.
- The stroller can stand alone in folding status.
- The frame uses a lightweight aluminum tube.

Name of Parts

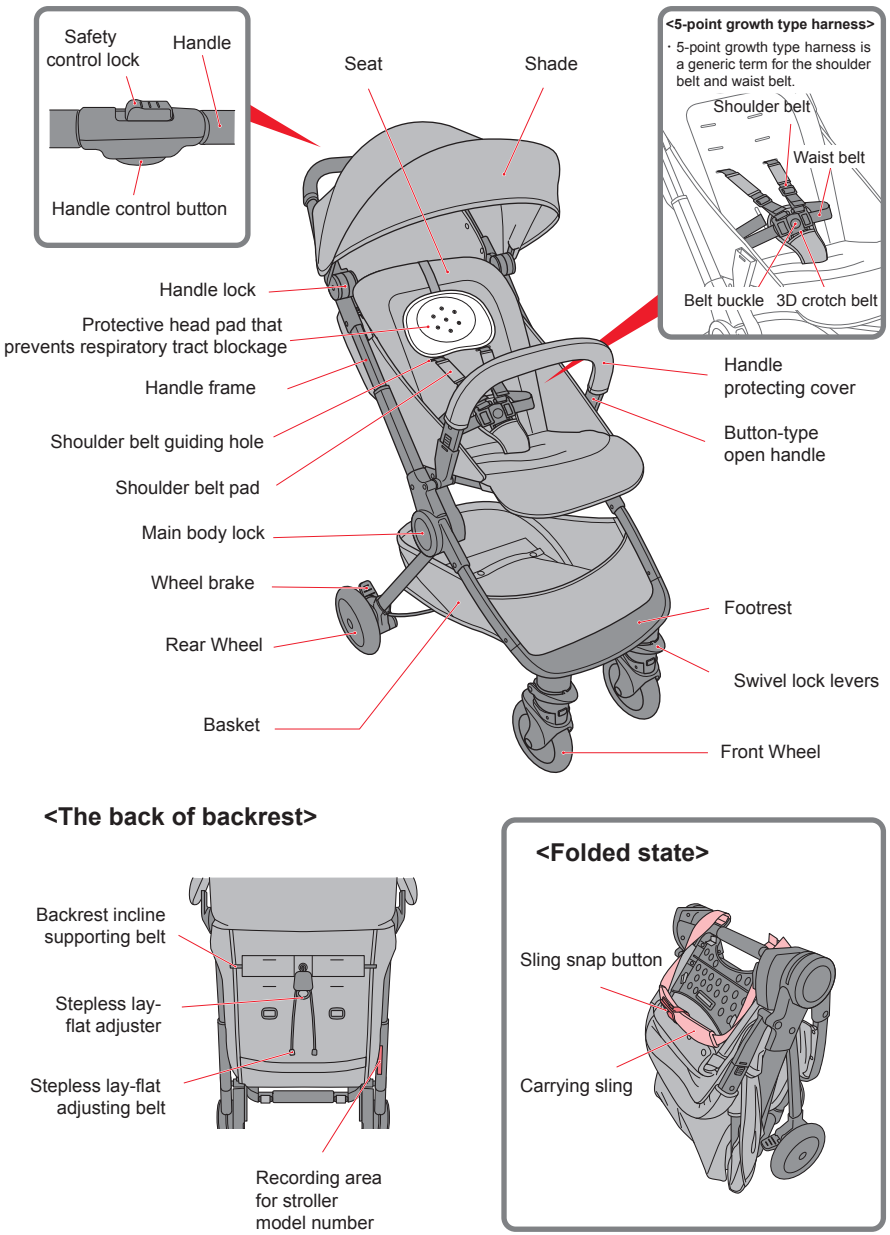

<The back of backrest>

<Folded state>

Before Use

WARNING


- Assembly, opening and folding of the baby stroller must be performed by an adult. Do not carry out these operations if the baby is touching or near the baby stroller. There may be a risk of the baby's hands or feet getting caught in the movable parts, or the baby bumping into the baby stroller, hence posing injury risk to the baby.
- Please ensure that the baby stroller has been installed correctly before using it. There may be a risk of accident if it is not installed correctly.

CAUTION


- Before assembly, please place a protective pad on the floor to protect the floor surface and the product. Otherwise, there may be a risk of damage to the floor and the product during the assembly process.

- After taking the baby stroller out from the box, the front and rear wheels are not yet installed on the baby stroller. The front and rear wheels must be installed before using the baby stroller.

〈Installing the front and rear wheels〉

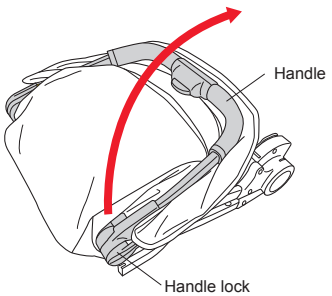


❶Place the baby stroller such that the handle faces up.
❷Lift the handle lock.

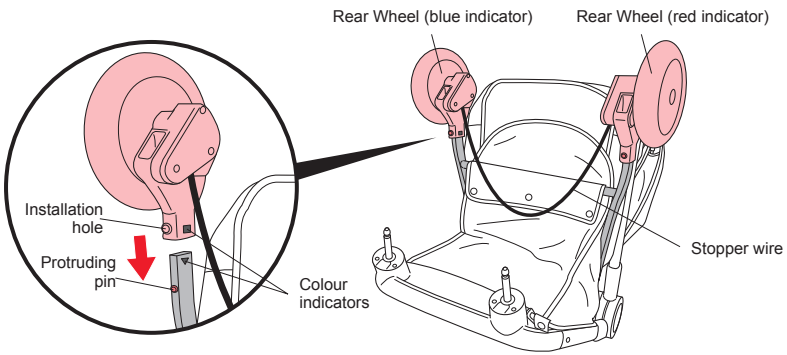


❸Align the rear wheel to the indicator on the frame pipe and insert the rear wheel. (Left & right)

CAUTION


- After inserting the rear wheels, please ensure that the stopper wire is not deformed.

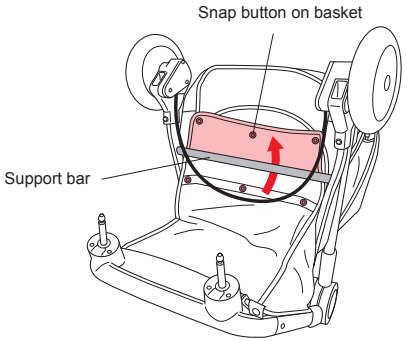


❹Unfasten the snap buttons at the back of the basket (3 locations) and pass the fabric part under the support bar.

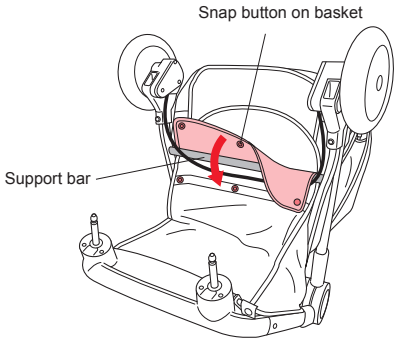

❺After wrapping around the support bar and stopper wire, fasten the snap buttons at the back of the basket (3 locations).

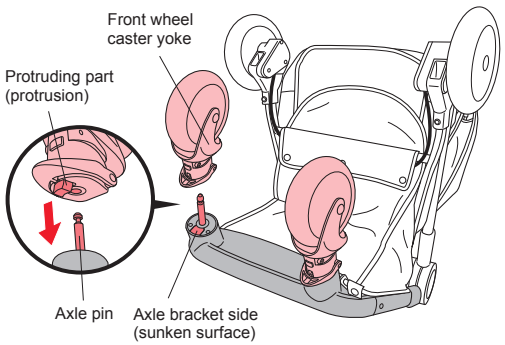

❻Align the protruding part (protrusion) on the front wheel caster yoke to the axle bracket (sunken surface) and insert the axle pin into the caster yoke. (Same for both front wheels)

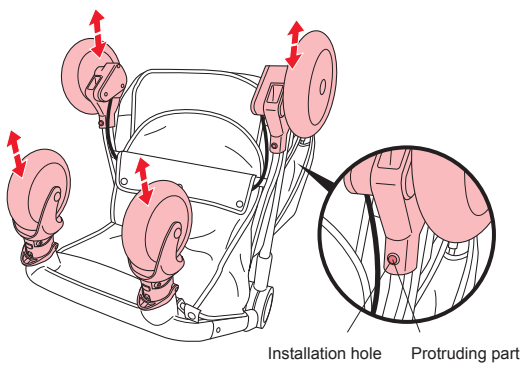

❼After installing the front and rear wheels, pull the wheels outward 2-3 times to ensure that the wheels do not fall off.


- Please check to ensure that the protruding pin on the frame pipe is properly engaged with the installation hole on the rear wheel.

Assembling and opening the baby stroller


・After taking the product out from the box, the handle frame is its shortened state.
The handle frame must be extended and secured before using the baby stroller.
・The handle frame can be secured only when the product is taken out from the box for the first time.

CAUTION
・The baby stroller cannot be used if the handle frame is shortened.
・The baby stroller cannot be folded if the handle frame is shortened.


〈Adjusting and securing the handle frame〉

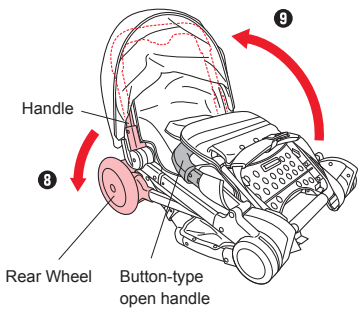


❽Lower the rear wheels.
❾Pull up the handle.

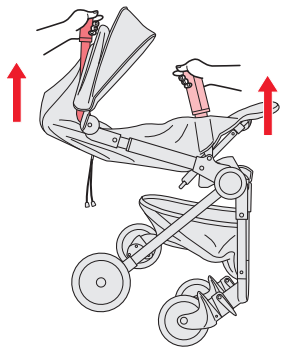


❿Hold on to the handle and button-type open handle and pull the main body up.

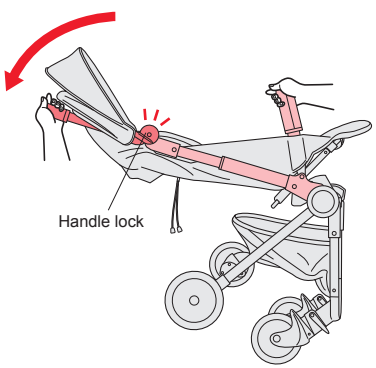

⓫Lift the handle to secure the handle lock.

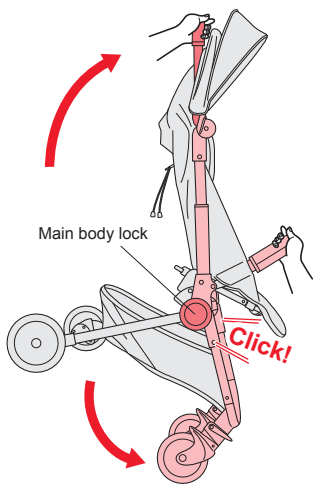

⓬Pull the front and rear wheels apart until a ‘click’ sound is heard at the main body lock.

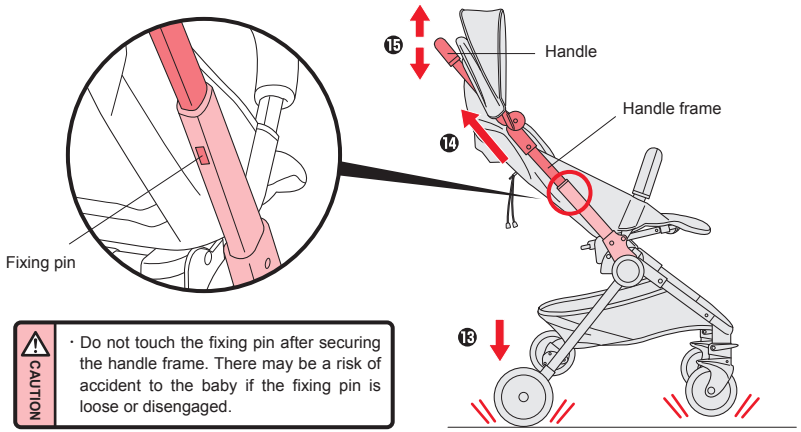

CAUTION
・Do not touch the fixing pin after securing the handle frame. There may be a risk of accident to the baby if the fixing pin is loose or disengaged.

⓭Lower the main body.
⓮Extend the handle until the fixing pins are engaged. (Left & right)
⓯Move the handle in a vertical direction to confirm that the handle lock and main body lock have been engaged, and the baby stroller is fully opened.

〈Checking the status of assembly〉

・Before using the baby stroller, please check to ensure that the baby stroller has been assembled correctly, based on the sequence of assembly.


Move the handle in a vertical direction to confirm that the baby stroller is fully opened.

Ensure that the handle frame has been secured by the fixing pins. (Left & right)

Ensure that the stopper wire is not deformed.

Ensure that the fabric part has wrapped around the support bar and the snap buttons at the back of the basket (3 locations) have been fastened.

Rear wheels (left & right): Ensure that the protruding pin on the frame pipe is properly engaged with the installation hole on the rear wheel. Pull the rear wheels outward 2-3 times to ensure that the wheels do not fall off.

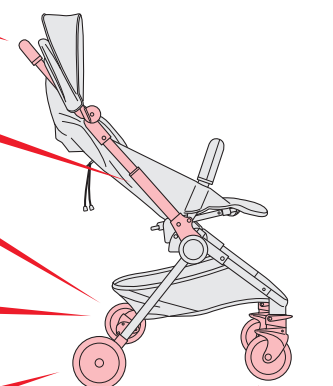

Front wheels (left & right): Pull the front wheels outward 2-3 times to ensure that the wheels do not fall off.


Opening the baby stroller

WARNING

- Please do not fold or unfold the stroller when the baby touches or is close to the stroller, since the movable joint may hurt the baby's fingers, hands, or feet, or the stroller may hit the baby's body and hurt the baby.
- Please fold or unfold the baby stroller on a flat surface. There may be a risk of losing balance and tumbling over.
- Please do not let the child operate the stroller, since this may result in the dangers of falling down or other accidents.

Little reminder


- Since the stroller is packed inside the box, it may not be able to unfold smoothly. Please repeatedly operate 2-3 times to unfold it.

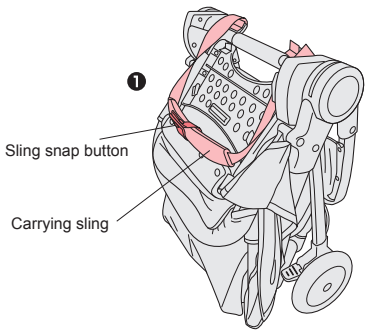


❶Please check to ensure that the carrying sling has been fastened to the sling snap button securely.

WARNING

- The carrying sling must be fastened to the sling snap button and stowed under the seat on the main body when the baby stroller is opened. There may be a risk of tumbling over or other accidents.

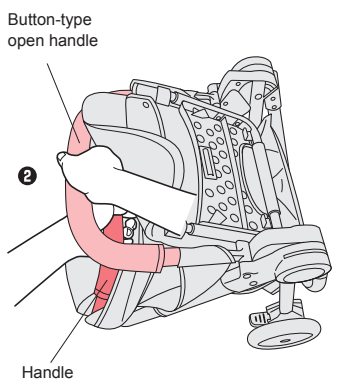


❷Pull up the button-type open handle and open the main body slightly.

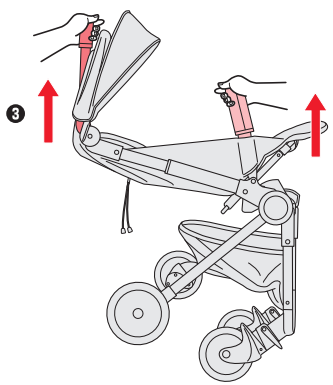


❸Lift the handle and pull up the main body.


WARNING

- When using the baby stroller, please move the handle in a vertical direction to confirm that the handle lock and main body lock have been engaged, and the baby stroller is fully opened.

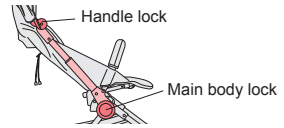

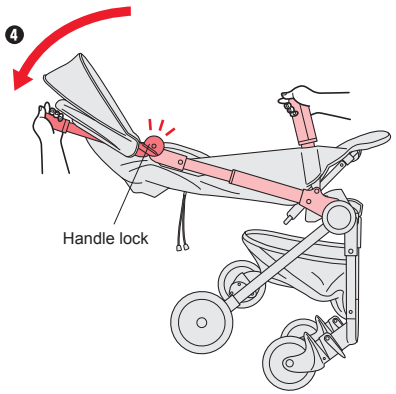


❹Lift the handle to secure the handle lock.

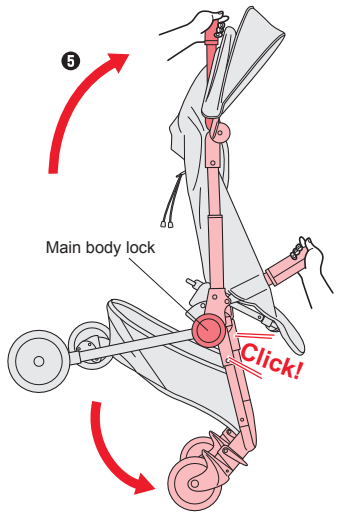

❺Pull the front and rear wheels apart until a 'click' sound is heard at the main body lock.

Tips

- It is easier to pull the front and rear wheels apart by pushing the front wheels forward and toward the floor.

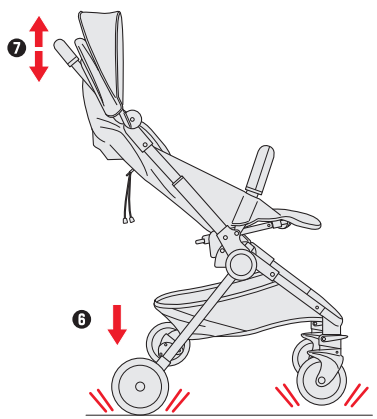


❻Lower the main body.
❼Please move the handle in a vertical direction to confirm that the handle lock and main body lock have been engaged, and the baby stroller is fully opened.

Stroller instructions

Using the Front Wheel swivels

〈Releasing the Front Wheel swivels〉


・When using the caster yoke on a flat surface, the front wheels can swivel freely so that the direction of the baby stroller can be changed smoothly. Please use the baby stroller in this manner under normal circumstances.

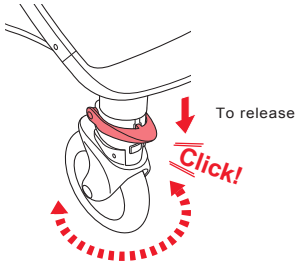

・Depress the swivel lock levers to release the swivels. (Left & right)

〈Locking the Front Wheel swivels〉

・When pushing the baby stroller on uneven surfaces or slopes, temporarily locking the swivels of the wheels on the forward side of the moving direction (left & right) will allow for easier pushing.

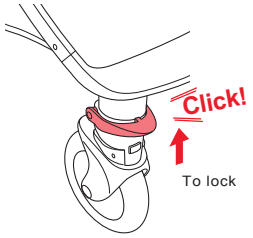

・Raise the swivel lock levers to lock the wheels. (Left & right)

Using the Rear Wheel stoppers

WARNING


・Always lock both stoppers when placing the baby in or lifting the baby out of the baby stroller.
・Do not rely solely on the stopper when the baby is in the baby stroller. Due to road conditions, the wear and tear of the product and other mechanical reasons, the stopper may not absolutely prevent the baby stroller from moving by itself.

CAUTION

・Even if the baby is not in the stroller, please still lock the left and right wheel brake when leaving the stroller.

・Just push down the stopper at the right rear wheel to lock both rear wheels.


〈Locking the Rear Wheel stoppers〉

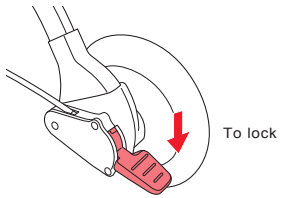

❶Depress the stopper lever (Right) to engage the stoppers.
❷Confirm that the stoppers are locked by moving the baby stroller back and forth lightly.

Tips ・If it is difficult to lock the stopper, try to lock it again after moving the baby stroller back and forth.


〈Releasing the Rear Wheel stoppers〉

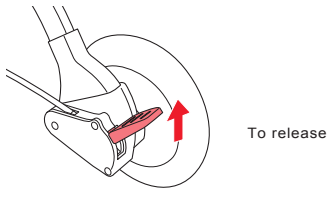

・Lift the stopper lever (Right) to release the stoppers.

CAUTION

・When locking or releasing the stopper by hand, be careful not to let your finger get caught in the gap indicated by the arrow.




Opening the button-type open handle

WARNING


・When attaching the button-type open handle, please be careful to avoid the fingers getting caught by the locks.
・Do not open the front guard and lift or pull the baby stroller with the child seated on it.

〈Remove the button-type open handle〉

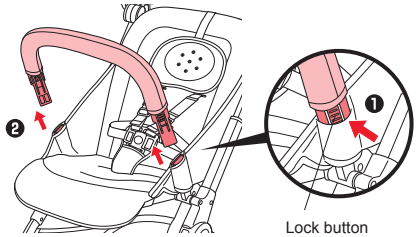


❶Press the lock button.
❷Pull up the button-type open handle at the same time.

〈Install the button-type open handle〉

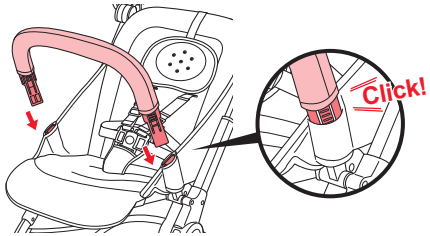

●Insert the button-type open handle into the slot until a 'click' sound is heard.

〈Remove the handle protecting cover〉

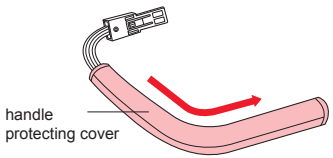


●Remove the handle protecting cover.

・Please follow the steps in reverse order for installation.

Using the basket

CAUTION

・Do not put sharp items into the basket for those may damage the basket.
・Do not load items over 5kg.
・Remove all items before folding the stroller.

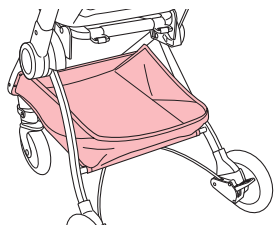

●Please place items into the basket from the top.

Tips ・When placing materials in the storage basket, please distribute the material weight evenly in the storage basket.


Stroller instructions

Using the sunshade

WARNING


・Do not open and close the sunshade when the baby is touching it. There may be a risk of the baby's fingers or toes getting stuck in the movable parts.

Opening the sunshade

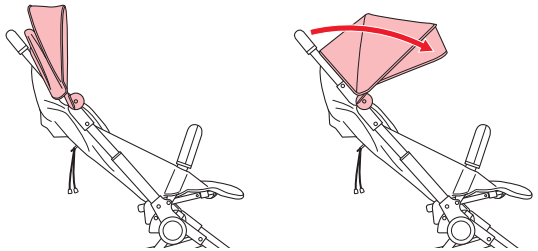


●Open the sunshade towards the front.

Closing the sunshade

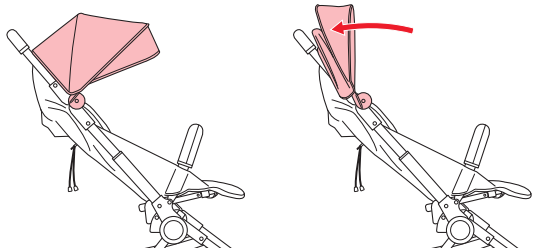

●Close the sunshade.

Stowing the sunshade extender cover

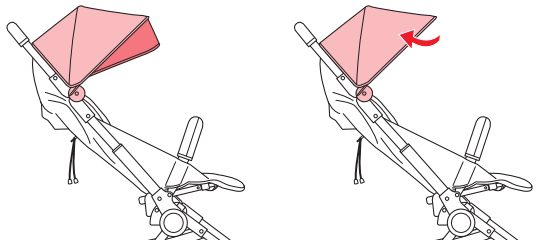

●Fold the sunshade extender cover inward.


Attaching the protective pads

・The protective pads in the baby stroller help to support the baby in maintaining the correct posture.

Head mamolu pad For use until the baby can hold his head up without any support.

(Approximately 4 months old as a guide)


・Please use the head mamolu pad only when the shoulder belts are installed at the lower shoulder belt holes. The head mamolu pad can be used for babies up to a maximum of 7 months old. (See "Adjusting the shoulder belt height" on page 17)

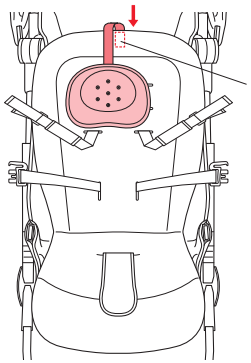

Hook-and-loop fastener (reverse side of the seat)

●Fasten the hook-and-loop fastener on the head mamolu pad to the hook-and-loop fastener at the rear side of the seat.

〈Position to attach the head mamolu pad〉

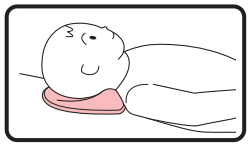

・Attach the pad such that the inflated portion at the lower end of the pad fits in nicely with the back of the baby's neck.


※Remove the pad if the inflated portion at the lower end of the pad does not fit in nicely with the back of the baby's neck.

Caution

・The head mamolu pad cannot be used when the shoulder belts are installed at the middle or upper shoulder belt holes.


Stroller instructions

1 Preparing for use

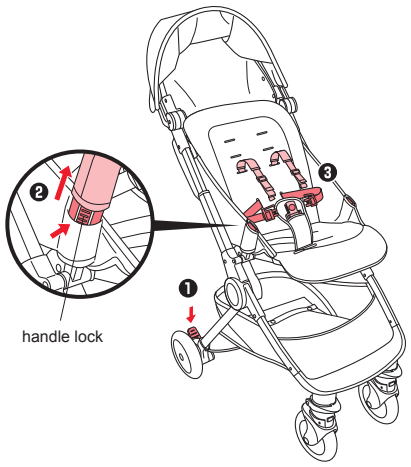


❶Lock the stoppers. (Left & right)
❷Press the button-type open handle lock.
・Remove the button-type open handle.
❸Unfasten the shoulder and waist belts.
・Press the crotch buckle to release the shoulder and waist belts.
・Remove the shoulder belts from the shoulder belt hooks.


Tips ・Please keep the button-type open handle removed from the baby stroller in the basket temporarily.




2 Seating the baby

〈Place the baby in the seat and fasten the seat belts〉

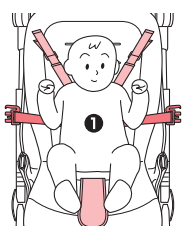

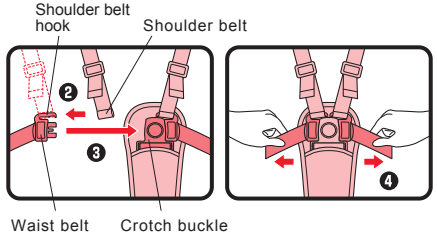

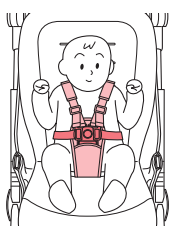

❶When placing the baby on the baby stroller, please align the baby's crotch to the crotch belt.
❷Insert the shoulder belts into the shoulder belt hooks.
❸Insert the waist belt into the crotch buckle.
❹Pull the waist belt to the left and right to confirm that is fastened properly.

※The length of shoulder and waist belts should be adjusted to fit the baby's size and seating position. (See P18)


Tips ・The label on the shoulder belts should be facing outward when fastened correctly.
・Check to ensure that the shoulder belts are not twisted.

WARNING
・After fastening the seat belts, pull the waist belt to the left and right to confirm that is fastened properly.
・The shoulder belts should always be inserted into the shoulder belt hooks during use. Otherwise, there may be a risk of the shoulder belt entangling around the baby's neck.
・Do not take your attention off the baby. The baby may stand up even with the seat belts fastened. Please adjust the waist belt in line with the baby's growth.
If the waist belt is loose, there may be a risk of the baby standing and falling off the baby stroller or other dangers.
・The position of the crotch belt should be adjusted to suit the baby. Otherwise, there may be a risk of the baby stroller falling backward.


3 Adjusting the belt

〈Adjusting the waist belt〉

〈To tighten〉 〈To loosen〉

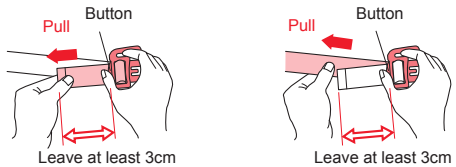


・Pull the waist belt while pressing the button gently to adjust the length

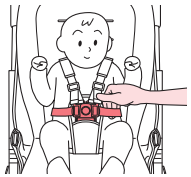


・The length of the waist belt should allow for 4 adult fingers to be inserted between the belt and the baby.

〈Adjusting the shoulder belts〉

〈To tighten〉 〈To loosen〉

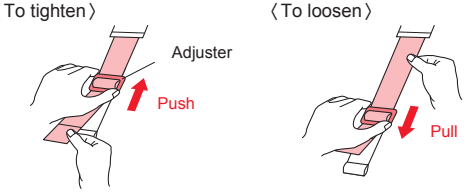


・Move the adjuster to adjust the length.

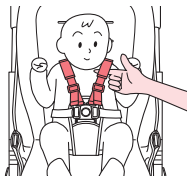

・The length of the shoulder belt should allow for 1 adult finger to be inserted between the belt and the baby.


〈Adjusting the crotch belt〉

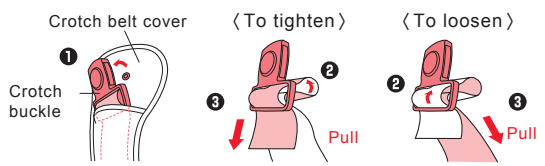

❶Unfasten the snap buttons of the crotch belt cover from the snap buttons of the crotch buckle.
❷Remove the crotch belt.
❸Pull the crotch belt to adjust the length
・After adjusting the belt, please check to ensure that the snap buttons of the crotch belt cover are fastened to the snap buttons of the crotch buckle.


WARNING
・The length of the shoulder, waist and crotch belts should be adjusted as the baby grows older.
If the shoulder, waist and crotch belts are loose, there may be a risk of the baby standing up or falling off the baby stroller even with the belts fastened.
・Be careful not to get the baby's fingers caught when closing the button-type open handle.
・After fastening the button-type open handle, confirm that it is properly engaged by pulling on it.
・Do not raise the button-type open handle when the baby is in the baby stroller.
・Leave at least 3cm at the end of the waist belt (⟺ area).
・Adjust the length of the shoulder, waist and crotch belts accordingly whenever the recline angle is changed.

〈button-type open handle〉

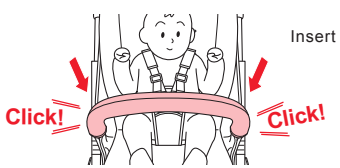

Insert the button-type open handle.

〈Releasing the stoppers〉

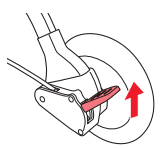

Release lock (left & right)


Stroller instructions

Adjusting the shoulder belt height

Warning
- Adjust the height of the shoulder belts as the baby grows older.

〈Shoulder belt position〉

- When taken out from the packaging, the shoulder belts are set at the lower position.

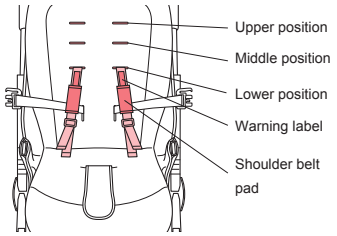

〈Shoulder belt guideline〉

- Shoulder belts should be inserted at the position below the shoulder.
- Adjust the position of the shoulder belts based on the three levels below.




Approximate age (body size)	Shoulder belt position
18 – 36 months	Upper position
7 – 18 months	Middle position
1 – 7 months	Lower position


The figures above serve as a guideline and they differ across individuals.

Tips
- The label on the shoulder belts should be facing outward when fastened correctly.
- Check to ensure that the shoulder belts are not twisted.

〈Adjusting the height of the shoulder belts〉

- Release the shoulder, waist and crotch belts from the thigh buckle. (See step ❸ in “Preparing for use” on page 17).
- Remove the shoulder belts from the shoulder belt hooks.

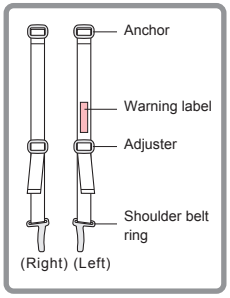


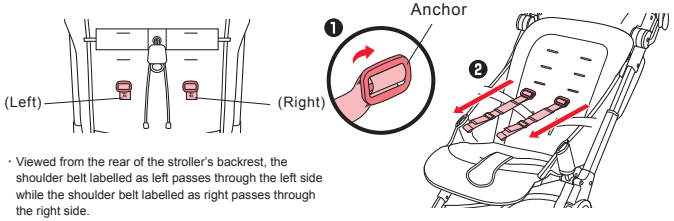

- Viewed from the rear of the stroller’s backrest, the shoulder belt labelled as left passes through the left side while the shoulder belt labelled as right passes through the right side.


❶Turn the shoulder belt anchor such that it is parallel to the shoulder belt.
❷Pass the shoulder belt anchor through the shoulder belt hole of the seat and backrest.

〈Using the upper position〉

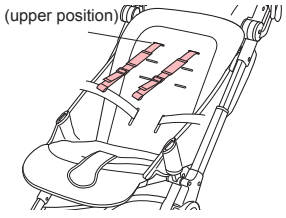


- Pass the shoulder belts through the seat hole (upper position) and base hole (upper position)

〈Using the middle position〉

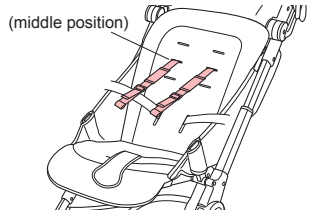

- Pass the shoulder belts through the seat hole (middle position) and base hole (middle position)

〈Using the lower position〉

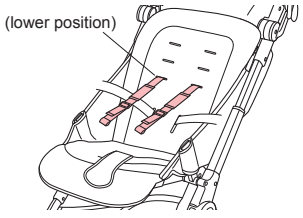

- Pass the shoulder belts through the seat hole (lower position) and base hole (lower position)

- After installing the shoulder belts, be sure to tuck the belts to make sure they have been firmly installed.


Adjusting the recline angle

- The main function of the stepless reclining adjuster is to keep the baby in a comfortable position.
- The lay-flat design of the backrest is to allow the baby to lay flat while he/she rides in the stroller.
- When the backrest lies flat, the headrest rises.

〈Guideline for the position of recline angle〉

Approximate age (body size)	Recline angle position
1 month – able to hold the head up	Fully reclined
Able to hold the head up – able to sit upright unaided	Fully reclined – halfway back (intermediate position)
Able to sit upright unaided onwards	Fully reclined – upright

Lowering the backrest

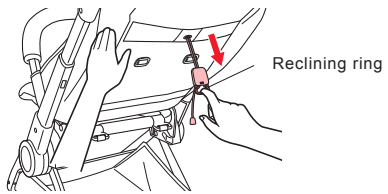

〈Upright〉 〈Semi-reclined〉 〈Fully reclined〉



❶Loosen the shoulder belts. (See P18)
❷Pull the reclining ring while supporting the baby with one arm.
❸Lower the backrest and adjust the recline angle while pulling on the ring.
❹Please adjust the length of the shoulder and waist belts after adjusting the backrest.


Warning
- When lowering the backrest with the baby in the baby stroller, please loosen the shoulder belts first.
- After adjusting the recline angle, adjust the length of the shoulder and waist belts. If the shoulder and waist belts are loose, there may be a risk of the baby standing up or falling off the baby stroller even with the belts fastened.

Caution
- Do not adjust the recline angle while pushing the baby stroller.
- When adjusting the recline angle with the baby in the baby stroller, do not change the recline angle abruptly.
- Support the weight of the baby when lowering the backrest with the baby in the baby stroller.
- Please use the fully reclined position for babies who are not yet able to sit upright unaided.

Tips
- If the baby is able to sit upright unaided and the position of his head has reached the position of the headrest, lowering the backrest will result in an uncomfortable posture for the baby. As such, adjust the reclining angle to a position where the headrest will not move upward.



Raising the backrest

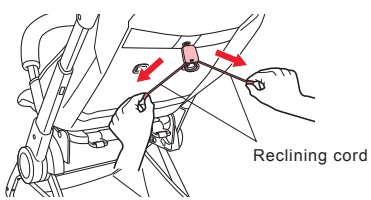

- To raise the backrest, please pull the reclining cord to the left and right while the baby’s weight is not resting on the backrest.

Tips
- The backrest cannot be raised when the baby’s weight is resting on the backrest

How to fold the baby stroller

WARNING


- Please do not open or close the baby stroller if the baby is touching or near the baby stroller. There may be a risk of the baby's fingers or toes getting caught in the movable parts, or the baby bumping into the baby stroller, hence posing injury risk to the baby.
- Please fold or unfold the baby stroller on a flat surface. There may be a risk of losing balance and tumbling over.
- Do not allow a child to operate the baby stroller. There may be a risk of injury due to the baby stroller tumbling over or accident.

CAUTION

- Insert the shoulder and waist belts into the crotch buckle before folding the baby stroller. Otherwise, there may be a risk of damage to the buckle.

Little reminder

- Due to packing, there may be occasions where the frame cannot be opened or closed smoothly at the initial stage. In such cases, please repeat the process 2-3 times to open the frame

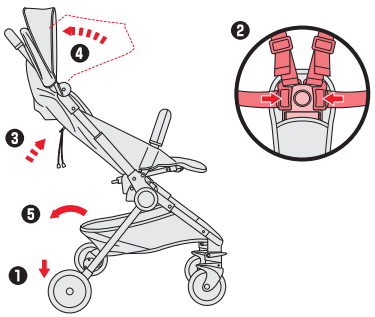



〈Before folding the baby stroller〉

❶Engage the rear wheel stopper(See pages 13)
❷Insert the shoulder and waist belts into the crotch buckle. (See page 17)
❸Raise the backrest. (See page 20)
❹Close the sunshade. (See page 15)
❺Remove all items from the basket.

Tips


- The baby stroller may open up during the folding process if the rear wheel stopper is not engaged.

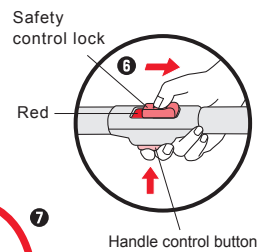


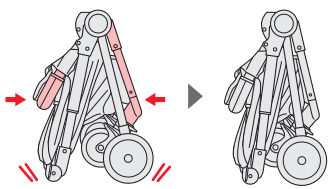


Tips

- Press on the button-type open handle and step with both hands simultaneously to fold the baby stroller into a compact size.

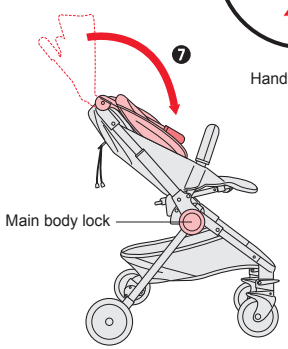

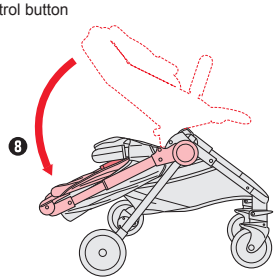

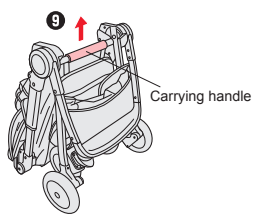

〈Releasing the lock〉

❻Slide the handle lever lock in the direction of the arrow (red colour is indicated) and squeeze the handle lever at the same time.
❼Lower the handle.
❽You can remove both hands after releasing the main body lock and folding the main body.

〈Folding the baby stroller〉

❾Lift the carrying handle to fold the baby stroller.

Carrying the baby stroller

Using the carrying sling


- With the carrying sling, you can carry the folded baby stroller on the shoulder or arm.


WARNING

- The carrying sling must be fastened to the sling snap button and stowed under the seat on the main body when the baby stroller is opened. There may be a risk of tumbling over or other accidents.

CAUTION

- Do not use the carrying sling to drag the baby stroller on its wheels. This may cause damage to the baby stroller.
- Do not turn or swing your body abruptly when carrying the baby stroller with a carrying sling. This is to avoid hitting someone nearby or soiling the clothes.

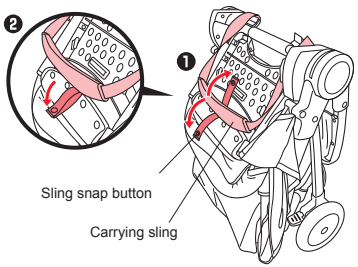

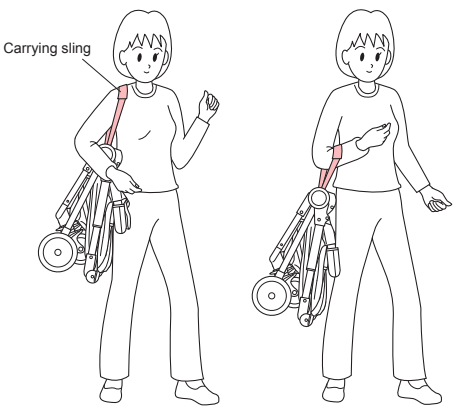

❶Unfasten the sling snap button.
❷Fasten the sling snap button.
※Please follow the steps in reverse order for installation.

Using the carrying handle




- Grab the carrying handle to move the folded baby stroller.

CAUTION

- When moving the baby stroller using a carrying handle, please pay attention to avoid hitting someone nearby or soiling the clothes.


Using the storage bag

How to stow

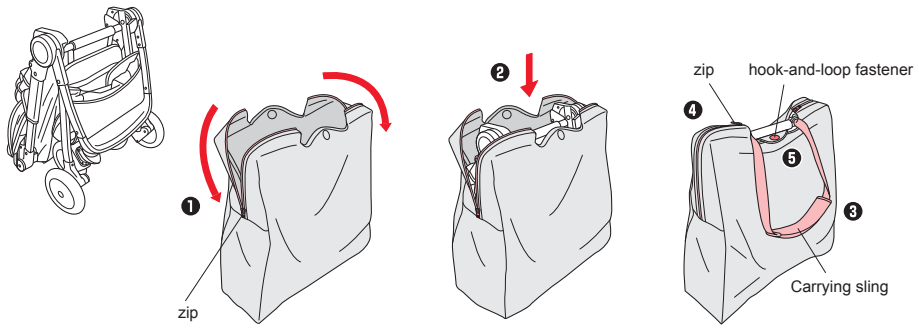

❶Unfasten the zips on the storage bag. (Left & right)
❷Place the folded baby stroller into the storage bag.
❸Pull out the carrying sling.
❹Fasten the zips. (Left & right)
❺Fasten the hook-and-loop fastener.

〈When moving the baby stroller with a carrying sling〉

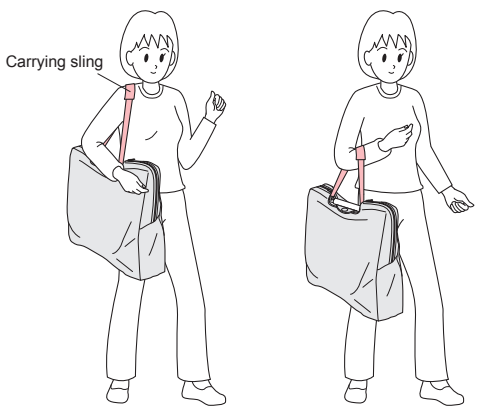

〈When moving the baby stroller with a carrying handle〉



Caution
- When moving the baby stroller, please pay attention to avoid hitting someone or something nearby.
- Do not turn or swing your body abruptly when carrying the baby stroller with a carrying sling to avoid hitting someone or something nearby. Otherwise, there may be a risk of accident.

Daily Care and maintenance

Cleaning method for sewing parts

<The cleaning method for the seat-sewn cover, preventing respiratory tract block protection head cushion, Shoulder belt pad, crotch belt pad and Handle protecting cover>

- Please note the following laundering & cleaning symbols.



Caution
- If drying the sewing outdoor, please place it flat on a shady area to dry it.
- Please do not use alkaline detergent, acidic detergent or bleach containing chlorine.

<Cleaning method for the shade, shoulder belt, and storage basket>

- Please do not put the entire component into the laundry machine. Please clean it according to the instructions below.
- Situation for water soluble smudges (such as juice, saliva, or urine): Please use a soft wet cloth, submerged in 40 degrees warm water and dried out slightly, to wipe out the smudge. Use a dry towel to wipe it out, and then put it in a shady place to dry naturally.
- Situation for non-water-soluble smudges (such as milk, fat, or salad dressing): Please add neutral detergent into 40 degree warm water, and then use brush or sponge to clean the smudge. Use cold or warm water to wash out the neutral detergent, use a dry towel to wipe water, and then place it in shady area to dry naturally.

Caution
- If any damage or abnormal situation is discovered on sewing, please stop using it and contact our maintenance center for help.

Maintenance of the stroller frame

<Maintenance of the frame and wheel>

- Please do not ignore the mud or dirt attached to the wheel. Wipe it out and clean it up with a wet towel.

Caution
- Breakdowns will occur often when mud or dirt is attached to the frame or wheel, so please stop using the stroller in this situation.
- Please do not use volatile solvents such as diluents or essential oil to clean mud or dirt.

- The tire is consumable, so when the tire approaches a thickness of 5 mm, please contact our maintenance center to replace it (at your cost).

<Maintenance of the screw and screw cap>

- Please check if the screw or screw cap if loose routinely. Please screw it tight when they get loose.

<Maintenance for the button-type open handle>

- Please use a dry towel to wipe out the dust in the joint of the open handle and stroller frame.

〈No lubricating oil〉

Caution


- Please ensure that there is no lubricating oil inside or around the area where the button-type open handle attaches to the main body. There may be a risk of the button-type open handle detaching.



〈Maintaining the front wheel caster yoke〉


- If the front wheel caster yoke does not rotate smoothly or the wheel is squeaky, please remove the front wheel and check if there is dirt, sand or stone lodged inside. Also, wipe the axle pin and the areas shown below with a dry cloth to remove any dirt and debris.

〈Removing the front wheel caster yoke〉

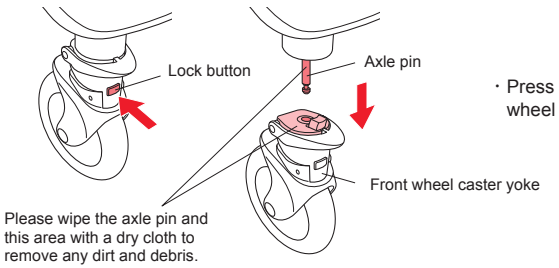

- Press and hold the lock button to remove the front wheel caster yoke. (Left & right)

〈Installing the front wheel caster yoke〉

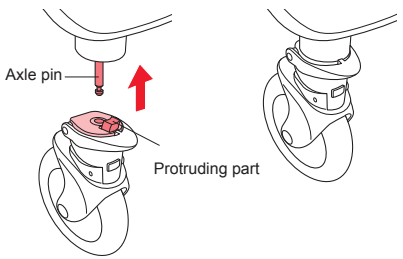

- Align the protruding part to the axle bracket and insert the axle pin. (Left & right)
- After installing the front wheel caster yokes, pull them outward 2-3 times to ensure that the wheels do not fall off.

WARNING

- Before removing the front wheels, the baby and other items in the baby stroller must be removed. The front wheels must also be removed at a safe place. Otherwise, there may be a risk of the baby and items falling off the baby stroller.
- Do not place the baby on the baby stroller before both the front wheels have been installed securely. There may be a risk of the baby stroller tumbling over.

If the following method still does not resolve the problem, please contact our maintenance center.

<Encounter problem in use>

Problem	Troubleshooting
Handle cannot be lowered after pressing the handle lever	Slide the handle lock lever and try again. (see P21).
Wheel is not turning	Please unlock the wheel fixing lock on both sides (see P13).
Wheel does not turn smoothly	Remove the front wheel caster yokes and check if there is dirt, sand or stone lodged inside. Remove the dirt and debris on the axle pin. (see P25).
Rear stoppers cannot be locked	Push the baby stroller slightly forward, then lock the stoppers. Ensure that no debris or other foreign particles are lodged in the rear stoppers.
Backrest cannot be pulled up	Please take the baby out of stroller first, and then pull the stepless lay-flat angle adjusting belt (Please read P20)
Baby stroller cannot be opened	Ensure that the seat fabric is not caught in the front guard and other main body structures.
Shoulder belt can not insert into waist belt	Please make sure the clothes and seatbelt are not caught.
The stroller cannot be folded.	Ensure that the fixing pins on the both sides of the handle frame are engaged. (See P10)
	Ensure that all steps in the <Before folding> section have been carried out before folding the baby stroller. (See P21) Check if the belts have been caught in the handle lock and main body lock.
	Ensure that the carrying sling has been stowed under the seat on the main body.
When the tire is worn	Replace the tire when the thickness of tire is less than 5 mm. Please contact our maintenance center.

<For used product>

Problem	Troubleshooting
Do not understand how previous user was using it.	Do not recommend the use of any product with unclear using condition.
The stroller shows cracks or serious damage.	Please do not use it.

Storage

- Please place the framework inside a plastic bag and store in a cool place without direct sunlight.
- Please do not place heavy objects on top of this product during storage. Overload may cause malfunction or deformation.

⚠Caution

- To avoid the distortion of the shade, please do not put stroller by its side or place heavy material on the stroller. Also, keep the stroller from high temperature areas when stored.
- Please do not place the stroller near a source of ignition. Please do not put the stroller inside the car on a hot day, since the plastic component may deform and would not fulfill its function.

Disposal guide

Please dispose this product according to local regulations.
Please do no dispose arbitrarily for environmental awareness.

MEMO

MEMO

MEMO